

# Manual R1xxx/R3xxx/R4xxx

## Reference

Copyright© Version 9.0, 2010 Funkwerk Enterprise Communications GmbH

## Legal Notice

### Aim and purpose

This document is part of the user manual for the installation and configuration of funkwerk devices. For the latest information and notes on the current software release, please also read our release notes, particularly if you are updating your software to a higher release version. You will find the latest release notes under [www.funkwerk-ec.com](http://www.funkwerk-ec.com) .

### Liability

This manual has been put together with the greatest possible care. However, the information contained in this manual is not a guarantee of the properties of your product. Funkwerk Enterprise Communications GmbH is only liable within the terms of its conditions of sale and supply and accepts no liability for technical inaccuracies and/or omissions.

The information in this manual can be changed without notice. You will find additional information and also release notes for funkwerk devices under [www.funkwerk-ec.com](http://www.funkwerk-ec.com) .

Funkwerk devices make WAN connections as a possible function of the system configuration. You must monitor the product in order to avoid unwanted charges. Funkwerk Enterprise Communications GmbH accepts no responsibility for data loss, unwanted connection costs and damage caused by unintended operation of the product.

### Trademarks

funkwerk trademarks and the funkwerk logo, bintec trademarks and the bintec logo, artem trademarks and the artem logo, elmeg trademarks and the elmeg logo are registered trademarks of Funkwerk Enterprise Communications GmbH.

Company and product names mentioned are usually trademarks of the companies or manufacturers concerned.

### Copyright

All rights reserved. No part of this manual may be reproduced or further processed in any way without the written consent of Funkwerk Enterprise Communications GmbH. The documentation may not be processed and, in particular, translated without the consent of Funkwerk Enterprise Communications GmbH.

You will find information on guidelines and standards in the declarations of conformity under [www.funkwerk-ec.com](http://www.funkwerk-ec.com) .

### How to reach Funkwerk Enterprise Communications GmbH

Funkwerk Enterprise Communications GmbH, Südwestpark 94, D-90449 Nuremberg, Germany,  
Phone: +49 911 9673 0, Fax: +49 911 688 07 25

Funkwerk Enterprise Communications France S.A.S., 6/8 Avenue de la Grande Lande, F-33174  
Gradignan, France, Phone: +33 5 57 35 63 00, Fax: +33 5 56 89 14 05

Internet: [www.funkwerk-ec.com](http://www.funkwerk-ec.com)

# Table of Contents

Chapter 1	Introduction . . . . .	1
Chapter 2	About this guide. . . . .	3
Chapter 3	Installation. . . . .	6
3.1	Setting up and connecting . . . . .	6
3.2	Cleaning. . . . .	11
3.3	Support information . . . . .	11
Chapter 4	Basic configuration . . . . .	12
4.1	Presettings . . . . .	12
4.1.1	Preconfigured data . . . . .	12
4.1.2	Software update . . . . .	12
4.2	System requirements . . . . .	13
4.3	Preparations . . . . .	13
4.3.1	Gathering data . . . . .	13
4.3.2	Configuring a PC . . . . .	16
4.4	Modify system password. . . . .	17
4.5	Setting up an internet connection . . . . .	18
4.5.1	Internet connection over internal ADSL modem . . . . .	18
4.5.2	Internet connection over UMTS. . . . .	18
4.5.3	Other internet connections . . . . .	19
4.5.4	Testing the configuration. . . . .	19
4.6	Setting up wireless LAN . . . . .	19
4.7	Software Update . . . . .	20

Chapter 5	Reset . . . . .	22
Chapter 6	Technical data . . . . .	24
6.1	Scope of supply . . . . .	24
6.2	General Product Features . . . . .	26
6.3	LEDs . . . . .	34
6.4	Connectors . . . . .	49
6.5	Pin Assignments . . . . .	55
6.5.1	Ethernet interface . . . . .	55
6.5.2	ISDN S0 port . . . . .	56
6.5.3	ISDN-PRI interface . . . . .	57
6.5.4	CardBus interface (PCMCIA) . . . . .	58
6.5.5	ADSL interface . . . . .	61
6.5.6	SHDSL interface . . . . .	61
6.5.7	X.21 interface . . . . .	63
6.6	WEEE information . . . . .	65
Chapter 7	Variable switching of S0 interfaces . . . . .	66
7.1	Switching the S0 interfaces from external to internal . . . . .	66
Chapter 8	Access and configuration. . . . .	70
8.1	Access Options. . . . .	70
8.1.1	Access via LAN . . . . .	70
8.1.2	Access via the Serial Interface . . . . .	73
8.1.3	Access over ISDN . . . . .	75
8.2	Logging in . . . . .	75
8.2.1	User names and passwords in ex works state . . . . .	76

8.2.2	Logging in for Configuration . . . . .	76
8.3	Configuration options . . . . .	77
8.3.1	Funkwerk Configuration Interface . . . . .	78
8.3.2	SNMP shell . . . . .	95
8.4	BOOTmonitor . . . . .	95
<b>Chapter 9</b>	<b>Assistants . . . . .</b>	<b>97</b>
<b>Chapter 10</b>	<b>System Management . . . . .</b>	<b>98</b>
10.1	Status . . . . .	98
10.2	Global Settings . . . . .	101
10.2.1	System . . . . .	101
10.2.2	Passwords. . . . .	103
10.2.3	Date and Time . . . . .	105
10.2.4	System Licences . . . . .	109
10.3	Interface Mode / Bridge Groups . . . . .	111
10.3.1	Interfaces . . . . .	113
10.4	Administrative Access . . . . .	117
10.4.1	Access . . . . .	117
10.4.2	SSH . . . . .	118
10.4.3	SNMP. . . . .	122
10.5	Remote Authentication . . . . .	123
10.5.1	RADIUS . . . . .	123
10.5.2	TACACS+ . . . . .	129
10.5.3	Options . . . . .	132
10.6	Certificates . . . . .	134
10.6.1	Certificate List . . . . .	134
10.6.2	CRLs . . . . .	143
10.6.3	Certificate Servers . . . . .	144

Chapter 11	Physical Interfaces . . . . .	146
11.1	AUX . . . . .	146
11.1.1	AUX . . . . .	146
11.2	Ethernet Ports . . . . .	149
11.2.1	Port Configuration . . . . .	150
11.3	ISDN Ports . . . . .	152
11.3.1	ISDN Configuration . . . . .	152
11.3.2	MSN Configuration . . . . .	160
11.4	ADSL Modem . . . . .	163
11.4.1	ADSL Configuration . . . . .	163
11.5	SHDSL . . . . .	166
11.5.1	SHDSL Configuration . . . . .	166
11.6	Serial Ports . . . . .	169
11.6.1	Options . . . . .	169
11.7	UMTS/HSDPA . . . . .	172
11.7.1	UMTS/HSDPA/HSUPA . . . . .	172
Chapter 12	LAN . . . . .	176
12.1	IP Configuration . . . . .	176
12.1.1	Interfaces . . . . .	176
12.2	VLAN . . . . .	180
12.2.1	VLANs . . . . .	181
12.2.2	Port Configuration . . . . .	182
12.2.3	Administration . . . . .	183
Chapter 13	Wireless LAN . . . . .	185
13.1	WLAN . . . . .	185

13.1.1	Radio Settings . . . . .	186
13.1.2	Virtual Service Sets . . . . .	199
13.1.3	WDS Links . . . . .	206
13.1.4	Client Link . . . . .	209
13.2	Administration . . . . .	213
13.2.1	Basic Setup . . . . .	213
<b>Chapter 14</b>	<b>Routing . . . . .</b>	<b>215</b>
14.1	Routes . . . . .	215
14.1.1	IP Routes . . . . .	215
14.1.2	Options . . . . .	221
14.2	NAT. . . . .	222
14.2.1	NAT Interfaces . . . . .	222
14.2.2	NAT Configuration . . . . .	224
14.3	RIP . . . . .	229
14.3.1	RIP Interfaces . . . . .	229
14.3.2	RIP Filter . . . . .	232
14.3.3	RIP Options . . . . .	234
14.4	Load Balancing. . . . .	237
14.4.1	Load Balancing Groups . . . . .	237
14.5	Multicast. . . . .	240
14.5.1	Forwarding . . . . .	241
14.5.2	IGMP . . . . .	243
14.5.3	Options . . . . .	246
14.6	QoS . . . . .	248
14.6.1	QoS Filter . . . . .	248
14.6.2	QoS Classification . . . . .	251
14.6.3	QoS Interfaces/Policies . . . . .	253
<b>Chapter 15</b>	<b>WAN. . . . .</b>	<b>260</b>

15.1	Internet + Dialup . . . . .	260
15.1.1	PPPoE . . . . .	262
15.1.2	PPTP . . . . .	267
15.1.3	PPPoA . . . . .	272
15.1.4	ISDN . . . . .	276
15.1.5	GPRS/UMTS . . . . .	284
15.1.6	AUX . . . . .	289
15.1.7	IP Pools . . . . .	295
15.2	ATM . . . . .	296
15.2.1	Profiles . . . . .	297
15.2.2	Service Categories . . . . .	302
15.2.3	OAM Controlling . . . . .	304
15.3	Leased Line . . . . .	308
15.3.1	Interfaces . . . . .	309
15.4	Real Time Jitter Control . . . . .	318
15.4.1	Controlled Interfaces . . . . .	318
<b>Chapter 16</b>	<b>VPN . . . . .</b>	<b>320</b>
16.1	IPSec . . . . .	320
16.1.1	IPSec Peers . . . . .	320
16.1.2	Phase-1 Profiles . . . . .	330
16.1.3	Phase-2 Profiles . . . . .	338
16.1.4	XAUTH Profiles . . . . .	342
16.1.5	IP Pools . . . . .	345
16.1.6	Options . . . . .	346
16.2	L2TP . . . . .	349
16.2.1	Tunnel Profiles . . . . .	349
16.2.2	Users . . . . .	353
16.2.3	Options . . . . .	359
16.3	PPTP . . . . .	360

16.3.1	PPTP Tunnel . . . . .	360
16.3.2	Options . . . . .	367
16.4	GRE . . . . .	368
16.4.1	GRE Tunnels . . . . .	368
<b>Chapter 17</b>	<b>Firewall . . . . .</b>	<b>371</b>
17.1	Policies . . . . .	372
17.1.1	Filter Rules . . . . .	373
17.1.2	QoS . . . . .	376
17.1.3	Options . . . . .	378
17.2	Interfaces . . . . .	380
17.2.1	Groups . . . . .	380
17.3	Addresses . . . . .	381
17.3.1	Address List . . . . .	381
17.3.2	Groups . . . . .	382
17.4	Services . . . . .	383
17.4.1	Service List . . . . .	383
17.4.2	Groups . . . . .	385
<b>Chapter 18</b>	<b>VoIP . . . . .</b>	<b>387</b>
18.1	Application Level Gateway . . . . .	387
18.1.1	SIP Proxies . . . . .	387
18.1.2	SIP Endpoints . . . . .	389
18.2	Media Gateway . . . . .	391
18.2.1	Extension . . . . .	392
18.2.2	SIP Accounts . . . . .	397
18.2.3	Call Routing . . . . .	404
18.2.4	CLID Translation . . . . .	408
18.2.5	Call Translation . . . . .	410
18.2.6	ISDN Trunks . . . . .	412

18.2.7	Options . . . . .	413
<b>Chapter 19</b>	<b>Local Services . . . . .</b>	<b>417</b>
19.1	DNS . . . . .	417
19.1.1	Global Settings . . . . .	419
19.1.2	Static Hosts . . . . .	422
19.1.3	Domain Forwarding . . . . .	423
19.1.4	Cache . . . . .	425
19.1.5	Statistics . . . . .	427
19.2	HTTPS . . . . .	428
19.2.1	HTTPS server . . . . .	428
19.3	DynDNS Client . . . . .	430
19.3.1	DynDNS Update . . . . .	430
19.3.2	DynDNS Provider. . . . .	432
19.4	DHCP Server . . . . .	434
19.4.1	DHCP Pool . . . . .	434
19.4.2	IP/MAC Binding . . . . .	437
19.4.3	DHCP Relay Settings . . . . .	439
19.5	Web Filter . . . . .	440
19.5.1	Global Settings . . . . .	440
19.5.2	Filter List . . . . .	442
19.5.3	Black / White List . . . . .	444
19.5.4	History . . . . .	446
19.6	CAPI Server . . . . .	446
19.6.1	User . . . . .	447
19.6.2	Options . . . . .	448
19.7	Scheduling. . . . .	449
19.7.1	Schedule . . . . .	449
19.7.2	Options . . . . .	453
19.8	Surveillance . . . . .	454

19.8.1	Hosts . . . . .	454
19.8.2	Interfaces . . . . .	456
19.8.3	Ping Generator . . . . .	458
19.9	ISDN Theft Protection . . . . .	460
19.9.1	Options . . . . .	460
19.10	Funkwerk Discovery . . . . .	462
19.10.1	Device Discovery . . . . .	462
19.10.2	Options . . . . .	466
19.11	UPnP . . . . .	467
19.11.1	Interfaces . . . . .	467
19.11.2	Global Settings . . . . .	468
19.12	Hotspot Gateway . . . . .	470
19.12.1	Hotspot Gateway . . . . .	471
19.13	BRRP . . . . .	476
19.13.1	Virtual Routers . . . . .	478
19.13.2	VR Synchronisation . . . . .	483
19.13.3	Options . . . . .	485
<b>Chapter 20</b>	<b>Maintenance . . . . .</b>	<b>487</b>
20.1	Diagnostics . . . . .	487
20.1.1	Ping Test . . . . .	487
20.1.2	DNS Test . . . . .	488
20.1.3	Traceroute Test . . . . .	488
20.2	Software & Configuration . . . . .	489
20.2.1	Options . . . . .	489
20.3	Reboot . . . . .	494
20.3.1	System Reboot . . . . .	494
<b>Chapter 21</b>	<b>External Reporting . . . . .</b>	<b>495</b>

21.1	Syslog . . . . .	495
21.1.1	Syslog Servers . . . . .	495
21.2	IP Accounting . . . . .	498
21.2.1	Interfaces . . . . .	498
21.2.2	Options . . . . .	499
21.3	E-mail Alert . . . . .	500
21.3.1	E-mail Alert Server . . . . .	500
21.3.2	E-mail Alert Recipient . . . . .	502
21.4	SNMP . . . . .	503
21.4.1	SNMP Trap Options. . . . .	504
21.4.2	SNMP Trap Hosts . . . . .	505
21.5	Activity Monitor . . . . .	506
21.5.1	Options . . . . .	507
<b>Chapter 22</b>	<b>Monitoring . . . . .</b>	<b>509</b>
22.1	Internal Log . . . . .	509
22.1.1	System Messages . . . . .	509
22.2	IPSec . . . . .	510
22.2.1	IPSec Tunnels . . . . .	510
22.2.2	IPSec Statistics. . . . .	512
22.3	ISDN/Modem . . . . .	514
22.3.1	Current Calls . . . . .	514
22.3.2	Call History . . . . .	516
22.4	Interfaces . . . . .	517
22.4.1	Statistics . . . . .	517
22.5	WLAN . . . . .	518
22.5.1	WLAN1 . . . . .	518
22.5.2	VSS . . . . .	520
22.5.3	WDS . . . . .	523

22.5.4	Client Links . . . . .	525
22.6	Bridges . . . . .	527
22.6.1	br<x> . . . . .	527
22.6.2	sta<x> . . . . .	528
22.7	Hotspot Gateway . . . . .	528
22.7.1	Hotspot Gateway . . . . .	529
22.8	QoS . . . . .	529
22.8.1	QoS . . . . .	530
	Glossary. . . . .	531
	Index . . . . .	572



## Chapter 1 Introduction

The powerful devices **bintec R1xxx/R3xxx/R4xxx** have been specially developed for high-speed Internet access and for VPN connections in SMEs and branch offices.

### Safety notices

The safety precautions, which are supplied with your device, tell you what you need to take into consideration when using your **bintec** gateway.

### Installation

How to connect your device is shown in [Setting up and connecting](#) on page 6. This chapter also tells you what preliminary tasks are necessary for configuration.

### Configuration

How to get your device running is explained in [Basic configuration](#) on page 12. There we show you how to start up your device from a Windows PC and how to install other useful online assistants. At the end of the chapter, you will be in a position to surf the Internet, send or receive e-mails and set up a connection to a partner network to access data at your company head office, for example.

### Password

If you are already familiar with configuring **bintec** devices and want to get started right away, all you really need to know is the factory default user name and password.

**User Name:** *admin*

**Password:** *funkwerk*



### Note

Remember to change the password immediately when you log in to the device for the first time. All **bintec** devices are supplied with the same password, which means they are not protected against unauthorised access until you change the password. How to change the passwords is described in chapter [Modify system password](#) on page 17.

### Workshops

Step-by-step instructions for the most important configuration tasks can be found in the separate **FEC Application Workshop** guide for each application, which can be downloaded from the [www.funkwerk-ec.com](http://www.funkwerk-ec.com) website under **Solutions**.

## Dime Manager

The devices are also designed for use with **Dime Manager**. The **Dime Manager** management tool can locate your Funkwerk devices within the network quickly and easily. The .NET-based application, which is designed for up to 50 devices, offers easy to use functions and a comprehensive overview of devices, their parameters and files.

All devices in the local network, including remote devices that can be reached over SNMP, are located using SNMP Multicast irrespective of their current IP address. A new IP address and password and other parameters can also be assigned. A configuration can then be initiated over HTTP or TELNET. If using HTTP, the Dime Manager automatically logs in to the devices on your behalf.

System software files and configuration files can be managed individually as required or in logical groups for devices of the same type.

You can find the **Dime Manager** on the enclosed product DVD.

## Chapter 2 About this guide

This document is valid for **bintec** devices with system software as of software version 7.9.5.

The Reference, which you have in front of you, contains the following chapters:

### User's Guide - Reference

Chapter	Description
Introduction	You see an overview of the the device:
About this guide	We explain the various components of this manual and how to use it.
Installation	This contains instructions for how to set up and connect your device.
Basic configuration	This chapter provides a step-by-step guide to the basic functions on your device.
Reset	This chapter explains how to reset your device to the ex works state.
Technical data	This section contains a description of all the device's technical properties.
Variable switching of S0 interfaces	This section describes how to switch the S0 interfaces from external to internal.
Access and configuration	This includes explanations about the different access and configuration methods.
Assistants	These chapters describe all configuration options of the <b>Funkwerk Configuration Interface</b> . The individual menus are described in the order of navigation.
System management	
Physical Interfaces	The individual chapters also contain more detailed explanations on the subsystem in question.
LAN	
Wireless LAN	
Routing	
WAN	
VPN	

Chapter	Description
Firewall	
VoIP	
Local Services	
Maintenance	
External reporting	
Monitoring	
Glossary	The glossary contains a reference to the most important technical terms used in network technology.
Index	The index lists all the key terms for operating the device and all the configuration options and gives page numbers so they can be found easily.

To help you locate information easily, this user's guide uses the following visual aids:

#### List of visual aids

Icon	Use
	Indicates practical information.
	Indicates general and important points.
	Indicates a warning of risk level Attention (points out possible dangers that may cause damage to property if not observed).
	Indicates a warning of risk level Warning (points out possible dangers that may cause physical injury or even death if not observed).

The following typographical elements are used to help you find and interpret the information in this user's guide:

#### Typographical elements

Typographical element	Use
•	Indicates lists.
<b>Menu-&gt;Submenu</b>	Indicates menus and sub-menus in the <b>Funkwerk Configura-</b>

Typographical element	Use
<b>File-&gt;Open</b>	<b>tion Interface</b> and Windows interface.
Non-proportional (Courier), e.g. <code>ping</code> <code>192.168.1.254</code>	Indicates commands that you must enter as written.
bold, e.g. <b>Windows Start menu</b>	Indicates keys, key combinations and Windows terms.
bold, e.g. <b>Licence Key</b>	Indicates fields in the <b>Funkwerk Configuration Interface</b> .
italic, e.g. <i>none</i>	Indicates values that you enter or that can be configured.
Online: blue and italic, e.g. <a href="http://www.funkwerk-ec.com">www.funkwerk-ec.com</a>	Indicates hyperlinks.

## Chapter 3 Installation



### Caution

Please read the safety notices carefully before installing and starting up your device. These are supplied with the device.

### 3.1 Setting up and connecting



### Note

All you need for this are the cables and antennas supplied with the equipment.



### Caution

Incorrect cabling of the ISDN and ETH interfaces may also damage your device. Connect only the ETH interface of the device to the LAN interface of the computer/hub or an ISDN interface of the device, if any, only to the ISDN connection.



### Note

If you connect an unconfigured device to an ISDN connection in parallel to a PBX, the PBX cannot take any calls until an ISDN number is configured on the device. If no entry is specified, every incoming ISDN call is accepted by the ISDN Login service.

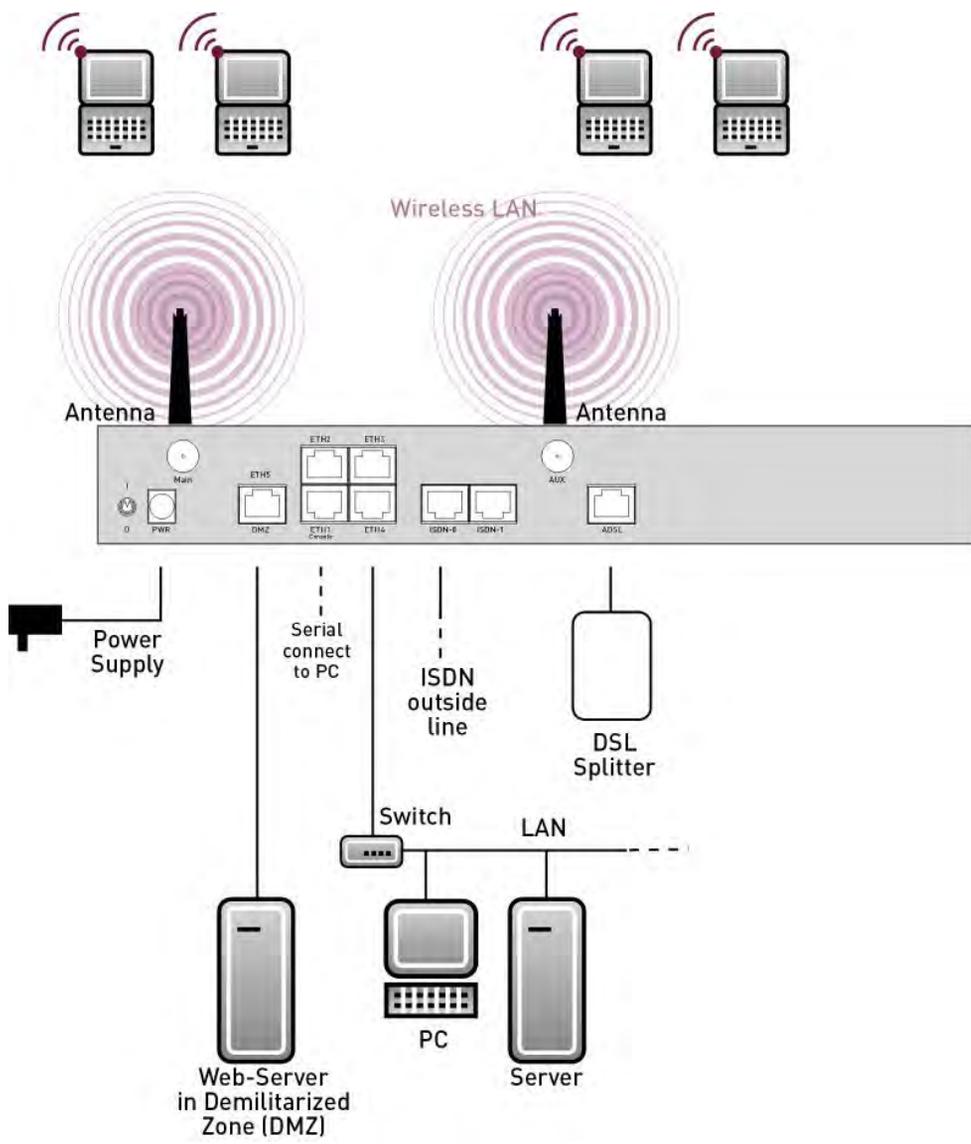


Fig. 2: Connection options using the example of R3000w

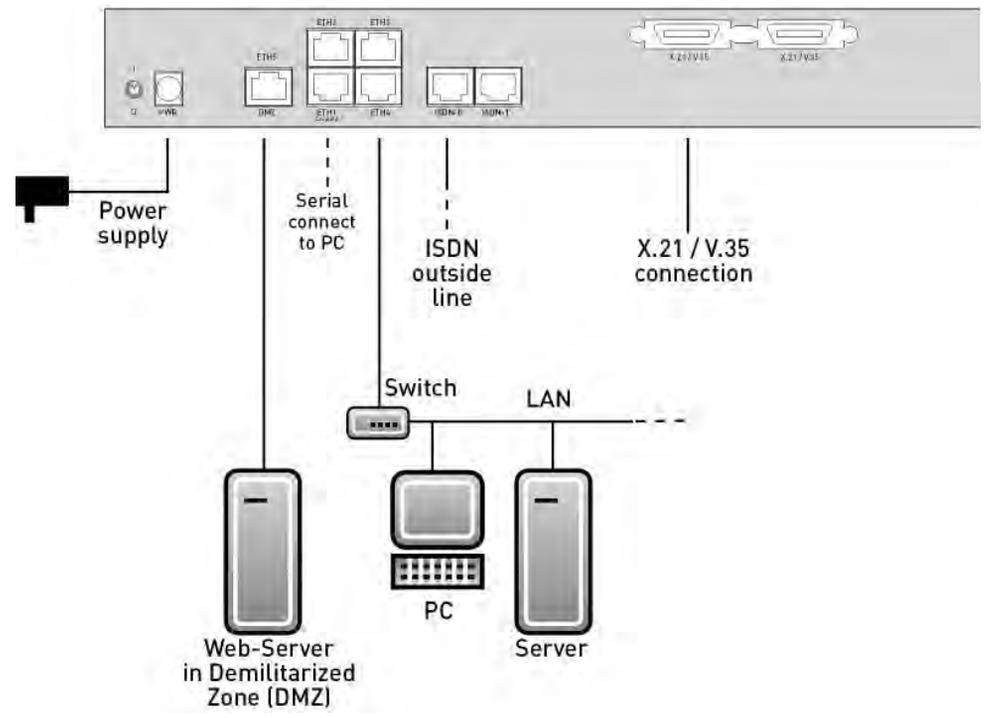


Fig. 3: Connection options using the example of R43000

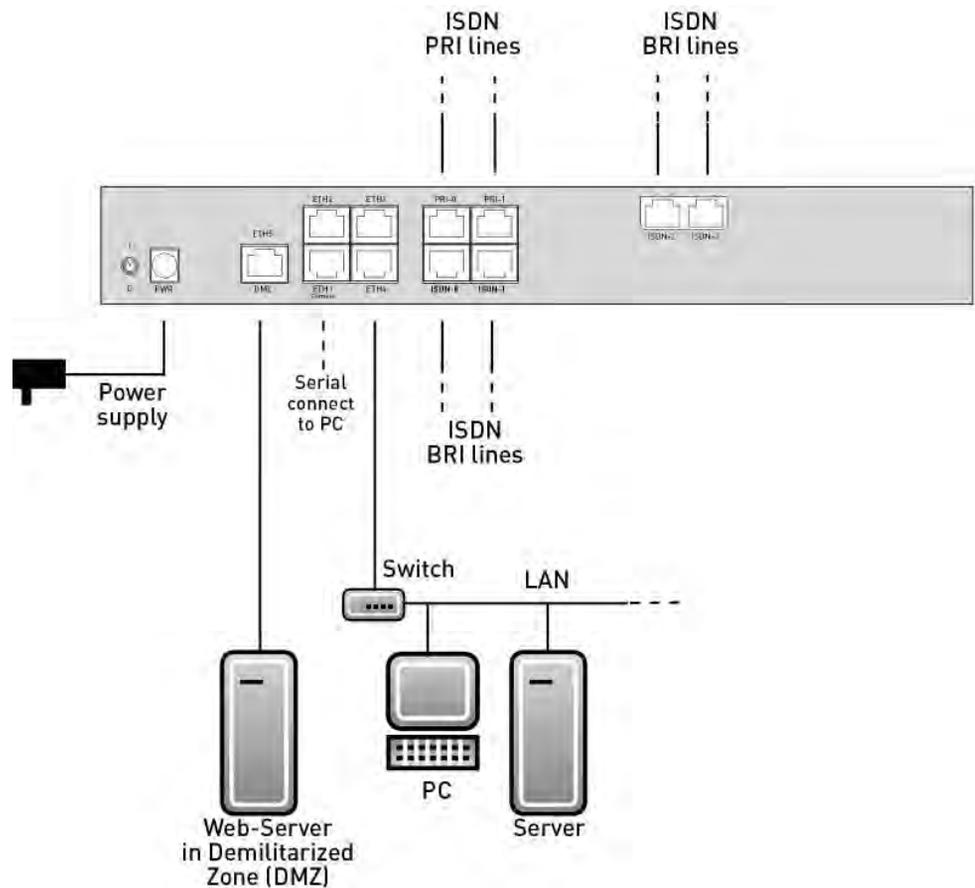


Fig. 4: Connection options using the example of **R41000**

When setting up and connecting, carry out the steps in the following sequence (refer to the connection diagrams for the individual devices in chapter [Technical data](#) on page 24):

- (1) Antennas (only **R1200w**, **R1200wu** and **R3000w**): Screw the external standard antennas provided to their RSMA connections **Main** and **AUX** and align the antennas.
- (2) Place your device on a solid, level base.
- (3) LAN
  - For the standard configuration of your device via Ethernet, connect the first switch port (**ETH1**) of your device to your LAN using the Ethernet cable supplied. The device automatically detects whether it is connected to a switch or directly to a PC.
- (4) ADSL (only **R3000** and **R3000w**)
  - Connect the ADSL interface (**ADSL**) of your device to the DSL output of the splitter using the DSL cable supplied.
- (5) SHDSL (only **R3400** and **R3800**)

Connect the SHDSL interface (**SHDSL**) of your device to the SHDSL connection using the DSL cable supplied.

(6) Mains connection

Connect the device to a mains socket using the mains adaptor supplied.

## Optional connections

- ISDN

Connect the ISDN interface (**ISDN** or **ISDN-x**) of the device to your ISDN socket using the ISDN cable provided.

- Other LANs/WANs

Connect any other terminals in your network to the remaining switch ports **ETH2**, **ETH3** or **ETH4** of your device using other Ethernet cables.

- Serial connection

For alternative configuration options, connect the serial interface of your PC with the serial interface of the device. The serial interface can also be assigned to Ethernet socket 1 (**ETH1**). Use the serial cable provided, and if necessary connect your network to another Ethernet socket. However, configuration via the serial interface is not provided by default.

- xDSL modem or DMZ

Connect the WAN interface (**ETH5/DMZ**) of your device to an xDSL modem (not supplied) via another Ethernet cable or with the Ethernet connection on your DMZ.

- PRI (only **R4100**)

Connect the ISDN PRI interface (**PRI-0** or **PRI-1**) of the device to your PRI connection.

- X.21 (only **R4300**)

Connect an X.21 interface on your device to your **X.21/V.35** or **X.21/V.36** connection using a suitable cable (which you can order as an accessory for your router). Make sure that you use an enabled X.21 interface. The left X.21 interface on the back of the device is enabled by default and works. The right X.21 interface can also be enabled if licensed.

- UMTS (only **R1200wu**)

Insert the UMTS card into the **CardBus / UMTS** slot.

The device is now prepared for configuration using the **Funkwerk Configuration Interface**.

## 3.2 Cleaning

You can clean your device easily. Use a damp cloth or antistatic cloth. Do not use solvents. Never use a dry cloth; the electrostatic charge could cause electronic faults. Make sure that no moisture can enter the device and cause damage.

## 3.3 Support information

If you have questions about your product or are looking for additional information, the Funkwerk Enterprise Communications GmbH Support Centre can be reached Monday to Friday between the hours of 8.00 am and 5 pm. They can be contacted as follows:

Email	hotline@funkwerk-ec.com
International Support Coordination	Telephone: +49 911 9673 1550 Fax: +49 911 9673 1599
End-customer Hotline	0900 1 38 65 93 (€1.10/min on land-lines in Germany)

For detailed information on our support services, contact [www.funkwerk-ec.com](http://www.funkwerk-ec.com).

## Chapter 4 Basic configuration

You configure your device using the **Funkwerk Configuration Interface**.

The way to obtain the basic configuration is explained below step-by-step. Detailed knowledge of networks is not necessary. A detailed online help system gives you extra support.

The **Companion DVD** also supplied includes all the tools that you need for the configuration and management of your device.

### 4.1 Presettings

#### 4.1.1 Preconfigured data

Your device is shipped with a pre-defined IP configuration:

- **IP Address:** *192.168.0.254*
- **Netmask:** *255.255.255.0*

Use the following access data to configure your device in an ex works state:

- **User Name:** *admin*
- **Password:** *funkwerk*



#### Note

All **bintec** devices are delivered with the same username and password. As long as the password remains unchanged, they are therefore not protected against unauthorised use. Make sure you change the passwords to prevent unauthorised access to your device!

How to change the passwords is described in [Modify system password](#) on page 17.

#### 4.1.2 Software update

Your device contains the version of the system software available at the time of production. More recent versions may have since been released. You can easily perform an update with the **Funkwerk Configuration Interface** using the **Maintenance -> Software & Configuration** menu.

For a description of the update procedure, see [Software Update](#) on page 20.

## 4.2 System requirements

For configuration of the device, your PC must meet the following system requirements:

- Microsoft Windows operating system Windows 2000 or higher
- Internet Explorer 6 or 7, Mozilla Firefox Version 1.2 or higher
- Installed network card (Ethernet)
- DVD drive
- TCP/IP protocol installed (see [Configuring a PC](#) on page 16)
- High colour display (more than 256 colours) for correct representation of the graphics.

## 4.3 Preparations

To prepare for configuration, you need to...

- have the data for the basic configuration and the Internet connection to hand and also gather the data needed for connecting the required WLAN clients.
- Check whether the PC from which you want to perform the configuration meets the necessary requirements.

You can also...

- install the **Dime Managers** software, which provides more tools for working with your device. This installation is optional and not essential for the configuration or operation of the device.

### 4.3.1 Gathering data

You can gather the main data for configuration with the **Funkwerk Configuration Interface** quickly, because you do not need any information that requires in-depth knowledge of networks.

If necessary, you can use the sample values.

Before you start the configuration, you should gather the data for the following purposes:

- Basic configuration (if your device is in the ex works state)
- Internet access (optional)
- Wireless LAN (optional, only for **R1200w**, **R1200wu** and **R300w**)

The following table shows examples of possible values for the necessary access data. You can enter your personal data in the "Your values" column, so that you can refer to these values later when needed.

If you configure a new network, you can use the given example values for IP addresses and netmasks. In cases of doubt, ask your system administrator.

### Basic configuration

For a basic configuration of your gateway, you need information that relates to your network environment:

#### Basic information

Access data	Example value	Your values
IP address of your gateway	<i>192.168.0.254</i>	
Netmask of your gateway	<i>255.255.255.0</i>	

### Internet access over ADSL

If you want to set up Internet access, you need an Internet Service Provider (ISP). You also receive your personal access data from your ISP. The terms used for the required access data may vary from provider to provider. However, the type of information you need for dial-in is basically the same.

The following table lists the access data that your device also needs for a DSL connection to the Internet.

#### Data for internet access over ADSL

Access data	Example value	Your values
Provider name	<i>GoInternet</i>	
Protocol	<i>PPP over Ethernet (PPPoE)</i>	
Encapsulation	<i>bridged-no-fcs</i>	
VPI (Virtual Path Identifier)	<i>1</i>	
VCI (Virtual Circuit Identifier)	<i>32</i>	
Your user name	<i>MyName</i>	
Password	<i>TopSecret</i>	

Some Internet Service Providers, such as T-Online, require additional information:

#### Additional information for T-Online

Access data	Example value	Your values
User account (12 digits)	000123456789	
T-Online number (usually 12 digits)	06112345678	
Joint user account	0001	



### Note

To configure T-Online Internet access, in the **Username** field, enter the following succession of numbers without intervening spaces:

User account (12 digits) + T-Online number (usually 12 digits) + co-user number (for the main user, always 0001).

If your T-Online number is less than 12 digits long, a "#" character is required between the T-Online number and the co-user number.

If you use T-DSL, you must add the character string "@t-online.de" at the end of this string of numbers.

You username could, for example, look like this:

00012345678906112345678#0001@t-online.de

### Wireless LAN (only for bintec R1200w, bintec R1200wu and bintec R3000w)

You can operate your device as an access point and therefore connect individual work stations (e.g. laptops, PCs with wireless card or wireless adapter) by wireless connections to your local network via WLAN (Wireless LAN) and let them communicate with each other. The table "Data for the Wireless LAN configuration" shows the information required.

As data can be transmitted over the air in the WLAN, this data can in theory be intercepted and read by any attacker with the appropriate resources. Particular attention must therefore be paid to protecting the wireless connection.

Note the following:

- Follow the safety precautions when configuring your WLAN.
- Please also read the information on WLAN operation published by the Federal Office for Information Security, see <http://www.bsi.bund.de>.

### Data for the Wireless LAN configuration

Access data	Example value	Your values
Preshared Key for WPA-PSK	without default	

Access data	Example value	Your values
Installation location of your device	<i>Germany</i>	
Channel to be used for WLAN	<i>3</i>	
Network name (SSID) for your WLAN	<i>without default</i>	
Visibility of the network name	<i>not visible</i>	
Security setting	<i>WPA-PSK</i>	

### 4.3.2 Configuring a PC

In order to reach your device via the **Funkwerk Configuration Interface** and to be able to carry out configuration, the PC used for the configuration has to satisfy some prerequisites.

- Make sure that the TCP/IP protocol is installed on the PC.
- Assign fixed IP address to your PC.

#### Checking the TCP/IP protocol

Proceed as follows to check whether you have installed the protocol:

- (1) Click the Windows Start button and then **Settings -> Control Panel -> Network Connections** (Windows XP) or **Control Panel -> Network and Sharing Center-> Change Adapter Settings** (Windows 7).
- (2) Click on **LAN Connection**.
- (3) Click on **Properties** in the status window.
- (4) Look for the **Internet Protocol (TCP/IP)** entry in the list of network components.

#### Installing the TCP/IP protocol

If you cannot find the **Internet Protocol (TCP/IP)** entry, install the TCP/IP protocol as follows:

- (1) First click **Properties**, then **Install** in the status window of the **LAN Connection**.
- (2) Select the **Protocol** entry.
- (3) Click **Add**.
- (4) Select **Internet Protocol (TCP/IP)** and click on **OK**.
- (5) Follow the on-screen instructions and restart your PC when you have finished.

#### Allocating PC IP address

Allocate an IP address to your PC as follows:

- (1) Select **Internet Protocol (TCP/IP)** and click on **Properties**.
- (2) Choose **Use next IP address** and enter a suitable IP address.

### Entering the gateway IP address in your PC

Then continue by entering the IP address of the gateway in the configuration of your PC as follows:

- (1) In **Internet Protocol (TCP/IP)** -> **Properties** under **Default gateway**, enter the IP address of your gateway.
- (2) Enter the IP address of your device under **Use next DNS server address**.
- (3) Click **OK**.
- (4) Close the status window with **OK**.

The computer now has an IPSec configuration.



#### Note

You can now launch **Funkwerk Configuration Interface** for configuration by entering the IP address of your device (192.168.0.254) in a supported browser (Internet Explorer 6 or later, Mozilla Firefox 1.2 or later) and entering the pre-configured login information (**User:** *admin*, **Password:** *funkwerk*).

## 4.4 Modify system password

All **bintec** devices are delivered with the same username and password. As long as the password remains unchanged, they are therefore not protected against unauthorised use. Make sure you change the passwords to prevent unauthorised access to your device!

Proceed as follows:

- (a) Go to **System Management** -> **Global Settings**-> **Passwords**
- (b) Enter a new password under **System Admin Password**.
- (c) Enter the new password again under **Confirm Admin Password**.
- (d) Click **OK**.
- (e) Save the configuration by clicking on the **Save Configuration** button above the menu navigation.

Note the following rules on password use:

- The password must not be easy to guess. Names, car registration numbers, dates of birth, etc. should not be chosen as passwords.
- The password should contain at least one character that is not a letter (special character or number).
- The password should be at least 8 characters long.
- Change your password regularly, e.g. every 90 days.

## 4.5 Setting up an internet connection

You can set up different types of internet connections using your device. The most common configuration is described below. The **Funkwerk Configuration Interface** internet wizard can be used to help configure alternative configuration types.

### 4.5.1 Internet connection over internal ADSL modem

The devices **R3000** and **R3000w** have an integrated ADSL2+ modem for establishing a fast Internet connection. To make it easier to configure an ADSL internet connection, the **Funkwerk Configuration Interface** has a wizard to guide you through the connection set-up process simply and quickly. A selection of preconfigured connections from leading providers (T-Home, Arcor) makes configuration even easier.

- (1) In **Funkwerk Configuration Interface** select the menu options **Assistants-> Internet access**.
- (2) Click **New** to create a new entry and to apply the **Connection Type** *Internal ADSL Modem*.
- (3) Follow the steps shown by the wizard. The wizard has its own online help, which offers all of the information you may require.
- (4) Once you have exited the wizard, save the configuration by clicking on the **Save Configuration** button above the menu navigation.

### 4.5.2 Internet connection over UMTS

Setting up an Internet connection (only for **R1200wu**) over UMTS requires an activated SIM card for your UMTS provider.

- (1) In **Funkwerk Configuration Interface** select the menu options **Wizards-> Internet Access**.
- (2) Click **New** to create a new entry and choose the **Connection Type** *UMTS*.
- (3) Follow the steps shown by the wizard. The wizard has its own online help, which offers all of the information you may require.
- (4) Once you have exited the wizard, save the configuration by clicking on the **Save Con-**

**figuration** button above the menu navigation.

### 4.5.3 Other internet connections

In addition to an ADSL connection over the internal ADSL2+ modem, you can connect your device over other connection types with the internet or over an external modem (e.g. a cable modem) or an external gateway. The corresponding wizard in **Funkwerk Configuration Interface** provides support for configurations of this type. You can find the internet wizards and other wizards for easy configuration of various applications at the top of the menu tree under **Wizards**.

### 4.5.4 Testing the configuration

Once you have completed the configuration of your device, you can test the connection in your LAN and to the Internet.

Carry out the following steps to test your device:

- (1) Test the connection to your device. Click **Run** in the Start menu and enter `ping`, followed by a space and the IP address of your system (e.g. `192.168.0.254`). A window appears with the response "Reply from...".
- (2) Test Internet access by entering [www.funkwerk-ec.com](http://www.funkwerk-ec.com) in the Internet browser. Funkwerk Enterprise Communications GmbH's Internet site offers you the latest news, updates and documentation.



#### Note

Incorrect configuration of the devices in your LAN may result in unwanted connections and increased charges! Monitor your device and make sure it only sets up connections at the times you want it to. Watch the LEDs on your device (LED for ISDN, ADSL and the Ethernet interface to which you have connected one or more WANs).

## 4.6 Setting up wireless LAN

Proceed as follows to use your device (only **bintec R1200w**, **R1200wu** and **R3000w**) as an access point in WPA-PSK mode:

- (1) In **Funkwerk Configuration Interface** go to the **Assistants-> Wireless LAN** menu.
- (2) Follow the steps shown by the wizard. The wizard has its own online help, which offers all of the information you may require.
- (3) Save the configuration by clicking on the **Save Configuration** button above the menu navigation.

## Configuring the WLAN Adapter under Windows XP

After installing the drivers for your WLAN card, Windows XP set up a new connection in the network environment. Proceed as follows to configure the Wireless LAN connection:

- (1) Right-click on **Start -> Settings -> Network Connections -> Wireless Network Connections**.
- (2) Select **Properties**.
- (3) Go to the **Wireless networks** tab.
- (4) Click **Add**.

Proceed as follows:

- (1) Enter a **Network Name**, e.g. *Client-1*.
- (2) Set **Network Authentication** to *WPA-PSK*.
- (3) Set **Data Encryption** to *TKIP*.
- (4) Under **Network Key** and **Confirm Network Key**, enter the configured preshared key.
- (5) Exit each menu with **OK**.



### Note


Windows XP allows several menus to be modified. Depending on the configuration, the path to the wireless network connection you want to configure may be different to that described above.

## 4.7 Software Update

The range of functions of **bintec** devices is continuously being extended. These extensions are made available to you by Funkwerk Enterprise Communications GmbH free of charge. Checking for new software versions and the installation of updates can be carried out easily with the **Funkwerk Configuration Interface**. An existing internet connection is needed for an automatic update.

Proceed as follows:

- (1) In the **Maintenance -> menu, select Software & Configuration**.
- (2) Under **Action**, select *Update System Software* and, under **Source**, *Latest Software from Funkwerk Server*.
- (3) Then click on **GO**.

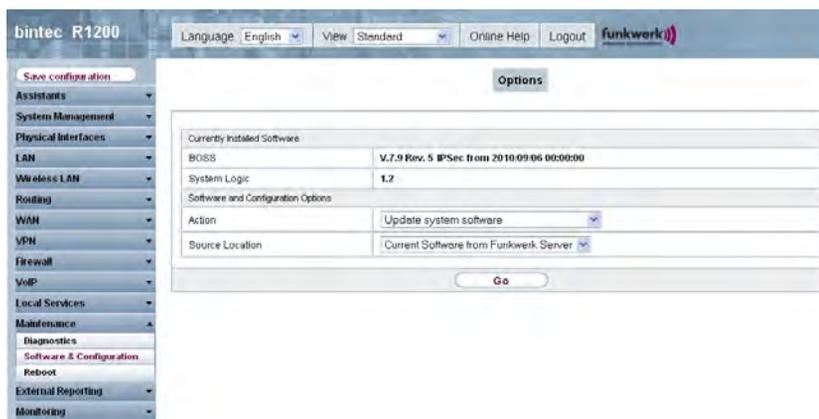

The screenshot shows the web interface of a bintec R1200 device. The top navigation bar includes 'Language: English', 'View: Standard', 'Online Help', 'Logout', and the 'funkwerk' logo. A left sidebar contains a menu with categories like 'Save configuration', 'Assistants', 'System Management', 'Physical interfaces', 'LAN', 'Wireless LAN', 'Routing', 'WAN', 'VPN', 'Firewall', 'VoIP', 'Local Services', 'Maintenance', 'Diagnostics', 'Software & Configuration', 'Reboot', 'External Reporting', and 'Monitoring'. The main content area is titled 'Options' and contains a table for 'Currently Installed Software' and 'Software and Configuration Options'.

Currently Installed Software	
BOSS	V.7.9 Rev. 5 IPSec from 2010.09.06 00:00:00
System Logic	1.2

Software and Configuration Options	
Action	Update system software
Source Location	Current Software from Funkwerk Server

At the bottom of the 'Options' section is a 'Go' button.

The device will now connect to the Funkwerk Enterprise Communications GmbH download server and check whether an updated version of the system software is available. If so, your device will be updated automatically. When installation of the new software is complete, you will be invited to restart the device.



### Caution

Once you have clicked on **GO**, the update cannot be cancelled/interrupted. If an error occurs during the update, do not re-start the device and contact support.

## Chapter 5 Reset

If the configuration is incorrect or if your device cannot be accessed, you can reset the device to the ex works standard settings using a special reset procedure.

Practically all existing configuration data will then be ignored, only the current user passwords are retained. Configurations stored in the device are not deleted and can, if required, be reloaded when the device is rebooted.

Proceed as follows:

- (1) If your device is in operation, switch it off and then on again. The device runs through the boot sequence.
- (2) Observe the LEDs on the front of your device. After the device runs through the start mode, the yellow LEDs on the right block light at the same.
- (3) Switch off the device while the LEDs light on the right block. You have about four seconds for this.
- (4) Repeat the on/off operation twice. Your router has now been switched on and off three times altogether.
- (5) Switch on your router for the fourth time. If you do not interrupt the boot sequence this time, the router starts in the "factory reset" state. This state is indicated by the LEDs on the right block flashing three times.  
If you switch the equipment off and on again, it starts with the saved boot configuration.

Proceed as follows if you also want to reset all the user passwords to the ex works state and delete stored configurations when resetting the device:

- Set up a serial connection to your device. Reboot your device and monitor the boot sequence. Read the message `Press <sp> for boot monitor or any other key to boot system`. Start the BOOTmonitor, choose **(4) Delete configuration** and follow the instructions.

or

- Carry out the reset procedure described above by switching on and off. Next establish a serial connection or a Telnet connection (Telnet: Use the IP address of the ex works standard settings) for your device. At the login prompt enter `erase bootconfig` as the **Login** in the command line. Leave the password empty and press the Return key. The device runs through the boot sequence again.

**Note**

The device is also reset to ex works state including all user passwords if you switch the device on and off five times instead of three times when the device is off.

**Note**

If you delete the boot configuration using the **Funkwerk Configuration Interface** (menu **Maintenance->Software & Configuration**), all passwords will also be reset and the current boot configuration deleted. The next time, the device will boot with the standard ex works settings.

You can now configure your device again as described from [Basic configuration](#) on page 12.

## Chapter 6 Technical data

This chapter summarises all the hardware properties of the **R1200**, **R1200w**, **R1200wu**, **R3000**, **R3000w**, **R3400**, **R3800**, **R4100** and **R4300** devices.

### 6.1 Scope of supply

Your device is supplied with the following parts:

	<b>Cable sets/mains unit/ other</b>	<b>Software</b>	<b>Documentation</b>
R1200	Ethernet cable ISDN cable Serial connecting cable Mains unit	Companion DVD	Quick Install Guide (printed) User's Guide (on DVD) Release Notes, if required Safety notices
R1200w	Ethernet cable ISDN cable Serial connecting cable Mains unit 2 standard antennas	Companion DVD	Quick Install Guide (printed) User's Guide (on DVD) Release Notes, if required Safety notices
R1200wu	Ethernet cable ISDN cable Serial connecting cable Mains unit 2 standard antennas	Companion DVD	Quick Install Guide (printed) User's Guide (on DVD) Release Notes, if required Safety notices
R3000	Ethernet cable ISDN cable Serial connecting cable Mains unit 2 DSL cables (for Annex A and for Annex B)	Companion DVD	Quick Install Guide (printed) User's Guide (on DVD) Release Notes, if required Safety notices

	<b>Cable sets/mains unit/ other</b>	<b>Software</b>	<b>Documentation</b>
R3000w	Ethernet cable ISDN cable Serial connecting cable Mains unit 2 DSL cables (for Annex A and for Annex B) 2 standard antennas	Companion DVD	Quick Install Guide (printed) User's Guide (on DVD) Release Notes, if required Safety notices
R3400	Ethernet cable ISDN cable Serial connecting cable Mains unit DSL cable	Companion DVD	Quick Install Guide (printed) User's Guide (on DVD) Release Notes, if required Safety notices
R3800	Ethernet cable ISDN cable Serial connecting cable Mains unit DSL cable Splitter (Y adapter)	Companion DVD	Quick Install Guide (printed) User's Guide (on DVD) Release Notes, if required Safety notices
R4100	Ethernet cable ISDN cable Serial connecting cable Mains unit Splitter (Y adapter)	Companion DVD	Quick Install Guide (printed) User's Guide (on DVD) Release Notes, if required Safety notices
R4300	Ethernet cable ISDN cable Serial connecting cable Mains unit X.21 DTE (optional)	Companion DVD	Quick Install Guide (printed) User's Guide (on DVD) Release Notes, if required Safety notices

	Cable sets/mains unit/ other	Software	Documentation
	X.21 DCE (optional) V.35 DTE (optional)		

## 6.2 General Product Features

The general product features cover performance features and the technical prerequisites for installation and operation of your device.

### General product features bintec R1200, bintec R1200w, bintec R1200wu

Product name	bintec R1200	bintec R1200w	bintec R1200wu
Dimensions and weights:			
Equipment dimensions without cable (B x H x D):	295 mm x 45 mm x 160 mm	295 mm x 45 mm x 160 mm + 8 mm (antenna socket)	295 mm x 45 mm x 160 mm + 8 mm (antenna socket)
Weight	approx. 1260 g	approx. 1260 g	approx. 1260 g
Transport weight (incl. documentation, cables, packaging)	approx. 2,6 kg	approx. 2,6 kg	approx. 2,6 kg
Memory	32 MB SDRAM, 8 MB flash ROM	32 MB SDRAM, 8 MB flash ROM	32 MB SDRAM, 8 MB flash ROM
LEDs	18 (1x Power, 1x Status, 5x2 Ethernet, 3x2 Function)	20 (1x Power, 1x Status, 5x2 Ethernet, 4x2 Function)	20 (1x Power, 1x Status, 5x2 Ethernet, 4x2 Function)
Power consumption of the device	max. 15 Watt, normally 13 Watt	max. 15 Watt, normally 13 Watt	max. 15 Watt, normally 13 Watt
Voltage supply	15 V AC 1.3 A EU PSU	15 V AC 1.3 A EU PSU	24 V AC 1 A EU PSU
Environmental requirements:			
Storage temperature	-20° to +70 °C	-20° to +70 °C	-20° to +70 °C
Operating temperature	0° to 40 °C	0° to 40 °C	0° to 40 °C

Product name	bintec R1200	bintec R1200w	bintec R1200wu
Relative atmospheric humidity	10 % to 90 % non-condensing in operation, 5 % to 95 % non-condensing when stored	10 % to 90 % non-condensing in operation, 5 % to 95 % non-condensing when stored	10 % to 90 % non-condensing in operation, 5 % to 95 % non-condensing when stored
Room classification	Only use in dry rooms.	Only use in dry rooms.	Only use in dry rooms.
Available interfaces:			
Ethernet IEEE 802.3 LAN (4-port switch), a port with serial interface function	Permanently installed (twisted pair only), 10/100 mbps, auto-sensing, MDIX; supports Baud rates: 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200 Baud	Permanently installed (twisted pair only), 10/100 mbps, auto-sensing, MDIX; supports Baud rates: 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200 Baud	Permanently installed (twisted pair only), 10/100 mbps, auto-sensing, MDIX; supports Baud rates: 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200 Baud
ISDN-WAN S0 (2)	Permanently installed	Permanently installed	Permanently installed
DMZ/ETH5	Additional Ethernet switch port	Additional Ethernet switch port	Additional Ethernet switch port
WLAN interface (antennas)	-	802.11b, 802.11g and 802.11a with Antenna Diversity	802.11b, 802.11g and 802.11a with Antenna Diversity
CardBus interface (PCMCIA)	-	-	Interface for integrating a UMTS modem card
Available sockets:			
Serial interface V.24	RJ45 socket	RJ45 socket	RJ45 socket
Ethernet interface	RJ45 socket	RJ45 socket	RJ45 socket
ISDN interface	RJ45 socket	RJ45 socket	RJ45 socket
CardBus interface	-	-	68-pole PCMCIA socket
Standards & Guidelines	R&TTE Directive 1999/5/EC  CE symbol for all EU states	R&TTE Directive 1999/5/EC  CE symbol for all EU states	R&TTE Directive 1999/5/EC  CE symbol for all EU states
SAFERNET™ Security Technology	Community passwords, PAP, CHAP, MS-CHAP, MS-CHAP v.2, PPTP,	Community passwords, PAP, CHAP, MS-CHAP, MS-CHAP v.2, PPTP,	Community passwords, PAP, CHAP, MS-CHAP, MS-CHAP v.2, PPTP,

Product name	bintec R1200	bintec R1200w	bintec R1200wu
	PPPoE, PPPoA, Call-back, Access Control Lists, CLID, NAT, SIF, MPPE Encryption, PPTP Encryption, VPN with PPTP or IPsec	PPPoE, PPPoA, Call-back, Access Control Lists, CLID, NAT, SIF, MPPE Encryption, PPTP Encryption, VPN with PPTP or IPsec	PPPoE, PPPoA, Call-back, Access Control Lists, CLID, NAT, SIF, MPPE Encryption, PPTP Encryption, VPN with PPTP or IPsec
Software supplied	Dime Manager on DVD	Dime Manager on DVD	Dime Manager on DVD
Printed documentation supplied	Quick Install Guide	Quick Install Guide	Quick Install Guide
Online documentation	User's Guide Workshops Release Notes, if required	User's Guide Workshops Release Notes, if required	User's Guide Workshops Release Notes, if required

#### General product features bintec R3000, bintec R3000w

Product name	bintec R3000	bintec R3000w
Dimensions and weights:		
Equipment dimensions without cable (B x H x D):	295 mm x 45 mm x 160 mm	295 mm x 45 mm x 160 mm + 8 mm (antenna socket)
Weight	approx. 1260 g	approx. 1260 g
Transport weight (incl. documentation, cables, packaging)	approx. 2,6 kg	approx. 2,6 kg
Memory	32 MB SDRAM, 8 MB flash ROM	32 MB SDRAM, 8 MB flash ROM
LEDs	18 (1x Power, 1x Status, 5x2 Ethernet, 3x2 Function)	20 (1x Power, 1x Status, 5x2 Ethernet, 4x2 Function)
Power consumption of the device	max. 15 Watt, normally 13 Watt	max. 15 Watt, normally 13 Watt
Voltage supply	15 V AC 1.3 A EU PSU	15 V AC 1.3 A EU PSU

Product name	bintec R3000	bintec R3000w
Environmental requirements:		
Storage temperature	-20° to +70 °C	-20° to +70 °C
Operating temperature	0° to 40 °C	0° to 40 °C
Relative atmospheric humidity	10 % to 90 % non-condensing in operation, 5 % to 95 % non-condensing when stored	10 % to 90 % non-condensing in operation, 5 % to 95 % non-condensing when stored
Room classification	Only use in dry rooms.	Only use in dry rooms.
Available interfaces:		
ADSL interface	Internal ADSL modem for Annex A and Annex B	Internal ADSL modem for Annex A and Annex B
Ethernet IEEE 802.3 LAN (4-port switch), a port with serial interface function	Permanently installed (twisted pair only), 10/100 mbps, autosensing, MDIX; supports Baud rates: 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200 Baud	Permanently installed (twisted pair only), 10/100 mbps, autosensing, MDIX; supports Baud rates: 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200 Baud
ISDN-WAN S0 (2)	Permanently installed	Permanently installed
DMZ/ETH5	Additional Ethernet switch port	Additional Ethernet switch port
WLAN interface (antennas)	-	802.11b, 802.11g and 802.11a with Antenna Diversity. Data rates 1, 2, 5.5, 6, 9, 11, 12, 18, 24, 36, 48, 54 mbps 1-, 2-, 5.5-, 6-, 9-, 11-, 12-, 18-, 24-, 36-, 48-, 54 mbps
Available sockets:		
Serial interface V.24	RJ45 socket	RJ45 socket
Ethernet interface	RJ45 socket	RJ45 socket
ISDN interface	RJ45 socket	RJ45 socket
ADSL interface	RJ45 socket	RJ45 socket
Standards & Guidelines	R&TTE Directive 1999/5/EC CE symbol for all EU states	R&TTE Directive 1999/5/EC CE symbol for all EU states

Product name	bintec R3000	bintec R3000w
SAFERNET™ Security Technology	Community passwords, PAP, CHAP, MS-CHAP, MS-CHAP v.2, PPTP, PPPoE, PPPoA, Callback, Access Control Lists, CLID, NAT, SIF, MPPE Encryption, PPTP Encryption, VPN with PPTP or IPSec	Community passwords, PAP, CHAP, MS-CHAP, MS-CHAP v.2, PPTP, PPPoE, PPPoA, Callback, Access Control Lists, CLID, NAT, SIF, MPPE Encryption, PPTP Encryption, VPN with PPTP or IPSec
Software supplied	Dime Manager on DVD	Dime Manager on DVD
Printed documentation supplied	Quick Install Guide	Quick Install Guide
Online documentation	User's Guide Workshops Release Notes, if required	User's Guide Workshops Release Notes, if required

#### General product features bintec R3400, bintec R3800

Product name	bintec R3400	bintec R3800
Dimensions and weights:		
Equipment dimensions without cable (B x H x D):	295 mm x 45 mm x 160 mm	295 mm x 45 mm x 160 mm
Weight	approx. 1260 g	approx. 1260 g
Transport weight (incl. documentation, cables, packaging)	approx. 2,6 kg	approx. 2,6 kg
Memory	32 MB SDRAM, 8 MB flash ROM	32 MB SDRAM, 8 MB flash ROM
LEDs	18 (1x Power, 1x Status, 5x2 Ethernet, 3x2 Function)	20 (1x Power, 1x Status, 5x2 Ethernet, 4x2 Function)
Power consumption of the device	max. 15 Watt, normally 10 Watt	max. 15 Watt, normally 12 Watt
Voltage supply	15 V AC 1.3 A EU PSU	15 V AC 1.3 A EU PSU
Environmental require-		

Product name	bintec R3400	bintec R3800
ments:		
Storage temperature	-20° to +70 °C	-20° to +70 °C
Operating temperature	0° to 40 °C	0° to 40 °C
Relative atmospheric humidity	10 % to 90 % non-condensing in operation, 5 % to 95 % non-condensing when stored	10 % to 90 % non-condensing in operation, 5 % to 95 % non-condensing when stored
Room classification	Only use in dry rooms.	Only use in dry rooms.
Available interfaces:		
SHDSL interface	Internal SHDSL 4-wire modem for Annex A and Annex B.  Bonding technology with 2-wire/4-wire as an inverse multiplexer - performed over IMA in accordance with the ATM forum.	Internal SHDSL 8-wire modem for Annex A and Annex B.  Bonding technology with 2-wire/4-wire/6-wire/8-wire as an inverse multiplexer - performed over IMA in accordance with the ATM forum.
Ethernet IEEE 802.3 LAN (4-port switch), a port with serial interface function	Permanently installed (twisted pair only), 10/100 mbps, autosensing, MDIX; supports Baud rates: 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200 Baud	Permanently installed (twisted pair only), 10/100 mbps, autosensing, MDIX; supports Baud rates: 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200 Baud
ISDN-WAN S0 (2)	Permanently installed	Permanently installed
DMZ/ETH5	Additional Ethernet switch port	Additional Ethernet switch port
Available sockets:		
Serial interface V.24	RJ45 socket	RJ45 socket
Ethernet interface	RJ45 socket	RJ45 socket
ISDN interface	RJ45 socket	RJ45 socket
SHDSL interface	RJ45 socket	RJ45 socket
Standards & Guidelines	R&TTE Directive 1999/5/EC CE symbol for all EU states	R&TTE Directive 1999/5/EC CE symbol for all EU states

<b>Product name</b>	<b>bintec R3400</b>	<b>bintec R3800</b>
SAFERNET™ Security Technology	Community passwords, PAP, CHAP, MS-CHAP, MS-CHAP v.2, PPTP, PPPoE, PPPoA, Callback, Access Control Lists, CLID, NAT, SIF, MPPE Encryption, PPTP Encryption, VPN with PPTP or IPSec	Community passwords, PAP, CHAP, MS-CHAP, MS-CHAP v.2, PPTP, PPPoE, PPPoA, Callback, Access Control Lists, CLID, NAT, SIF, MPPE Encryption, PPTP Encryption, VPN with PPTP or IPSec
Software supplied	Dime Manager on DVD	Dime Manager on DVD
Printed documentation supplied	Quick Install Guide	Quick Install Guide
Online documentation	User's Guide Workshops Release Notes, if required	User's Guide Workshops Release Notes, if required

#### **General product features bintec R4100, bintec R4300**

<b>Product name</b>	<b>bintec R4100</b>	<b>bintec R4300</b>
Dimensions and weights:		
Equipment dimensions without cable (B x H x D):	295 mm x 45 mm x 160 mm	295 mm x 45 mm x 160 mm
Weight	approx. 1260 g	approx. 1260 g
Transport weight (incl. documentation, cables, packaging)	approx. 2,6 kg	approx. 2,6 kg
Memory	32 MB SDRAM, 8 MB flash ROM	32 MB SDRAM, 8 MB flash ROM
LEDs	20 (1x Power, 1x Status, 5x2 Ethernet, 4x2 Function)	20 (1x Power, 1x Status, 5x2 Ethernet, 4x2 Function)
Power consumption of the device	max. 15 Watt, normally 10 Watt	max. 15 Watt, normally 13 Watt
Voltage supply	24 V AC 1 A EU PSU	15 V AC 1.3 A EU PSU
Environmental require-		

Product name	bintec R4100	bintec R4300
ments:		
Storage temperature	-20° to +70 °C	-20° to +70 °C
Operating temperature	0° to 40 °C	0° to 40 °C
Relative atmospheric humidity	10 % to 90 % non-condensing in operation, 5 % to 95 % non-condensing when stored	10 % to 90 % non-condensing in operation, 5 % to 95 % non-condensing when stored
Room classification	Only use in dry rooms.	Only use in dry rooms.
Available interfaces:		
Ethernet IEEE 802.3 LAN (4-port switch), a port with serial interface function	Permanently installed (twisted pair only), 10/100 mbps, autosensing, MDIX; supports Baud rates: 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200 Baud	Permanently installed (twisted pair only), 10/100 mbps, autosensing, MDIX; supports Baud rates: 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200 Baud
ISDN-WAN S0 (2)	Permanently installed	Permanently installed
ISDN-PRI (2)	Permanently installed	-
DMZ/ETH5	Additional Ethernet switch port	Additional Ethernet switch port
X.21 interface (2)	-	Permanently installed
Available sockets:		
Serial interface V.24	RJ45 socket	RJ45 socket
Ethernet interface	RJ45 socket	RJ45 socket
ISDN interface	RJ45 socket	RJ45 socket
ISDN-PRI interface	RJ45 socket	-
X.21 interface	-	RJ45 socket
Standards & Guidelines	R&TTE Directive 1999/5/EC CE symbol for all EU states	R&TTE Directive 1999/5/EC CE symbol for all EU states
SAFERNET™ Security Technology	Community passwords, PAP, CHAP, MS-CHAP, MS-CHAP v.2, PPTP, PPPoE, PPPoA, Callback, Access Control Lists, CLID, NAT, SIF, MPPE Encryption, PPTP Encryption, VPN	Community passwords, PAP, CHAP, MS-CHAP, MS-CHAP v.2, PPTP, PPPoE, PPPoA, Callback, Access Control Lists, CLID, NAT, SIF, MPPE Encryption, PPTP Encryption, VPN

<b>Product name</b>	<b>bintec R4100</b>	<b>bintec R4300</b>
	with PPTP or IPSec	with PPTP or IPSec
Software supplied	Dime Manager on DVD	Dime Manager on DVD
Printed documentation supplied	Quick Install Guide	Quick Install Guide
Online documentation	User's Guide Workshops Release Notes, if required	User's Guide Workshops Release Notes, if required



### Note

## Antenna Diversity

The two antennas do not have equality of access. One is used both to transmit and receive (marked as "main", "primary" or "1"; the antenna next to the power switch), the other is only used to receive. During reception, the AP (Access Point) checks which antenna is receiving a better signal. This is then used for decoding.

## 6.3 LEDs

The device LEDs provide information on certain activities and statuses of the device.

The LEDs on **bintec R1200** are arranged as follows:

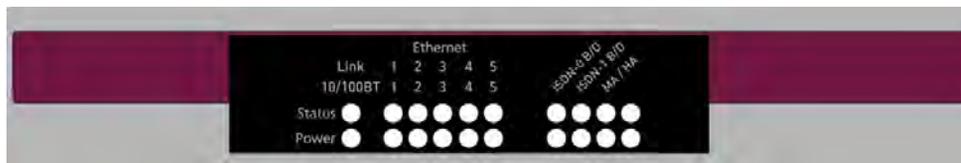


Fig. 5: LEDs on **bintec R1200**

In operation mode, the LEDs on **bintec R1200** display the following status information for your device:

### LED status display

LED	Status	Information
Power	on	The power supply is connected.

LED	Status	Information
Status	Permanently on or off	Error.
	flashing	The device is active.
ETH 1 to 5 Top row	on	The device is connected to the Ethernet.
	flashing	Data traffic via the Ethernet interface.
ETH 1 to 5 Bottom row	on	Data traffic with 100 mbps.
	off	Data traffic with 10 mbps.
ISDN-0 B/D Top row	on	ISDN D-channel is active.
ISDN-0 B/D Bottom row	on	One ISDN B channel is active.
	flashing	Both ISDN B channels are active.
ISDN-1 B/D Top row	on	ISDN D-channel is active.
ISDN-1 B/D Bottom row	on	One ISDN B channel is active.
	flashing	Both ISDN B channels are active.
MA / HA Top row	flashing	BRRP packets are received.
MA / HA Bottom row	on	A user is logged in to the system (e.g. over Telnet).

The LEDs on **bintec R1200w** are arranged as follows:

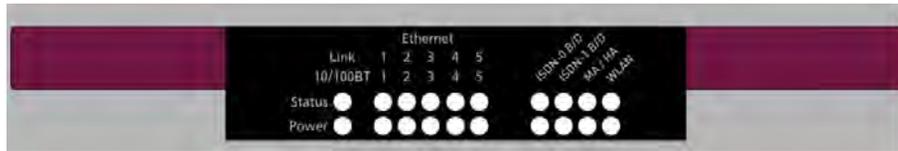


Fig. 6: LEDs on **bintec R1200w**

In operation mode, the LEDs on **bintec R1200w** display the following status information for your device:

#### LED status display

LED	Status	Information
Power	on	The power supply is connected.
Status	Permanently on or off	Error.
	flashing	The device is active.
ETH 1 to 5 Top row	on	The device is connected to the Ethernet.
	flashing	Data traffic via the Ethernet interface.
ETH 1 to 5 Bottom row	on	Data traffic with 100 mbps.
	off	Data traffic with 10 mbps.
ISDN-0 B/D Top row	on	ISDN D-channel is active.
ISDN-0 B/D Bottom row	on	One ISDN B channel is active.
	flashing	Both ISDN B channels are active.

LED	Status	Information
ISDN-1 B/D Top row	on	ISDN D-channel is active.
ISDN-1 B/D Bottom row	on	One ISDN B channel is active.
	flashing	Both ISDN B channels are active.
MA / HA Top row	flashing	BRRP packets are received.
MA / HA Bottom row	on	A user is logged in to the system (e.g. over Telnet).
WLAN Top row	on	The WLAN module is active.
WLAN Bottom row	flashing	Data traffic via the WLAN interface.

The LEDs on **bintec R1200wu** are arranged as follows:



Fig. 7: LEDs on **bintec R1200wu**

In operation mode, the LEDs on **bintec R1200wu** display the following status information for your device:

#### LED status display

LED	Status	Information
Power	on	The power supply is connected.

LED	Status	Information
Status	Permanently on or off	Error.
	flashing	The device is active.
ETH 1 to 5 Top row	on	The device is connected to the Ethernet.
	flashing	Data traffic via the Ethernet interface.
ETH 1 to 5 Bottom row	on	Data traffic with 100 mbps.
	off	Data traffic with 10 mbps.
ISDN-0 B/D Top row	on	ISDN D-channel is active.
ISDN-0 B/D Bottom row	on	One ISDN B channel is active.
	flashing	Both ISDN B channels are active.
ISDN-1 B/D Top row	on	ISDN D-channel is active.
ISDN-1 B/D Bottom row	on	One ISDN B channel is active.
	flashing	Both ISDN B channels are active.
UMTS Top row	on	UMTS connection set up.
UMTS Bottom row	flashing	Data traffic over UMTS.

LED	Status	Information
WLAN Top row	flashing	Data traffic via the WLAN interface.
WLAN Bottom row	slow flashing	The WLAN module is active.
	on	At least one WLAN client is connected.

The LEDs on **bintec R3000** are arranged as follows:



Fig. 8: LEDs on **bintec R3000**

In operation mode, the LEDs on **bintec R3000** display the following status information for your device:

#### LED status display

LED	Status	Information
Power	on	The power supply is connected.
Status	Permanently on or off	Error.
	flashing	The device is active.
ETH 1 to 5 Top row	on	The device is connected to the Ethernet.
	flashing	Data traffic via the Ethernet interface.
ETH 1 to 5 Bottom row	on	Data traffic with 100 mbps.
	off	Data traffic with 10 mbps.

LED	Status	Information
ISDN-0 B/D Top row	on	ISDN D-channel is active.
ISDN-0 B/D Bottom row	on	One ISDN B channel is active.
	flashing	Both ISDN B channels are active.
ISDN-1 B/D Top row	on	ISDN D-channel is active.
ISDN-1 B/D Bottom row	on	One ISDN B channel is active.
	flashing	Both ISDN B channels are active.
ADSL Top row	flashing	The device synchronises with the DSLAM of the ADSL provider.
	on	The device has successfully synchronised with the DSLAM of the ADSL provider.
ADSL Bottom row	flashing	Data traffic via the ADSL interface.
	synchronous flashing	ADSL Handshake.
	asynchronous flashing	ADSL system error.

The LEDs on **bintec R3000w** are arranged as follows:



Fig. 9: LEDs on **bintec R3000w**

In operation mode, the LEDs on **bintec R3000w** display the following status information for your device:

#### LED status display

LED	Status	Information
Power	on	The power supply is connected.
Status	Permanently on or off	Error.
	flashing	The device is active.
ETH 1 to 5 Top row	on	The device is connected to the Ethernet.
	flashing	Data traffic via the Ethernet interface.
ETH 1 to 5 Bottom row	on	Data traffic with 100 mbps.
	off	Data traffic with 10 mbps.
ISDN-0 B/D Top row	on	ISDN D-channel is active.
ISDN-0 B/D Bottom row	on	One ISDN B channel is active.
	flashing	Both ISDN B channels are active.
ISDN-1 B/D Top row	on	ISDN D-channel is active.

LED	Status	Information
ISDN-1 B/D Bottom row	on	One ISDN B channel is active.
	flashing	Both ISDN B channels are active.
ADSL Top row	flashing	The device synchronises with the DSLAM of the ADSL provider.
	on	The device has successfully synchronised with the DSLAM of the ADSL provider.
ADSL Bottom row	flashing	Data traffic via the ADSL interface.
	synchronous flashing	ADSL Handshake.
	asynchronous flashing	ADSL system error.
WLAN Top row	flashing	Data traffic via the WLAN interface.
WLAN Bottom row	slow flashing	The WLAN module is active.
	on	At least one WLAN client is connected.

The LEDs on **bintec R3400** are arranged as follows:



Fig. 10: LEDs on **bintec R3400**

In operation mode, the LEDs on **bintec R3400** display the following status information for

your device:

### LED status display

LED	Status	Information
Power	on	The power supply is connected.
Status	Permanently on or off	Error.
	flashing	The device is active.
ETH 1 to 5 Top row	on	The device is connected to the Ethernet.
	flashing	Data traffic via the Ethernet interface.
ETH 1 to 5 Bottom row	on	Data traffic with 100 mbps.
	off	Data traffic with 10 mbps.
ISDN-0 B/D Top row	on	ISDN D-channel is active.
ISDN-0 B/D Bottom row	on	One ISDN B channel is active.
	flashing	Both ISDN B channels are active.
MA / HA Top row	flashing	BRRP packets are received.
MA / HA Bottom row	on	A user is logged in to the system (e.g. over Telnet).
SHDSL-2/1 Top row	on	The wire pair 4-5 on the SHDSL line has successfully synchronized with the DSLAM of the SHDSL provider.

LED	Status	Information
	flashing	Data traffic over the SHDSL wire pair 4-5.
SHDSL-2/1 Top row	on	The wire pair 7-8 on the SHDSL line has successfully synchronized with the DSLAM of the SHDSL provider.
	flashing	Data traffic over the SHDSL wire pair 7-8.

The LEDs on **bintec R3800** are arranged as follows:



Fig. 11: LEDs on **bintec R3800**

In operation mode, the LEDs on **bintec R3800** display the following status information for your device:

#### LED status display

LED	Status	Information
Power	on	The power supply is connected.
Status	Permanently on or off	Error.
	flashing	The device is active.
ETH 1 to 5 Top row	on	The device is connected to the Ethernet.
	flashing	Data traffic via the Ethernet interface.
ETH 1 to 5 Bottom row	on	Data traffic with 100 mbps.
	off	Data traffic with 10 mbps.

LED	Status	Information
ISDN-0 B/D Top row	on	ISDN D-channel is active.
ISDN-0 B/D Bottom row	on	One ISDN B channel is active.
	flashing	Both ISDN B channels are active.
MA / HA Top row	flashing	BRRP packets are received.
MA / HA Bottom row	on	A user is logged in to the system (e.g. over Telnet).
SHDSL-2/1 Top row	on	The wire pair 4-5 on the SHDSL line has successfully synchronized with the DSLAM of the SHDSL provider.
	flashing	Data traffic over the SHDSL wire pair 4-5.
SHDSL-2/1 Top row	on	The wire pair 7-8 on the SHDSL line has successfully synchronized with the DSLAM of the SHDSL provider.
	flashing	Data traffic over the SHDSL wire pair 7-8.
SHDSL-4/3 Top row	on	The wire pair 3-6 on the SHDSL line has successfully synchronized with the DSLAM of the SHDSL provider.
	flashing	Data traffic over the SHDSL wire pair 3-6.
SHDSL-4/3 Top row	on	The wire pair 1-2 on the SHDSL line has successfully synchronized with the DSLAM of the SHDSL provider.
	flashing	Data traffic over the SHDSL wire pair 1-2.

The LEDs on **bintec R4100** are arranged as follows:

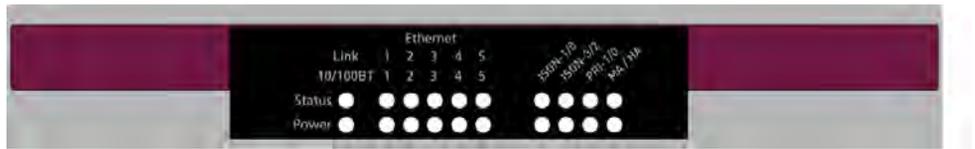


Fig. 12: LEDs on **bintec R4100**

In operation mode, the LEDs on **bintec R4100** display the following status information for your device:

### LED status display

LED	Status	Information
Power	on	The power supply is connected.
Status	Permanently on or off	Error.
	flashing	The device is active.
ETH 1 to 5 Top row	on	The device is connected to the Ethernet.
	flashing	Data traffic via the Ethernet interface.
ETH 1 to 5 Bottom row	on	Data traffic with 100 mbps.
	off	Data traffic with 10 mbps.
ISDN-1/0 Top row	on	ISDN-0: ISDN D-channel is active.
	flashing	ISDN-0: At least one ISDN B channel is active.
ISDN-1/0 Bottom row	on	ISDN-1: ISDN D-channel is active.
	flashing	ISDN-1: At least one ISDN B channel is active.

LED	Status	Information
ISDN-3/2 Top row	on	ISDN-2: ISDN D-channel is active.
	flashing	ISDN-2: At least one ISDN B channel is active.
ISDN-3/2 Bottom row	on	ISDN-3: ISDN D-channel is active.
	flashing	ISDN-3: At least one ISDN B channel is active.
PRI 1/0 Top row	on	PRI-0: ISDN D-channel is active.
	flashing	PRI-0: At least one ISDN B channel is active.
PRI 1/0 Bottom row	on	PRI-1: ISDN D-channel is active.
	flashing	PRI-1: At least one ISDN B channel is active.
MA / HA Top row	flashing	BRRP packets are received.
MA / HA Bottom row	on	A user is logged in to the system (e.g. over Telnet).

The LEDs on **bintec R4300** are arranged as follows:

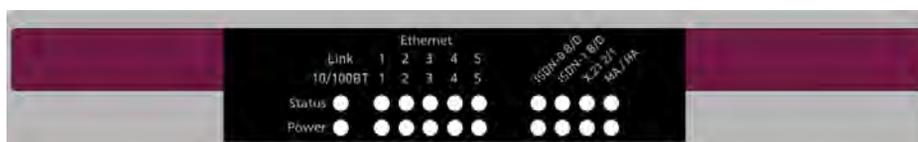


Fig. 13: LEDs on **bintec R4300**

In operation mode, the LEDs on **bintec R4300** display the following status information for your device:

**LED status display**

LED	Status	Information
Power	on	The power supply is connected.
Status	Permanently on or off	Error.
	flashing	The device is active.
ETH 1 to 5 Top row	on	The device is connected to the Ethernet.
	flashing	Data traffic via the Ethernet interface.
ETH 1 to 5 Bottom row	on	Data traffic with 100 mbps.
	off	Data traffic with 10 mbps.
ISDN-0 B/D Top row	on	ISDN D-channel is active.
ISDN-0 B/D Bottom row	on	One ISDN B channel is active.
	flashing	Both ISDN B channels are active.
ISDN-1 B/D Top row	on	ISDN D-channel is active.
ISDN-1 B/D Bottom row	on	One ISDN B channel is active.
	flashing	Both ISDN B channels are active.
X.21 2/1 Top row	on	X.21 1: Connection is set up.

LED	Status	Information
	flashing	X.21 1: Data traffic.
X.21 2/1 Bottom row	on	X.21 2: Connection is set up.
	flashing	X.21 2: Data traffic.
MA / HA Top row	flashing	BRRP packets are received.
MA / HA Bottom row	on	A user is logged in to the system (e.g. over Telnet).

## 6.4 Connectors

All the connections are located on the back of the device.

**bintec R1200** has a 4-port Ethernet switch including a port with serial interface function, a DMZ/ETH5 interface and two ISDN interfaces.

The connections are arranged as follows:

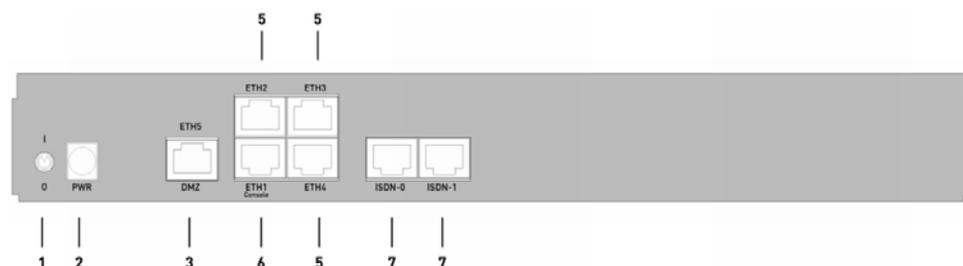


Fig. 14: Back of **bintec R1200**

### Back of bintec R1200

1	I/O	Mains switch
2	PWR	Socket for plug-in power pack
3	DMZ/ETH5	Ethernet interface
5	ETH2 - ETH4	Ethernet interface

6	ETH1 / Console	Ethernet interface with serial interface function
7	ISDN-0 - ISDN-1	ISDN interface

**bintec R1200w** has a 4-port Ethernet switch including a port with serial interface function, a DMZ/ETH5 interface and two ISDN interfaces.

The connections are arranged as follows:

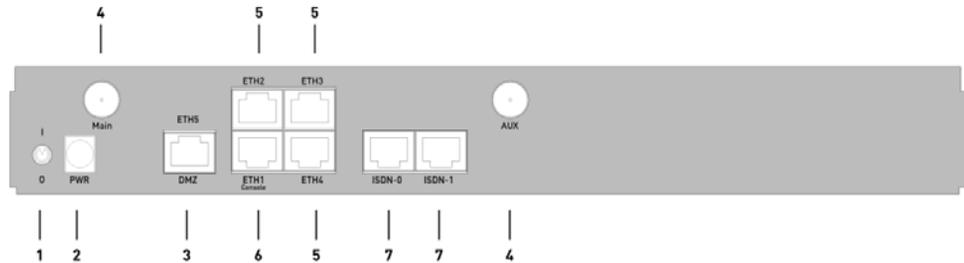


Fig. 15: Back of **bintec R1200w**

#### Back of bintec R1200w

1	I/O	Mains switch
2	PWR	Socket for plug-in power pack
3	DMZ/ETH5	Ethernet interface
4	Main and AUX	RSMA connection
5	ETH2 - ETH4	Ethernet interface
6	ETH1 / Console	Ethernet interface with serial interface function
7	ISDN-0 - ISDN-1	ISDN interface

**bintec R1200wu** has a 4-port Ethernet switch including a port with serial interface function, a DMZ/ETH5 interface and two ISDN interfaces and a CardBus slot for connecting a UMTS modem.

The connections are arranged as follows:

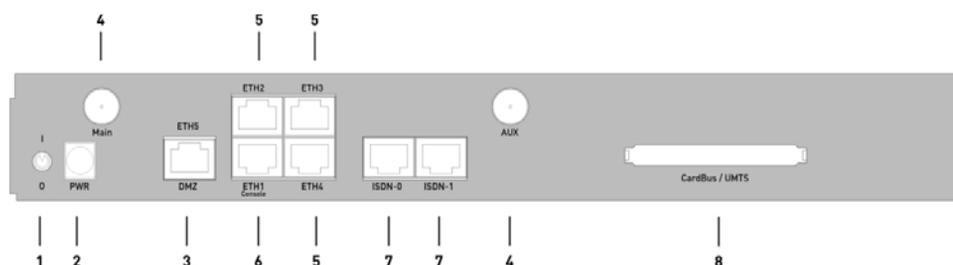


Fig. 16: Back of **bintec R1200wu**

#### Back of bintec R1200wu

1	I/O	Mains switch
2	PWR	Socket for plug-in power pack
3	DMZ/ETH5	Ethernet interface
4	Main and AUX	RSMA connection
5	ETH2 - ETH4	Ethernet interface
6	ETH1 / Console	Ethernet interface with serial interface function
7	ISDN-0 - ISDN-1	ISDN interface
8	CardBus	CardBus slot for UMTS modem

**bintec R3000** has a 4-port Ethernet switch including a port with serial interface function, a DMZ/ETH5 interface, two ISDN interfaces and an ADSL interface.

The connections are arranged as follows:

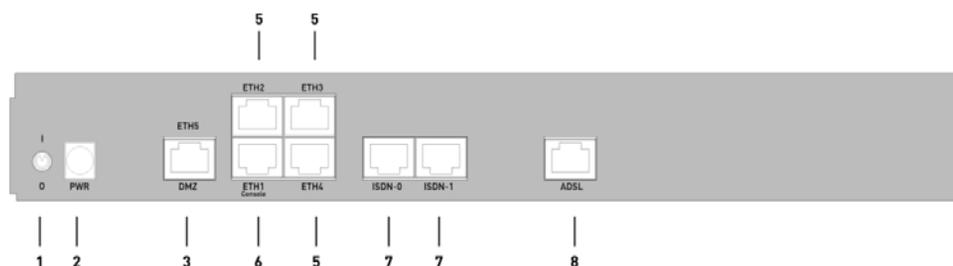


Fig. 17: Back of **bintec R3000**

#### Back of bintec R3000

1	I/O	Mains switch
2	PWR	Socket for plug-in power pack
3	DMZ/ETH5	Ethernet interface
5	ETH2 - ETH4	Ethernet interface

6	ETH1 / Console	Ethernet interface with serial interface function
7	ISDN-0 - ISDN-1	ISDN interface
8	ADSL	ADSL interface

**bintec R3000w** has a 4-port Ethernet switch including a port with serial interface function, a DMZ/ETH5 interface, two ISDN interfaces and an ADSL interface.

The connections are arranged as follows:

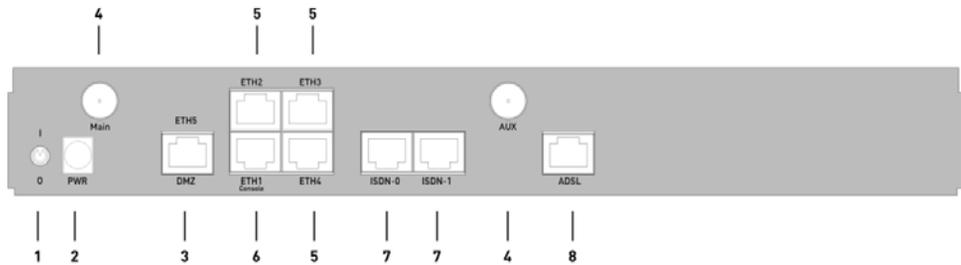


Fig. 18: Back of **bintec R3000w**

#### Back of bintec R3000w

1	I/O	Mains switch
2	PWR	Socket for plug-in power pack
3	DMZ/ETH5	Ethernet interface
4	Main and AUX	RSMA connection
5	ETH2 - ETH4	Ethernet interface
6	ETH1 / Console	Ethernet interface with serial interface function
7	ISDN-0 - ISDN-1	ISDN interface
8	ADSL	ADSL interface

**bintec R3400** has a 4-port Ethernet switch including a port with serial interface function, a DMZ/ETH5 interface, an ISDN interface and an SHDSL interface.

The connections are arranged as follows:

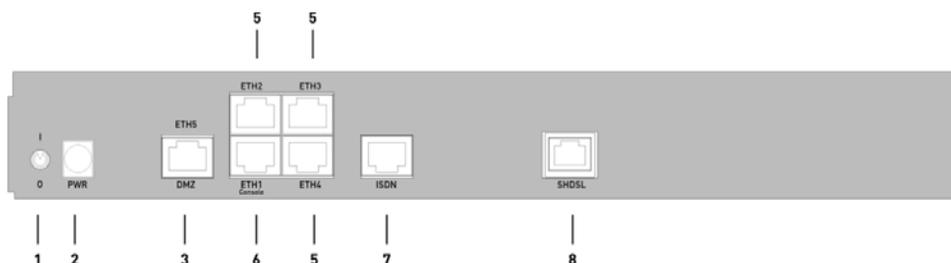


Fig. 19: Back of **bintec R3400**

#### Back of bintec R3400

1	I/O	Mains switch
2	PWR	Socket for plug-in power pack
3	DMZ/ETH5	Ethernet interface
5	ETH2 - ETH4	Ethernet interface
6	ETH1 / Console	Ethernet interface with serial interface function
7	ISDN	ISDN interface
8	SHDSL	SHDSL interface

**bintec R3800** has a 4-port Ethernet switch including a port with serial interface function, a DMZ/ETH5 interface, an ISDN interface and an SHDSL interface.

The connections are arranged as follows:



Fig. 20: Back of **bintec R3800**

#### Back of bintec R3800

1	I/O	Mains switch
2	PWR	Socket for plug-in power pack
3	DMZ/ETH5	Ethernet interface
5	ETH2 - ETH4	Ethernet interface
6	ETH1 / Console	Ethernet interface with serial interface function

7	ISDN	ISDN interface
8	SHDSL	SHDSL interface

**bintec R4100** has a 4-port Ethernet switch including a port with serial interface function, a DMZ/ETH5 interface, four ISDN interfaces and two ISDN-PRI interfaces.

The connections are arranged as follows:

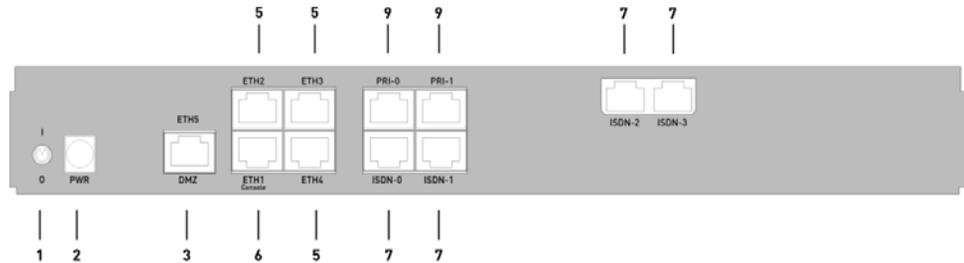


Fig. 21: Back of **bintec R4100**

#### Back of bintec R4100

1	I/O	Mains switch
2	PWR	Socket for plug-in power pack
3	DMZ/ETH5	Ethernet interface
5	ETH2 - ETH4	Ethernet interface
6	ETH1 / Console	Ethernet interface with serial interface function
7	ISDN-0 - ISDN-3	ISDN interface
9	PRI-0 - PRI-1	ISDN-PRI interface

**bintec R4300** has a 4-port Ethernet switch including a port with serial interface function, a DMZ/ETH5 interface, two ISDN interfaces and two X.21 interfaces.

The connections are arranged as follows:

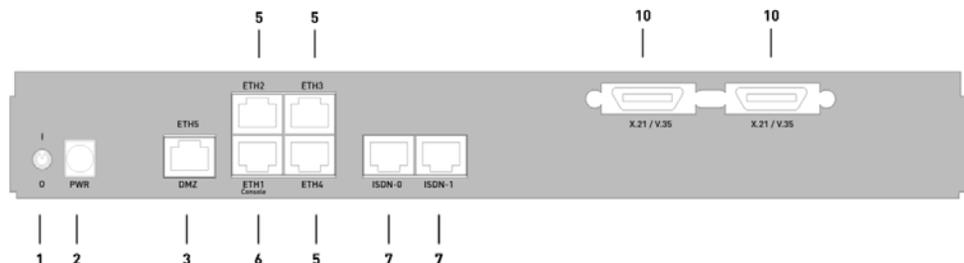


Fig. 22: Back of **bintec R4300**

**Back of bintec R4300**

1	I/O	Mains switch
2	PWR	Socket for plug-in power pack
3	DMZ/ETH5	Ethernet interface
5	ETH2 - ETH4	Ethernet interface
6	ETH1 / Console	Ethernet interface with serial interface function
7	ISDN-0 - ISDN-1	ISDN interface
10	X.21 / V.35	X.21 interface

## 6.5 Pin Assignments

### 6.5.1 Ethernet interface

**bintec R1200, bintec R1200w, R1200wu, R3000, R3000w, R3400, R3800, R4100 and R4300** have an Ethernet interface with integrated 4-port switch (ETH1 - ETH4) and a separate Ethernet interface (DMZ/ETH5).

The 4-port switch is used to connect individual PCs or other switches. The *ETH1/Console* interface can also be used as a serial interface. The DMZ/ETH5 interface can be used to connect an optional DSL modem or a DMZ.

The connection is made via an RJ45 socket.

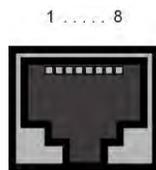


Fig. 23: Ethernet 10/100 Base-T interface (RJ45 socket)

The pin assignment for the Ethernet 10/100 Base-T interface (RJ45 socket) is as follows:

#### RJ45 socket for Ethernet connection

Pin	Function
1	TD +
2	TD -
3	RD +
4	Not used

Pin	Function
5	Not used
6	RD -
7	Not used
8	Not used

The Ethernet 10/100 BASE-T interface does not have an Auto-MDI-X function.

The pin assignment for the Ethernet 10/100 Base-T interface (RJ45 socket) is as follows:

#### RJ45 socket for Ethernet connection or serial interface (console)

Pin	Function
1	TD + (Ethernet)
2	TD - (Ethernet)
3	RD + (Ethernet)
4	RX (console)
5	GND (console)
6	RD - (Ethernet)
7	GND (console)
8	TX (console)

The combined serial Ethernet 10/100Base-T interface does not have an Auto-MDI-X function.

## 6.5.2 ISDN S0 port

**bintec R1200, R1200w, R1200wu, R3000, R3000w, R3400, R3800, R4100 and R4300** have two additional ISDN-S0 interfaces, which can be used for backup functions, for example.

The connection is made via an RJ45 socket:

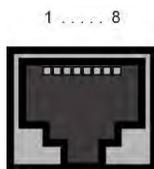


Fig. 24: ISDN S0 BRI interface (RJ45 socket)

The pin assignment for the ISDN S0 BRI interface (RJ45 socket) is as follows:


**RJ45 socket for ISDN connection**

Pin	Function
1	Not used
2	Not used
3	Transmit (+)
4	Receive (+)
5	Receive (-)
6	Transmit (-)
7	Not used
8	Not used

**6.5.3 ISDN-PRI interface**

Both of the ISDN PRI interfaces on **bintec R4100** are connected via an RJ45 plug. The cable supplied connects the RJ45 plug needed for the device to an RJ45 plug needed for the PRI connection.

The following pins are used for the connection:

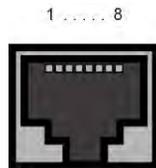

*Fig. 25: ISDN PRI interface (RJ45 socket)*

The pin assignment for the ISDN PRI interface (RJ45 socket) is as follows:

**RJ45 socket for ISDN PRI connection**

Pin	Function
1	T+
2	T-
3	Not used
4	R+
5	R-
6	Not used
7	Not used

Pin	Function
8	Not used

### Note for NTs in Germany



#### Note

In Germany, "Transmit" (NT-->TE) is often designated "S2Mab" (a and b) on the plug and "Receive" (TE-->NT) "S2Man" (a and b).

## 6.5.4 CardBus interface (PCMCIA)

The CardBus interface on **bintec R1200wu** allows a UMTS CardBus modem to be added to the system.

The modem card is inserted in the existing CardBus slot and is integrated automatically by the system. You can insert the card even when the device is running (hot-pluggable).

If the card is not integrated automatically, the system does not support this specific card. Our support staff will be pleased to help if you have any questions.

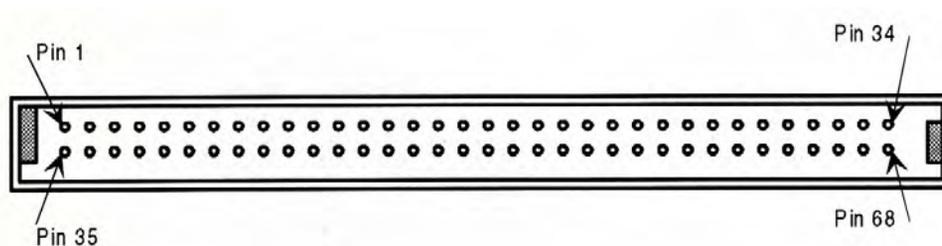


Fig. 26: 68-pin CardBus slot for UMTS modem card

The pin assignment is as follows:

#### Pin assignment of the CardBus slot

Pin	Function	Description
1	GND	Ground
2	CAD0	Mpx address/data 0
3	CAD1	Mpx address/data 1
4	CAD3	Mpx address/data 3
5	CAD5	Mpx address/data 5
6	CAD7	Mpx address/data 7

Pin	Function	Description
7	CCBE0#	Command/Byte possible 0
8	CAD9	Mpx address/data 9
9	CAD11	Mpx address/data 11
10	CAD12	Mpx address/data 12
11	CAD14	Mpx address/data 14
12	CCBE1#	Command/Byte possible 1
13	CPAR	CardBus Parity
14	CPERR#	CardBus Parity error
15	CGNT#	CardBus Grant
16	CINT#	CardBus IREQ
17	VCC	Card power supply
18	VPP1	Programming voltage 1
19	CCLK	CardBus cycle
20	CIRDY#	CardBus initiator ready
21	CCBE2#	Command/Byte possible 2
22	CAD18	Mpx address/data 18
23	CAD20	Mpx address/data 20
24	CAD21	Mpx address/data 21
25	CAD22	Mpx address/data 22
26	CAD23	Mpx address/data 23
27	CAD24	Mpx address/data 24
28	CAD25	Mpx address/data 25
29	CAD26	Mpx address/data 26
30	CAD27	Mpx address/data 27
31	CAD29	Mpx address/data 29
32	RFU	Reserved
33	CCLKRUN#	Start CardBus cycle
34	GND	Ground
35	GND	Ground
36	CCD1#	Card ID 1
37	CAD2	Mpx address/data 2
38	CAD4	Mpx address/data 4

Pin	Function	Description
39	CAD6	Mpx address/data 6
40	RFU	Reserved
41	CAD8	Mpx address/data 8
42	CAD10	Mpx address/data 10
43	CVS1	Voltage ID 1
44	CAD13	Mpx address/data 13
45	CAD15	Mpx address/data 15
46	CAD16	Mpx address/data 16
47	RFU	Reserved
48	CBLOCK#	CardBus blocked
49	CSTOP#	CardBus stop
50	CDEVSEL#	CardBus device selection
51	VCC	Card power supply
52	VPP2	Programming voltage 2
53	CTRDY#	CardBus destination ready
54	CFRAME#	CardBus Cycle Frame
55	CAD17	Mpx address/data 17
56	CAD19	Mpx address/data 19
57	CVS2	Voltage ID 2
58	CRST#	Reset CardBus
59	CSERR#	CardBus system error
60	CREQ#	CardBus request
61	CCBE3#	Command/Byte possible 3
62	CAUDIO	CardBus audio
63	CSTSCHG	CardBus status change
64	CAD28	Mpx address/data 28
65	CAD30	Mpx address/data 30
66	CAD31	Mpx address/data 31
67	CCD2#	Card ID 2
68	GND	Ground

### 6.5.5 ADSL interface

The ADSL interface on **bintec R3000** and **R3000w** is connected via an RJ45 plug. The cable supplied connects the RJ45 plug needed for the device to an RJ45 plug provided for Annex A. The second cable supplied connected the RJ45 plug with an RJ45 plug for Annex B.

The following pins are used for the ADSL connection:

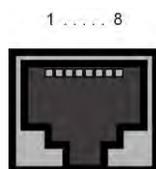


Fig. 27: ADSL interface (RJ45 socket)

The pin assignment for the ADSL interface (RJ45 socket) is as follows:

#### RJ45 socket for ADSL connection

Pin	Function
1	Not used
2	Not used
3	Not used
4	Line a
5	Line b
6	Not used
7	Not used
8	Not used

### 6.5.6 SHDSL interface

The SHDSL interface on **bintec R3400** is connected via an RJ45 connector. The cable supplied connects the RJ45 connector needed for the device to an RJ45 connector needed for the SHDSL connection.

The following pins are used for the SHDSL connection:

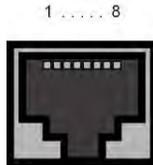


Fig. 28: SHDSL interface (RJ45 connector) **bintec R3400**

In 2 wire mode, the wire pairs a1 and b1 are used. In 4 wire mode, the additional wire pairs a2 and b2 are used.

The pin assignment for the SHDSL interface (RJ45 connector) is as follows:

#### RJ45 socket for SHDSL connection bintec R3400

Pin	Function
1	Not used
2	Not used
3	Not used
4	Line a1
5	Line b1
6	Not used
7	Line a2
8	Line b2

The SHDSL interface on **bintec R3800** is connected via an RJ45 connector. The cable supplied connects the RJ45 connector needed for the device to an RJ45 connector needed for the SHDSL connection.

The following pins are used for the SHDSL connection:

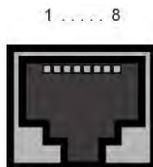


Fig. 29: SHDSL interface (RJ45 connector) **bintec R3800**

The use of wire pairs can be configured in the **Funkwerk Configuration Interface**.

The pin assignment for the SHDSL interface (RJ45 connector) is as follows:

#### RJ45 socket for SHDSL connection bintec R3800

Pin	Function
1	Line a4
2	Line b4
3	Line a3
4	Line a1
5	Line b1
6	Line b3
7	Line a2
8	Line b2

### 6.5.7 X.21 interface

**bintec R4300** has two X.21 interfaces

The connection is made via a 26-pole mini Delta ribbon socket:

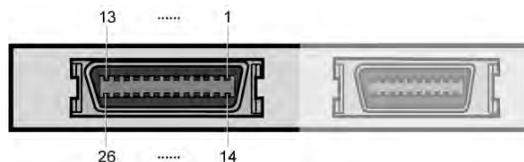


Fig. 30: X.21 interface (26-pole mini Delta ribbon socket)

The 26-pole mini Delta ribbon socket has the following pin assignment:

#### Pin assignment of 26-pole mini Delta ribbon socket

Signal	Pin no.	X.21 (DB-15)	X.21 (DB-15)	V.35 (M34)	V.35 (M34)	V.36 (DB-37)	V.36 (DB-37)
		DTE	DCE	DTE	DCE	DTE	DCE
Shield	A1 (1)	1	1	A	A	1	1
GND	A2 (2)	8	8	B	B	19	19
TxD (B)	A3 (3)	9	11	S	T	22	24
TxD (A)	A4 (4)	2	4	P	R	4	6
RxD (B)	A5 (5)	11	9	T	S	24	22
RxD (A)	A6 (6)	4	2	R	P	6	4
RTS (B)	A7 (7)	10	12			25	27
RTS (A)	A( 8)	3	5	C	D	7	9

Signal	Pin no.	X.21 (DB-15)	X.21 (DB-15)	V.35 (M34)	V.35 (M34)	V.36 (DB-37)	V.36 (DB-37)
		DTE	DCE	DTE	DCE	DTE	DCE
CBS (B)	A9 (9)	12	10			27	25
CBS (A)	A10 (10)	5	3	D	C	9	7
RxC (B)	A11 (11)	13	14	X	W	26	35
RxC (A)	A12 (12)	6	7	V	U	8	17
Mode DCE	A13 (13)		8		B		19
Mode 0	B1 (14)			B		19	19
DTR (B)	B2 (15)					30	29
DTR (A)	B3 (16)			H	E	12	11
DCD (B)	B4 (17)					31	31
DCD (A)	B5 (18)			F	F	13	13
DSR (B)	B6 (19)					29	30
DSR (A)	B7 (20)			E	H	11	12
TxC (B)	B8 (21)			W	AA	23	23
TxC (A)	B9 (22)			U	Y	5	5
Mode 1	B10 (23)						
Mode 2	B11 (24)	8	8				
TxCE (B)	B12 (25)		13	AA	X	35	26
TxCE (A)	B13 (26)		6	Y	V	36	8

## 6.6 WEEE information



The waste container symbol with the »X« through it on the device indicates that the device must be disposed of separately from normal domestic waste at an appropriate waste disposal facility at the end of its useful service life.



Das auf dem Gerät befindliche Symbol mit dem durchgekreuzten Müllcontainer bedeutet, dass das Gerät am Ende der Nutzungsdauer bei den hierfür vorgesehenen Entsorgungsstellen getrennt vom normalen Hausmüll zu entsorgen ist.



Le symbole se trouvant sur l'appareil et qui représente un conteneur à ordures barré signifie que l'appareil, une fois que sa durée d'utilisation a expiré, doit être éliminé dans des poubelles spéciales prévues à cet effet, de manière séparée des ordures ménagères courantes.



Il simbolo raffigurante il bidone della spazzatura barrato riportato sull'apparecchiatura significa che alla fine della durata in vita dell'apparecchiatura questa dovrà essere smaltita separatamente dai rifiuti domestici nei punti di raccolta previsti a tale scopo.



El símbolo del contenedor con la cruz, que se encuentra en el aparato, significa que cuando el equipo haya llegado al final de su vida útil, deberá ser llevado a los centros de recogida previstos, y que su tratamiento debe estar separado del de los residuos urbanos.



Symbolen som sitter på apparaten med den korsade avfallstunnan betyder att apparaten när tjänat ut ska kasseras och lämnas till de förutsedda sortergårdarna och skiljas från normalt hushållsavfall.



Tegnet på apparatet som viser en avfallcontainer med et kryss over, betyr at apparatet må kastet på hertil egnet avfallssted og ikke sammen med vanlig avfall fra husholdningen.



Το σύμβολο που βρίσκεται στην συσκευή με το σταυρωμένο κοντέινερ απορριμμάτων σημαίνει, ότι η συσκευή στο τέλος της διάρκειας χρήσης της πρέπει να διατεθεί ξεχωριστά από τα κανονικά απορρίμματα στα γι' αυτό τον σκοπό προβλεπόμενα σημεία διάθεσης.



Symboliet med gennemkrydset affaldsbeholder på apparatet betyder, at apparatet, når det ikke kan bruges længere, skal bortskaffes adskilt fra normalt husholdningsaffald på et af de dertil beregnede bortskaffelsessteder.



Znajdujący się na urządzeniu symbol przekreślonego pojemnika na śmieci oznacza, że po upływie żywotności urządzenia należy go oddać do odpowiedniej placówki utylizacyjnej i nie wyrzucać go do normalnych śmieci domowych.



Het doorgehaalde symbool van de afvalcontainer op het apparaat betekent dat het apparaat op het einde van zijn levensduur niet bij het normale huisvuil mag worden verwijderd. Het moet bij een erkend inzamelpunt worden ingeleverd.



O símbolo com um caixote de lixo riscado, que se encontra no aparelho, significa, que o aparelho no fim da sua vida útil deve ser eliminado separadamente do lixo doméstico nos centros de recolha adequados.

## Chapter 7 Variable switching of S0 interfaces

### 7.1 Switching the S0 interfaces from external to internal

The devices **bintec R1200**, **bintec R3000** and **bintec R4100** have two or four BRI connections. All BRI connections can be operated as internal or as external S0 connections. The external S0 connections are used for connection to the network operator's ISDN network. The internal S0 connections are provided for connecting various ISDN terminals (telephone, PC, etc.). In the ex works state, the BRI connections are configured as external connections.

The two S0 interfaces BRI-1 and BRI-2 can be switch from external (ex works state) to internal via a link plug field on the PCB for the device. Additional interfaces BRI-3 and BRI-4 can be switched via the link plugs on the side of the ISDN-L module.

If you use a S0 interface as an internal connection, you can specify for each interface whether or not the connection is powered via your device when the connected terminal does not have its own power supply. The respective link plugs must be moved to do this.

In addition, you can switch the 100 Ohm terminators on/off for each interface via additional link plugs. You require terminators:

- if you connect an external connection directly with the external NTBA
- for a point-to-point connection
- if the bus starts directly with the connection of your device

You can also connect the interfaces BRI-3 and BRI-4 to each other. This can guarantee the power supply for a terminal on an BRI interface switched to internal mode in the event that your device is switched off or the power supply fails. For example, an external S0 can be placed on an internal S0. In this case, an idle relay loops through from external S0 to internal S0 and so creates an emergency supply for the internal S0 bus/telephone.



#### Warning


Always remove the power cord before opening the device. This is the only way of ensuring that the internal mains unit is completely dead. If you do not remove the power cord, there is a risk of injury or death.

Note that the device should only be opened by trained service personnel.


To carry out the switch proceed as follows:

Unscrew the two screws on the back of the device and slide the cover upwards.

The link plugs for the BRI-1 and BRI-2 interfaces can be found on all devices on the main PCB behind the terminal block.

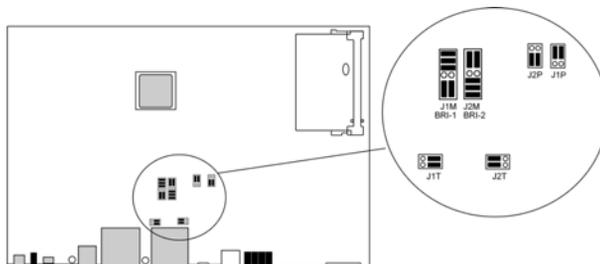


Insert the link plugs for interfaces BRI-1 and BRI-2 as shown in the following figure:

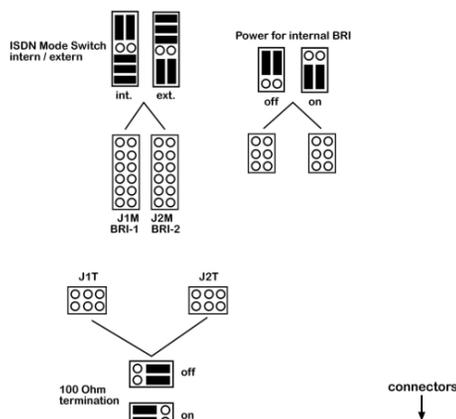


Use	Interface	Link plug area	Position	Position
Internal/external switching	BRI-1	J1M	Internal 	external 
Internal/external switching	BRI-2	J2M	Internal 	external 
Power supply for internal connection	BRI-1	J1P	Off 	On 
Power supply for internal connection	BRI-2	J2P	Off 	On 
100 Ohm terminator	BRI-1	J1T	Off 	On 

Use	Interface	Link plug area	Position	Position
100 Ohm terminator	BRI-2	J2T	Off 	On 

You can also switch the interfaces BRI-3 and BRI-4. The link plugs are on the side of the ISDN-L module.

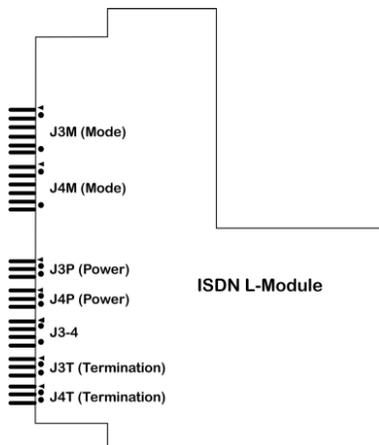

Insert the link plugs for interfaces BRI-3 and BRI-4 as shown in the following figure:

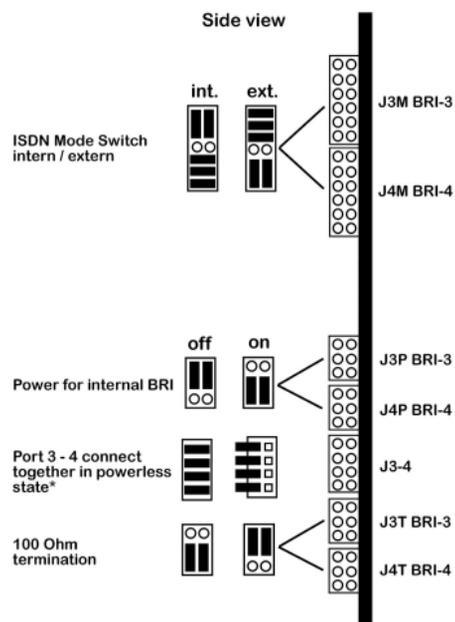

\* "on" position is only allowed if J3M BRI-3 is in "int." Mode and "J4M BRI-4" is in "ext." Mode

\* "on" is only permitted, if J3M BRI-3 is set to internal mode and J4M BRI-4 is set to external mode.

Use	Interface	Link plug area	Position	Position
Internal/external switching	BRI-3	J3M	Internal 	external 
Internal/external switching	BRI-4	J4M	Internal 	external 
Power supply for internal connection	BRI-3	J3P	Off 	On 
Power supply for internal connection	BRI-4	J4P	Off 	On 
100 Ohm terminator	BRI-3	J3T	Off 	On 
100 Ohm terminator	BRI-4	J4T	Off 	On 
Connection of BRI-3 and BRI-4	-	J3-4	Off 	On 

## Chapter 8 Access and configuration

This chapter describes all the access and configuration options.

### 8.1 Access Options

The various access options are presented below. Select the procedure to suit your needs.

There are various ways you can access your device to configure it:

- Via your LAN
- Via the serial interface
- Via an ISDN connection

#### 8.1.1 Access via LAN

Access via one of the Ethernet interfaces of your device allows you to open the **Funkwerk Configuration Interface** in a web browser for configuration purposes and to access your device via Telnet or SSH.



#### Caution

If you carry out the initial configuration with the **Funkwerk Configuration Interface**, this can result in inconsistencies or malfunctions, as soon as you carry out additional settings using other configuration options. Therefore, it is recommended that the configuration is continued with the **Funkwerk Configuration Interface**. If you use SNMP shell commands, continue with this configuration method.

##### 8.1.1.1 HTTP/HTTPS

With a current web browser, you can use the HTML interfaces to configure your device. For this, enter the following in your web browser's address field:

- `http://192.168.0.254`

or

`https://192.168.0.254`

### 8.1.1.2 Telnet

Apart from configuration using a web browser, with a Telnet connection you can also access the SNMP shell and use other configuration options.

You do not need any additional software on your PC to set up a Telnet connection to your device: Telnet is available on all operating systems.

Proceed as follows:

#### Windows

- (1) Click **Run...** in the Windows Start menu.
- (2) Enter `telnet <IP address of your device>`.
- (3) Click **OK**.  
A window with the login prompt appears. You are now in the SNMP shell of your device.
- (4) Continue with *Logging in for Configuration* on page 76.

#### Unix

You can also set up a Telnet connection on UNIX and Linux without any problem:

- (1) Enter `telnet <IP address of your device>` in a terminal.  
A window with the login prompt appears. You are now in the SNMP shell of your device.
- (2) Continue with *Logging in for Configuration* on page 76.

### 8.1.1.3 SSH

In addition to the unencrypted and potentially viewable Telnet session, you can also connect to your device via an SSH connection. This is encrypted, so all the remote maintenance options can be carried out securely.

The following preconditions must be met in order to connect to the device via SSH:

- The encryption keys needed for the process must be available on the device.
- An SSH client must be installed on your PC.

#### Encryption keys

First of all, make sure that the keys for encrypting the connection are available on your device:

- (1) Log in to one of the types already available on your device (e.g. via Telnet - for login

see [Logging in](#) on page 75).

- (2) Enter `update -i` for the input prompt. You are now in the Flash Management shell.
- (3) Call up a list of all the files saved on the device: `ls -al`.

If you see a display like the one below, the keys needed are already there and you can connect to the device via SSH:

```
Flash-Sh > ls -al

Flags Version Length Date Name ...

Vr-xpbc-B 7.1.04 2994754 2004/09/02 14:11:48 box150_srel.ppc860
Vrw-pl--f 0.0 350 2004/09/07 10:44:14 sshd_host_rsa_key.pub
Vrw-pl--f 0.0 1011 2004/09/07 10:44:12 sshd_host_rsa_key
Vrw-pl--f 0.0.01 730 2004/09/07 10:42:17 sshd_host_dsa_key.pub
Vrw-pl--f 0.0.01 796 2004/09/07 10:42:16 sshd_host_dsa_key

Flash-Sh >
```



#### Note

The device generates a key pair for each of the algorithms (RSA and DSA), i.e. two files must be stored in the flash for each algorithm (see example at above).

If no keys are available, you have to generate these first. Proceed as follows:

- (1) Leave the Flash Management shell with `exit`.
- (2) Call the **Funkwerk Configuration Interface** and log on to your device (see [Calling the Funkwerk Configuration Interface](#) on page 79).
- (3) Make sure that *English* is selected as the language.
- (4) Check the key status in the **System Management -> Administrative Access -> SSH** menu. If both keys are available, you will see the *Generated* value in the two **RSA key Status** and **DSA key Status** fields.
- (5) If one or both of these fields contains the value *Not Generated*, you must generate the relevant key. To have the device generate the key, click **Generate**.  
The device generates the key and stores it in the FlashROM. *Generated* indicates that generation was successful.
- (6) Make sure that both keys have been successfully generated. If necessary, repeat the procedure described above.

## Login via SSH

Proceed as follows to log in on your device via SSH:

If you have made sure that all the keys needed are available on the device, you have to check whether an SSH client is installed on your PC. Most UNIX and Linux distributions install a SSH client by default. Additional software, e.g. PuTTY, usually has to be installed on a Windows PC.

Proceed as follows to log in on your device via SSH:

## UNIX

- (1) Enter `ssh <IP address of the device>` in a terminal.  
The login prompt window appears. This is located in the SNMP shell of the device.
- (2) Continue with *Logging in* on page 75.

## Windows

- (1) How an SSH connection is set up very much depends on the software used. Consult the documentation for the program you are using.  
As soon as you have connected to the device, the login prompt window will appear. You are now in the SNMP shell of your gateway.
- (2) Continue with *Logging in* on page 75.



### Note

PuTTY requires certain settings for a connection to a **bintec** device. The support pages of <http://www.funkwerk-ec.com> include FAQs, which list the required settings.

## 8.1.2 Access via the Serial Interface

Each **bintec** gateway has a serial interface, with which a PC can be connected directly. The following chapter describes what you have to remember when setting up a serial connection and what you can do to configure your device in this way.

Access via the serial interface is ideal if you are setting up an initial configuration of your device and a LAN access is not possible via the pre-configured IP address (192.168.0.254/255.255.255.0).

## Windows

If you are using a Windows PC, you need a terminal program for the serial connection, e.g. HyperTerminal. Make sure that HyperTerminal was also installed on the PC with the Win-

dows installation. However, you can also use any other terminal program that can be set to the corresponding parameters (see below).

Proceed as follows to access your device via the serial interface:

- (1) In the Windows Start menu, click **Programs -> Accessories -> Communication -> HyperTerminal -> Device on COM1** (or **Device on COM2**, if you use the COM2 port of your PC) to start HyperTerminal.
- (2) Press **Return** (at least once) after the HyperTerminal window opens.

A window with the login prompt appears. You are now in the SNMP shell of your device. You can now log in on your device and start the configuration.

## Check

If the login prompt does not appear after you press **Return** several times, the connection to your device has not been set up successfully.

Therefore, check the COM1 or COM2 settings on your PC.

- (1) Click on **File ->Properties**.
- (2) Click **Configure** in the **Connect to** tab.  
The following settings are necessary:
  - Bits per second: *9600*
  - Data bits: *8*
  - Parity: *open*
  - Stopbits: *1*
  - Flow control: *open*
- (3) Enter the values and click **OK**.
- (4) Make the following settings in the **Settings** tab:
  - Emulation: *VT100*
- (5) Click **OK**.

The changes to the terminal program settings do not take effect until you disconnect the connection to your device and then make the connection again.

If you use HyperTerminal, there may be problems with displaying umlauts and other special characters. If necessary, therefore, set HyperTerminal to *Autodetection* instead of *VT100*.

## Unix

You will require a terminal program such as `cu` (on System V), `tip` (on BSD) or `minicom` (on Linux). The settings for these programs correspond to those listed above.

Example of a command line for using `cu`: `cu -s 9600 -c/dev/ttyS1`

Example of a command line for using `tip`: `tip -9600 /dev/ttyS1`

### 8.1.3 Access over ISDN

All devices that have an ISDN interface can be accessed and configured from another device via an ISDN call.

Access over ISDN with ISDN Login is especially recommended if your device is to be remotely configured or maintained. This is also possible even if your device is still in the ex works state. Access is then obtained with the aid of a device that is already configured or a PC with an ISDN card in the remote LAN. The device to be configured in your own LAN is reached via a number of the ISDN connection (e.g. 1234). This enables the administrator in the Remote LAN to configure your device remotely, for example.



#### Note

If you connect an unconfigured device to an ISDN connection in parallel to a PBX, the PBX cannot take any calls until an ISDN number is configured on the device.

Access over ISDN costs money. If your device and your computer are in the LAN, it is cheaper to access your device via the LAN or via the serial interface.

Your device in your LAN merely needs to be connected to the ISDN connection and switched on.

To reach your device over ISDN Login, proceed as follows:

- (1) Connect your device to the ISDN.
- (2) Log in as administrator on your device in the remote LAN in the usual way.
- (3) In the SNMP shell, type in `isdnlogin <number of the ISDN connection of your device>`, e.g. `isdnlogin 1234`.
- (4) The login prompt appears. You are now in the SNMP shell of your device.

Continue with [Logging in for Configuration](#) on page 76.

## 8.2 Logging in

With certain access data, you can log in on your device and carry out different actions. The extent of the actions available depend on the authorisations of the user concerned.

A login prompt appears first, regardless of how you access your device. You cannot view any information on the device or change the configuration without authentication.

## 8.2.1 User names and passwords in ex works state

In its ex works state, your device is provided with the following user names and passwords:

### User names and passwords in ex works state

User Name	Password	Authorisations
admin	funkwerk	Read and change system variables, store configurations; use <b>Funkwerk Configuration Interface</b> .
write	public	Read and write system variables (except passwords) (changes are lost when you switch off your device).
read	public	Read system variables (except passwords).

It is only possible to change and save configurations if you log in with the user name `admin`. Access information (user names and passwords) can also only be changed if you log in with the user name `admin`. For security reasons, passwords are normally shown not in plain text but only as asterisks. The user names, on the other hand, are displayed as plain text.

The security concept of your device enables you to read all the other configuration settings with the user name `read`, but not the access information. It is therefore impossible to log in with `read`, read the password of the `admin` user and subsequently log in with `admin` and make changes to the configuration.



### Caution

All **bintec** devices are delivered with the same username and password. As long as the password remains unchanged, they are therefore not protected against unauthorised use. How to change the passwords is described in [Passwords](#) on page 103.

Make sure you change the passwords to prevent unauthorised access to your device!

If you have forgotten your password, you must reset your device to the ex works state, which means your configuration will be lost.

## 8.2.2 Logging in for Configuration

Set up a connection to the device. The access options are described in [Access Options](#) on page 70.

## Funkwerk Configuration Interface

Log in via the HTML surface as follows:

- (1) Enter your user name in the **User** field of the input window.
- (2) Enter your password in the **Password** field of the input window and confirm with **Return** or click the **Login** button.

The status page of the **Funkwerk Configuration Interface** opens in the browser.

## SNMP shell

Log into the SNMP shell as follows:

- (1) Enter your user name e.g. `admin`, and confirm with **Return**.
- (2) Enter your user password e.g. `funkwerk`, and confirm with **Return**.

Your device logs in with the input prompt, e.g. `R100wu:>`. The login was successful. You are now in the SNMP shell.

To leave the SNMP shell after completing the configuration, enter `exit` and press **Return**.

## 8.3 Configuration options

This chapter first offers an overview of the various tools you can use for configuration of your device.

You can configure your device in the following ways:

- **Funkwerk Configuration Interface**
- Assistant
- SNMP shell commands

The configuration options available to you depend on the type of connection to your device:

### Types of connections and configurations

Type of connection	Possible types of configuration
LAN	Assistant, <b>Funkwerk Configuration Interface</b> , shell commands
Serial connection	Shell command

Therefore, several types of configuration are available for each type of connection.

**Note**

To change the device configuration, you must log in with the user name `admin`. If you do not know the password, you cannot make any configuration settings. This applies to all types of configuration.

### 8.3.1 Funkwerk Configuration Interface

The **Funkwerk Configuration Interface** is a web-based graphic user surface that you can use from any PC with an up-to-date web browser via an HTTP or HTTPS connection.

You can use the **Funkwerk Configuration Interface** to carry out all configuration tasks easily. It is integrated in your device and is available in English. If required, other languages can be downloaded from the download area [Software & Configuration](#) on page 489 of [www.funkwerk-ec.com](http://www.funkwerk-ec.com) and installed on your device. To do this, proceed as described in .

The settings you make with the **Funkwerk Configuration Interface** are applied with the **OK** or **Apply** button of the menu, and you do not have to restart the device.

If you finish the configuration and want to save your settings so that they are loaded as the boot configuration when you reboot your device, save these by clicking the **Save configuration** button.

You can also use the **Funkwerk Configuration Interface** to monitor the most important function parameters of your device.

The screenshot displays the Funkwerk R1200 configuration interface. At the top, there is a navigation bar with 'Language' set to 'English', 'View' set to 'Standard', and buttons for 'Online Help' and 'Logout'. The 'funkwerk' logo is visible in the top right corner.

On the left side, there is a vertical menu with various configuration categories: 'Save configuration', 'Assistants', 'System Management', 'Status', 'Global Settings', 'Interface Mode / Bridge Groups', 'Administrative Access', 'Remote Authentication', 'Certificates', 'Physical Interfaces', 'LAN', 'Wireless LAN', 'Routing', 'WAN', 'VPN', 'Firewall', 'VoIP', 'Local Services', 'Maintenance', 'External Reporting', and 'Monitoring'.

The main content area is divided into several sections:

- Automatic Refresh Interval:** Set to 60 Seconds, with an 'Apply' button.
- Warning:** System Password not changed!
- System Information:**
  - Uptime: 2 Day(s) 22 Hour(s) 27 Minute(s)
  - System Date: Mon Jan 16 23:53:01 2006
  - Serial Number: R1E180006500018
  - BOSS Version: V.7.9 Rev. 5 IPsec from 2009/11/09 00:00:00
- Resource information:**
  - CPU Usage: 0%
  - Memory Usage: 22.1/31.9 MB (70%)
  - ISDN Usage External: 0 / 4B Channels
  - Active Sessions (SIF, RTP, etc...): 0
  - Active IPsec Tunnels: 0 / 0
- Physical Interface:** A table showing the status of various interfaces.

Physical Interface	Interface Specifics	Link
en1-0	192.168.0.254/255.255.255.0	+
en1-4	Not configured / Not configured	-
WLAN1	Off	-
com0-8	Not configured	-
bri2-0	Not configured	-
bri2-1	Not configured	-
	Configured	-
- Recent System Logs:** A table showing system events.

Time	Level	Subsystem	Message
01:25:24	Information	VoIP	PABX: Adminstatus is disabled, all PABX features will be disabled
01:25:23	Information	IPsec	init: starting...
01:25:23	Information	IPsec	BinTec ipsecd version 3.0 Copyright (c) 1996-2009 by Funkwerk Enterprise Communications GmbH
01:25:23	Information	IPsec	init: running
01:25:23	Information	INET	sshd: pid 57 - listening on 0.0.0.0 port 22
01:25:22	Information	Configuration	system r1200 started at Sat Jan 14 1:25:22 2006
01:25:21	Debug	Ethernet	en1-0: add multicast 01:00:5e:00:00:02
01:25:21	Debug	Ethernet	en1-0: add multicast 01:00:5e:00:00:16
01:25:21	Debug	HTTP	httpd[25]: perm: unable to read key file
01:25:21	Debug	HTTP	httpd[25]: using default certificate

Fig. 32: Funkwerk Configuration Interface Initial Screen

### 8.3.1.1 Calling the Funkwerk Configuration Interface

- (1) Check whether the device is connected and switched on and that all the necessary cables are correctly connected (see *Setting up and connecting* on page 6).
- (2) Check the settings of the PC from which you want to configure your device (see *Configuring a PC* on page 16).
- (3) Open a web browser.
- (4) Enter `http://192.168.0.254` in the address field of the web browser.
- (5) Enter `admin` in the **User** field and `funkwerk` in the **Password** field and click **LOGIN**.

You are not in the status menu of your device's **Funkwerk Configuration Interface** (see *Status* on page 98).

### 8.3.1.2 Operating elements

#### Funkwerk Configuration Interface window

The **Funkwerk Configuration Interface** window is divided into three areas:

- The header
- The navigation bar
- The main configuration window

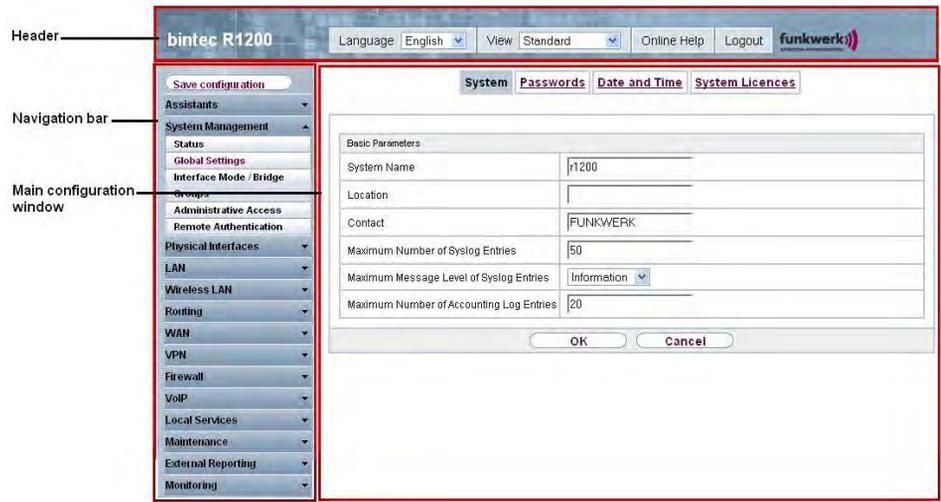


 
Fig. 33: Areas of the **Funkwerk Configuration Interface**

 
#### Header



Fig. 34: **Funkwerk Configuration Interface** header

#### Funkwerk Configuration Interface header

Menu	Function
	<p><b>Language selection:</b> From the dropdown menu, select the language in which the <b>Funkwerk Configuration Interface</b> is to be</p>

Menu	Function
	displayed. Here, you can select the language in which you want to carry out the configuration. German and English are available.
View <input type="text" value="Standard"/>	<b>View:</b> Select the desired view from the dropdown menu. Standard and SNMP browsers can be selected.
	<b>Online Help:</b> Click this button if you want help with the menu now active. The description of the sub-menu where you are now is displayed.
	<p><b>Logout:</b> If you want to end the configuration, click this button to log out of your device. A window is opened offering you the following options:</p> <ul style="list-style-type: none"> <li>• Save configuration, backup previous boot configuration, then exit.</li> <li>• Save configuration, then exit.</li> <li>• Exit without saving.</li> </ul>

### Navigation bar



Fig. 35: Save Configuration button



Fig. 36: Menus

The **Save Configuration** button is found in the navigation bar.

If you save a current configuration, you can save this as the boot configuration or you can also archive the previous boot configuration as a backup.

If you click the **Save configuration** button in the FCI, you will be asked "Do you really want to save the current configuration as a boot configuration?"

You have the following two options:

- *Save configuration*, i.e. save the current configuration as the boot configuration
- *Save configuration and backup previous boot configuration*, i.e. save the current configuration as the boot configuration and also archive the previous boot configuration as a backup.

If you want to load the archived boot configuration into your device, go to **Maintenance** -> **Software & Configuration** and select **Action** = *Restore Backup*. The archived backup is used as the current boot configuration.

The navigation bar also contains the main configuration menus and their sub-menus.

Click the main menu you require. The corresponding sub-menu then opens.

If you click the sub-menu you want, the entry selected will be displayed in red. All the other sub-menus will be closed. You can see at a glance the sub-menu you are in.

### Status page

If you call the **Funkwerk Configuration Interface**, after you log in the status page of your device is displayed. The most important data of your device can be seen on this at a glance.

 
 
### Main configuration window

The sub-menus generally contain several pages. These are called using the buttons at the top of the main window. If you click a button, the window is opened with the basic parameters. You can extend this by clicking the **Advanced Settings** tab, which displays the additional options.



### Configuration elements

The various actions that you can perform when configuring your device in the **Funkwerk Configuration** are triggered by means of the following buttons:

#### Funkwerk Configuration Interface buttons

Button	Function
	Updates the view.
	If you do not want to save a newly configured list entry, cancel this and any settings made by pressing <b>Cancel</b> .
	Confirms the settings of a new entry and the parameter changes in a list.
	Immediately starts the configured action.
	Calls the the sub-menu to create a new entry.
	Inserts an entry in an internal list.

### Funkwerk Configuration Interface buttons for special functions

  Button	Function
	In the <b>Access Point Search</b> menu, you use this button to start automatic detection of all the access points available and connected by Ethernet in the network.
	In the <b>System Management -&gt; Certificates -&gt; Certificates</b> and the <b>System Management -&gt; Certificates -&gt; CRLs</b> menus, this button opens the sub-menus for configuring the certificates or CRL imports.
	In the <b>System Management-&gt; Certificates -&gt; Certificates</b> menu, this button opens the sub-menu for the configuration of the certificate request.
	In the <b>Surveillance -&gt; ISDN/Modem -&gt; Current Calls</b> menu, clicking on this button ends the active calls selected in the column  .

Various icons indicate the following possible actions or statuses:

### Funkwerk Configuration Interface icons

Icon	Function
	Deletes the list entry.
	Displays the menu for changing the settings of an entry.
	Displays the details for an entry.
	Moves an entry. A combo box opens in which you can choose the list entry that selected entry is to be placed in front of/ after.
	Creates another list entry first and opens the configuration menu.
	Sets the status of the entry to <i>Inactive</i> .
	Sets the status of the entry to <i>Active</i> .
	Indicates "Dormant" status for an interface or connection.
	Indicates "Up" status for an interface or connection.
	Indicates "Down" status for an interface or connection.
	Indicates "Blocked" status for an interface or connection.

Icon	Function
	Indicates "Going up" status for an interface or connection.
	Indicates that data traffic is encrypted.
	Triggers a WLAN bandscan.
	Displays the next page in a list.
	Displays the previous page in a list.

You can select the following operating functions in the list view:

### Funkwerk Configuration Interface list options

Menu	Function
Update Interval	<p>Here you can set the interval in which the view is to be updated.</p> <p>To do this, enter a period in seconds in the input field and confirm it with .</p>
Filter	<p>You can have the list entries filtered and displayed according to certain criteria.</p> <p>You can determine the number of entries displayed per page by entering the required number in <b>View x per Page</b>.</p> <p>Use the  and  buttons to scroll one page forward and one page back.</p> <p>You can filter according to certain keywords within the configuration parameters by selecting the filter rule you want under <b>Filter in x &lt;Option&gt; y</b> and entering the search word in the input field.  starts the filter operation.</p>
Configuration elements	<p>Some lists contain configuration elements.</p> <p>You can therefore change the configuration of the corresponding list entry directly in the list.</p>

 


Fig. 37: Configuration of the update interval



Fig. 38: Filter list

### Structure of the Funkwerk Configuration Interface configuration menus

The menus of the **Funkwerk Configuration Interface** contain the following basic structures:

 
#### Funkwerk Configuration Interface menu structure

Menu	Function
Basic configuration menu/list	When you select a menu from the navigation bar, the menu of basic parameters is displayed first. In a sub-menu containing several pages, the menu containing the basic parameters is displayed on the first page.  The menu contains either a list of all the configured entries or the basic settings for the function concerned.
Sub-menu 	The <b>New</b> button is available in each menu in which a list of all the configured entries is displayed. Click the button to display the configuration menu for creating a new list entry.
Sub-menu 	Click this button to process the existing list entry. You go to the configuration menu.
Menu 	Click this tab to display extended configuration options.

The following options are available for the configuration:

#### Funkwerk Configuration Interface configuration elements

Menu	Function
Input fields	e.g. empty text field  Text field with hidden input  Enter the data.
Radio buttons	e.g.

Menu	Function
	 <p>Select the corresponding option.</p>
Checkboxes	<p>e.g. activation by selecting checkbox</p>  <p>Selection of several possible options</p> 
Dropdown menus	<p>e.g.</p>  <p>Click the arrow to open the list. Select the required option using the mouse.</p>
Internal lists	<p>e.g.</p>  <p>Click <b>Add</b>. A new list entry is created. Enter the corresponding data. If list input fields remain empty, these are not saved when you confirm with <b>OK</b>. Delete the entries by clicking the .</p>

### Display of options that are not available

Options that are not available because they depend on the selection of other options are generally hidden. If the display of these options could be helpful for a configuration decision, they are instead greyed out and cannot be selected.



**Important**

Please look at the messages displayed in the sub-menus. These provide information on any incorrect configurations.

**Warning symbols**

Icon	Meaning
	This symbol appears in messages referring you to settings that were made with the Setup Tool.

Icon	Meaning
	This symbol appears in messages referring you to the fact that values were entered or selected incorrectly.
Pay particular attention to the following message:	
"Warning: Changes not supported by the Setup Tool!" If you makes these changes with the <b>Funkwerk Configuration Interface</b> , this can cause inconsistencies or mal-functions. Therefore, it is recommended that the configuration is continued with the Setup Tool.	

### 8.3.1.3 Funkwerk Configuration Interface menus

The configuration options of your device are contained in the sub-menus, which are displayed in the navigation bar in the left-hand part of the window.



#### Note

Please note that not all devices have the full range of functions. Check the software of your device on the corresponding product page under [www.funkwerk-ec.com](http://www.funkwerk-ec.com).

The **Funkwerk Configuration Interface** contains the following menus:

#### Assistants

Menu	Function
<b>First steps</b>	In this menu you can make the basic settings that are required to add your gateway to your local network (LAN).
<b>Internet access</b>	The wizard guides you through the individual configuration steps to connect your local network (LAN) to the internet.
<b>VPN</b>	In this menu you are guided through all of the settings that are required to set up your LAN-LAN connection as a virtual private network.
<b>Wireless LAN</b>	Wireless LAN involves the set-up of a network using wireless technology.
<b>VoIP PBX in the LAN</b>	The assistant is required, e.g. for specific PBX in the LAN, such as <b>Hybird</b> in order to guarantee SIP compatibility. To do this, external communication is carried out over a single IP address and NAT is realised as full-cone NAT.

#### System Management

Menu	Function
<b>Status</b>	<p>In this menu, general information on your device is displayed at a glance.</p> <p>This information includes serial number, software version, current memory and processor use, status of the physical interfaces and the last 10 system messages.</p>
<b>Global Settings</b>	<p>In this menu, you enter the basic system settings of your device, such as, for example, system name, system date, system time and passwords.</p> <p>You can also manage licences that are necessary for the use of certain functions.</p>
<b>Interface Mode / Bridge Groups</b>	In this menu, you define the mode in which the interfaces of your device are to run (routing or bridging) and if necessary can define bridge groups.
<b>Administrative Access</b>	In this menu, you configure the access options for the individual interfaces.
<b>Remote Authentication</b>	In this menu, you configure the authentication via a RADIUS server or TACAS+ server.
<b>Certificates</b>	In this menu you can generate and import keys and have them certified.

### Physical Interfaces

Menu	Function
<b>AUX</b>	You can define various settings for communication between the gateway and modem in this menu.
<b>Ethernet Ports</b>	In this menu, you configure the Ethernet interfaces of your device. To do this, you select the speed and type of interface, for example.
<b>ISDN Ports</b>	In this menu, you configure the ISDN interface of your device. Here you enter data such as the type of ISDN connection to which your device is connected.
<b>ADSL Modem</b>	Only <b>R3000</b> and <b>R3000w</b> .

Menu	Function
	In this menu, you configure the ADSL interface of your device. Here you specify whether Annex A or Annex B is used as ADSL mode for the broadband connection.
<b>SHDSL</b>	Only <b>R3400</b> and <b>R3800w</b> .  In this menu, you configure the SHDSL interface of your device. Here you enter how many change pairs are used for the SHDSL connection.
<b>Serial ports</b>	Only <b>R4300</b> .  In this menu you can configure the serial WAN interface(s) for your device, i.e. one or two integrated X.21/V.35 interfaces depending on the licence. Here you enter which clock rate is used for the connection.
<b>UMTS</b>	Only <b>R1200wu</b> .  In this menu, you configure the CardBus interface of your device. Here you specify that UMTS is enabled.

**LAN**

Menu	Function
<b>IP configuration</b>	In this menu, you carry out the IP configuration of the LAN interfaces for your device.
<b>VLAN</b>	In this menu, you configure the VLANs.

**Wireless LAN (only bintec R1200w, R1200wu and R3000w)**

Menu	Function
<b>WLAN</b>	In this menu, you configure your wireless modules as an access point or as an access client.
<b>Administration</b>	In this menu, you make the basic WLAN settings.

**Routing**

Menu	Function
<b>Routes</b>	In this menu, you enter additional routes.

Menu	Function
<b>NAT</b>	In this menu, you configure the NAT firewall (NAT, Network Address Translation).
<b>RIP</b>	In this menu, you configure the dynamic updating of the routing table via RIP.
<b>Load Balancing</b>	In this menu, you configure application-controlled bandwidth management.
<b>Multicast</b>	In this menu, you configure the use of multimedia streaming protocols for e.g. voice over IP or video and audio streaming (e.g. IPTV or Webradio) or TriplePlay (voice, video, data).
<b>QoS</b>	In this menu, you configure all the "Quality of Service" settings.

#### WAN

Menu	Function
<b>Internet + Dialup</b>	In this menu, you define the Internet connections for the various connection protocols or dialup connections.
<b>ATM</b>	In this menu, you carry out configuration of the ATM profiles that are needed for all the ADSL connections and also connection monitoring (OAM) and ATM QoS.
<b>Leased Line</b>	In this menu, the permanent connections of two communication partners are displayed.
<b>Real Time Jitter Control</b>	In this menu, you can set the upstream speed.

#### VPN

Menu	Function
<b>IPSec</b>	In this menu, you configure VPN connections over IPSec.
<b>L2TP</b>	In this menu you configure the use of L2TP (Layer 2 Tunnelling Protocol).
<b>PPTP</b>	In this menu, you configure the an encrypted PPTP tunnel.
<b>GRE</b>	This menu shows a list of all configured GRE tunnels.

#### Firewall

Menu	Function
<b>Policies</b>	In this menu you configure the filter rules for the firewall.
<b>Interfaces</b>	In this menu, you can group together the interfaces to be filtered.
<b>Addresses</b>	In this menu, you can create the address aliases to be filtered.
<b>Services</b>	In this menu, you can create the service aliases to be filtered.

### VoIP

Menu	Function
<b>Application Level Gateway</b>	In this menu, you configure a proxy for IP telephony, which implements the necessary NAT and firewall releases for connection to the VoIP provider.
<b>Media Gateway</b>	In this menu, you configure a network transition between various telecommunication networks.

### Local Services

Menu	Function
<b>DNS</b>	In this menu, you configure the name resolution.
<b>HTTPS</b>	In this menu, you configure the port and certificate for a configuration session over HTTPS.
<b>DynDNS Client</b>	In this menu, you configure the dynamic name resolution.
<b>DHCP Server</b>	In this menu, you configure your device as a DHCP server.
<b>Web Filter</b>	In this menu, you configure the use of the URL-based Proventia Web Filter from ISS ( <a href="http://www.iss.net">www.iss.net</a> ).
<b>CAPI Server</b>	In this menu, you configure your device as a CAPI server.
<b>Scheduling</b>	In this menu, you configure time-dependent standard actions of your devices.
<b>Surveillance</b>	In this menu, you configure the surveillance of interfaces or hosts in the network.

Menu	Function
<b>ISDN Theft Protection</b>	In this menu you can configure the ISDN theft protection function for each interface.
<b>Funkwerk Discovery</b>	In this menu, you can configure management functions for <b>bintec</b> Access Point.
<b>UPnP</b>	In this menu, you configure the UPnP settings individually for each interface of your gateway.
<b>Hotspot Gateway</b>	In this menu, you configure the bintec Hotspot Gateway.
<b>BRRP</b>	In this menu, you can configure a redundant network environment.

### Maintenance

Menu	Function
<b>Diagnostics</b>	In this menu you can test the accessibility of hosts, DNS servers or routing.
<b>Software &amp; Configuration</b>	In this menu, you can manage your device's configuration files. You can save them either locally on your device or on your computer, for example.  You can also start an update of the system software.
<b>Reboot</b>	In this menu, you can initiate the rebooting of the device.

### External Reporting

Menu	Function
<b>Syslog</b>	In this menu, you configure the host to which the data logged internally on the device is forwarded for saving and further processing.
<b>IP Accounting</b>	In this menu, you decide for which interfaces accounting messages are to be generated.
<b>E-mail Alert</b>	Depending on the configuration, in this menu e-mails are sent to the administrator as soon as relevant syslog messages occur.
<b>SNMP</b>	In this menu, you configure whether the device is to listen for external SNMP accesses and send SNMP traps.
<b>Activity Monitor</b>	In this menu, you configure the surveillance of your device with

Menu	Function
	the Windows Tool Activity Monitor (component of <b>BRICKware</b> for Windows).

### Monitoring

Menu	Function
<b>Internal Log</b>	In this menu, the system messages are displayed.
<b>IPSec</b>	In this menu, the IPSec connections and connection statistics that are currently active are displayed.
<b>ISDN/Modem</b>	In this menu, the ISDN connections are displayed.
<b>Interfaces</b>	In this menu, connection statistics and status of all interfaces are displayed.
<b>WLAN</b>	This menu shows you the WLAN connections statistics.
<b>Bridges</b>	In this menu you can view the current values of the configured bridges.
<b>Hotspot Gateway</b>	This menu shows a list of all bintec Hotspot users.
<b>QoS</b>	In this menu, statistics are displayed for all interfaces for which QoS has been configured.

### SNMP Browser

If you select the *SNMP Browser* under **View** in the header, you will see an HTML view of all internal system MIB tables and can modify the saved values. This view is only provided for professional configuration and extended monitoring.

SNMP (Simple Network Management Protocol) is a protocol that allows access for configuring your device. All configuration parameters are stored in the MIB (Management Information Base) in the form of MIB tables and MIB variables. You can read and modify these directly via the SNMP browser.



#### Caution

This configuration method assumes an in-depth system knowledge of Funkwerk devices!

### 8.3.2 SNMP shell

SNMP (Simple Network Management Protocol) is a protocol that defines how you can access the configuration settings.

All configuration settings are stored in the MIB (Management Information Base) in the form of MIB tables and MIB variables. You can access these directly from the SNMP shell via SNMP commands. This type of configuration requires a detailed knowledge of our devices.

## 8.4 BOOTmonitor

The BOOTmonitor is only available over a serial connection to the device.

The BOOTmonitor provides the following functions, which you select by entering the corresponding number:

- (1) Boot System (reboot the system):  
The device loads the compressed boot file from the flash memory to the working memory. This happens automatically on starting.
- (2) Software Update via TFTP:  
The device performs a software update via a TFTP server.
- (3) Software Update via XMODEM:  
The device performs a software update via a serial interface with XMODEM.
- (4) Delete configuration:  
The device is reset to the ex works state. All configuration files are deleted and the BOOTmonitor settings are set to the default values.
- (5) Default BOOTmonitor Parameters:  
You can change the default settings of the BOOTmonitor of the device, e.g. the baud rate for serial connections.
- (6) Show System Information:  
Shows useful information about your device, e.g. serial number, MAC Address and software versions.

The BOOTmonitor is started as follows.

The device passes through various functional states when starting:

- Start Mode
- BOOTmonitor mode
- Normal mode

After some self-tests have been successfully carried out in the start mode, your device

reaches the BOOTmonitor mode. The BOOTmonitor prompt is displayed if you are serially connected to your device.

Press <sp> for boot monitor or any other key to boot system

```
R1200 Bootmonitor V.7.9.1 Rev. 1 from 2009/10/19 00:00:00  
Copyright (c) 1996-2005 by Funkwerk Enterprise Communications GmbH
```

```
(1) Boot System  
(2) Software Update via TFTP  
(3) Software Update via XMODEM  
(4) Delete Configuration  
(5) Default Bootmonitor Parameters  
(6) Show System Information
```

```
Your Choice> _
```

After display of the BOOTmonitor prompt, press the space bar within four seconds to use the functions of the BOOTmonitor. If you do not make an entry within four seconds, the device changes back to normal operating mode.



#### Note

If you change the baud rate (the preset value is 9600 baud), make sure the terminal program used also uses this baud rate. If this is not the case, you will not be able to establish a serial connection to the device.

## Chapter 9 Assistants

The **Wizards** menu offers step-by-step instructions for the following basic configuration tasks:

- First steps
- Internet access
- VPN
- Wireless LAN
- SWYX (only with active optional DSP module)
- VoIP PBX in the LAN

Choose the corresponding task from the navigation bar and follow the instructions and explanations on the separate pages of the Assistant.

## Chapter 10 System Management

The System Management menu contains general system information and settings.

You see a system status overview. Global system parameters such as the system name, date/time, passwords and licences are managed and the access and authentication methods are configured.

### 10.1 Status

If you log into the **Funkwerk Configuration Interface**, your device's status page is displayed, which shows the most important system information.

You see an overview of the following data:

- System status
- Your device's activities: Resource utilisation, active sessions and tunnels
- Status and basic configuration of the LAN, WAN, ISDN, WLAN, and ADSL interfaces
- Information on plugged add-on modules (if any)
- The last 10 system messages

You can customise the update interval of the status page by entering the desired period in seconds as **Automatic Update Interval** and clicking on the **Apply**-button.



#### Caution

Under **Automatic Refresh Interval** do not enter a value of less than 5 seconds, otherwise the refresh interval of the screen will be too short to make further changes!

The screenshot displays the 'bintec R1200' web interface. At the top, there are navigation options for Language (English), View (Standard), Online Help, and Logout. A 'Save configuration' button is visible. The left sidebar contains a menu with categories like Assistants, System Management, Physical Interfaces, LAN, Wireless LAN, Routing, WAN, VPN, Firewall, VoIP, Local Services, Maintenance, External Reporting, and Monitoring. The main content area is titled 'Warning: System Password not changed!' and is divided into three sections:

- System Information:**
  - Automatic Refresh Interval: 60 Seconds (Apply)
  - Uptime: 2 Day(s) 22 Hour(s) 27 Minute(s)
  - System Date: Mon Jan 16 23:53:01 2006
  - Serial Number: R1E180006500018
  - BOSS Version: V.7.9 Rev. 5 IPsec from 2009/11/09 00:00:00
- Resource information:**
  - CPU Usage: 0%
  - Memory Usage: 22.1/31.9 MB (70%)
  - ISDN Usage External: 0 / 4B Channels
  - Active Sessions (SIF, RTP, etc...): 0
  - Active IPsec Tunnels: 0 / 0
- Physical Interface:**

Physical Interface	Interface Specifics	Link
en1-0	192.168.0.254/255.255.255.0	
en1-4	Not configured / Not configured	
WLAN1	Off	
com0-8	Not configured	
bri2-0	Not configured	
bri2-1	Not configured	
	Configured	

Below these sections is a 'Recent System Logs' table:

Time	Level	Subsystem	Message
01:25:24	Information	VoIP	PABXD: Adminstatus is disabled, all PABX features will be disabled
01:25:23	Information	IPSec	init: starting...
01:25:23	Information	IPSec	BinTec ipsecd version 3.0 Copyright (c) 1996-2009 by Funkwerk Enterprise Communications GmbH
01:25:23	Information	IPSec	init: running
01:25:23	Information	INET	sshd: pid 57 - listening on 0.0.0.0 port 22
01:25:22	Information	Configuration	system r1200 started at Sat Jan 14 1:25:22 2006
01:25:21	Debug	Ethernet	en1-0: add multicast 01:00:5e:00:00:02
01:25:21	Debug	Ethernet	en1-0: add multicast 01:00:5e:00:00:16
01:25:21	Debug	HTTP	httpd[25]: pem: unable to read key file
01:25:21	Debug	HTTP	httpd[25]: using default certificate

Fig. 40: System Management -> Status

The **System Management -> Status** menu consists of the following fields:

#### Fields in the Status System Information menu

Field	Value
Uptime	Displays the time past since the device was rebooted.
System Date	Displays the current system date and system time.
Serial Number	Displays the device serial number.
BOSS Version	Displays the currently loaded version of the system software.

#### Fields in the Status Resource Information menu

Field	Value
CPU Usage	Displays the CPU usage as a percentage.
Memory Usage	Displays the usage of the working memory in MByte in relation to the available total working memory in MByte. The usage is also displayed in brackets as a percentage.

Field	Value
ISDN Usage Internal	Shows the number of active B channels and the maximum number of available B channels for internal connections.
ISDN Usage External	Shows the number of active B channels and the maximum number of available B channels for external connections.
Active Sessions (SIF, RTP, etc... )	Displays the total of all SIF, TDRC, and IP load balancing sessions.
Active IPsec Tunnels	Displays the number of currently active IPsec tunnels in relation to the number of configured IPsec tunnels.

#### Fields in the Status Module menu

Field	Value
DSP Module	Shows the type of plugged DSP module if any. An acquired fax licence, if any, can be displayed.

#### Other fields in the menu Status

Field	Value
Physical Interface - Interface Specifics - Link	<p>The physical interfaces are listed here and their most important settings are shown. The system also displays whether the interface is connected or active.</p> <p>Interface specifics for Ethernet interfaces:</p> <ul style="list-style-type: none"> <li>• IP Address</li> <li>• Netmask</li> </ul> <p>Interface specifics for serial/ISDN interfaces:</p> <ul style="list-style-type: none"> <li>• Configured</li> <li>• Not configured</li> </ul> <p>Interface specifics for xDSL interfaces:</p> <ul style="list-style-type: none"> <li>• Downstream/Upstream Line Speed</li> </ul> <p>Interface Specifics for WLAN Interfaces:</p> <p>Access Point Mode:</p> <ul style="list-style-type: none"> <li>• Operation Mode: Access Point or Off</li> <li>• The channel used on this wireless module</li> <li>• Number of connected clients</li> </ul>

Field	Value
	<ul style="list-style-type: none"> <li>• Number of WDS links</li> <li>• Software version of the wireless card</li> </ul> <p>Access Client Mode:</p> <ul style="list-style-type: none"> <li>• Operation Mode: Access Client or Off</li> <li>• The channel used on this wireless module</li> <li>• Software version of the wireless card</li> </ul>
Recent System Logs	Displays the last 10 system messages.

## 10.2 Global Settings

The basic system parameters are managed in the **Global Settings** menu.

### 10.2.1 System

The **System Management -> Global Settings -> System** menu is used for entering the basic system data of your device.

The screenshot shows the web interface for a bintec R1200 device. The top navigation bar includes 'Language English', 'View Standard', 'Online Help', 'Logout', and the 'funkwerk' logo. A left sidebar lists various system management categories, with 'System Management' expanded to show 'Global Settings' as the active selection. The main content area displays the 'System' configuration page, which includes tabs for 'System', 'Passwords', 'Date and Time', and 'System Licences'. The 'Basic Parameters' section contains the following fields:

System Name	r1200
Location	
Contact	FUNKWERK
Maximum Number of Syslog Entries	50
Maximum Message Level of Syslog Entries	Information
Maximum Number of Accounting Log Entries	20

At the bottom of the configuration area are 'OK' and 'Cancel' buttons.

Fig. 41: System Management -> Global Settings -> System

The **System Management -> Global Settings -> System** menu consists of the following

fields:

### Fields in the System Basic Parameters menu

Field	Value
System Name	<p>Enter the system name of your device. This is also used as the PPP host name.</p> <p>A character string of up to 255 characters is possible.</p> <p>The device type is entered as the default value.</p>
Location	<p>Enter the location of your device.</p>
Contact	<p>Enter the relevant contact person. Here you can enter the e-mail address of the system administrator, for example.</p> <p>A character string of up to 255 characters is possible.</p> <p>The default value is <i>FUNKWERK</i>.</p>
Maximum Number of Syslog Entries	<p>Enter the maximum number of syslog messages that are stored internally in the device.</p> <p>Possible values are <i>0</i> to <i>1000</i>.</p> <p>The default value is <i>50</i>. You can view the stored messages in <b>Monitoring -&gt; Internal Log</b>.</p>
Maximum Message Level of Syslog Entries	<p>Select the priority of system messages above which a log should be created.</p> <p>System messages are only recorded internally if they have a higher or identical priority to that indicated, i.e. all messages generated are recorded at syslog level <i>debug</i>.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Emergency</i>: Only messages with emergency priority are recorded.</li> <li>• <i>Alert</i>: Messages with emergency and alert priority are recorded.</li> <li>• <i>Critical</i>: Messages with emergency, alert and critical priority are recorded.</li> <li>• <i>Errors</i>: Messages with emergency, alert, critical and error</li> </ul>

Field	Value
	<p>priority are recorded.</p> <ul style="list-style-type: none"> <li>• <i>Warning</i>: Messages with emergency, alert, critical, error and warning priority are recorded.</li> <li>• <i>Notice</i>: Messages with emergency, alert, critical, error, warning and notice priority are recorded.</li> <li>• <i>Information</i> (default value) Messages with emergency, alert, critical, error, warning, notice and information priority are recorded.</li> <li>• <i>Debug</i>: All messages are recorded.</li> </ul>
Maximum Number of Accounting Log Entries	<p>Enter the maximum number of accounting entries that are stored internally in the device.</p> <p>Possible values are 0 to 1000.</p> <p>The default value is 20.</p>

## 10.2.2 Passwords

Setting the passwords is another basic system setting.

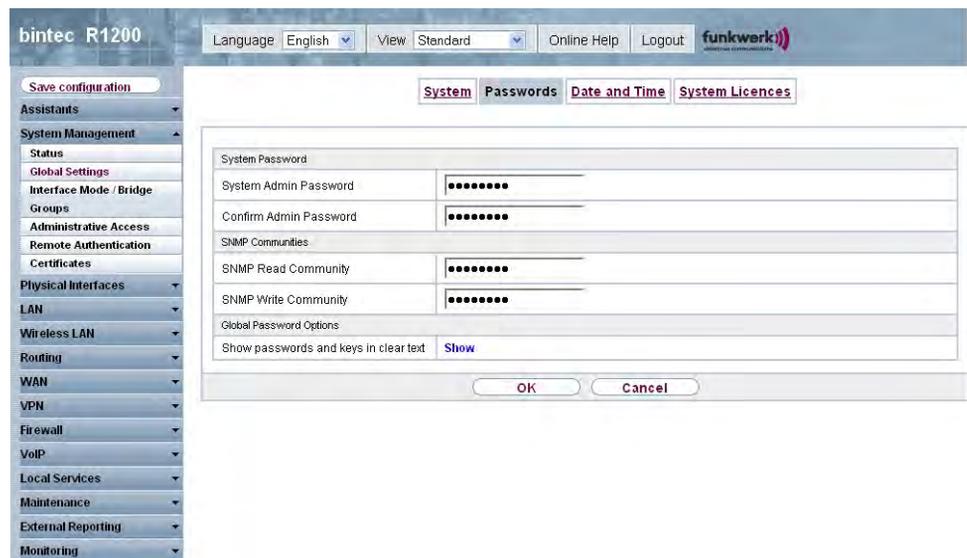


Fig. 42: System Administration -> Global Settings -> Passwords

**Note**

All **bintec** devices are delivered with the same username and password. As long as the password remains unchanged, they are not protected against unauthorised use.

Make sure you change the passwords to prevent unauthorised access to the device

If the password is not changed, under **System Administration** -> **Status** appears the warning: "System password not changed!"

The **System Management** -> **Global Settings** -> **Passwords** menu consists of the following fields:

**Fields in the Passwords System Password menu**

Field	Value
System Admin Password	Enter the password for the user name <code>admin</code> .  This password is also used with SNMPv3 for authentication (MD5) and encryption (DES).
Confirm Admin Password	Confirm the password by entering it again.

**Fields in the Passwords SNMP Communities menu**

Field	Value
SNMP Read Community	Enter the password for the user name <code>read</code> .
SNMP Write Community	Enter the password for the user name <code>write</code> .

**Fields in the Passwords Global Password Options menu**

Field	Value
Show passwords and keys in clear text	Define whether the passwords are to be displayed in clear text (plain text).  The function is activated with <code>Show</code> .  The function is disabled by default.  If you activate the function, all passwords and keys in all menus are displayed and can be edited in plain text.  The WLAN and IPSec keys are one exception here. They can only be entered in plain text. If you press <b>OK</b> or call the menu again, they are displayed as asterisks.

## 10.2.3 Date and Time

You need the system time for tasks such as correct timestamps for system messages, accounting or IPSec certificates.

The screenshot shows the configuration page for 'Date and Time' in the bintec R1200 web interface. The page has a navigation menu on the left and a main content area with several sections:

- Basic Settings:**
  - Time Zone: UTC+00
  - Current Local Time: Tue Nov 14 21:43:45 2006
- Manual Time Settings:**
  - Set Date: Fields for Day, Month, and Year.
  - Set Time: Fields for Hour and Minute.
- Automatic Time Settings (Time Protocol):**
  - ISDN Timeserver:  Enabled
  - First Timeserver: [ ] SNTP
  - Second Timeserver: [ ] SNTP
  - Third Timeserver: [ ] SNTP
  - Time Update Interval: 1440 Minute(s)
  - Time Update Policy: Normal
  - Internal Time Server:  Enabled

At the bottom of the form are 'OK' and 'Cancel' buttons.

Fig. 43: System Administration -> Global Settings -> Date and Time

You have the following options for determining the system time (local time):

### ISDN/Manual

The system time is updated via ISDN, i.e. the date and time are taken from the ISDN when the first outgoing call is made, or is set manually on the device.

If the correct location of the device (country/city) is set for the **System Time Zone**, switching from summer time to winter time (and back) is automatic. This is independent of the exchange time or the ntp server time. Summer time starts on the last Sunday in March by switching from 2 a.m. to 3 a.m. The calendar-related or schedule-related switches that are scheduled for the missing hour are then carried out. Winter time starts on the last Sunday in October by switching from 3 a.m. to 2 a.m. The calendar-related or schedule-related switches that are scheduled for the additional hour are then carried out.

If a value other than Universal Time Coordinated (UTC), option *UTC+-x*, has been chosen for the **System Time Zone**, the switch from summer to winter time must be carried out manually when required.

## Time server

You can obtain the system time automatically, e.g. using various time servers. To ensure that the device uses the desired current time, you should configure one or more time servers. Switching from summer time to winter time (and back) must be carried out manually if the time is derived using this method by changing the value in the **System Time Zone** field with an option UTC+ or UTC-.



### Note

If a method for automatically deriving the time is defined on the device, the values obtained in this way automatically have higher priority. A manually entered system time is therefore overwritten.

The **System Management** -> **Global Settings** -> **Date and Time** menu consists of the following fields:

#### Fields in the Date and Time Basic Settings menu

Field	Description
Time Zone	Select the time zone in which your device is installed.  You can select Universal Time Coordinated (UTC) plus or minus the deviation in hours or a predefined location, e.g. <i>Europe/Berlin</i> .
Current Local Time	The current date and current system time are shown here. The entry cannot be changed.

#### Fields in the Date and Time Manual Time Settings menu

Field	Description
Set Date	Enter a new date.  Format: <ul style="list-style-type: none"> <li>• <b>Day:</b> dd</li> <li>• <b>Month:</b> mm</li> <li>• <b>Year:</b> yyyy</li> </ul>
Set Time	Enter a new time.  Format:

Field	Description
	<ul style="list-style-type: none"> <li>• <b>Hour:</b> hh</li> <li>• <b>Minute:</b> mm</li> </ul>

#### Fields in the Date and Time Automatic Time Settings (Time Protocol) menu

Field	Description
ISDN Timeserver	<p>Define whether the time information received at an incoming ISDN connection is used to update the system time. If a time server is configured, the time is only determined over ISDN until a successful update is received from this time server. Updating over ISDN is deactivated for the period in which the time is determined by means of a time server.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
First Timeserver	<p>Enter the primary time server, using either a domain name or an IP address.</p> <p>In addition, select the protocol for the time server request.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>SNTP</i> (default value): This server uses the simple network time protocol with UDP port 123.</li> <li>• <i>Time Service / UDP</i>: This server uses the Time service with UDP port 37.</li> <li>• <i>Time Service / TCP</i>: This server uses the Time service with TCP port 37.</li> <li>• <i>None</i>: This time server is not currently used for the time request.</li> </ul>
Second Timeserver	<p>Enter the secondary time server, using either a domain name or an IP address.</p> <p>In addition, select the protocol for the time server request.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>SNTP</i> (default value): This server uses the simple network time protocol with UDP port 123.</li> <li>• <i>Time Service / UDP</i>: This server uses the Time service</li> </ul>

Field	Description
	<p>with UDP port 37.</p> <ul style="list-style-type: none"> <li>• <i>Time Service / TCP</i>: This server uses the Time service with TCP port 37.</li> <li>• <i>None</i>: This time server is not currently used for the time request.</li> </ul>
Third Timeserver	<p>Enter the tertiary time server, using either a domain name or an IP address.</p> <p>In addition, select the protocol for the time server request.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>SNTP</i> (default value): This server uses the simple network time protocol with UDP port 123.</li> <li>• <i>Time Service / UDP</i>: This server uses the Time service with UDP port 37.</li> <li>• <i>Time Service / TCP</i>: This server uses the Time service with TCP port 37.</li> <li>• <i>None</i>: This time server is not currently used for the time request.</li> </ul>
Time Update Interval	<p>Enter the time interval in minutes at which the time is automatically updated.</p> <p>The default value is <i>1440</i>.</p>
Time Update Policy	<p>Enter the time period after which the system attempts to contact the time server again following a failed time update.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Normal</i> (default value): The system attempts to contact the time server after 1, 2, 4, 8, and 16 minutes.</li> <li>• <i>Aggressive</i>: For ten minutes, the system attempts to contact the time server after 1, 2, 4, 8 seconds and then every 10 seconds.</li> <li>• <i>Endless</i>: For an unlimited period, the system attempts to contact the time server after 1, 2, 4, 8 seconds and then every 10 seconds.</li> </ul> <p>If certificates are used to encrypt data traffic in a VPN, it is ex-</p>

Field	Description
	tremely important that the correct time is set on the device. To ensure this is the case, for <b>Time Update Policy</b> , select the value <i>Endless</i> .
Internal Timeserver	<p>Select whether the internal timeserver is to be used.</p> <p>The function is activated by choosing <i>Enabled</i>. Time requests from a client will be answered with the current system time. This is given as GMT, without offset.</p> <p>The function is disabled by default. Time requests from a client are not answered.</p>

## 10.2.4 System Licences

This chapter describes how to activate the functions of the software licences you have purchased.

The following licence types exist:

- Licences already available in the device's ex works state
- Free extra licences
- Extra licences at additional cost

The data sheet for your device tells you which licences are available in the device's ex works state and which can also be obtained free of charge or at additional cost. You can access this data sheet at [www.funkwerk-ec.com](http://www.funkwerk-ec.com).

### Entering licence data

You can obtain the licence data for extra licences via the online licensing pages in the support section at [www.funkwerk-ec.com](http://www.funkwerk-ec.com). Please follow the online licensing instructions. (Please also note the information on the licence card for licences at additional cost.) You will then receive an e-mail containing the following data:

- **License Key** and
- **Licence Serial Number**

You enter this data in the **System Management -> Global Settings -> System Licenses -> New** menu.

In the **System Management -> Global Settings -> System Licenses** menu, a list of all registered licenses is shown (**Description, License Type, License Serial Number, Status**).

**Possible values for Status:**

Licence	Meaning
OK	Subsystem is activated.
Not OK	Subsystem is not activated.
Not supported	You have entered a licence for a subsystem your device does not support.

In addition, above the list is shown the **System License-ID** required for on-line licensing.

**Note**

To restore the standard licences for a device, click the **Default Licences** (standard licences) button.

**10.2.4.1 Edit/New**

Choose the  icon to edit existing entries. Choose the **New** button to add licences.

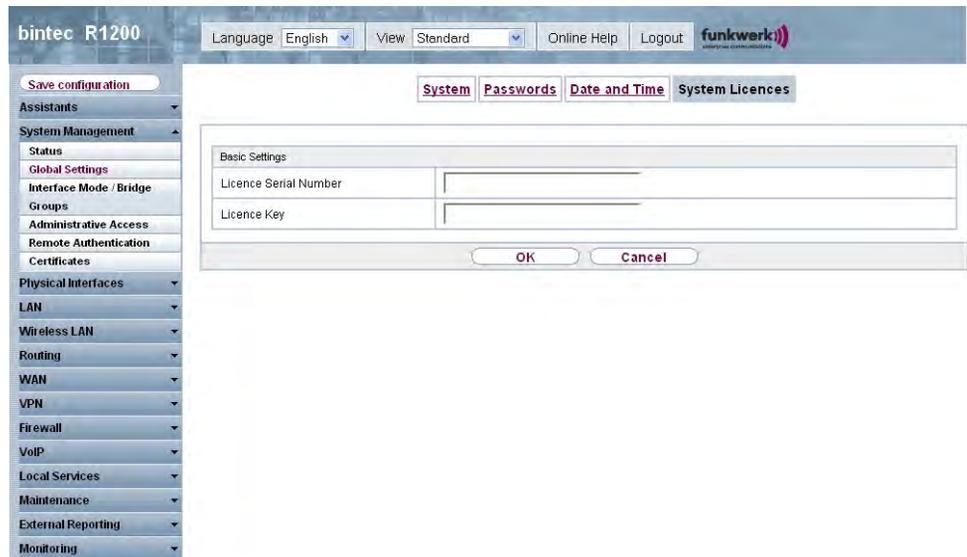


Fig. 44: **System Management -> Global Settings -> System Licences -> New**

**Activating extra licences**

You activate extra licences by adding the received licence information in the **System Man-**

**agement -> Global Settings -> System Licenses -> New** menu.

The **System Management -> Global Settings -> System Licences -> New** menu consists of the following fields:

#### Fields in the System Licences Basic Settings menu

Field	Value
Licence Serial Number	Enter the licence serial number you received when you bought the licence.
Licence Key	Enter the licence key you received by e-mail.



#### Note

If *Not OK* is displayed as the status:

- Enter the licence data again.
- Check your hardware serial number.

If *Not Supported* is displayed as the status, you have entered a license for a sub-system that your device does not support. This means you cannot use the functions of this licence.

#### Deactivating a licence

Proceed as follows to deactivate a licence:

- (1) Go to **System Management -> Global Settings -> System Licenses**.
- (2) Press the  icon in the line containing the licence you want to delete.
- (3) Confirm with **OK**.

The licence is deactivated. You can reactivate your additional licence at any time by entering the valid licence key and licence serial number.

## 10.3 Interface Mode / Bridge Groups

In this menu, you define the operation mode for your device's interfaces.

### Routing versus bridging

Bridging connects networks of the same type. In contrast to routing, bridges operate at layer 2 of the OSI model (data link layer), are independent of higher-level protocols and transmit data packets using MAC addresses. Data transmission is transparent, which means the

information contained in the data packets is not interpreted.

With routing, different networks are connected at layer 3 (network layer) of the OSI model and information is routed from one network to the other.

## Conventions for port/interface names

If your device has a radio port, it receives the interface name WLAN. If there are several radio modules, the names of wireless ports in the user interface of your device are made up of the following parts:

- (a) WLAN
- (b) Number of the physical port (1 or 2)

Example: *WLAN1*

The name of the Ethernet port is made up of the following parts:

- (a) ETH, where en stands for Ethernet
- (b) Number of the port

Example: *ETH1*

The names of the interfaces connected to an Ethernet port are made up of the following parts:

- (a) Abbreviation for interface type
- (b) Number of the Ethernet port
- (c) Number of the interface

Example: *en1-0* (first interface on the first Ethernet port)

The name of the bridge group is made up of the following parts:

- (a) Abbreviation for interface type
- (b) Number of the bridge group

Example: *br0* (first bridge group)

The name of the wireless network is made up of the following parts:

- (a) Abbreviation for interface type
- (b) Number of the wireless module
- (c) Number of the interface

Example: *vss1-0* (first wireless network on the first wireless module)

The name of the WDS link or bridge link is made up of the following parts:

- (a) Abbreviation for interface type
- (b) Number of the wireless module on which the WDS link or bridge link is configured
- (c) Number of the WDS link or bridge link

Example: *wds1-0* (first WDS link or bridge link on the first wireless module)

The name of the client link is made up of the following parts:

- (a) Abbreviation for interface type
- (b) Number of the wireless module on which the client link is configured
- (c) Number of the client link

Example: *sta1-0* (first client link on the first wireless module)

The names of the virtual interfaces connected to an Ethernet port are made up of the following parts:

- (a) Abbreviation for interface type
- (b) Number of the Ethernet port
- (c) Number of the interface connected to the Ethernet port
- (d) Number of the virtual interface

Example: *en1-0-1* (first virtual interface based on the first interface on the first Ethernet port)

### 10.3.1 Interfaces

You define separately whether each interface is to operate in routing or bridging mode.

If you want to set bridging mode, you can either use existing bridge groups or create a new bridge group.

The default setting for all existing interfaces is routing mode. On selecting the *New Bridge Group* option for **Mode / Bridge Group**, a bridge group, i.e. *br0*, *br1* etc., is automatically created and the interface is run in bridging mode.

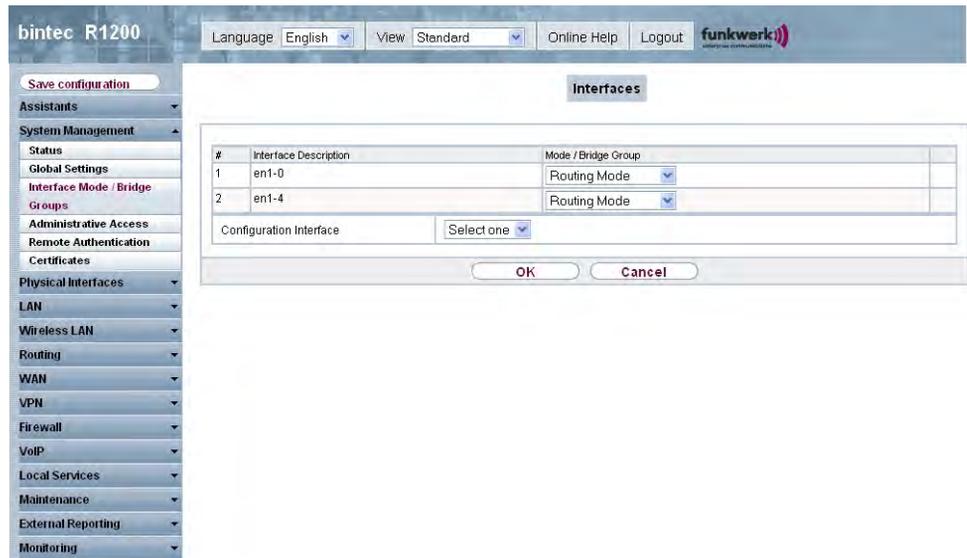


Fig. 45: System Management -> Interface Mode / Bridge Groups -> Interfaces

The **System Management -> Interface Mode / Bridge Groups -> Interfaces** menu consists of the following fields:

#### Fields in the Interfaces menu

Field	Description
#	Shows the serial number of the interface.
Interface Description	Displays the name of the interface.
Mode / Bridge Group	Select whether you want to run the interface in <i>Routing Mode</i> or whether you want to assign the interface to an existing ( <i>br0</i> , <i>br1</i> etc.) or new bridge group ( <i>New Bridge Group</i> ). If you select <i>New Bridge Group</i> , a new bridge group is created automatically when you click <b>OK</b> .
Configuration Interface	Select the interface via which the configuration is to be carried out.  Possible values: <ul style="list-style-type: none"> <li>• <i>Select one</i> (default value): Ex works setting The right configuration interface must be selected from the other options.</li> <li>• <i>Ignore</i> : No interface is defined as configuration interface.</li> <li>• <i>&lt;Interface name&gt;</i>: Select the interface to be used for configuration. If this interface is in a bridge group, it is assigned</li> </ul>

Field	Description
	the group's IP address when it is taken out of the group.

### 10.3.1.1 <stax-x> Edit

Click the  icon to edit additional settings for WLAN clients in bridge mode (so-called MAC bridge).



**Fig. 46: System Management -> Global Settings -> Interface Mode / Bridge Groups -> Edit**

You can realise bridging for devices behind access clients with the MAC Bridge function. In wildcard mode you cannot define how Unicast non-IP frames or non-ARP frames are processed. To use the MAC bridge function, you must carry out configuration steps in several menus.

- (1) Select the **Funkwerk Configuration Interface** menu **Wireless LAN -> WLANx -> Radio Settings**.
- (2) Set **Operation Mode** to *Access Client* and save the settings with **OK**.
- (3) Select the menu options **System Management -> Interface Mode / Bridge Groups -> Interfaces**. The additional interface **sta1-0** is displayed.
- (4) For interface **sta1-0** select Mode / Bridge Group = *br0* and **Configuration Interface** = *en1-0* and save the settings with **OK**.
- (5) Click the **Save Configuration** button to save all of the configuration settings. You can use the MAC Bridge.

The **System Management -> Interface Mode / Bridge Groups -> Edit** menu consists of the following fields:

#### Fields in the <stax-x> Layer 2.5 Option menu

Field	Value
Interface	Shows the interface that is being edited.
Wildcard Mode	<p>Select the Wildcard mode you want to use on the interface.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>None</i> (default value): Wildcard mode is not used.</li> <li>• <i>Static</i>: With this setting, you must enter the MAC Address of a device that is connected over IP under <b>Wildcard MAC Address</b>. Each packet without IP and without ARP is forwarded to this device. This occurs even when the device is no longer connected.</li> <li>• <i>First</i>: If you choose this setting the MAC Address of the first non-IP unicast frame or non-ARP unicast frame, which occurs on any of the Ethernet interfaces, is used as the wildcard MAC address. This wildcard MAC Address can only be reset by rebooting the device or by selecting another wildcard mode.</li> <li>• <i>Last</i>: If you choose this setting the internal WLAN MAC Address is used to establish a connection to the access point. As soon as a non-IP unicast frame or non-ARP unicast frame appears, it is forwarded to the MAC Address from which the last non-IP unicast frame or non-ARP unicast frame was received on the Ethernet interface of the device. This wildcard MAC Address is renewed with each non-IP unicast frame or non-ARP unicast frame.</li> </ul>
Wildcard MAC Address	<p>Only for <b>Wildcard Mode</b> = <i>Static</i></p> <p>Enter the MAC Address of a device that is connected over IP.</p>
Transparent MAC Address	<p>Only for <b>Wildcard Mode</b> = <i>Static, First</i></p> <p>Choose whether or not the <b>Wildcard MAC Address</b> is used in addition to the WLAN MAC Address to establish the connection to the access point.</p> <p>The function is activated with <i>Enabled</i>.</p>

Field	Value
	The function is disabled by default.

## 10.4 Administrative Access

In this menu, you can configure the administrative access to the device.

### 10.4.1 Access

In the **Administrative Access** -> **Access** menu, a list of all IP-configurable interfaces is shown.

The screenshot shows the 'bintec R1200' web interface. The top navigation bar includes 'Language English', 'View Standard', 'Online Help', and 'Logout'. The left sidebar contains a menu with 'Administrative Access' highlighted. The main content area shows the 'Access' configuration page with sub-tabs for 'Access', 'SSH', and 'SNMP'. A table lists the following interfaces and their access parameters:

Interface	Telnet	SSH	HTTP	HTTPS	Ping	SNMP	ISDN Login
en1-0	<input checked="" type="checkbox"/>	<input type="checkbox"/>					
en1-4	<input checked="" type="checkbox"/>	<input type="checkbox"/>					
br0	<input checked="" type="checkbox"/>	<input type="checkbox"/>					
bri2-0	<input type="checkbox"/>	<input checked="" type="checkbox"/>					
bri2-1	<input type="checkbox"/>	<input checked="" type="checkbox"/>					

Buttons: Add, OK, Cancel

Fig. 47: System Management -> Administrative Access -> Access

For the Ethernet interface you can select the access parameters *Telnet*, *SSH*, *HTTP*, *HT-TPS*

, *Ping*, *SNMP*, and for the ISDN interfaces you can select *ISDN Login*.

### 10.4.1.1 Add

Press the **Add** button to configure administrative access for additional interfaces.

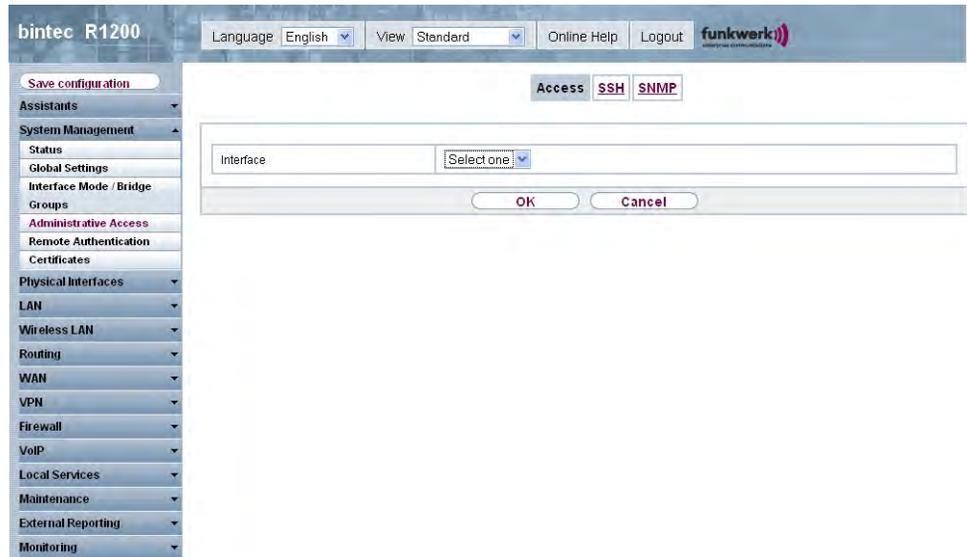


Fig. 48: **System Management -> Administrative Access -> Access -> Add**

The **System Management -> Administrative Access -> Access -> Add** menu consists of the following fields:

#### Fields in the Access menu

Field	Description
Interface	Select the interface for which administrative access is to be configured.

### 10.4.2 SSH

Your devices offers encrypted access to the shell. You can enable ( **enabled**, default value) or disable this access in the **System Management -> Administrative Access -> SSH** menu and have access to the options for configuration of the SSH login.

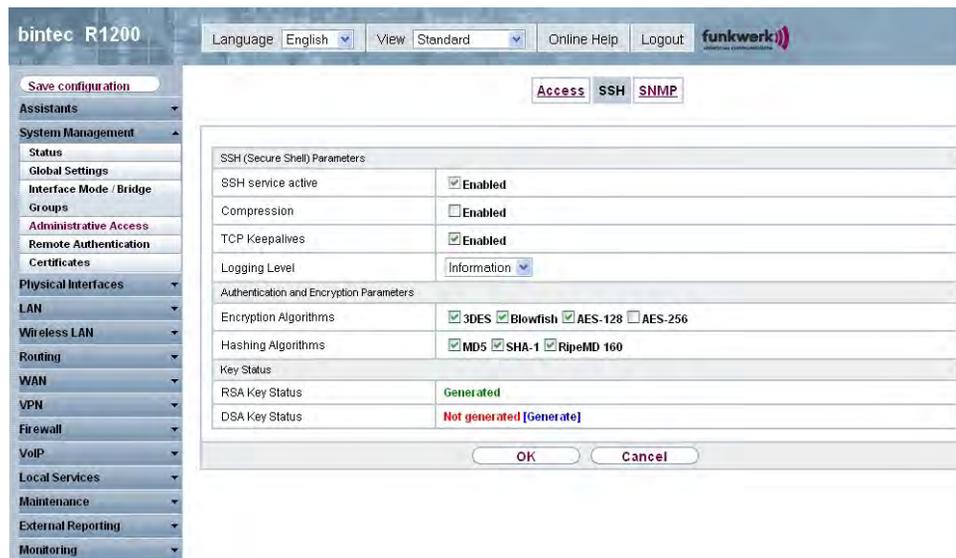


Fig. 49: System Management -> Administrative Access -> SSH

You need an SSH client application, e.g. PuTTY, to be able to reach the SSH Daemon.

If you wish to use SSH Login together with the PuTTY client, you may need to comply with some special configuration requirements, for which we have prepared FAQs. You will find these in the Service/Support section at [www.funkwerk-ec.com](http://www.funkwerk-ec.com).

To be able to reach the shell of your device via an SSH client, make sure the settings for the SSH Daemon and SSH client are the same.



#### Note

If configuration of an SSH connection is not possible, restart the device to initialise the SSH Daemon correctly.

The **System Management -> Administrative Access -> SSH** menu consists of the following fields:

#### Fields in the SSH SSH (Secure Shell) Parameters menu

Field	Value
SSH service active	Select whether the SSH Daemon is to be enabled for the interface.  The function is activated by choosing <i>Enabled</i> .

Field	Value
	The function is enabled by default.
Compression	Select whether data compression should be used.  The function is activated by choosing <i>Enabled</i> .  The function is disabled by default.
TCP Keepalives	Select whether the device is to send keepalive packets.  The function is activated by choosing <i>Enabled</i> .  The function is enabled by default.
Logging Level	Select the syslog level for the syslog messages generated by the SSH Daemon.  Possible settings: <ul style="list-style-type: none"> <li>• <i>Information</i> (default value) Fatal and simple errors of the SSH Daemon and information messages are recorded.</li> <li>• <i>Fatal</i>: Only fatal errors of the SSH Daemon are recorded.</li> <li>• <i>Errors</i>: Fatal and simple errors of the SSH Daemon are recorded.</li> <li>• <i>Debug</i>: All messages are recorded.</li> </ul>

#### Fields in the SSH Authentication and Encryption Parameters menu

Field	Value
Encryption Algorithms	Select the algorithms that are to be used to encrypt the SSH connection.  Possible options: <ul style="list-style-type: none"> <li>• <i>3DES</i></li> <li>• <i>Blowfish</i></li> <li>• <i>AES-128</i></li> <li>• <i>AES-256</i></li> </ul> <i>3DES</i> , <i>Blowfish</i> and <i>AES-128</i> and are enabled by default.
Hashing Algorithms	Select the algorithms that are to be available for message authentication of the SSH connection.

Field	Value
	<p>Possible options:</p> <ul style="list-style-type: none"> <li>• <i>MD5</i></li> <li>• <i>SHA-1</i></li> <li>• <i>RipeMD160</i></li> </ul> <p><i>MD5</i>, <i>SHA-1</i> and <i>RipeMD160</i> are enabled by default.</p>

### Fields in the SSH Key Status menu

Field	Value
RSA Key Status	<p>Shows the status of the RSA key.</p> <p>If an RSA key has not been generated yet, <i>Not Generated</i> is displayed in red and a link, <i>Generate</i>, is provided. If you select the link, the generation process is triggered and the view is updated. The status <i>Generating</i> is displayed in green. When generation has been completed successfully, the status changes from <i>Generating</i> to <i>Generated</i>. If an error occurs during generated, <i>Not Generated</i> and the <i>Generate</i> link are displayed again. You can then repeat generation.</p> <p>If the status <i>Unknown</i> is displayed, generation of a key is not possible, for example because there is not enough space in the FlashROM.</p>
DSA Key Status	<p>Shows the status of the DSA key.</p> <p>If a DSA key has not been generated yet, <i>Not Generated</i> is displayed in red and a link, <i>Generate</i>, is provided. If you select the link, the generation process is triggered and the view is updated. The status <i>Generating</i> is displayed in green. When generation has been completed successfully, the status changes from <i>Generating</i> to <i>Generated</i>. If an error occurs during generated, <i>Not Generated</i> and the <i>Generate</i> link are displayed again. You can then repeat generation.</p> <p>If the status <i>Unknown</i> is displayed, generation of a key is not possible, for example because there is not enough space in the FlashROM.</p>

### 10.4.3 SNMP

SNMP (Simple Network Management Protocol) is a network protocol used to monitor and control network elements (e.g. routers, servers, switches, printers, computers etc.) from a central station. SNMP controls communication between the monitored devices and monitoring station. The protocol describes the structure of the data packets that can be transmitted, as well as the communication process.

The data objects queried via SNMP are structured in tables and variables and defined in the MIB (Management Information Base). This contains all the configuration and status variables of the device.

SNMP can be used to perform the following network management tasks:

- Surveillance of network components
- Remote controlling and configuration of network components
- Error detection and notification

You use this menu to configure the use of SNMP.

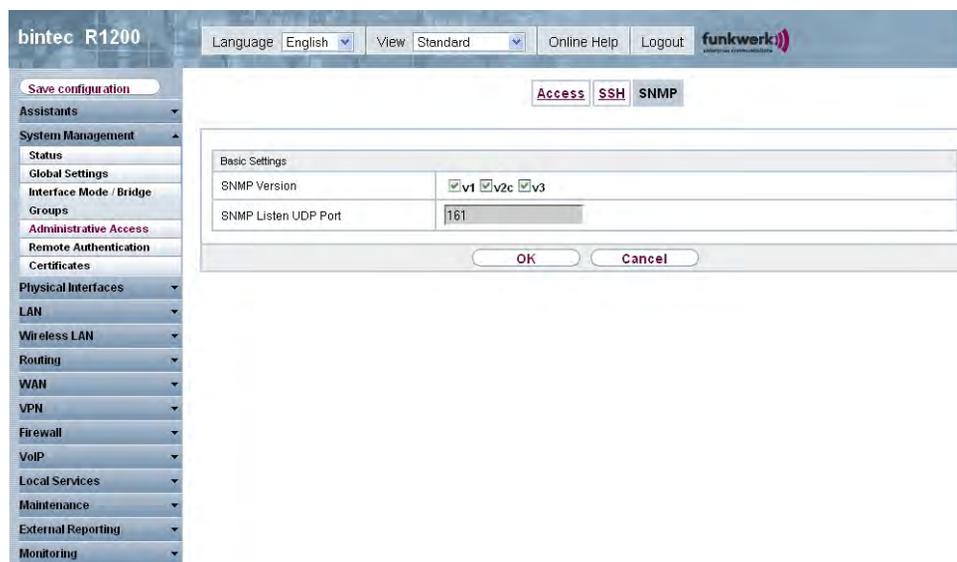


Fig. 50: System Management -> Administrative Access -> SNMP

The **Administrative Access -> Administrative Access -> SNMP** menu consists of the following fields:

**Fields in the SNMP Basic Settings menu**

Field	Value
SNMP Version	<p>Select the SNMP version your device is to use to listen for external SNMP accesses.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>v1</i>: SNMP Version 1</li> <li>• <i>v2c</i>: Community-Based SNMP Version 2</li> <li>• <i>v3</i>: SNMP Version 3</li> </ul> <p><i>v1</i>, <i>v2c</i> and <i>v3</i> are active by default.</p> <p>If no option is selected, the function is deactivated.</p>
SNMP Listen UDP Port	<p>Shows the UDP port ( <i>161</i> ) at which the device receives SNMP requests.</p> <p>The value cannot be changed.</p>



#### Tip

If your SNMP Manager supports SNMPv3, you should, if possible, use this version as older versions transfer all data unencrypted.

## 10.5 Remote Authentication

This menu contains the settings for user authentication.

### 10.5.1 RADIUS

RADIUS (Remote Authentication Dial In User Service) is a service that enables authentication and configuration information to be exchanged between your device and a RADIUS server. The RADIUS server administrates a database with information about user authentication and configuration and for statistical recording of connection data.

RADIUS can be used for:

- Authentication
- Accounting
- Exchange of configuration data

For an incoming connection, your device sends a request with user name and password to

the RADIUS server, which then searches its database. If the user is found and can be authenticated, the RADIUS server sends corresponding confirmation to your device. This confirmation also contains parameters (called RADIUS attributes), which your device uses as WAN connection parameters.

If the RADIUS server is used for accounting, your device sends an accounting message at the start of the connection and a message at the end of the connection. These start and end messages also contain statistical information about the connection (IP address, user name, throughput, costs).

## RADIUS packets

The following types of packets are sent between the RADIUS server and your device (client):

### Packet types

Field	Value
ACCESS_REQUEST	Client -> Server  If an access request is received by your device, a request is sent to the RADIUS server if no corresponding connection partner has been found on your device.
ACCESS_ACCEPT	Server -> Client  If the RADIUS server has authenticated the information contained in the ACCESS_REQUEST, it sends an ACCESS_ACCEPT to your device together with the parameters used for setting up the connection.
ACCESS_REJECT	Server -> Client  If the information contained in the ACCESS_REQUEST does not correspond to the information in the user database of the RADIUS server, it sends an ACCESS_REJECT to reject the connection.
ACCOUNTING_START	Client -> Server  If a RADIUS server is used for accounting, your device sends an accounting message to the RADIUS server at the start of each connection.
ACCOUNTING_STOP	Client -> Server

Field	Value
	If a RADIUS server is used for accounting, your device sends an accounting message to the RADIUS server at the end of each connection.

In the **System Management** -> **Remote Authentication** -> **RADIUS** menu, a list of all registered RADIUS servers is displayed.

### 10.5.1.1 Edit/New

Choose the  icon to edit existing entries. Choose the **New** button to add RADIUS servers.

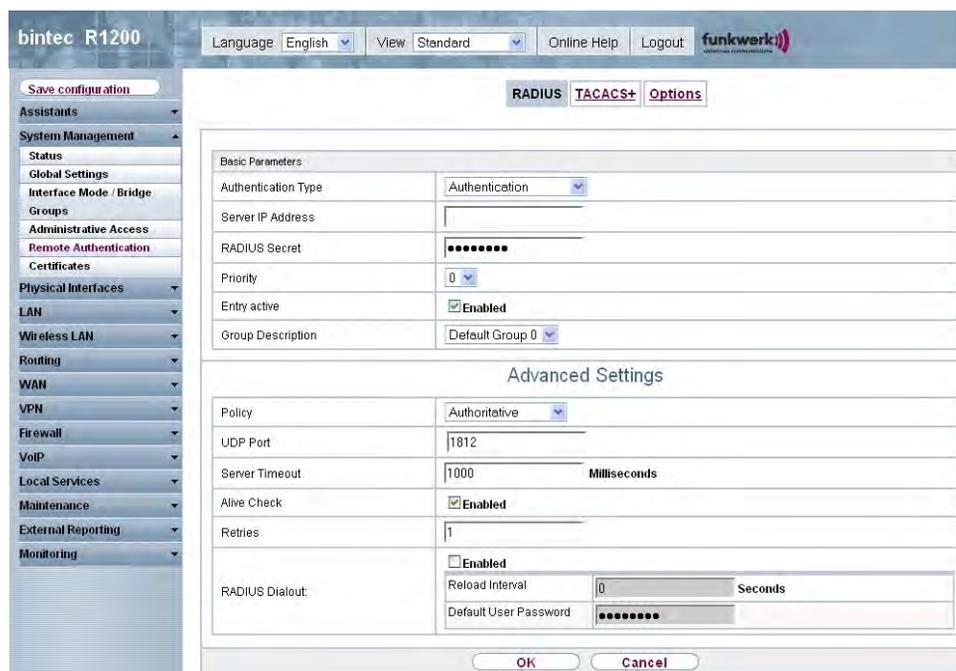


Fig. 51: **System Administration** -> **Remote Authentication** -> **RADIUS** -> **New**

The **System Administration** -> **Remote Authentication**-> **RADIUS** -> **New** menu consists of the following fields:

#### Fields in the RADIUS Basic Parameters menu

Field	Value
Authentication Type	Select what the RADIUS server is to be used for.

Field	Value
	<p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Authentication</i> (default value): The RADIUS server is used for controlling access to a network.</li> <li>• <i>Accounting</i>: The RADIUS server is used for recording statistical call data.</li> <li>• <i>Login Authentication</i>: The RADIUS server is used for controlling access to the SNMP shell of your device.</li> <li>• <i>IPSec Authentication</i>: The RADIUS server is used for sending configuration data for IPSec peers to your device.</li> <li>• <i>WLAN (802.1x)</i>: The RADIUS server is used for controlling access to a wireless network.</li> <li>• <i>XAUTH</i>: The RADIUS server is used for authenticating IPSec peers via XAuth.</li> </ul>
Vendor Mode	<p>Only for <b>Authentication Type</b> = <i>Accounting</i>.</p> <p>In hotspot applications, select the mode define by the provider.</p> <p>In standard application, leave the default value <i>Standard</i>.</p> <p>Possible values for hotspot applications:</p> <ul style="list-style-type: none"> <li>• <i>France Telecom</i>: For France Telecom hotspot applications.</li> <li>• <i>bintec HotSpot Server</i>: For bintec hotspot applications.</li> </ul>
Server IP Address	Enter the IP address of the RADIUS server.
RADIUS Secret	Enter the shared password used for communication between the RADIUS server and your device.
Priority	<p>If a number of RADIUS server entries were created, the server with the highest priority is used first. If this server does not answer, the server with the next-highest priority is used.</p> <p>Possible values from 0 (highest priority) to 7 (lowest priority).</p> <p>The default value is 0.</p> <p>See also <b>Policy</b> in the <b>Advanced Settings</b>.</p>
Entry active	Select whether the RADIUS server configured in this entry is to be used.

Field	Value
	<p>The function is activated by choosing <i>Enabled</i>.</p> <p>The function is enabled by default.</p>
Group Description	<p>Define a new RADIUS group description or assign the new RADIUS entry to a predefined group. The configured RADIUS servers for a group are queried according to <b>priority</b> and <b>policy</b>.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>New</i> (default value): Enter a new group description in the text field.</li> <li>• <i>Default Group 0</i>: Select this entry for special applications, such as Hotspot Server configuration.</li> <li>• <i>&lt;Group Name&gt;</i>: Select a predefined group from the list.</li> </ul>

The **Advanced Settings** menu consists of the following fields:

#### Fields in the menu **Advanced Settings**

Field	Value
Policy	<p>Select how your device is to react if a negative response to a request is received.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Authoritative</i> (default value): A negative response to a request is accepted.</li> <li>• <i>Non-authoritative</i>: A negative response to a request is not accepted. A request is sent to the next RADIUS server until your device receives a response from a server configured as authoritative.</li> </ul>
UDP Port	<p>Enter the UDP port to be used for RADIUS data.</p> <p>RFC 2138 defines the default ports 1812 for authentication (1645 in older RFCs) and 1813 for accounting (4,180.84 cm older RFCs). You can obtain the port to be used from the documentation for your RADIUS server.</p> <p>The default value is <i>1812</i>.</p>

Field	Value
Server Timeout	<p>Enter the maximum wait time between ACCESS_REQUEST and response in milliseconds.</p> <p>After timeout, the request is repeated according to <b>Retries</b> or the next configured RADIUS server is requested.</p> <p>Possible values are whole numbers between <i>50</i> and <i>50000</i>.</p> <p>The default value is <i>1000</i> (1 second).</p>
Alive Check	<p>Here you can activate a check of the reachability of a RADIUS server in <b>Status</b> <i>Down</i>.</p> <p>An Alive Check is carried out regularly (every 20 seconds) by sending an ACCESS_REQUEST to the IP address of the RADIUS server. If the server is reachable, <b>Status</b> is set to <i>alive</i> again. If the RADIUS server is only reachable over a switched line (dialup connection), this can cause additional costs if the server is <i>down</i> for a long time.</p> <p>The function is activated by choosing <i>Enabled</i>.</p> <p>The function is enabled by default.</p>
Retries	<p>Enter the number of retries for cases when there is no response to a request. If an answer has still not been received after these attempts, the <b>Status</b> is set to <i>down</i>. If the <b>Active Check</b> = <i>Enabled</i> your device tries to reach the server every 20 seconds. If the server answers, the <b>Status</b> is set back to <i>alive</i>.</p> <p>Possible values are whole numbers between <i>0</i> and <i>10</i>.</p> <p>The default value is <i>1</i>. To prevent <b>Status</b> being set to <i>down</i>, set this value to <i>0</i>.</p>
RADIUS Dialout	<p>Only for <b>Authentication Type</b> = <i>Authentication</i> and <i>IPSec Authentication</i>.</p> <p>Select whether your device receives requests from RADIUS server dialout routes. This enables temporary interfaces to be configured automatically and your device can initiate outgoing connections that are not configured permanently.</p> <p>The function is activated by choosing <i>Enabled</i>.</p>

Field	Value
	<p>The function is disabled by default.</p> <p>If the function is active, you can enter the following options:</p> <ul style="list-style-type: none"> <li>• <i>Reload Interval</i> Enter the time period in seconds between the update intervals.</li> </ul> <p>The default entry here is 0 i.e. an automatic reload is not carried out.</p> <ul style="list-style-type: none"> <li>• <i>Default User Password</i>: Some Radius servers require a user password for each RADIUS request. Enter the password that your device sends as the default user password in the prompt for the dialout routes on the RADIUS server.</li> </ul>

## 10.5.2 TACACS+

TACACS+ permits access control for your device, network access servers (NAS) and other network components via one or more central servers.

Like RADIUS, TACACS+ is an AAA protocol and offers authentication, authorisation and accounting services (TACACS+ Accounting is currently not supported by **bintec** devices).

The following TACACS+ functions are available on your device:

- Authentication for login shell
- Command authorisation on the shell (e.g. telnet, show)

TACACS+ uses TCP port 49 and establishes a secure and encrypted connection.

In the **System Management** -> **Remote Authentication** -> **TACACS+** menu, a list of all registered TACACS+ servers is displayed.

### 10.5.2.1 Edit/New

Choose the  icon to edit existing entries. Choose the **New** button to add TACACS+ servers.

The screenshot shows the configuration interface for a TACACS+ server on a bintec R1200 device. The interface is titled 'bintec R1200' and includes a sidebar menu on the left with 'Remote Authentication' selected. The main content area is divided into two sections: 'Basic Parameters' and 'Advanced Settings'. The 'Basic Parameters' section contains the following fields: Authentication Type (set to 'Login Authentication'), Server IP Address (empty), TACACS+ Secret (masked with dots), Priority (set to 0), and Entry active (checked). The 'Advanced Settings' section contains the following fields: Policy (set to 'Non-authoritative'), TCP Port (set to 49), Timeout (set to 3 Seconds), Block Time (set to 60 Seconds), and Encryption (checked). At the bottom of the form, there are 'OK' and 'Cancel' buttons.

Fig. 52: System Management -> Remote Authentication -> TACACS+ -> New

The **System Management -> Remote Authentication -> TACACS+ -> New** menu consists of the following fields:

#### Fields in the TACACS+ Basic Parameters menu

Field	Description
Authentication Type	Displays which TACACS+ function is to be used. The value cannot be changed.  Possible values: <ul style="list-style-type: none"> <li><i>Login Authentication</i>: Here, you can define whether the current TACACS+ server is to be used for login authentication to your device.</li> </ul>
Server IP Address	Enter the IP address of the TACACS+ server that is to be requested for login authentication.
TACACS+ Secret	Enter the password to be used to authenticate and, if applicable, encrypt data exchange between the TACACS+ server and the network access server (your device). The maximum length of the entry is 32 characters.
Priority	Assign a priority to the current TACACS+ server. The server with the lowest value is the one used first for TACACS+ login authentication. If this does not respond or access is denied (only if <b>Policy</b> = <i>Non-authoritative</i> ), the entry with the

Field	Description
	<p>next-highest priority is used.</p> <p>The available values are 0 to 9, the default value is 0.</p>
Entry active	<p>Select whether this server is to be used for login authentication.</p> <p>The function is activated by choosing <i>Enabled</i>.</p> <p>The function is enabled by default.</p>

The **Advanced Settings** menu consists of the following fields:

#### Fields in the menu Advanced Settings

Field	Description
Policy	<p>Select the interpretation of the TACACS+ response.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Non-authoritative</i> (default value): The TACACS+ servers are queried in order of their priority (see <b>Priority</b>) until a positive response is received or a negative response is received from an authoritative server.</li> <li>• <i>Authoritative</i>: A negative response to a request is accepted, i.e. a request is not sent to another TACACS+ server. The device's internal user administration is not turned off by TACACS+. It is checked after all TACACS+ servers have been queried.</li> </ul>
TCP Port	<p>Shows the default TCP port ( 49) used for the TACACS+ protocol. The value cannot be changed.</p>
Timeout	<p>Enter time in seconds for which the NAS is to wait for a response from TACACS+.</p> <p>If a response is not received during the wait time, the next configured TACACS+ server is queried (only if <b>Policy</b> = <i>Non-authoritative</i>) and the current server is set to status <i>Blocked</i>.</p> <p>The possible values are 1 to 60, the default value is 3.</p>
Block Time	<p>Enter the time in seconds for which the current server is to remain in blocked status.</p>

Field	Description
	<p>At the end of the block time, the server is set to the status specified in the <b>Administrative Status</b> field.</p> <p>The possible values are <i>0</i> to <i>3600</i>, the default value is <i>60</i>. The value <i>0</i> means that the server is never set to <i>Blocked</i> status and thus no other servers are queried.</p>
Encryption	<p>Select whether data exchange between the TACACS+ server and the NAS is to be encrypted with MD5.</p> <p>The function is activated by choosing <i>Enabled</i>.</p> <p>The function is enabled by default.</p> <p>If the function is not enabled, the packets and all related information are transferred unencrypted. Unencrypted transfer is not recommended as a default setting and should only be used for debugging.</p>

### 10.5.3 Options

This setting possible here causes your device to carry out authentication negotiation for incoming calls, if it cannot identify the calling party number (e.g. because the remote terminal does not signal the calling party number). If the data (password, partner PPP ID) obtained by executing the authentication protocol is the same as the data of a listed remote terminal or RADIUS user, your device accepts the incoming call.

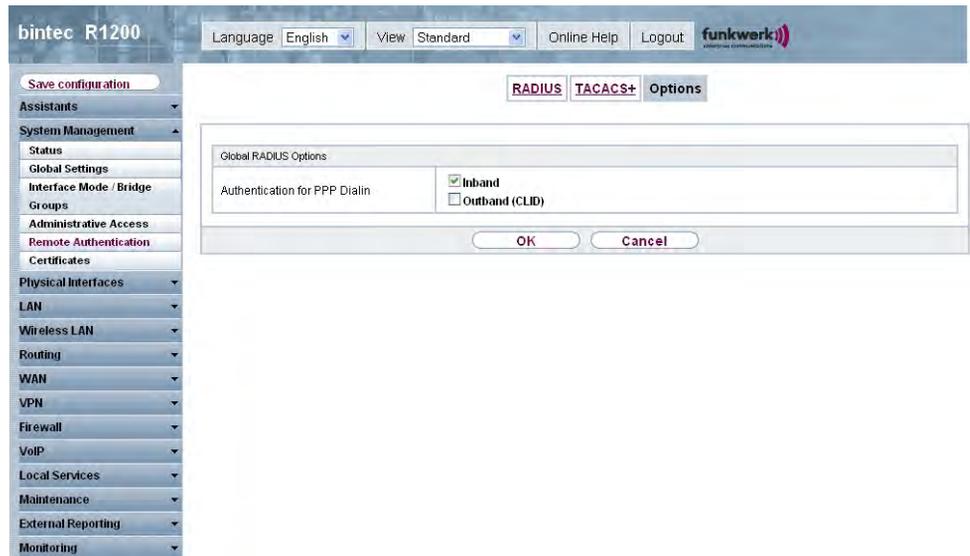


Fig. 53: System Administration -> Remote Authentication -> Options

The **System Management -> Remote Authentication -> Options** menu consists of the following fields:

#### Fields in the Options Global RADIUS Options menu

Field	Description
Authentication for PPP Dialin	<p>By default, the following authentication sequence is used for incoming calls with RADIUS: First CLID, then PPP and then PPP with RADIUS.</p> <p>Options:</p> <ul style="list-style-type: none"> <li><i>Inband</i> : Only inband RADIUS requests (PAP, CHAP, MS-CHAP V1 &amp; V2) (i.e. PPP requests without CLID) are sent to the RADIUS server defined in <b>Server IP Address</b>.</li> <li><i>Outband (CLID)</i> : Only outband RADIUS requests (i.e. requests for calling line identification, CLID) are sent to the RADIUS server.</li> </ul> <p><i>Inband</i> is activated by default.</p>

## 10.6 Certificates

An asymmetric cryptosystem is used to encrypt data to be transported in a network, to generate or check digital signatures and the authenticate users. A key pair consisting of a public key and a private key is used to encrypt and decrypt the data.

For encryption the sender requires the public key of the recipient. The recipient decrypts the data using his private key. Um sicherzustellen, dass der öffentlich Schlüssel der echte Schlüssel des Empfängers und keine Fälschung ist, wird ein Nachweis, ein sogenanntes digitales Zertifikat benötigt.

Ein digitales Zertifikat bestätigt u.a. die Echtheit und den Eigentümer eines öffentlichen Schlüssels. It is similar to an official passport in that it confirms that the holder of the passport has certain characteristics, such as gender and age, and that the signature on the passport is authentic. As there is more than one certificate issuer, e.g. the passport office for a passport, and as such certificates can be issued by several different issuers and in varying qualities, the trustworthiness of the issuer is extremely important. The quality of a certificate is regulated by the German Signature Act or respective EU Directives.

Certification authorities that issue so-called qualified certificates are organised in a hierarchy with the Federal Network Agency as the higher certifying authority. The structure and content of a certificate are stipulated by the standard used. X.509 is the most important and the most commonly use standard for digital certificates. Qualified certificates are personal and extremely trustworthy.

Digital certificates are part of a so-called Public Key Infrastructure (PKI). PKI refers to a system that can issue, distribute and check digital certificates.

Certificates are issued for a specific period, usually one year, i.e. they have a limited validity period.

Your device is designed to use certificates for VPN connections and for voice connections over Voice over IP.

### 10.6.1 Certificate List

In the **System Management** -> **Certificates** -> **Certificate List** menu a list of all available certificates is shown.

#### 10.6.1.1 Edit

Click the  icon to display the content of the selected object (key, certificate, or request).

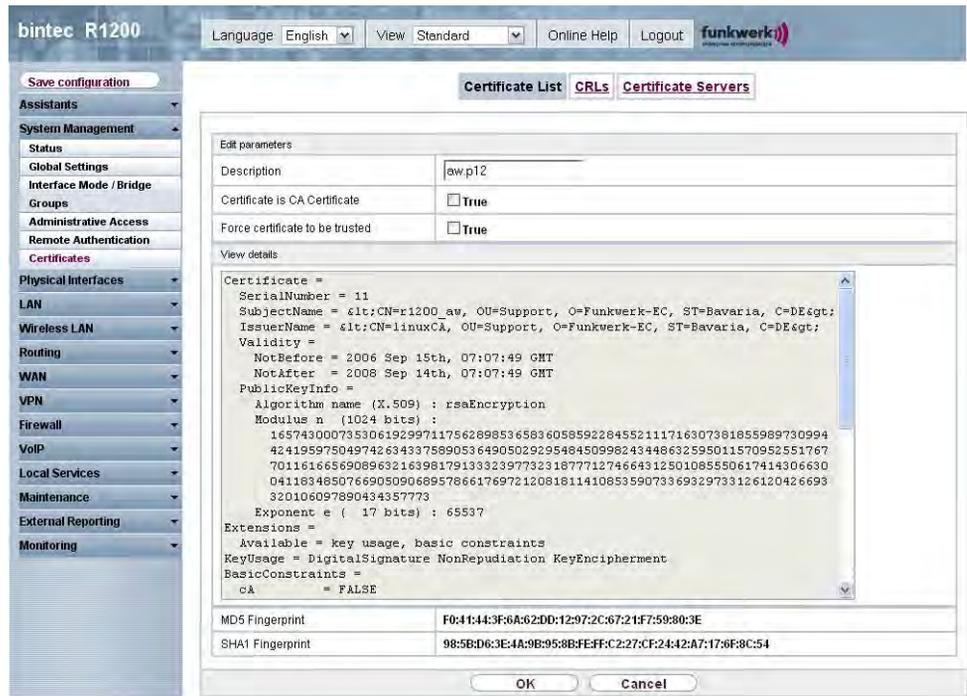


Fig. 54: System Management -> Certificates -> Certificate List->

The certificates and keys themselves cannot be changed, but a few external attributes can be changed, depending on the type of the selected entry.

The **System Management -> Certificates -> Certificate List ->** menu consists of the following fields:

#### Fields in the menu

Field	Description
Description	Shows the name of the certificate, key, or request.
Certificate is CA Certificate	<p>Mark the certificate as a certificate from a trustworthy certification authority (CA).</p> <p>Certificates issued by this CA are accepted during authentication.</p> <p>The function is activated with <i>True</i>.</p> <p>The function is disabled by default.</p>

Field	Description
Certificate Revocation List (CRL) Checking	<p>Only for <b>Certificate is a CA certificate</b> = <i>True</i>.</p> <p>Define the extent to which certificate revocation lists (CRLs) are to be included in the validation of certificates issued by the owner of this certificate.</p> <p>Possible settings:</p> <ul style="list-style-type: none"> <li>• <i>Disabled</i>: No checking of CRLs.</li> <li>• <i>Always</i>: CRLs are always checked.</li> <li>• <i>Only if a CRL Distribution Point is present</i> (default value): If the CA certificate contains a CRL Distribution Point (CDP), this one is to be checked additionally to the revocation lists globally configured on the device. Under "View Details" in the certificate content you can check whether the CA certificate contains a CDP.</li> <li>• <i>Use Settings from superior certificate</i>: The settings of the higher level certificate are used, if one exists. It does not, the same procedure is used as that described under "Only if a CRL Distribution Point is present".</li> </ul>
Force certificate to be trusted	<p>Define that this certificate is to be accepted as the user certificate without further checks during authentication.</p> <p>The function is activated with <i>True</i>.</p> <p>The function is disabled by default.</p>



### Caution

It is extremely important for VPN security that the integrity of all certificates manually marked as trustworthy (certification authority and user certificates) is ensured. The displayed "fingerprints" can be used to check this integrity: Compare the displayed values with the fingerprints specified by the issuer of the certificate (e.g. on the Internet). It is sufficient to check one of the two values.

## 10.6.1.2 Request

### Registration authority certificates in SCEP

If SCEP (Simple Certificate Enrollment Protocol) is used, your device also supports separ-

ate registration authority certificates.

Registration authority certificates are used by some Certificate Authorities (CAs) to handle certain tasks (signature and encryption) during SCEP communication with separate keys, and to delegate the operation to separate registration authorities, if applicable.

When a certificate is downloaded automatically, i.e. if **CA Certificates** = *-Download-* is selected, all the certificates needed for the operation are loaded automatically.

If all the necessary certificates are already available in the system, these can also be selected manually.

Select the **Request** button to request or import more certificates.

The screenshot shows the 'bintec R1200' System Management interface. The left sidebar contains a navigation menu with categories like 'System Management', 'Physical Interfaces', and 'Monitoring'. The 'Certificates' section is highlighted. The main content area shows the 'Certificate List' menu with 'Request' selected. The 'Certificate Request' form includes fields for 'Certificate Request Description', 'Mode' (Manual/SCEP), 'Generate Private Key' (RSA/1024 Bits), and 'Subject Name' (Custom/Enabled). Below this is the 'Advanced Settings' section with 'Subject Alternative Names' (three entries) and 'Options' (Autosave Mode).

Fig. 55: System Management -> Certificates -> Certificate List -> Request

The **System Management -> Certificates -> Certificate List -> Request** menu consists of the following fields:

#### Fields in the Certificate List Certificate Request menu

Field	Description
Certificate Request Description	Enter a unique description for the certificate.
Mode	<p>Select the way in which you want to request the certificate.</p> <p>Possible settings:</p> <ul style="list-style-type: none"> <li>• <i>Manual</i> (default value): Your device generates a PKCS#10 for the key. This file can then be uploaded directly in the browser or copied in the <b>Edit</b> menu using the <b>View Details</b> field. This file must be provided to the CA and the received certificate must then be imported manually to your device.</li> <li>• <i>SCEP</i>: The key is requested from a CA using the Simple Certificate Enrolment Protocol.</li> </ul>
Generate Private Key	<p>Only if <b>Mode</b> = <i>Manual</i>.</p> <p>Select an algorithm for key creation.</p> <p><i>RSA</i> (default value) and <i>DSA</i> are available.</p> <p>Also select the length of the key to be created.</p> <p>Possible values: <i>512, 768, 1024, 1536, 2048, 4096</i>.</p> <p>Please note that a key with a length of 512 bits could be rated as unsecure, whereas a key of 4096 bits not only needs a lot of time to create, but also occupies a major share of the resources during IPSec processing. A value of 768 or more is, however, recommended and the default value is 1024 bits.</p>
SCEP URL	<p>Only if <b>Mode</b> = <i>SCEP</i>.</p> <p>Enter the URL of the SCEP server, e.g. <code>http://scep.funkwerk.de:8080/scep/scep.dll</code></p> <p>Your CA administrator can provide you with the necessary data.</p>
CA Certificate	<p>Only if <b>Mode</b> = <i>SCEP</i>.</p> <p>Select the CA certificate.</p> <ul style="list-style-type: none"> <li>• <i>-Download-</i>: In <b>CA Name</b>, enter the name of the CA certificate of the certification authority (CA) from which you wish to</li> </ul>

Field	Description
	<p>request your certificate, e.g. <i>cawindows</i>. Your CA administrator can provide you with the necessary data.</p> <p>If no CA certificates are available, the device will first download the CA certificate of the relevant CA. It then continues with the enrolment process, provided no more important parameters are missing. In this case, it returns to the <b>Generate Certificate Request</b> menu.</p> <p>If the CA certificate does not contain a CRL distribution point (Certificate Revocation List, CRL), and a certificate server is not configured on the device, the validity of certificates from this CA is not checked.</p> <ul style="list-style-type: none"> <li>• &lt;name of an existing certificate&gt;: If all the necessary certificates are already available in the system, you select these manually.</li> </ul>
RA Sign Certificate	<p>Only if <b>Mode</b> = <i>SCEP</i>.</p> <p>Only if <b>CA Certificates</b> is not = <i>-Download-</i>.</p> <p>Select a certificate for signing SCEP communication.</p> <p>The default value is <i>-Use CA Certificate-</i>, i.e. the CA certificate is used.</p>
RA Encrypt Certificate	<p>Only if <b>Mode</b> = <i>SCEP</i>.</p> <p>Only if <b>RA Sign Certificate</b> is not = <i>-Use CA Certificate-</i>.</p> <p>If you use one of your own certificates to sign communication with the RA, you can select another one here to encrypt communication.</p> <p>The default value is <i>-Use RA Sign Certificate-</i>, i.e. the same certificate is used as for signing.</p>
Password	<p>Only if <b>Mode</b> = <i>SCEP</i>.</p> <p>You may need a password from the certification authority to obtain certificates for your keys. Enter the password you received from the certification authority here.</p>

#### Fields in the Certificate List Subject Name menu

Field	Description
Custom	<p>Select whether you want to enter the name components of the subject name individually as specified by the CA or want to enter a special subject name.</p> <p>If <i>Enabled</i> is selected, a subject name can be given in <b>Summary</b> with attributes that are not offered in the list. Example: "CN=VPNServer, DC=mydomain, DC=com, c=DE".</p> <p>If the field is not marked, enter the name components in <b>Common name, E-mail, Organizational Unit, Organization, Locality, State/Province</b> and <b>Country</b>.</p> <p>The function is disabled by default.</p>
Summary	<p>Only for <b>Custom</b> = enabled.</p> <p>Enter a subject name with attributes not offered in the list.</p> <p>Example: "CN=VPNServer, DC=mydomain, DC=com, c=DE".</p>
Common Name	<p>Only for <b>Custom</b> = disabled.</p> <p>Enter the name according to CA.</p>
E-mail	<p>Only for <b>Custom</b> = disabled.</p> <p>Enter the e-mail address according to CA.</p>
Organisational Unit	<p>Only for <b>Custom</b> = disabled.</p> <p>Enter the organisational unit according to CA.</p>
Organisation	<p>Only for <b>Custom</b> = disabled.</p> <p>Enter the organisation according to CA.</p>
Location	<p>Only for <b>Custom</b> = disabled.</p> <p>Enter the location according to CA.</p>
State/Province	<p>Only for <b>Custom</b> = disabled.</p> <p>Enter the state/province according to CA.</p>
Country	<p>Only for <b>Custom</b> = disabled.</p>

Field	Description
	Enter the country according to CA.

The **Advanced Settings** menu consists of the following fields:

#### Fields in the Advanced Settings Alternative Subject Name menu

Field	Description
#1, #2, #3	<p>For each entry, define the type of name and enter additional subject names.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>None</i> (default value): No additional name is entered.</li> <li>• <i>IP</i>: An IP address is entered.</li> <li>• <i>DNS</i>: A DNS name is entered.</li> <li>• <i>Email</i>: An e-mail address is entered.</li> <li>• <i>URI</i>: A uniform resource identifier is entered.</li> <li>• <i>DN</i>: A distinguished name (DN) name is entered.</li> <li>• <i>RID</i>: A registered identity (RID) is entered.</li> </ul>

#### Field in the Advanced Settings Options menu

Field	Description
Autosave Mode	<p>Select whether your device automatically stores the various steps of the enrolment internally. This is an advantage if enrolment cannot be concluded immediately. If the status has not been saved, the incomplete registration cannot be completed. As soon as the enrolment is completed and the certificate has been downloaded from the CA server, it is automatically saved in the device configuration.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is enabled by default.</p>

### 10.6.1.3 Import

Choose the **Import** button to import certificates.



Fig. 56: System Management -> Certificates -> Certificate List -> Import

The **System Management -> Certificates -> Certificate List -> Import** menu consists of the following fields:

#### Fields in the Certificate List Import menu

Field	Description
External Filename	Enter the file path and name of the certificate to be imported, or use <b>Browse...</b> to select it from the file browser.
Local Certificate Description	Enter a unique description for the certificate.
File Encoding	Select the type of coding so that your device can decode the certificate.  Possible values: <ul style="list-style-type: none"> <li>• <i>Auto</i> (default value) Activates automatic code recognition. If downloading the certificate in auto mode fails, try with a certain type of encoding.</li> <li>• <i>Base64</i></li> <li>• <i>Binary</i></li> </ul>
Password	You may need a password to obtain certificates for your keys.

Field	Description
	Enter the password here.

## 10.6.2 CRLs

In the **System Management** -> **Certificates** -> **CRLs** menu a list of all CRLs is shown.

If a key is no longer to be used, e.g. because it has fallen into the wrong hands or has been lost, the corresponding certificate is declared invalid. The certification authority revokes the certificate and publishes it on a certificate blacklist, so-called CRL. Certificate users should always check against these lists to ensure that the certificate used is currently valid. This check can be automated via a browser.

The Simple Certificate Enrollment Protocol (SCEP) supports the issue and revocation of certificates in networks.

### 10.6.2.1 Import

Choose the **Import** button to import CRLs.



Fig. 57: **System Management** -> **Certificates** -> **CRLs** -> **Import**

The **System Management** -> **Certificates** -> **CRLs** -> **Import** menu consists of the following fields:

#### Fields in the CRLs CRL Import menu

Field	Description
External Filename	Enter the file path and name of the CRL to be imported, or use <b>Browse...</b> to select it from the file browser.
Local Certificate Description	Enter a unique description for the CRL.
File Encoding	<p>Select the type of encoding, so that your device can decode the CRL.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>auto</i> (default value) Activates automatic code recognition. If downloading the CRL in auto mode fails, try with a certain type of encoding.</li> <li>• <i>Base64</i></li> <li>• <i>Binary</i></li> </ul>
Password	Enter the password to be used for the import.

### 10.6.3 Certificate Servers

In the **System Management** -> **Certificates** -> **Certificate Servers** menu a list of all certificate servers is shown.

A certificate server provides for certificate revocation lists (CRL), that are used by the device to verify certificates via LDAP or HTTP.

#### 10.6.3.1 New

Choose the **New** button to set up a certificate server.



Fig. 58: System Management -> Certificates -> Certificate Servers -> New

The **System Management -> Certificates -> Certificate Servers -> New** menu consists of the following fields:

#### Fields in the Certificate Servers Basic Parameters menu

Field	Description
Description	Enter a unique description for the certificate server.
LDAP URL Path	Enter the LDAP URL or the HTTP URL of the server.

## Chapter 11 Physical Interfaces

In this menu, you configure the physical interfaces that you have used when connecting your gateway. The configuration interface only shows the interfaces that are available on your device. In the **System Management** -> **Status** menu you can see a list of all physical interfaces and information on whether the interfaces are connected or active and whether they have already been configured.

### 11.1 AUX

You require a special cable for the console port of your gateway (e.g. AUX Backup cable) to connect an external analogue modem to the AUX port on a **bintec** gateway.

#### 11.1.1 AUX

With an analogue/GSM interface, the gateway also supports connections for analogue and GSM modems (e.g. as backup). In principle, you can use any Hayes- or GSM07.07-compatible modem with a serial interface for this purpose. The following modems have been tested successfully for **bintec**:

- US Robotics Sportster Flash (analogue modem)
- US Robotics 56K Fax Modem (analogue modem)
- Siemens TC35i (GSM modem)

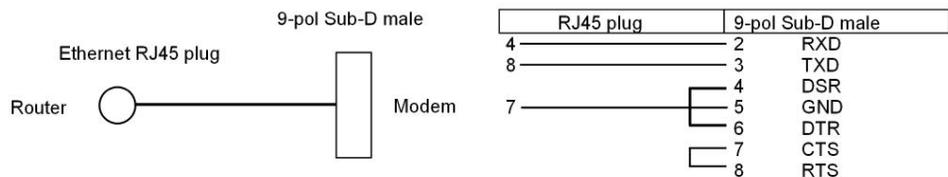


Fig. 59: PIN assignment modem cable

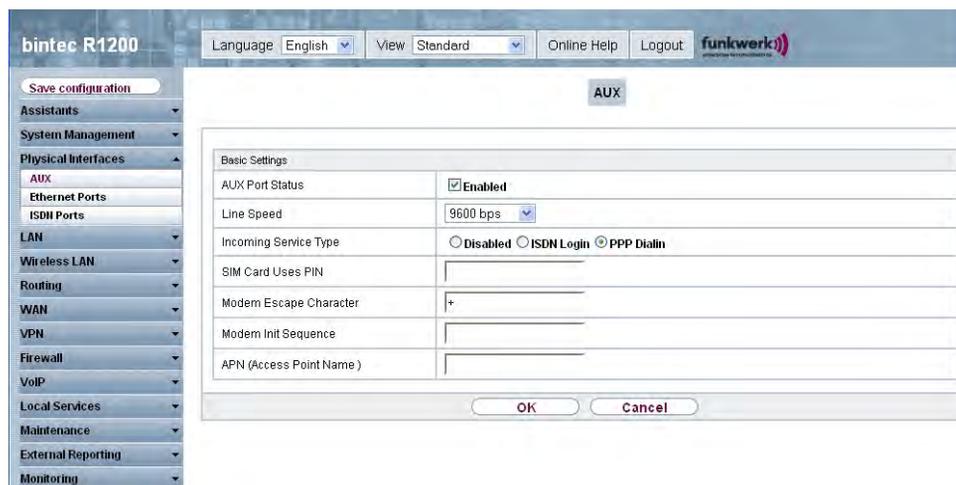


Fig. 60: Physical Interfaces -> AUX -> AUX

The **Physical Interfaces -> AUX -> AUX** menu consists of the following fields:

#### Fields in the AUX Basic Parameters menu

Field	Description
AUX Port Status	<p>Select whether the AUX port should be enabled or disabled.</p> <p>The port is enabled by choosing <i>Enabled</i>. The port is disabled by default.</p>
Line Speed	<p>Only for <b>AUX Port Status</b> enabled</p> <p>Here you select the speed at which the gateway addresses the modem (in bps).</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Default</i>: The Baud rate of the serial terminal connection is retained. (9600 in ex works state)</li> </ul> <p>All other values mean that the modem is addressed at the corresponding speed in bps.</p> <ul style="list-style-type: none"> <li>• <i>9600 bps</i> (default value)</li> <li>• <i>19200 bps</i></li> <li>• <i>38400 bps</i></li> <li>• <i>57600 bps</i>: Recommended for communication with a GSM modem.</li> </ul>

Field	Description
	<ul style="list-style-type: none"> <li>• <i>115200 bps</i>: Recommended for communication with an analogue modem.</li> </ul>
Incoming Service Type	<p>Only for <b>AUX Port Status</b> enabled</p> <p>Here you select the gateway subsystem to which an incoming call over the modem is to be assigned.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Disabled</i>: No call is accepted.</li> <li>• <i>ISDN Login</i>: The call is assigned to the ISDN Login subsystem.</li> <li>• <i>PPP Dialin</i>(default value): The call is assigned to the PPP subsystem.</li> </ul>
SIM Card Uses PIN	<p>Only for <b>AUX Port Status</b> enabled</p> <p>Here you enter the PIN of your GSM modem, if your modem asks for it.</p> <p>Entering a wrong PIN blocks communication with the modem until the entry in the profile is corrected.</p>
Modem Escape Character	<p>Only for <b>AUX Port Status</b> enabled</p> <p>The value for this field is set by default to <i>.</i> It should only be changed if the escape character of the modem is different.</p>
Modem Init Sequence	<p>Only for <b>AUX Port Status</b> enabled</p> <p>Here you can enter an initialization string for your modem. The command <i>ATX3&amp;K3\V1</i> is the default setting (the modem does not wait for a free signal before dialling).</p> <p>You can add other AT commands by separating them with semicolons. The entry is limited to 50 characters. Make sure you enter the command for activating the XON/XOFF software flow control. This is proprietary and cannot be set automatically. The command sequence can be obtained from your modem manual or the manufacturer.</p>
APN (Access Point Name)	<p>Only for <b>AUX Port Status</b> enabled</p>

Field	Description
	<p>If GPRS is used, the so-called Access Point Name of the provider must be entered, e.g. internet.eplus.de for eplus and so on.</p> <p>A maximum of 40 characters can be entered. If no APN or an incorrect APN is entered, a configured GPRS connection will not function.</p>

## 11.2 Ethernet Ports

An Ethernet interface is a physical interface for connection to the local network or external networks.

The Ethernet ports **ETH1** to **ETH4** are assigned to a single logical Ethernet interface in ex works state. The logical Ethernet interface, *en1-0*, is assigned and is preconfigured with the **IP Address** *192.168.0.254* and **Netmask** *255.255.255.0*.

The logical Ethernet interface *en1-4* is assigned to the **ETH5** port and is not preconfigured.



### Note

To ensure your device can be reached, when splitting ports make sure that Ethernet interface *en1-0* is assigned - with the preconfigured IP address and netmask - to a port that can be reached via Ethernet. If in doubt, carry out the configuration using a serial connection via the **Console** interface.

### ETH1 - ETH4

The interfaces can be used separately. They are logically separated from each other, each separated port is assigned the desired logical Ethernet interface in the **Ethernet Interface Selection** field of the **Port Configuration** menu. For each assigned Ethernet interface, another interface is displayed in the list in the **LAN -> IP Configuration** menu and a completely independent configuration of the interface is possible.

### ETH5

By default, the logical Ethernet interface *en1-4* is assigned to the **ETH5** port. The configuration options are the same as those for the ports **ETH1 - ETH4**.

## VLANs for Routing Interfaces

Configure VLANs to separate individual network segments from each other, for example (e.g. individual departments of a company) or to reserve bandwidth for individual VLANs when managed switches are used with the QoS function.

### 11.2.1 Port Configuration

#### Port Separation

Your device makes it possible to run the switch ports as one interface or to logically separate these from each other and to configure them as independent Ethernet interfaces.

By default, the same configuration applies for all switch ports.

During configuration, please note the following: The splitting of the switch ports into several Ethernet interfaces merely logically separates these from each other. The available total bandwidth of 100 mbps full duplex for all resulting interfaces remains the same. For example, if you split all the switch ports from each other, each of the resulting interfaces only uses a part of the total bandwidth. If you group together several switch ports into one interface, the full bandwidth of 100 mbps full duplex is available for all the ports together.

The screenshot shows the web interface for a bintec R1200 device. The left sidebar contains a navigation menu with categories like Assistants, System Management, Physical Interfaces, LAN, Wireless LAN, Routing, WAN, VPN, Firewall, VoIP, Local Services, Maintenance, External Reporting, and Monitoring. The 'Physical Interfaces' section is expanded to show 'Ethernet Ports'. The main content area is titled 'Port Configuration' and features an 'Automatic Refresh Interval' of 300 seconds and an 'Apply' button. Below this is a 'Switch Configuration' table with the following data:

Switch Port	Ethernet Interface Selection	Configured Speed / Mode	Current Speed / Mode
1	en1-0	Full Autonegotiation	Down
2	en1-0	Full Autonegotiation	Down
3	en1-0	Full Autonegotiation	100 mbps / Full Duplex
4	en1-0	Full Autonegotiation	Down
5	en1-4	Full Autonegotiation	Down

At the bottom of the configuration area are 'OK' and 'Cancel' buttons.

Fig. 61: Physical Interfaces -> Ethernet Ports -> Port Configuration

The **Physical Interfaces -> Ethernet Ports -> Port Configuration** menu consists of the following fields:

#### Fields in the Port Configuration Switch Configuration menu

Field	Description
Switch Port	Shows the respective switch port. The numbering corresponds to the numbering of the Ethernet ports on the back of the device.
Ethernet Interface Selection	<p>Assign a logical Ethernet interface to the switch port.</p> <p>You can select from five interfaces, <i>en1-0</i> to <i>en1-4</i>. In the basic setting, switch ports <b>1-4</b> are assigned to interface <i>en1-0</i> and switch port <b>5</b> is assigned to interface <i>en1-4</i></p>
Configured Speed / Mode	<p>Select the mode in which the interface is to run.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Full Autonegotiation</i> (default value)</li> <li>• <i>Auto 100 mbps only</i></li> <li>• <i>Auto 10 mbps only</i></li> <li>• <i>Auto 100 mbps / Full Duplex</i></li> <li>• <i>Auto 100 mbps / Half Duplex</i></li> <li>• <i>Auto 10 mbps / Full Duplex</i></li> <li>• <i>Auto 10 mbps / Half Duplex</i></li> <li>• <i>Fixed 100 mbps / Full Duplex</i></li> <li>• <i>Fixed 100 mbps / Half Duplex</i></li> <li>• <i>Fixed 10 mbps / Full Duplex</i></li> <li>• <i>Fixed 10 mbps / Half Duplex</i></li> <li>• <i>Disabled</i>: The interface is created but remains inactive.</li> </ul>
Current Speed / Mode	<p>Shows the actual mode and actual speed of the interface.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>100 mbps / Full Duplex</i></li> <li>• <i>100 mbps / Half Duplex</i></li> <li>• <i>10 mbps / Full Duplex</i></li> <li>• <i>10 mbps / Half Duplex</i></li> <li>• <i>Inactive</i></li> </ul>

## 11.3 ISDN Ports

In this menu, you configure the ISDN interfaces of your device. Here you enter data such as the type of ISDN connection to which your gateway is connected. You can use the ISDN interfaces of your gateway for various types of use.

You must carry out two steps to configure the ISDN interfaces:

- Enter the settings for your ISDN connection: Here you set the most important parameters of your ISDN connection.
- MSN Configuration: Here you tell your device how to react to incoming calls from the WAN.

### 11.3.1 ISDN Configuration



#### Note

If the ISDN protocol is not detected, it must be selected manually under **Port Usage** and **ISDN Configtype**. The automatic D channel detection is then switched off. An incorrectly set ISDN protocol prevents ISDN connections being set up.

In the **Physical Interfaces -> ISDN Ports -> ISDN Configuration** menu, a list of all ISDN ports and their configurations is shown.

#### 11.3.1.1 Working with

Choose the  button to edit the configuration of the ISDN port.

#### ISDN BRI interface

You can use the ISDN BRI interface of your gateway for both dialup connections and leased lines over ISDN.

Fig. 62: Physical Interfaces -> ISDN Ports -> ISDN Configuration-> 

The **Physical Interfaces -> ISDN Ports-> ISDN Configuration->**  menu consists of the following fields:

#### Fields in the ISDN Configuration Basic Parameters menu

Field	Description
Port Name	Shows the name of the ISDN port.
Autoconfiguration on Bootup	Select whether the ISDN switch type (D channel detection for switched line) is to be automatically identified.  The function is activated with <i>Enabled</i> .  The function is enabled by default.
Result of Autoconfiguration	Shows the status of the ISDN Auto Config.  Automatic D-channel detection runs until a setting is found or until the ISDN protocol is selected manually under <b>Port Usage</b> . This field cannot be edited. The result of autoconfiguration is displayed for <b>Port Usage</b> and <b>ISDN Configuration Type</b> .  Possible values: <ul style="list-style-type: none"> <li>• All possible values for <b>Port Usage</b> and <b>ISDN Configtype</b>.</li> <li>• <i>Running</i>: Detection is still running.</li> </ul>
Port Usage	Only if <b>Automatic Configuration on Startup</b> is disabled.

Field	Description
	<p>Select the protocol that you want to use for the ISDN port.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Not used</i>: The ISDN connection is not used.</li> <li>• <i>Dialup (Euro ISDN)</i></li> <li>• <i>Leased Line</i></li> <li>• <i>Q-SIG</i></li> </ul>
ISDN Configuration Type	<p>Only if <b>Autoconfig on Bootup</b> is disabled and if <b>Port Usage</b> = <i>Dialup (Euro ISDN)</i> or <i>Q-SIG</i>.</p> <p>Select the ISDN connection type.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Point-to-Multipoint</i> (default value): Point-to-multipoint connection</li> <li>• <i>Point-to-Point</i>: Point-to-Point ISDN access</li> </ul>
ISDN Switch Type	<p>Only if <b>Port Usage</b> = <i>Leased Line</i></p> <p>Select the ISDN protocol supplied by your provider.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Leased Line B1 64S</i>: Leased line over B channel 1 (64 kbps)</li> <li>• <i>Leased Line B1+B2 64S2</i>: Leased line over both B channels (128 kbps)</li> <li>• <i>Leased Line D+B1+B2 TS02</i>: Leased line over D-channel and both B channels (144 kbps)</li> <li>• <i>Leased Line B1+B2 Different Endpoints</i>: Leased line to two different endpoints.</li> <li>• <i>Leased Line B1+D TS01</i>: Leased line over B channel 1 and D-channel (80 kbps)</li> <li>• <i>Leased Line B2+D TS01</i>: Leased line over B channel 2 and D-channel (80 kbps)</li> <li>• <i>Leased Line B2 64S</i>: Leased line over B channel 2 (64 kbps)</li> </ul>
Subscriber Number	Only if <b>Port Usage</b> = <i>Dialup (Euro ISDN)</i> and <b>ISDN Con-</b>

Field	Description
	<p><b>figtype</b> = <i>Point-to-Point</i> and for <b>Port Usage</b> = <i>Q-SIG</i></p> <p>Enter the call number for the connection.</p>

The **Advanced Settings** menu consists of the following fields:

#### Fields in the menu Advanced Settings

Field	Description
X.31 (X.25 in D Channel)	<p>Select whether you want to use X.31 (X.25 in the D channel) e.g. for CAPI applications.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
X.31 TEI Value	<p>Only if <b>X.31 (X.25 in D channel)</b> is enabled</p> <p>With the ISDN autoconfiguration, the X.31-TEI is detected automatically. If the autoconfiguration has not detected TEI, you can manually enter the value assigned by the exchange.</p> <p>Possible values are <i>0</i> to <i>63</i>.</p> <p>The default value is <i>-1</i> (for automatic detection).</p>
X.31 TEI Service	<p>Only if <b>X.31 (X.25 in D channel)</b> is enabled</p> <p>Select the service for which you want to use X.31 TEI.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>CAPI</i></li> <li>• <i>Default CAPI</i></li> <li>• <i>Packet Switch</i> (default value)</li> </ul> <p><i>CAPI</i> and <i>Default CAPI</i> are for using X.31 TEI for CAPI applications. For <i>CAPI</i>, the TEI value set in the CAPI application is used. For <i>Default CAPI</i>, the value of the CAPI application is ignored and the default value set here is always used.</p> <p>Set <i>Packet Switch</i> if you wish to use X.31 TEI for the X.25 device.</p>

#### ISDN-PRI interface

For a Primary Rate Interface (PRI, or S2M), the channels are transmitted in series in so-called time slots.

Choose the  button to edit the configuration of the ISDN port.

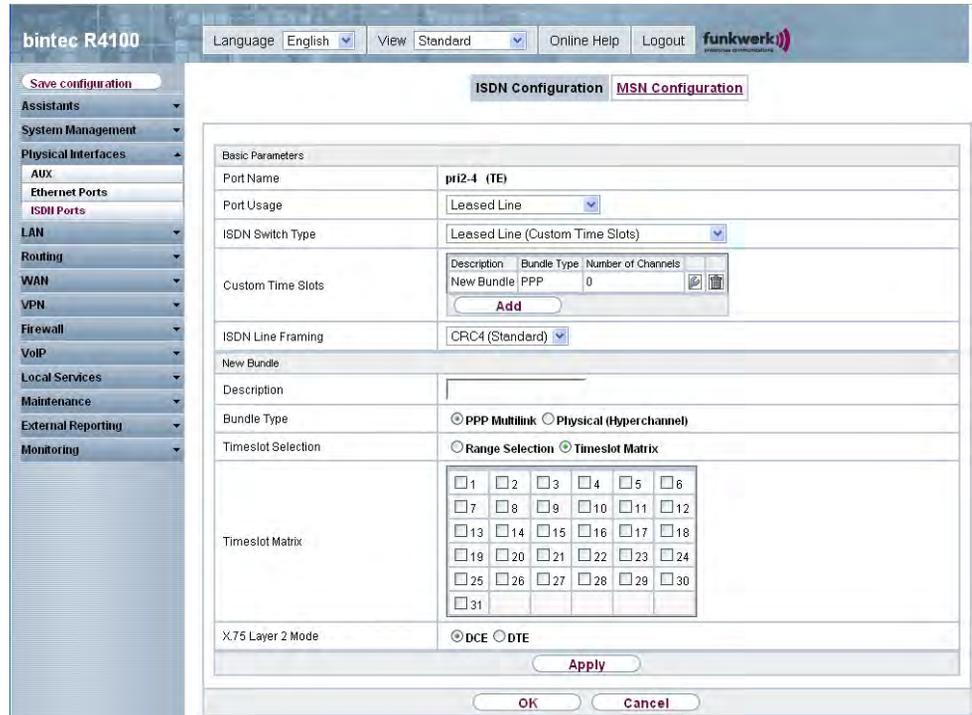


Fig. 63: Physical Interfaces -> ISDN Ports -> ISDN Configuration->

The **Physical Interfaces -> ISDN Ports -> ISDN Configuration->** menu consists of the following fields:

#### Fields in the ISDN Configuration Basic Parameters menu

Field	Description
Port Name	Shows the name of the ISDN port.
Port Usage	<p>Select whether the ISDN switch type (D channel detection for switched line) is to be automatically identified.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li><i>None</i> (default value): ISDN connection is not used.</li> <li><i>EURO ISDN S2M (TE)</i>: EURO ISDN S2M User Profile</li> </ul>

Field	Description
	<ul style="list-style-type: none"> <li>• <i>EURO ISDN S2M (NT)</i>: EURO ISDN S2M Network Profile</li> <li>• <i>Back to Back (dialup)</i>: Two S2M connections are linked directly.</li> <li>• <i>Leased Line</i>: You can select a leased line.</li> <li>• <i>Q-SIG S2M (TE)</i>: EQ-SIG S2M User Profile</li> <li>• <i>Q-SIG S2M (NT)</i>: Q-SIG S2M Network Profile</li> </ul>
ISDN Line Framing	<p>Only if a <b>Port Usage</b> is selected.</p> <p>Select the framing type for layer 1.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>CRC4 (Standard)</i> (default value)</li> <li>• <i>No CRC</i></li> </ul> <p>The default value can be left in the majority of scenarios. You can use the <i>No CRC</i> if required (e.g. in Sweden and France), if the device is to be connected to a PABX.</p>
Subscriber Number	<p>Only if <b>Port Usage</b> = <i>EURO ISDN S2m (TE)</i>, <i>EURO ISDN S2m (NT)</i>, <i>Q-SIG S2M (TE)</i> or <i>Q-SIG S2M (NT)</i></p> <p>Enter the call number for the connection.</p>
Channel Selection	<p>Only if <b>Port Usage</b> = <i>EURO ISDN S2m (TE)</i>, <i>EURO ISDN S2m (NT)</i>, <i>Q-SIG S2M (TE)</i> or <i>Q-SIG S2M (NT)</i></p> <p>The <b>Channel Selection</b> option is provided in order to guarantee the compatibility with special providers. This defines how the B channel is selected for an outgoing call.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Any Channel</i> (default value): The device tells the PABX that all channels are available. The exchange of the PABX selects the channel to be used.</li> <li>• <i>No channel identification</i> : The device sends no IE (Information Element) for channel identification. The exchange selects the channel to be used.</li> </ul>

Field	Description
	<ul style="list-style-type: none"> <li>• <i>Submit preferred channel</i></li> </ul> <p>: The device selects the channel to be used and signals this to the exchange.</p> <p>You can normally use the default value. It is only necessary to change the setting in a few special cases.</p> <p>If you encounter problems with outgoing calls, ask your provider whether a special value has to be set.</p>
Clock Mode	<p>Only if <b>Port Usage</b> = <i>Back to Back (dialup)</i></p> <p>Defines which connection partner sends the clock signal for synchronization between the sender and the recipient. If the clock signal is not sent by the exchange itself, one of the connection partners must send the signal.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>External</i>: The device receives the clock signal.</li> <li>• <i>Internal</i>: The device sends the clock signal.</li> </ul>
ISDN Switch Type	<p>Only if <b>Port Usage</b> = <i>Leased Line</i> Select the ISDN connection type.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Leased Line (Custom Time Slots)</i>: Up to 31 PPP interfaces can be configured for leased lines to different destinations.</li> <li>• <i>Leased Line, 1 Hyperchannel (G.703 + G.704)</i>: 1984 kbps, structured</li> <li>• <i>Leased Line Unstructured G.703</i>: 2048 kbps, unstructured</li> </ul>
Custom Time Slots	<p>Only if <b>Port Usage</b> = <i>Leased Line</i> and <b>ISDN Switch Type</b> = <i>Leased Line (Custom Time Slots)</i></p> <p>You have the option to bundle any channels on the physical layer as so-called hyper channels. You can also group together channels as PPP multilink channel bundles.</p> <p>Timeslots divide the available 2 Mbps bandwidth of an S2M connection into logical channels. No distinction is made below</p>

Field	Description
	<p>between timeslots and channels, as the difference is immaterial for configuration purposes.</p> <p>A list of the channel bundles already configured is shown.</p> <p>Click <b>Add</b> to configure new channel bundles.</p>

You can use the **Add** button under **Custom Time Slots** to configure further bundles.



#### Note

This function is only available for leased lines.

#### Fields in the ISDN Configuration New Bundle menu

Field	Description
Description	Enter the name of the channel bundle.
Bundle Type	<p>Displays the type of channel bundle.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>PPP Multilink</i>: The channels are bundled as PPP Multilink channels.</li> <li>• <i>Physical (Hyperchannel)</i>: The channels are bundled as physical hyperchannels.</li> </ul>
Timeslot Selection	Choose between <i>Range Selection</i> and <i>Timeslot Matrix</i> .
Timeslot Range	<p>Only if <b>Timeslot Selection</b> = <i>Range Selection</i>.</p> <p>Shows the logical channels (timeslots) combined to form this channel bundle.</p> <ul style="list-style-type: none"> <li>• <i>From</i>: Shows the first of the channels used for this channel bundle. Possible values: 1 to 31.</li> <li>• <i>to</i>: Shows the last of the channels used for this channel bundle. Possible values: 1 to 31.</li> </ul>
Timeslot Matrix	<p>Only if <b>Timeslot Selection</b> = <i>Timeslot Matrix</i> Shows a list of all channels in detail. If you do not wish to use all the channels between a certain start and end channel for a channel bundle, you can make a selective assignment here.</p>

Field	Description
X.75 Layer 2 Mode	<p>Here you define how the interface created by this channel bundle is to behave during connection setup. You only need to configure these parameters if you used X.75 in layer 2.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>DCE</i></li> <li>• <i>DTE</i></li> </ul>

### 11.3.2 MSN Configuration

In this menu, you can assign the available ISDN numbers to the required services (e.g. PPP routing, ISDN login).

If you use the ISDN interface for outgoing and incoming dialup connections, your own numbers for this interface can be entered in this menu (these settings are not possible for leased lines). Your device distributes the incoming calls to the internal services according to the settings in this menu. Your own number is included as the calling party number for outgoing calls.

The device supports the following services:

- **PPP (routing):** The PPP (routing) service is your device's general routing service. This enables ISDN remote terminals to establish data connections with your LAN, among other things. This enables partners outside your own local network to access hosts within your LAN. It is also possible to establish outgoing data connections to ISDN remote terminals.
- **ISDN Login:** The ISDN login service enables both incoming data connections with access to the SNMP shell of your device, and outgoing data connections to other **bintec** devices. As a result, your device can be remotely configured and administrated.
- **IPSec:** **bintec** devices support the DynDNS service to enable hosts without fixed IP addresses to obtain a secure connection over the Internet. With the IPSec Callback function and using a direct ISDN call to an IPSec peer with a dynamic IP address you can signal to this IPSec peer that you are online and waiting for the setup of an IPSec tunnel over the Internet. If the called peer currently has no connection to the Internet, the ISDN call causes a connection to be set up. The identification of the caller from his or her ISDN number is enough information to initiate setting up a tunnel.
- **X.25 PAD:** X.25 PAD is used to provide a protocol converter, which converts non-packet-oriented protocols to packet-oriented communication protocols and vice versa. Data terminal equipment sending or receiving data on a non-data-packet-oriented basis can this be adapted in line with Datex-P (public data packet network based on the principle of a packet switching exchange).

When a call comes in, your device first uses the entries in this menu to check the type of call (data or voice call) and the called party number, whereby only part of the called party number reaches the device, which is forwarded from the local exchange or, if available, the PBX. The call is then assigned to the corresponding service.



### Note

If no entry is specified (ex works state), every incoming ISDN call is accepted by the ISDN Login service. To avoid this, you should make the necessary entries here. As soon as an entry exists, the incoming calls not assigned to any entry are forwarded to the CAPI service.

In the **Physical Interfaces -> ISDN Ports -> MSN Configuration** menu a list of all MSNs is shown.

### 11.3.2.1 New

Choose the **New** button to edit MSNs.

The screenshot shows the web interface for a bintec R1200 device. The top navigation bar includes 'Language English', 'View Standard', 'Online Help', 'Logout', and the 'funkwerk' logo. A left sidebar menu lists various configuration categories, with 'Physical Interfaces' expanded to show 'ISDN Ports'. The main content area displays the 'MSN Configuration' dialog box, which is divided into 'Basic Parameters' and 'MSN Configuration' tabs. The 'Basic Parameters' tab is active, showing the following fields:

ISDN Port	bri2-0
Service	ISDN Login
MSN	
MSN Recognition	<input checked="" type="radio"/> Right to Left <input type="radio"/> Left to Right (DDI)
Bearer Service	<input checked="" type="radio"/> Data + Voice <input type="radio"/> Data <input type="radio"/> Voice

At the bottom of the dialog box are 'OK' and 'Cancel' buttons.

Fig. 64: **Physical Interfaces -> ISDN Ports -> MSN Configuration -> New**

The **Physical Interfaces -> ISDN Ports -> MSN Configuration -> New** menu consists of the following fields:

#### Fields in the MSN Configuration Basic Parameters menu

Field	Description
ISDN Port	Select the ISDN port for which the MSN is to be configured.
Service	<p>Select the service to which a call is to be assigned on the <b>MSN</b> below.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>ISDN Login</i> (default value): Enables logging in with <i>ISDN Login</i>.</li> <li>• <i>PPP (Routing)</i>: Default setting for PPP routing. Contains the automatic detection of the PPP connections stated below except <i>PPP DOVB</i>.</li> <li>• <i>IPSec</i>: Enables a number to be defined for IPSec callback.</li> <li>• <i>Other (PPP)</i>: Other services can be selected: <i>PPP 64k</i> (enables 64 kbps PPP data connections), <i>PPP 56k</i> (enables 56 kbps PPP data connections), <i>PPP V.110 (9600, 14400, 19200, 38400)</i> (enables PPP connections with V.110 and bit rates of 9600 bps, 14400 bps, 19200 bps, 38400 bps), <i>PPP V.120</i> (enables incoming PPP connections with V.120).</li> </ul>
MSN	Enter the number used to check the called party number. For the call to be accepted, it is sufficient for the individual numbers in the entry to agree, taking account of <b>MSN Recognition</b> .
MSN Recognition	<p>Select the mode your device is to use for the number comparison for <b>MSN</b> with the called party number of the incoming call.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Right to Left</i> (default value)</li> <li>• <i>Left to Right (DDI)</i>: Always select if your device is connected to a point-to-point connection.</li> </ul>
Bearer Service	<p>Select the type of incoming call (service detection).</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Data + Voice</i> (default value): Both data and voice calls.</li> <li>• <i>Data</i>: Data call</li> <li>• <i>Voice</i>: Voice call (modem, voice, analogue fax).</li> </ul>

## 11.4 ADSL Modem

### 11.4.1 ADSL Configuration

In this menu, you make the basic settings for your ADSL connection.

**R3000** and **R3000w** are ADSL multiprotocol routers with integrated ADSL(2+) modem and automatic ISDN backup. The ADSL modem on the **R3000 / R3000w** is compatible with ANNEX A and ANNEX B standards and so can be used universally in several countries. It is particularly suitable for high-speed Internet access and remote access use in SMEs or remote offices. The device is supplied ex works with 10 IPsec tunnels including hardware acceleration. Up to 100 additional IPsec tunnels can also be enabled if licensed. The integrated second ISDN S0 interface can also be enabled by licence if required.

Fig. 65: Physical Interfaces -> ADSL Modem-> ADSL Configuration

The **Physical Interfaces -> ADSL Modem-> ADSL Configuration** menu consists of the following fields:

#### Fields in the ADSL Configuration ADSL Port Status menu

Field	Description
ADSL Chipset	Shows the key of the installed chipset.
Physical Connection	Shows the current ADSL operation mode. The value cannot be changed.

Field	Description
	<p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Unknown</i>: The ADSL link is not active.</li> <li>• <i>ANSI T1.413</i>: ansiT1dot413</li> <li>• <i>ADSL1</i>: ADSL classic, G.DMT, ITU G.992.1</li> <li>• <i>G.Lite</i>: Splitterless ADSL, ITU G.992.2</li> <li>• <i>ADSL2</i>: G.DMT.Bis, ITU G.992.3</li> <li>• <i>ADSL2 DELT</i>: ADSL2 Double Ended Line Test</li> <li>• <i>ADSL2 Plus</i>: ADSL2 Plus, ITU G.992.5</li> <li>• <i>ADSL2 Plus DELT</i>: ADSL2 Plus Double Ended Line Test</li> <li>• <i>READSL2</i>: Reach Extended ADSL2</li> <li>• <i>READSL2 DELT</i>: Reach Extended ADSL2 Double Ended Line Test</li> <li>• <i>ADSL2 ITU-T G.992.3 Annex M</i></li> <li>• <i>ADSL2+ ITU-T G.992.5 Annex M</i></li> </ul>

#### Fields in the ADSL Configuration Current Line Speed menu

Field	Description
Downstream	<p>Displays the data rate in the receive direction (direction from CO/DSLAM to CPE/router) in bits per second. The value cannot be changed.</p>
Upstream	<p>Displays the data rate in the send direction (direction from CPE/router to CO/DSLAM) in bits per second.  The value cannot be changed.</p>

#### Fields in the ADSL Configuration ADSL Parameters menu

Field	Description
ADSL Mode	<p>Define which Annex of ITU-T Recommendation G.991.2 is used for the connection.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Annex A</i>: For applications in North America (provider-dependent) for example.</li> <li>• <i>Annex B</i> (default value): For applications in Europe</li> </ul>

Field	Description
	(provider-dependent) for example.
ADSL SyncType	<p>Select the ADSL synchronization type.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Automatic Mode</i> (default value): The ADSL mode is automatically adapted for the remote terminal.</li> <li>• <i>ADSL1</i>: ADSL1 / G.DMT is used.</li> <li>• <i>ADSL2</i>: ADSL2 / G.992.3 is used.</li> <li>• <i>ADSL2 Plus</i>: ADSL2 Plus / G.992.5 is used.</li> <li>• <i>Down</i>: The ADSL interface is not active.</li> </ul> <p>Only for <b>ADSL Mode</b> = <i>Annex A</i>.</p> <ul style="list-style-type: none"> <li>• <i>Automatic Mode (Annex-M)</i>: The ADSL mode is automatically adapted to the other end with reference to G.992.3 Annex M.</li> <li>• <i>ADSL2 Plus (Annex-M)</i>: ADSL2 Plus / G.992.3 Annex M is used.</li> <li>• <i>ANSI T1.413</i>: ansiT1dot413</li> </ul> <p>Only for <b>ADSL Mode</b> = <i>Annex B</i>.</p> <ul style="list-style-type: none"> <li>• <i>ETSI T1.413</i>: ETSI T1.413</li> </ul>
Transmit Shaping	<p>Select whether the data rate in the send direction is to be reduced. This is only needed in a few cases for special DSLAMs.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Default (Line Speed)</i>: The data rate in the send direction is not reduced.</li> <li>• <i>128,000 bps to 2,048,000 bps</i>: The data rate in the send direction is reduced to a maximum of 128,000 bps to 2,048,000 bps in defined steps.</li> <li>• <i>User Defined</i>: The data rate is reduced to the value entered in <b>Maximum Upstream Bandwidth</b></li> </ul> <p>The default value is <i>Default (Line Speed)</i>.</p>
Maximum upstream bandwidth	Only if <b>Transmit Shaping</b> = <i>User defined</i>

Field	Description
	Enter the maximum data rate in the send direction in bits per second.

## 11.5 SHDSL

**R3400** and **R3800** have an integrated SHDSL mode. The devices support G.SHDSL according to ITU-T recommendations G.991.2 Annex A and B and SHDLS.bis according to G.991.2 Annex F and G. Depending on the device type and configuration the gateway transmits the data over a pair of wires at up to 5696 kbps, over two pairs of wires at up to 11392 kbps, over three pairs of wires at up to 17088 kbps or over four pairs of wires at up to 22784 kbps.

### 11.5.1 SHDSL Configuration

In the **SHDSL** menu you configure the SHDSL interface of your device.



#### Note

Ask your provider about any special features of your SHDSL connection.



#### Note

Agree the connection conditions for back-to-back connections (campus connect) with your remote terminal.

The SHDSL interfaces can be configured separately or as a bundle.

Choose the  button to edit the predefined SHDSL interfaces. In the ex works state, the logical SHDSL interfaces *Shdsl-0* to *Shdsl-3* are each preset with one pair of wires.



Fig. 66: Physical Interfaces -> SHDSL -> SHDSL Configuration->

#### Fields in the SHDSL SHDSL Parameter menu

Field	Description
ATM Interface	Displays the name of the ATM interface.
Device Mode	<p>Define the role within the connection.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li><i>CPE (Customer Premises Equipment)</i> (default value): Mode for the user page of the SHDSL connection.</li> <li><i>CO (Central Office)</i>: Mode for the provider page of the SHDSL connection.</li> </ul> <p>Note: CPE on the one hand and CO on the other hand must always be set for each SHDSL connection.</p>
SHDSL Type	<p>Define which Annex of ITU-T Recommendation G.991.2 is used for the connection.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li><i>Annex A</i>: For applications in North America (provider-dependent) for example.</li> <li><i>Annex B</i> (default value): For applications in Europe (provider-dependent) for example.</li> </ul>
Clock Rate	Define whether the clock rate should be negotiated.

Field	Description
	<p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Fixed</i>: The clock rate is predefined.</li> <li>• <i>Adaptive</i> (default value): The clock rate is negotiated depending on the line quality.</li> </ul>
Wire Mode	<p>Define the number and combination of wires (depending on the device type) used for the SHDSL connection.</p> <p>Only <b>R3400</b>:</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>2 wire</i> (default value): Two wires are used with m-pair bonding for a clock rate of 192 kbps to 5696 kbps.</li> <li>• <i>4 wire</i>: Four wires are used with m-pair bonding for a clock rate of 384 kbps to 11392 kbps. This option supports 4-wire mode under G991.2 and Globespan Enhanced Mode.</li> </ul> <p>Only <b>R3800</b>:</p> <ul style="list-style-type: none"> <li>• <i>2 wire</i>: Two wires are used with m-pair bonding for a clock rate of 192 kbps to 5696 kbps.</li> <li>• <i>4 wire</i>: Four wires are used with m-pair bonding for a clock rate of 384 kbps to 11392 kbps. This option supports 4-wire mode under G991.2 and Globespan Enhanced Mode.</li> <li>• <i>4 wire standard</i>: Four wires are used for m-pair bonding with a clock rate of 384 kbps to 11392 kbps. This option supports 4-wire mode under G991.2 but not Globespan Enhanced Mode.</li> <li>• <i>4 wire IMA</i>: Four wires are used with IMA for a clock rate of 384 kbps to 11392 kbps.</li> <li>• <i>6 wire</i>: Six wires are used with m-pair bonding for a clock rate of 576 kbps to 17088 kbps.</li> <li>• <i>6 wire IMA</i>: Six wires are used with IMA for a clock rate of 576 kbps to 17088 kbps.</li> <li>• <i>8 wire</i>: Eight wires are used with m-pair bonding for a clock rate of 768 kbps to 22784 kbps.</li> <li>• <i>8 wire IMA</i>: Eight wires are used with IMA for a clock rate of 768 kbps to 22784 kbps.</li> </ul>

Field	Description
Additional Wire Pairs	<p>Only for <b>Wire Mode</b> = <i>4 wire, 4 wire standard, 4 wire IMA, 6 wire, 6 wire IMA</i>.</p> <p>For <b>Wire Mode</b> = <i>4 wire, 4 wire standard</i> or <i>4 wire IMA</i> the second pair of wires is defined here.</p> <p>For <b>Wire Mode</b> = <i>6 wire</i> or <i>6 wire IMA</i> the second and third pairs of wires are defined here.</p> <p>Wire pairs already used in defined connections are not available for selection. If these continue to be used for this SHDSL connection, the existing connection must first be terminated.</p>
Requested Rate	<p>Only for <b>Clock Rate</b> = <i>Fixed</i>.</p> <p>Select which speed should be used.</p>
Line Speed Interval	<p>Only for <b>Clock Rate</b> = <i>Adaptive</i>.</p> <p>Under <b>Minimum</b> select the minimum clock rate and under <b>Maximum</b> select the maximum clock rate for the connection.</p>

## 11.6 Serial Ports

### 11.6.1 Options

In the **Serial Ports** menu, configure the serial WAN interface of your gateway.

Your gateway offers an integrated X.21/V.35 interface.

The interface can be operated in accordance with various electrical standards (X.21, V.35, ...). The electrical standard used and the layer 1 operation mode (DTE or DCE) can be detected automatically from the plugged cable. Both of these parameters can also be set manually. You can purchase a suitable cable from your dealer.

Choose the  button to edit the configuration of the serial port.

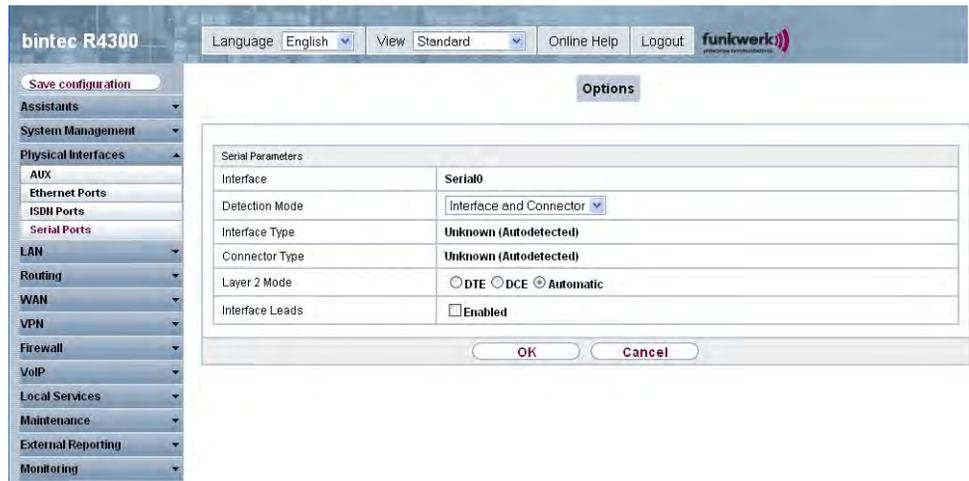


Fig. 67: Physical Interfaces -> Serial Ports -> Options -> 

The **Physical Interfaces -> Serial Ports -> Options -> ** menu consists of the following fields:

#### Fields in the Options Serial Parameters menu

Field	Description
Interface	Displays the name of the serial interface.
Detection Mode	<p>Define whether the interface and connector types used are to be detected automatically (autodetected) or set manually.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Interface and Connector</i> (default value): The interface and connector types are detected automatically.</li> <li>• <i>Interface</i>: Only the interface type is detected automatically. The connector type must be set manually.</li> <li>• <i>Connector</i>: Only the connector type is detected automatically. The interface type must be set manually.</li> <li>• <i>Manual</i>: Both the interface and connector type must be set manually.</li> </ul>
Interface Type	<p>Define the interface type of the port used.</p> <p>If you select the <b>Detection Mode</b> <i>Interface and Connector</i> or <i>Interface</i>, the interface type is detected automatically. The detected value is displayed, e.g. <i>V. 35 (autodetected)</i>.</p>

Field	Description
	<p>If you select the <b>Detection Mode</b> <i>Connector</i> or <i>Manual</i>, you must set the interface type field manually.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>None</i>: The port is not used.</li> <li>• <i>X.21 with Termination</i>: V.11 on all lines, 120-ohm terminating resistor on critical input lines.</li> <li>• <i>V.35</i>: V.35 on critical lines, V.28 on uncritical lines.</li> <li>• <i>V.36</i>: V.11 on critical lines, V.10 on uncritical lines.</li> <li>• <i>X.21 bis</i>: V.28 on all lines.</li> <li>• <i>X.21 without Termination</i>: Unterminated V.11 on all lines.</li> <li>• <i>RS-449</i>: V.11 on critical lines, V.10 on uncritical lines (9-pole or 37-pole sub-D plug).</li> <li>• <i>RS-530</i>: V.11 on critical lines, V.10 on uncritical lines (25-pole sub-D plug).</li> <li>• <i>RS-530a</i>: V.11 on critical lines, V.10 on uncritical lines incl. DTR and DSR (25-pole sub-D plug).</li> </ul>
Connection Type	<p>Define the connector type of the port used.</p> <p>If you select the <b>Detection Mode</b> <i>Interface and Connector</i> or <i>Connector</i>, the connector type is detected automatically. The detected value is displayed, e.g. <i>Unknown (Autodetected)</i>.</p> <p>If you select the <b>Detection Mode</b> <i>Interface</i> or <i>Manual</i>, you must set the connector type field manually.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>DTE</i>: The pins are assigned as DTE interface. This setting is necessary, for example, if the router is connected to a public data network like Datex-P in Germany.</li> <li>• <i>DCE</i>: The pins are assigned as DCE interface.</li> </ul>
Line Speed	<p>Only if <b>Connection Type</b> = <i>DCE</i>. Select which speed should be used.</p>
Layer 2 Mode	<p>Define the value of the HDLC address field in the transmitted command frames (Layer 2).</p>

Field	Description
	<p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Automatic</i> (default value): The selection made for connect- or is applied. You can usually accept this setting, e.g. for access to a public data network such as Datex-P.</li> <li>• <i>DTE</i>: The address field has the value for DTE.</li> <li>• <i>DCE</i>: The address field has the value for DCE.</li> </ul>
Interface Leads	<p>Define whether the gateway checks the status of the interface lines. The same value should be set for both connection partners.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Enabled</i>. The Layer 1 signalling of the remote terminal is checked on the signal line (I for X.21, CTS for V.35). The check correspondingly affects the variable L1State.</li> <li>• <i>Disabled</i> (default value): The Layer 1 signalling of the remote terminal is not checked, your gateway assumes that the physical line is always "up". In this setting, you should monitor the interface line in some other way, e.g. with PPP Keepalive.</li> </ul>

## 11.7 UMTS/HSDPA

### 11.7.1 UMTS/HSDPA/HSUPA

In the **UMTS / HSDPA / HSUPA** menu configure the connection for a UMTS CardBus modem.

#### 11.7.1.1 Edit

Choose the  icon to edit the UMTS CardBus modem.

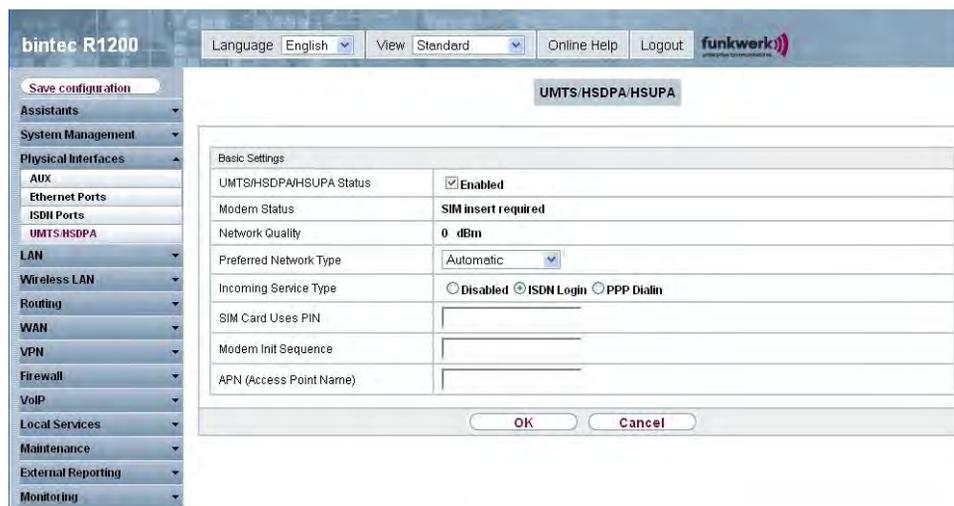


Fig. 68: Physical Interfaces -> UMTS / HSDPA -> UMTS / HSDPA / HSUPA -> Edit

The **Physical Interfaces -> UMTS / HSDPA -> UMTS / HSDPA / HSUPA -> Edit** menu consists of the following fields:

#### Fields in the UMTS / HSDPA / HSUPA Basic Settings menu

Field	Description
UMTS/HSDPA/HSUPA Status	<p>Select whether or not UMTS/HSDPA/HSUPA is to be enabled on your device.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
Modem Status	<p>Shows the status of the UMTS/HSDPA/HSUPA modem.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Active</i></li> <li>• <i>Inactive</i></li> <li>• <i>Init</i></li> <li>• <i>Called</i></li> <li>• <i>Calling</i></li> <li>• <i>Connect</i></li> <li>• <i>SIM insert required</i></li> <li>• <i>PIN input required</i></li> </ul>

Field	Description
	<ul style="list-style-type: none"> <li>• <i>Errors</i></li> <li>• <i>Disconnected</i></li> </ul>
Mobile phone providers	Shows the connected mobile phone provider.
Network Quality	<p>Only for <b>UMTS/HSDPA/HSUPA Status</b> = <i>Enabled</i></p> <p>Displays the current quality of the UMTS connection. The value cannot be changed.</p>
Preferred Network Type	<p>Select the network type to be used as preference.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Automatic</i> (default value): GPRS or UMTS are used for the connection, depending on the network type that is locally available.</li> <li>• <i>GPRS only</i>: Only GPRS is used, if GPRS is not available, no connection can be established.</li> <li>• <i>UMTS only</i>: Only UMTS is used, if UMTS is not available, no connection can be established.</li> <li>• <i>GPRS preferred</i>: GPRS is preferred, if GPRS is not available, UMTS is used.</li> <li>• <i>UMTS preferred</i>: UMTS is preferred, if UMTS is not available, GPRS is used.</li> </ul>
Incoming Service Type	<p>Only for <b>UMTS/HSDPA/HSUPA Status</b> = <i>Enabled</i></p> <p>Here you select the gateway subsystem to which an incoming call over the modem is to be assigned.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>ISDN Login</i>(default value): The call is assigned to the ISDN Login subsystem.</li> <li>• <i>PPP Dialin</i>: The call is assigned to the PPP subsystem.</li> <li>• <i>Disabled</i>: No call is accepted.</li> </ul>
SIM Card Uses PIN	<p>Only for <b>UMTS/HSDPA/HSUPA Status</b> = Init Sequence <i>Enabled</i></p> <p>Enter the PIN for your UMTS modem card.</p>

Field	Description
	<p>Note: Entering a wrong PIN blocks communication until the entry is corrected.</p>
Modem Init Sequence	<p>Only for <b>UMTS/HSDPA/HSUPA Status</b> = <i>Enabled</i></p> <p>Here you can enter an initialization string for your modem. You can add other AT commands if required by separating them with semicolons. The entry is limited to 80 characters.</p>
APN (Access Point Name)	<p>Only for <b>UMTS/HSDPA/HSUPA Status</b> = <i>Enabled</i></p> <p>If GPRS/UMTS is to be used, you must enter the so-called Access Point Name here that you receive from your provider. A maximum of 80 characters can be entered.</p> <p>If no APN or an incorrect APN is entered, a configured GPRS/UMTS connection will not function.</p>

## Chapter 12 LAN

In this menu, you configure the addresses in your LAN and can structure your local network using VLANs.

### 12.1 IP Configuration

In this menu, you can edit the IP configuration of the LAN and Ethernet interfaces of your device.

#### 12.1.1 Interfaces

In the **LAN -> IP Configuration -> Interfaces** menu, the available IP interfaces are listed. You can edit the IP configuration of the interfaces or create virtual interfaces for special applications. Here is a list of all of the interfaces (logical Ethernet interfaces and others created in the subsystems) configured in the **System Management -> Interface Mode / Bridge Groups -> Interfaces** menu.

Use the  to edit the settings of an existing interface (bridge groups, Ethernet interfaces in routing mode).

You can use the **New** button to create virtual interfaces. However, this is only needed in special applications (e.g. BRRP).

Depending on the option selected, different fields and options are available. All the configuration options are listed below.

The default setting for all existing interfaces of your device is routing mode. The interface, **en1-0**, is pre-configured with IP address *192.168.0.254* and netmask *255.255.255.0*.


#### Example of subnets

If your device is connected to a LAN that consists of two subnets, you should enter a second **IP Address/Netmask**.

The first subnet has two hosts with the IP addresses 192.168.42.1 and 192.168.42.2, for example, and the second subnet has two hosts with the IP addresses 192.168.46.1 and 192.168.46.2. To be able to exchange data packets with the first subnet, your device uses the IP address 192.168.42.3, for example, and 192.168.46.3 for the second subnet. The netmasks for both subnets must also be indicated.

### 12.1.1.1 Edit/New

Choose the  icon to edit existing entries. Choose the **New** button to create virtual interfaces.

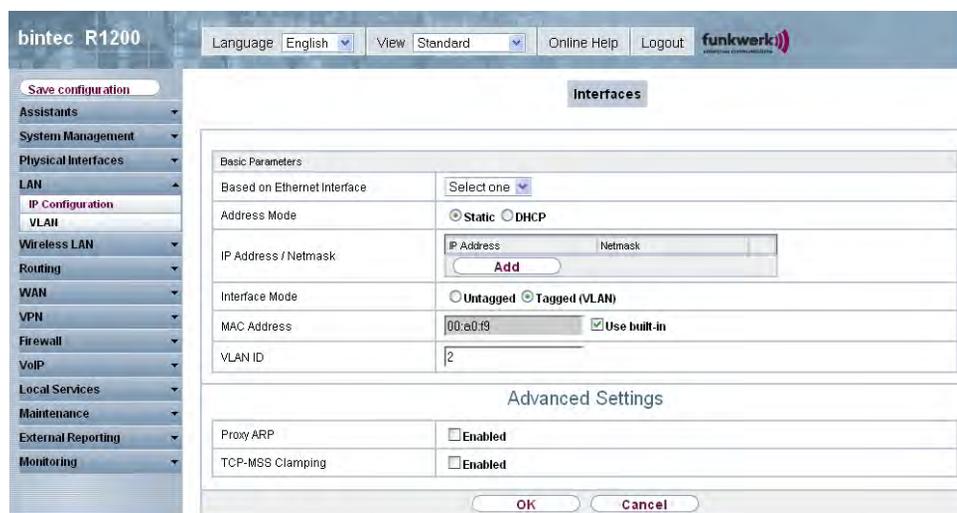

The screenshot shows the 'bintec R1200' web interface. The top navigation bar includes 'Language English', 'View Standard', 'Online Help', and 'Logout'. The left sidebar shows a menu with 'IP Configuration' selected, and 'Interfaces' is the active sub-menu. The main content area is titled 'Interfaces' and contains the following configuration fields:

- Basic Parameters:**
  - Based on Ethernet Interface: Select one (dropdown)
  - Address Mode:  Static  DHCP
  - IP Address / Netmask: IP Address (text input), Netmask (text input), Add (button)
  - Interface Mode:  Untagged  Tagged (VLAN)
  - MAC Address: 00:e0:19 (text input),  Use built-in
  - VLAN ID: 2 (text input)
- Advanced Settings:**
  - Proxy ARP:  Enabled
  - TCP-MSS Clamping:  Enabled

Buttons for 'OK' and 'Cancel' are located at the bottom of the form.

Fig. 69: LAN -> IP Configuration -> Interfaces ->Edit/New

The LAN -> IP Configuration -> Interfaces ->Edit/New menu consists of the following fields:

#### Fields in the Interfaces Basic Parameters menu

Field	Description
Based on Ethernet Interface	This field is only displayed if you are editing a virtual routing interface.  Select the Ethernet interface for which the virtual interface is to be configured.
Address Mode	Select how an IP address is assigned to the interface.  Possible values: <ul style="list-style-type: none"> <li><i>Static</i> (default value): A static IP address is assigned to the interface in <b>IP Address/Netmask</b>.</li> <li><i>DHCP</i>: An IP address is assigned to the interface dynamically via DHCP.</li> </ul>

Field	Description
IP Address/Netmask	<p>Only if <b>Address Mode</b> = <i>Static</i></p> <p>With <b>Add</b>, add a new address entry and enter the <b>IP Address</b> and corresponding <b>Netmask</b></p>
Interface Mode	<p>Only for physical interfaces in routing mode.</p> <p>Select the configuration mode of the interface.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Untagged</i> (default value): The interface is not assigned for a specific purpose.</li> <li>• <i>Tagged (VLAN)</i>: This option only applies for routing interfaces.</li> </ul> <p>You use this option to assign the interface to a VLAN. This is done using the VLAN ID, which is displayed in this mode and can be configured. In this mode, the definition of a MAC Address in <b>MAC Address</b> is optional.</p>
MAC Address	<p>Only for virtual interfaces and if <b>Interface Mode</b> = <i>Untagged</i></p> <p>Enter the MAC Address associated with the interface. For virtual interfaces, you can use the MAC Address of the physical interface under which the virtual interface was created, but this is not necessary. You can also allocate a virtual MAC Address. The first 6 characters of the MAC are preset (but can be changed).</p>
VLAN ID	<p>Only if <b>Interface Mode</b> = <i>Tagged (VLAN)</i>.</p> <p>This option only applies for routing interfaces. Assign the interface to a VLAN by entering the VLAN ID of the relevant VLAN.</p> <p>Possible values are 1 (default value) to 4094.</p>

The **Advanced Settings** menu consists of the following fields:

#### Fields in the menu **Advanced Settings**

Field	Description
DHCP MAC Address	<p>Only if <b>Address Mode</b> = <i>DHCP</i></p> <p>If <b>Use Built-In</b> is activated (default setting), the hardware MAC Address of the Ethernet interface is used. In the case of physic-</p>

Field	Description
	<p>al interfaces, the current MAC Address is entered by default.</p> <p>If you disable <b>Use Built-In</b>, you enter a MAC Address for the virtual interface, e.g. <code>00:e1:f9:06:bf:03</code>.</p> <p>Some providers use hardware-independent MAC addresses to allocate their clients IP addresses dynamically. If your provider has assigned you a MAC Address, enter this here.</p>
DHCP Hostname	<p>Only if <b>Address Mode</b> = <i>DHCP</i></p> <p>Enter the host name requested by the provider. The maximum length of the entry is 45 characters.</p>
DHCP Broadcast flag	<p>Only if <b>Address Mode</b> = <i>DHCP</i></p> <p>Choose whether or not the BROADCAST bit is set in the DHCP requests for your device. Some DHCP servers that assign IP addresses by UNICAST do not respond to DHCP requests with the set BROADCAST bit. In this case, it is necessary to send DHCP requests in which this bit is not set. In this case, disable this option.</p> <p>The function is activated by choosing <i>Enabled</i>.</p> <p>The function is enabled by default.</p>
Proxy ARP	<p>Select whether your device is to respond to ARP requests from its own LAN on behalf of defined remote terminals.</p> <p>The function is activated by choosing <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
TCP-MSS Clamping	<p>Select whether your device is to apply MSS Clamping. To prevent IP packets fragmenting, the MSS (Maximum Segment Size) is automatically decreased by the device to the value set here.</p> <p>The function is activated by choosing <i>Enabled</i>.</p> <p>The function is disabled by default. Once enabled, the default value <code>1350</code> is entered in the input field.</p>

## 12.2 VLAN

By implementing VLAN segmentation in accordance with 802.1Q, you can configure VLANs on your device. The wireless ports of an access point, in particular, are able to remove the VLAN tag of a frame sent to the clients and to tag received frames with a predefined VLAN ID. This functionality makes an access point nothing less than a VLAN-aware switch with the enhancement of grouping clients into VLAN groups. In general, VLAN segmenting can be configured with all interfaces.

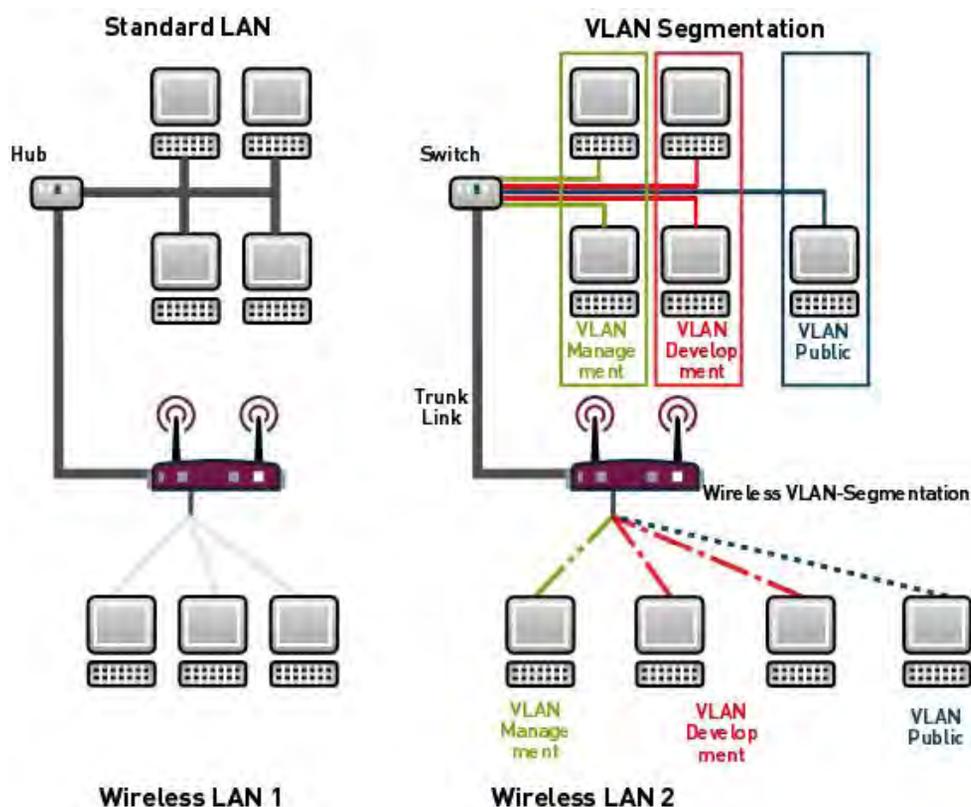


Fig. 70: VLAN segmenting

### VLAN for Bridging and VLAN for Routing

In the **LAN -> VLAN** menu, VLANs (virtual LANs) are configured with interfaces that operate in bridging mode. Using the **VLAN** menu, you can make all the settings needed for this and query their status.



### Caution

For interfaces that operate in Routing mode, you only assign a VLAN ID to the interface. You define this via the parameter **Interface Mode** = *VLAN* and the **VLAN ID** field in the **LAN -> IP Configuration -> Interfaces -> New** menu.

## 12.2.1 VLANs

In this menu, you can display all the VLANs already configured, edit your settings and create new VLANs. By default, the *Management* VLAN is available, to which all interfaces are assigned.

### 12.2.1.1 Edit/New

Choose the  icon to edit existing entries. Choose the **New** button to configure other VLANs.

The screenshot shows the 'bintec R1200' web interface. At the top, there are navigation options: Language (English), View (Standard), Online Help, and Logout. The main menu on the left includes categories like Assistants, System Management, Physical Interfaces, LAN, IP Configuration, and VLAN. The 'VLANs' tab is selected in the top right of the dialog. The 'Configure VLAN' form contains the following fields:

- VLAN Identifier: 1
- VLAN Name: Management
- VLAN Members: Interface (sta1-0), Egress Rule (Untagged), Delete

Buttons for 'OK' and 'Cancel' are located at the bottom of the dialog.

Fig. 71: LAN -> VLAN -> VLANs -> Edit/New

The **LAN -> VLAN -> VLANs -> Edit/New** menu consists of the following fields:

#### Fields in the VLANs Configure VLAN menu

Field	Description
VLAN Identifier	Enter the number that identifies the VLAN. In the <b>Edit</b> menu, you can no longer change this value.

Field	Description
	Possible values are <i>1</i> to <i>4094</i> .
VLAN Name	Enter a unique name for the VLAN. A character string of up to 32 characters is possible.
VLAN Members	Select the ports that are to belong to this VLAN. You can use the <b>Add</b> button to add members.  For each entry, also select whether the frames to be transmitted from this port are to be transmitted <i>Tagged</i> (i.e. with VLAN information) or <i>Untagged</i> (i.e. without VLAN information).

## 12.2.2 Port Configuration

In this menu, you can define and view the rules for receiving frames at the VLAN ports.

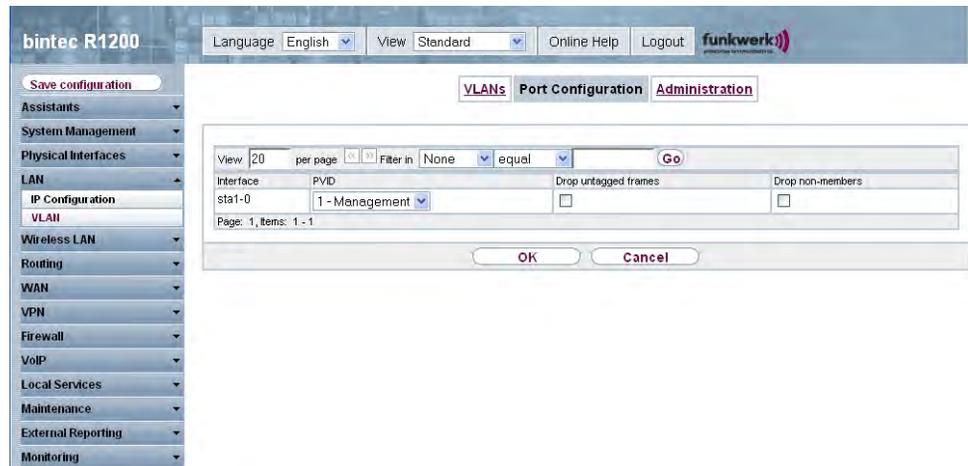


Fig. 72: LAN -> VLAN -> Port Configuration

The LAN -> VLAN -> Port Configuration menu consists of the following fields:

### Fields in menu Port Configuration

Field	Description
Interface	Shows the port for which you define the PVID and processing rules.
PVID	Assign the selected port the required PVID (Port VLAN Identifi-

Field	Description
	er).  If a packet without a VLAN tag reaches this port, it is assigned this PVID.
Drop untagged frames	If this option is enabled, untagged frames are discarded. If the option is disabled, untagged frames are tagged with the PVID defined in this menu.
Drop non-members	If this option is enabled, all tagged frames that are tagged with a VLAN ID to which the selected port does not belong are discarded.

### 12.2.3 Administration

In this menu, you make general settings for a VLAN. The options must be configured separately for each bridge group.

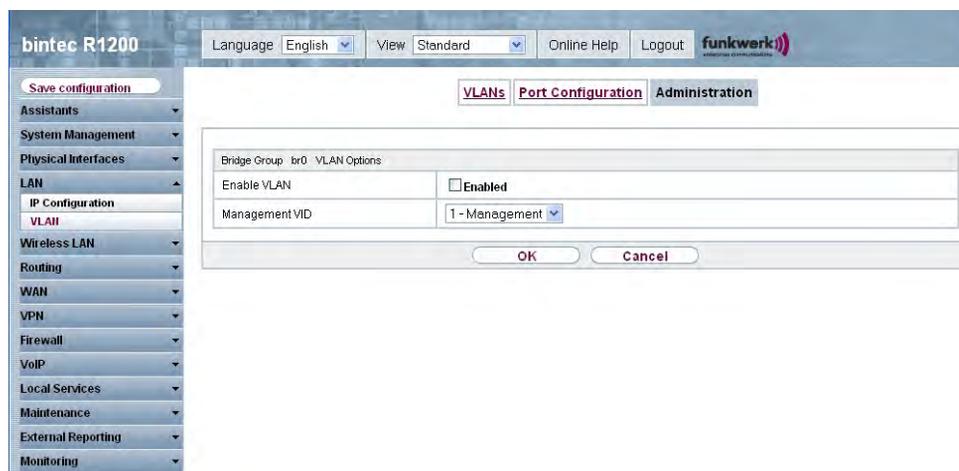


Fig. 73: LAN -> VLAN -> Administration

The LAN -> VLAN -> Administration menu consists of the following fields:

#### Fields in the Administration Bridge Group br<ID> VLAN Options menu

Field	Description
Enable VLAN	Enable or disable the specified bridge group for VLAN.

Field	Description
	The function is activated with <i>Enabled</i> . The function is not activated by default.
Management VID	Enter the VLAN ID of the VLAN in which your device is to operate.

## Chapter 13 Wireless LAN

In the case of wireless LAN (WLAN = Wireless Local Area Network), this relates to the creation of a network using wireless technology.

### Network functions

Like a wired network, a WLAN offers all the main network functions. Access to servers, files, printers, and the e-mail system is just as reliable as company-wide Internet access. Because the devices do not require any cables, the great advantage of WLAN is that there are no building-related restrictions (i.e. the device location does not depend on the position and number of connections).

### Currently applicable standard: IEEE 802.11

In the case of 802.11-WLANs, all the functions of a wired network are possible. WLAN transmits inside and outside buildings with a maximum of 100 mW.

IEEE 802.11g is currently the most widespread standard for wireless LANs and offers a maximum data transmission rate of 54 mbps. This procedure operates in the radio frequency range of 2.4 GHz, which ensures that parts of the building are penetrated as effectively as possible with a low transmission power that poses no health risks.

A 802.11g-compatible standard is 802.11b, which operates in the 2.4 GHz range (2400 MHz - 2485 MHz) and offers a maximum data transmission rate of 11 mbps. 802.11b and 802.11g WLAN systems involve no charge or login.

With 802.11a, bandwidths of up to 54 mbps can be used in the 5150 GHz to 5725 MHz range. With the higher frequency range, 19 non-overlapping frequencies are available (in Germany). This frequency range can also be used without a licence in Germany. In Europe, transmission power of not just 30 mW but 1000 mW can be used with 802.11h, but only if TPC (TX Power Control, method for controlling transmission power in wireless systems to reduce interferences) and DFS (Dynamic Frequency Selection) are used. The purpose of TPC and DFS is to ensure that satellite connections and radar devices are not interfered with.

### 13.1 WLAN

In the **Wireless LAN** -> **WLAN1** menu, you can configure the WLAN module of your device.

Depending on the model, one or two WLAN modules, **WLAN1** and, in certain models, **WLAN2**, are available.

## 13.1.1 Radio Settings

In the **Wireless LAN -> WLAN -> Radio Settings** menu, an overview of all the configuration options for the WLAN module is shown.

The screenshot shows the web interface for a bintec R1200 device. The top bar includes 'Language English', 'View Standard', 'Online Help', 'Logout', and the 'funkwerk' logo. The left navigation menu is expanded to 'Wireless LAN' and 'WLAN'. The main content area is titled 'Radio Settings' and contains a table with the following data:

Radio Settings						
MAC Address	Operation Mode	Operation Band	Channel in Use	Maximum Bitrate	Transmit Power	Status
00:0c:84:01:ae:50	Off	2.4 GHz	6	Auto	17dBm	<span style="color: red;">●</span> 

Fig. 74: Wireless LAN -> WLAN -> Radio Settings

### 13.1.1.1 Radio Settings -> Edit

In this menu, you change the settings for the wireless module.

Choose the  button to edit the configuration.

**bintec R1200** Language English View Standard Online Help Logout **funkwerk**

**Save configuration** **Radio Settings**

**Wireless Settings**

Operation Mode	Access Point
Operation Band	2.4 GHz In/Outdoor
Channel	Auto
Antenna Diversity	<input checked="" type="checkbox"/> Enabled
Transmit Power	Max.

**Performance Settings**

Wireless Mode	802.11 mixed (b/g)
Max. Transmission Rate	Auto
Nitro Mode	<input checked="" type="checkbox"/> Enabled
Nitro XM	<input type="checkbox"/> Frame Compression <input checked="" type="checkbox"/> Frame Concatenation <input checked="" type="checkbox"/> Piggyback Acknowledge <input checked="" type="checkbox"/> Direct Link

**Advanced Settings**

Beacon Period	100	ms
DTIM Period	2	
RTS Threshold	Always off	
Short Retry Limit	7	
Long Retry Limit	4	
Fragmentation Threshold	2346	Bytes
ED Threshold	0	
CW Min.	15	
CW Max.	1023	
Max. Receive Lifetime	512	ms
Max. Transmit MSDU Lifetime	512	ms

OK Cancel

Fig. 75: Wireless LAN -> WLAN -> Radio Settings->

The Wireless LAN -> WLAN -> Radio Settings -> menu consists of the following fields:

#### Fields in the Radio Settings WLAN Settings menu

Field	Description
Operation Mode	<p>Define the mode in which the wireless module of your device is to operate.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li><i>Off</i> (default value) The radio module is switched off.</li> <li><i>Access Point</i>: Your device is used as an access point in your network.</li> <li><i>Access Client</i>: Your device serves as an Access Client in your network.</li> </ul>

Field	Description
Client mode	<p>Only for <b>Operating Mode</b> = <i>Access Client</i></p> <p>Select the client connection mode to the access point.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Infrastructure</i> (default value): In a network in infrastructure mode, all clients communicate with each other via access points only. There is no direct communication between the individual clients.</li> <li>• <i>Ad-Hoc</i>: In ad-hoc mode, an access client can be used as central interface between a number of terminals. In this way, devices such as computers and printers can be wirelessly interconnected.</li> </ul> <p>Select the <b>channel</b> to be used.</p>
Operation Band	<p>Select the operation band and usage area of the wireless module.</p> <p>For <b>Operation Mode</b> = <i>Access Point</i></p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>2.4 GHz In/Outdoor</i> (default value): our device is operated at 2.4 GHz (mode 802.11b and mode 802.11g), inside or outside buildings.</li> <li>• <i>5 GHz Indoor</i>: Your device is run with 5 GHz (Mode 802.11a/h) inside buildings.</li> <li>• <i>5 GHz Outdoor</i>: Your device is run with 5 GHz (Mode 802.11a/h) outside buildings.</li> <li>• <i>5 GHz In/Outdoor</i>: Your device is run with 5 GHz (Mode 802.11a/h) inside or outside buildings.</li> </ul> <p>For <b>Operation Mode</b> = <i>Access Client</i></p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>2,4 and 5 GHz</i></li> <li>• <i>2.4 GHz</i> (default value)</li> <li>• <i>5 GHz</i></li> </ul>
Usage Area	<p>Only for <b>Operation Mode</b> = <i>Access Client</i>, <b>Client Mode</b> =</p>

Field	Description
	<p><i>Infrastructure</i> and <b>Operation Band</b> = 2.4 and 5 GHz or 5 GHz</p> <p>Choose the location at which the device is operated.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Indoor-Outdoor</i> (default value)</li> <li>• <i>Indoor</i></li> <li>• <i>Outdoor</i></li> </ul>
IEEE 802.11d Compliance	<p>Only for <b>Operating Mode</b> = <i>Access Client</i></p> <p>Select how the country information is determined.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Flexible</i> (default value): The system attempts to determine the country information of the access point, otherwise the system's own country information is used.</li> <li>• <i>None</i>: The system's own country information is used.</li> <li>• <i>Strict</i>: The country information of the access point is used.</li> </ul>
Channel	<p>The number of channels you can selected depends on the country setting. Please consult the data sheet for your device.</p> <p><b>Access Point mode:</b></p> <p>Configuring the network name (SSID) in Access Point mode means that wireless networks can be logically separated from each other, but they can still physically interfere with each other if they are operating on the same or closely adjacent wireless channels. So if you are operating two or more radio networks close to each other, it is advisable to allocate the networks to different channels. Each of these should be spaced at least four channels apart, as a network also partially occupies the adjacent channels.</p> <p>In the case of manual channel selection, please make sure first that the clients actually support these channels.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• For <b>Frequency Band</b> = 2.4 GHz <i>In/Outdoor</i></li> </ul>

Field	Description
	<p>Possible values are <i>1</i> to <i>13</i> and <i>Auto</i> (default value).</p> <ul style="list-style-type: none"> <li>• For <b>Frequency Band</b> = <i>5 GHz Indoor</i></li> </ul> <p>Possible values are <i>36, 40, 44, 48</i> and <i>Auto</i> (default value)</p> <ul style="list-style-type: none"> <li>• For <b>Operation Band</b> = <i>5 GHz In/Outdoor</i> and <i>5 GHz Outdoor</i></li> </ul> <p>Only the <i>Auto</i> option is possible here.</p> <p><b>Access Client mode:</b></p> <p>In Access Client mode you can only select the required channel in <b>Client Mode</b> = <i>Ad Hoc</i>.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• For <b>Frequency Band</b> = <i>2.4 GHz In/Outdoor</i></li> </ul> <p>Possible values are <i>1</i> to <i>13</i> and <i>Auto</i> (default value).</p> <ul style="list-style-type: none"> <li>• For <b>Frequency Band</b> = <i>5 GHz Indoor</i></li> </ul> <p>Possible values are <i>36, 40, 44, 48</i> and <i>Auto</i> (default value)</p> <ul style="list-style-type: none"> <li>• For <b>Operation Band</b> = <i>5 GHz In/Outdoor</i> and <i>5 GHz Outdoor</i></li> </ul> <p>Only the <i>Auto</i> option is possible here.</p>
Antenna Diversity	<p>Select how many and which antennas are used to send and receive.</p> <p>If the function is deactivated, only the main antenna sends and receives.</p> <p>If the function is activated, two antennas receive and the better signal is evaluated.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is activated by default.</p>
Transmit Power	<p>Select the maximum value for the radiated antenna power. The actually radiated antenna power may be lower than the maximum value set, depending on the data rate transmitted. The maximum value for Transmit Power is country-dependent.</p>

Field	Description
	<p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Max.</i> (default value): The maximum antenna power is used.</li> <li>• <i>User Defined</i>: Enter the required maximum value in dBm in the input field.</li> <li>• <i>2 mW 3 dBm</i></li> <li>• <i>5 mW 7 dBm</i></li> <li>• <i>10 mW 10 dBm</i></li> <li>• <i>40 mW 16 dBm</i></li> </ul>

#### Fields in the Radio Settings Performance Settings menu

Field	Description
Wireless Mode	<p>Only for <b>Operation Band = 2.4 GHz In/Outdoor</b></p> <p>Select the wireless technology that the access point is to use.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>802.11g</i>: The device operates only in accordance with 802.11g. 802.11b clients have no access.</li> <li>• <i>802.11b</i>: Your device operates only in accordance with 802.11b and forces all clients to adapt to it.</li> <li>• <i>802.11 mixed (b/g)</i> (default value) / <i>802.11 mixed-short (b/g)</i>: Your device adapts to the client technology. The following applies for mixed-short: The data rates 5.5 and 11 mbps must be supported by all clients (basic rates).</li> <li>• <i>802.11 mixed-long (b/g)</i>: Your device adapts to the client technology. Only a data rate of 1 and 2 mbps needs to be supported by all clients (basic rates). This mode is also needed for Centrino clients if connection problems occur.</li> </ul>
Max. Transmission Rate	<p>Select the transmission speed.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>auto</i> (default value) The transmission speed is determined automatically.</li> <li>• <i>&lt;Value&gt;</i>: Depending on the setting for <b>Operation Band</b>, <b>Bandwidth</b>, <b>Number of spatial streams</b> and <b>Wireless Mode</b>, different whole values in mbps will be available for se-</li> </ul>

Field	Description
	lection.
Nitro Mode	<p>Activate this function to increase the transmission speed for 802.11g through frame bursting. As a result, several packets are sent one after the other without a waiting period. This is particularly effective in 11b/g mixed operation.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is activated by default.</p> <p>If problems occur with older WLAN hardware, this function should be deactivated.</p>
Nitro XM	<p>The Nitro XM (eXtreme Multimedia) function can increase throughput by combining Protection (avoids collisions in radio cells with 11g and 11b clients), Packet Bursting (sending of several data packets together; already implemented with the name Nitro), Compression and Concatenation (combines several smaller packets into one larger WLAN packet).</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Frame Compression</i>: If this function is activated, sent data is compressed. This only works in combination with clients that use Conexant radio cards. The gain in transmission speed depends to a large extent on the type of transmitted data.</li> <li>• <i>Frame Concatenation</i>: If this function is activated, several small data packets are combined to form larger ones. This only works in combination with clients that use Conexant radio cards.</li> <li>• <i>Piggyback Acknowledge</i>: If this function is activated, the confirmation for received packets ("ACK") is combined with other sent packages. This only works in combination with clients that use Conexant radio cards.</li> <li>• <i>Direct Link</i>: If "Direct link" is activated, logged-on clients can exchange data directly, without routing via the access point. This only works in combination with clients that use Conexant radio cards.</li> </ul> <p>By default, <i>Frame Concatenation</i>, <i>Piggyback Acknowledge</i> and <i>Direct Link</i> are activated.</p>

The **Advanced Settings** menu consists of the following fields:

#### Fields in the menu **Advanced Settings**

Field	Description
Beacon Period	<p>Only if <b>Operation Mode</b> = <i>Access Point</i> or <i>Access Client</i> with <b>Client Mode</b> <i>Ad Hoc</i>.</p> <p>Enter the time in milliseconds between the sending of two beacons.</p> <p>This value is transmitted in Beacon and Probe Response Frames.</p> <p>Possible values are 1 to 65535.</p> <p>The default value is 100 msec.</p>
DTIM Period	<p>Only if <b>Operation Mode</b> = <i>Access Point</i> or <i>Access Client</i> with <b>Client Mode</b> <i>Ad Hoc</i>.</p> <p>Enter the interval for the Delivery Traffic Indication Message (DTIM).</p> <p>The DTIM field is a data field in transmitted beacons that informs clients about the window to the next broadcast or multicast transmission. If clients operate in power save mode, they come alive at the right time and receive the data.</p> <p>Possible values are 1 to 255.</p> <p>The default value is 2.</p>
RTS Threshold	<p>Here, you select how the RTS/CTS mechanism is to be switched on/off.</p> <p>If you choose <i>User Defined</i>, in the input field you can specify the data packet length threshold in bytes (1..2346) as of which the RTS/CTS mechanism is to be used. This makes sense if several clients that are not in each other's wireless range are run in one access point. The mechanism can also be switched on/off independently of the data packet length by selecting the value <i>Always on</i> or <i>Always off</i> (default value).</p>
Short Retry Limit	<p>Enter the maximum number of attempts to send a frame of length less than or equal to the value defined in <b>RTS</b></p>

Field	Description
	<p>. After this many failed attempts, the packet is discarded.</p> <p>Possible values are 1 to 255.</p> <p>The default value is 7.</p>
Long Retry Limit	<p>Enter the maximum number of attempts to send a data packet of length less than or equal to the value defined in <b>RTS Threshold</b>. After this many failed attempts, the packet is discarded.</p> <p>Possible values are 1 to 255.</p> <p>The default value is 4.</p>
Fragmentation Threshold	<p>Enter the maximum size as of which the data packets are to be fragmented (i.e. split into smaller units). A low value is recommended for this field in areas with poor reception and in the event of radio interference.</p> <p>Possible values are 256 to 2346.</p> <p>The default value is 2346 bytes.</p>
ED Threshold	<p>Define the Energy Detection threshold for CCA (Clear Channel Assessment).</p> <p>Possible values are -2147483648 to 2147483647.</p> <p>The default value is 0.</p>
CW Min	<p>Define the maximum size of the contention window.</p> <p>Possible values are 1 to 65535.</p> <p>The default value is 15.</p>
CW Max	<p>Define the minimum size of the contention window.</p> <p>Possible values are 1 to 65535.</p> <p>The default value is 1023.</p>
Max Receive Lifetime	<p>Enter the time from receipt of the first fragment of a data packet as of which no further attempts are made. The data packet is discarded.</p>

Field	Description
	<p>Possible values are 1 to 4294967295.</p> <p>The default value is 512 msec.</p>
Max Transmit MSDU Lifetime	<p>Enter the time from sending of the first fragment of a data packet as of which no further send attempts are made. The data packet is discarded.</p> <p>Possible values are 1 to 4294967295.</p> <p>The default value is 512 msec.</p>

If *Access Client* has been selected for the **Operation Mode** with **Client Mode** *Infrastructure*, the following parameters will also be available under **Advanced Settings**.

#### Fields in the Advanced Settings Access Client Mode menu

Field	Description
Scan channels	<p>Only for <b>Operation Mode</b> = <i>Access Client</i>, <b>Client Mode</b> = <i>Infrastructure</i> and <b>Operation Band</b> = 2.4 GHz.</p> <p>Choose the channels which the WLAN client automatically scans for available wireless networks.</p> <p>The function is enabled by default. All channels are scanned. If the function is disabled, you can define the required channels under <b>Selected Channels</b>.</p>
User Defined Channel Plan	<p>Only for <b>Scan channels</b> = <i>User defined</i></p> <p>Define the channels which the WLAN client automatically scans for available wireless networks.</p>
Roaming Profile	<p>Select the roaming profile. The options available include typical roaming functions.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Fast Roaming</i>: The WLAN client searches for available wireless networks as soon as the radio signal of the existing radio connection becomes unsuitable for higher data rates.</li> <li>• <i>Normal Roaming</i> (default value): Standard roaming.</li> <li>• <i>Slow Roaming</i>: The WLAN client searches for available wireless networks as soon as the radio signal of the existing</li> </ul>

Field	Description
	<p>radio connection becomes weaker.</p> <ul style="list-style-type: none"> <li>• <i>No Roaming</i>: The WLAN client searches for available wireless networks if it is no longer connected to a wireless network.</li> <li>• <i>Custom Roaming</i>: Specify the individual roaming parameters.</li> </ul>
Scan Threshold	<p>Indicates the value in dBm above which the system scans for available wireless networks in the background.</p> <p>The value can only be changed for <b>Roaming Profile</b> = <i>Custom Roaming</i>. The default value is <i>-70 dBm</i>.</p>
Scan Interval	<p>Indicates the interval in milliseconds after which the system scans for available wireless networks.</p> <p>The value can only be changed for <b>Roaming Profile</b> = <i>Custom Roaming</i>. The default value is <i>5000 ms</i>.</p>
Channel Sweep	<p>Indicates how many frequencies are scanned in the background.</p> <p>The value can only be changed for <b>Roaming Profile</b> = <i>Custom Roaming</i>. The default value is <i>2</i>. The value <i>0</i> disables the scan in the background. The value <i>-1</i> enables the scan of all available frequencies.</p>
Min. Time Period for Active Scan	<p>Indicates the minimum time in milliseconds a frequency is actively scanned.</p> <p>The value can only be changed for <b>Roaming Profile</b> = <i>Custom Roaming</i>. The default value is <i>10 ms</i>.</p>
Max. Time Period for Active Scan	<p>Indicates the maximum time in milliseconds a frequency is actively scanned.</p> <p>The value can only be changed for <b>Roaming Profile</b> = <i>Custom Roaming</i>. The default value is <i>40 ms</i>.</p>
Min. Time Period for Passive Scan	<p>Indicates the minimum time in milliseconds a frequency is passively scanned.</p> <p>The value can only be changed for <b>Roaming Profile</b> = <i>Custom Roaming</i>. The default value is <i>20 ms</i>.</p>
Max. Time Period for Passive Scan	<p>Indicates the maximum time in milliseconds a frequency is actively scanned.</p>

Field	Description
	The value can only be changed for <b>Roaming Profile</b> = <i>Custom Roaming</i> . The default value is <i>120 ms</i> .
RTS Threshold	<p>Select how the RTS/CTS mechanism is to be switched on/off.</p> <p>If you choose <i>User Defined</i>, in the input field you can specify the data packet length threshold in bytes (1..2346) as of which the RTS/CTS mechanism is to be used. This makes sense if several clients that are not in each other's wireless range are run in one access point. The mechanism can also be switched on/off independently of the data packet length by selecting the value <i>Always on</i> or <i>Always off</i> (default value).</p>
Short Retry Limit	<p>Enter the maximum number of attempts to send a frame of length less than or equal to the value defined in <b>RTS Threshold</b>. After this many failed attempts, the packet is discarded.</p> <p>Possible values are <i>1 to 255</i>.</p> <p>The default value is <i>7</i>.</p>
Long Retry Limit	<p>Enter the maximum number of attempts to send a data packet of length less than or equal to the value defined in <b>RTS Threshold</b>. After this many failed attempts, the packet is discarded.</p> <p>Possible values are <i>1 to 255</i>.</p> <p>The default value is <i>4</i>.</p>
Fragmentation Threshold	<p>Enter the maximum size as of which the data packets are to be fragmented (i.e. split into smaller units). A low value is recommended for this field in areas with poor reception and in the event of radio interference.</p> <p>Possible values are <i>256 to 2346</i>.</p> <p>The default value is <i>2346 bytes</i>.</p>
ED Threshold	<p>Define the Energy Detection threshold for CCA (Clear Channel Assessment).</p> <p>Possible values are <i>-2147483648 to 2147483647</i>.</p>

Field	Description
	The default value is <i>0</i> .
CW Min.	Define the maximum size of the contention window.  Possible values are <i>1</i> to <i>65535</i> .  The default value is <i>15</i> .
CW Max.	Define the minimum size of the contention window.  Possible values are <i>1</i> to <i>65535</i> . The default value is <i>1023</i> .
Max. Receive Lifetime	Enter the time from receipt of the first fragment of a data packet as of which no further attempts are made. The data packet is discarded.  Possible values are <i>1</i> to <i>4294967295</i> .  The default value is <i>512 msec</i> .
Max. Transmit MSDU Lifetime	Enter the time from sending of the first fragment of a data packet as of which no further send attempts are made. The data packet is discarded.  Possible values are <i>1</i> to <i>4294967295</i> .  The default value is <i>512 msec</i> .

## 13.1.2 Virtual Service Sets

If you operate your device in access point mode (**Wireless LAN** -> **WLAN** -> **Wireless Module Settings** ->  -> **Operating Mode** = *Access Point*), you can set up and edit the desired wireless networks in the **Wireless LAN** -> **WLAN** -> **Wireless Networks (VSS)** ->  -> **New** menu.



### Note

The preset wireless network Funkwerk-EC has the following security settings in the ex works state:

- **Security Mode** = *WPA-PSK*
- **WPA Mode** = *WPA and WPA2*
- **WPA Cipher** and **WPA2 Cipher** = *AES and TKIP*
- The **Preshared Key** is filled with an internal system value, which you must change during configuration.

## Setting network names

In contrast to a LAN set up over Ethernet, a wireless LAN does not have any cables for setting up a permanent connection between the server and clients. Access violations or faults may therefore occur with directly adjacent radio networks. To prevent this, every radio network has a parameter that uniquely identifies the network and is comparable with a domain name. Only clients with a network configuration that matches that of your device can communicate in this WLAN. The corresponding parameter is called the network name. In the network environment, it is sometimes also referred to as the SSID.

## Protection of wireless networks

As data can be transmitted over the air in the WLAN, this data can in theory be intercepted and read by any attacker with the appropriate resources. Particular attention must therefore be paid to protecting the wireless connection.

There are three security modes, WEP, WPA-PSK and WPA Enterprise. WPA Enterprise offers the highest level of security, but this security mode is only really suitable for companies, because it requires a central authentication server. Private users should choose WEP or preferably WPA-PSK with higher security as their security mode.

## WEP

802.11 defines the WEP security standard (Wired Equivalent Privacy = encryption of data with 40 bits (**Security Mode** = *WEP 40*) or 104 bits (**Security Mode** = *WEP 104*)). However, this widely used WEP has proven susceptible to failure. However, a higher degree of security can only be achieved through hardware-based encryption which required additional configuration (for example 3DES or AES). This permits even sensitive data from being transferred via a radio path without fear of it being stolen.

## IEEE 802.11i

Standard IEEE 802.11i for wireless systems contains basic security specifications for wireless networks, in particular with regard to encryption. It replaces the insecure WEP (Wired Equivalent Privacy) with WPA (Wi-Fi Protected Access). It also includes the use of the advanced encryption standard (AES) to encrypt data.

## WPA

WPA (Wi-Fi Protected Access) offers additional privacy by means of dynamic keys based on the Temporal Key Integrity Protocol (TKIP), and offers PSK (preshared keys) or Extensible Authentication Protocol (EAP) via 802.1x (e.g. RADIUS) for user authentication.

Authentication using EAP is usually used in large wireless LAN installations, as an authentication instance in the form of a server (e.g. a RADIUS server) is used in these cases. PSK (preshared keys) are usually used in smaller networks, such as those seen in SoHo (Small office, Home office). Therefore, all the wireless LAN subscribers must know the PSK, because it is used to generate the session key.

## WPA2

WPA2 is the enhancement of WPA. In WPA2, the 802.11i standard is not only implemented for the first time in full, but another encryption algorithm AES (Advanced Encryption Standard) is also used.

## Access control

You can control which clients can access your wireless LAN via your device by creating an Access control list (**ACL Mode** or **MAC Filter**). In the Access Control List, you enter the MAC addresses of the clients that may access your wireless LAN. All other clients have no access.

## Security measures

To protect the data transferred on the WLAN, you may need to carry out the following configuration steps in the **Wireless LAN -> WLAN -> Wireless Networks (VSS) ->New->** menu:

- Change the access passwords for your device.
- Change the default SSID, **Network Name (SSID)** = *Funkwerk-ec* , of your access point. Set **Visible** = *Enabled*. This will exclude all WLAN clients that attempt to establish a connection with the general value for **Network Name (SSID)** *Any* and do not know the SSID settings.
- Use the available encryption methods. To do this, select **Security Mode** = *WEP 40*, *WEP 104* , *WPA PSK* or *WPA Enterprise* or both, and enter the relevant key in the access point under **WEP Key1 - 4** or **Preshared Key** and in the WLAN clients.
- The WEP key should be changed regularly. To do this, change the **Data Transfer Key** . Select the longer 104 Bit WEP key.
- For the transfer of highly security-critical informationen, **Security Mode** = *WPA-Enterprise* should be configured with **WPA Mode** = *WPA 2*. This method contains hardware-based encryption and RADIUS authentication of the client. In special cases, combination with IPsec is possible.
- Restrict WLAN access to permitted clients. Enter the MAC addresses of the wireless network cards of these clients in the **Permitted Addresses**-list in the **MAC Filter** menu (see [Fields in the MAC Filter menu](#) on page 205).

In the **Wireless LAN -> WLAN -> Virtual Service Sets** menu, a list of all WLAN networks shown.

### 13.1.2.1 Virtual Service Sets -> Edit/New

Choose the  icon to edit existing entries. Choose the **New** button to configure other wireless networks.

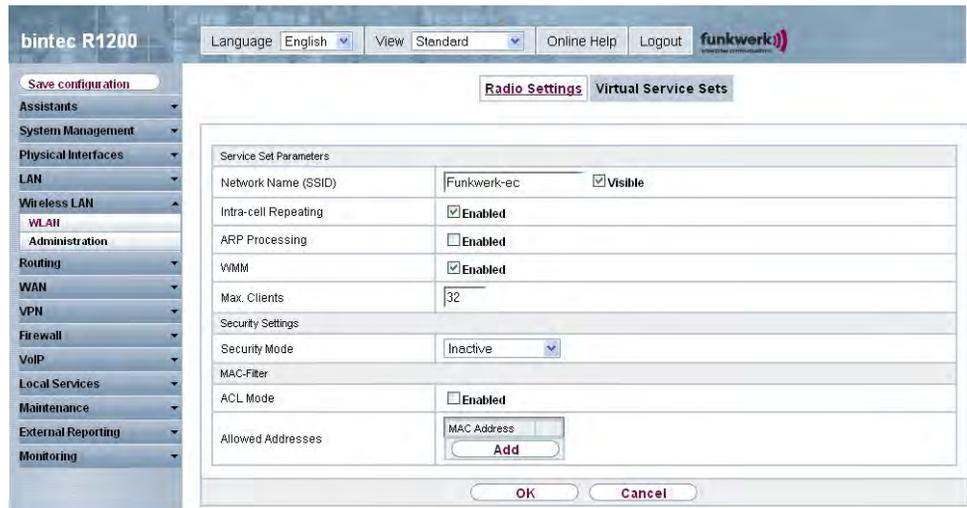


Fig. 76: Wireless LAN -> WLAN -> Virtual Service Sets -> /New

The Wireless LAN -> WLAN -> Virtual Service Sets ->  ->/New menu consists of the following fields:

#### Fields in the Virtual Service Sets Service Set Parameters menu

Field	Description
Network Name (SSID)	<p>Enter the name of the wireless network (SSID).</p> <p>Enter an ASCII string with a maximum of 32 characters.</p> <p>Also select whether the <b>Network Name (SSID)</b> is to be transmitted.</p> <p>The network name is shown by choosing <i>Visible</i>.</p> <p>It is visible by default.</p>
Intra-cell Repeating	<p>Select whether communication between the WLAN clients is to be permitted within a radio cell.</p> <p>The function is activated by choosing <i>Enabled</i>.</p> <p>The function is enabled by default.</p>
ARP Processing	<p>Select whether the ARP processing function should be enabled.</p> <p>The ARP data traffic is reduced in the network by the fact that ARP broadcasts that have been converted to ARP unicasts are forwarded to IP addresses that are known internally. Unicasts</p>

Field	Description
	<p>are quicker and clients with an enabled power save function are not addressed.</p> <p>The function is activated by choosing <i>Enabled</i>.</p> <p>The function is disabled by default.</p> <p>Make sure that ARP processing cannot be applied in conjunction with the MAC bridge function.</p>
WMM	<p>Select whether voice or video prioritisation via WMM (Wireless Multimedia) is to be activated for the wireless network so that optimum transmission quality is always achieved for time-critical applications. Data prioritisation is supported in accordance with DSCP (Differentiated Services Code Point) or IEEE802.1d.</p> <p>The function is activated by choosing <i>Enabled</i>.</p> <p>The function is enabled by default.</p>
Max. Clients	<p>Enter the maximum number of clients that can be connected to this wireless network (SSID)</p> <p>The maximum number of clients that can register with a wireless module depends on the specifications of the respective WLAN module. This number can be shared across all configured wireless networks. If the maximum number of clients is reached, no more new wireless networks can be created and a warning message will appear.</p>

#### Fields in the Virtual Service Sets Security Settings menu

Field	Description
Security Mode	<p>Select the security mode (encryption and authentication) for the wireless network.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Inactive</i> (default value): Neither encryption nor authentication</li> <li>• <i>WEP 40</i>: WEP 40 Bit</li> <li>• <i>WEP 104</i>: WEP 104 Bit</li> <li>• <i>WPA-PSK</i>: WPA Preshared Key</li> </ul>

Field	Description
	<ul style="list-style-type: none"> <li>• <i>WPA-Enterprise</i>: 802.11i/TKIP</li> </ul>
Transmit Key	<p>Only if <b>Security Mode</b> = <i>WEP 40</i>, <i>WEP 104</i></p> <p>Select one of the keys configured in <b>WEP Key &lt;1 - 4&gt;</b> as the default key.</p> <p>The default value is <i>Key 1</i>.</p>
WEP Key 1-4	<p>Only if <b>Security Mode</b> = <i>WEP 40</i>, <i>WEP 104</i></p> <p>Enter the WEP key.</p> <p>Enter a character string with the right number of characters for the selected WEP mode. For <i>WEP 40</i> you need a string of 5 characters, <i>WEP 104</i> 13 characters. For example <i>hello</i> for <i>WEP 40</i>, <i>funkwerk-wep1</i> for <i>WEP 104</i>.</p>
WPA Mode	<p>Only if <b>Security Mode</b> = <i>WPA-PSK</i> and <i>WPA-Enterprise</i></p> <p>Select whether you want to use WPA (with TKIP encryption) or WPA 2 (with AES encryption), or both.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>WPA and WPA 2</i> (default value): WPA and WPA 2 can be used.</li> <li>• <i>WPA</i>: Only WPA is used.</li> <li>• <i>WPA 2</i>: Only WPA2 is used.</li> </ul>
WPA Cipher	<p>Only for <b>Security Mode</b> = <i>WPA-PSK</i> and <i>WPA-Enterprise</i> and for <b>WPA Mode</b> = <i>WPA</i> and <i>WPA and WPA2</i></p> <p>Select the type of encryption you want to apply to WPA.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>TKIP</i> (default value): TKIP is used.</li> <li>• <i>AES</i>: AES is used.</li> <li>• <i>AES and TKIP</i>: AES or TKIP is used.</li> </ul>
WPA2 Cipher	<p>Only for <b>Security Mode</b> = <i>WPA-PSK</i> and <i>WPA-Enterprise</i> and for <b>WPA Mode</b> = <i>WPA2</i> and <i>WPA and WPA2</i></p>

Field	Description
	<p>Select the type of encryption you want to apply to WPA2.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>AES</i> (default value): AES is used.</li> <li>• <i>TKIP</i> : TKIP is used.</li> <li>• <i>AES and TKIP</i>: AES or TKIP is used.</li> </ul>
Preshared Key	<p>Only if <b>Security Mode</b> = <i>WPA-PSK</i></p> <p>Enter the WPA password.</p> <p>Enter an ASCII string with 8 - 63 characters.</p> <p>Note: Change the default Preshared Key! If the key has not been changed, your device will not be protected against unauthorised access!</p>
EAP Preauthentication	<p>Only if <b>Security Mode</b> = <i>WPA-Enterprise</i></p> <p>Select whether the EAP preauthentication function is to be activated. This function tells your device that WLAN clients, which are already connected to another access point, can first carry out 802.1x authentication as soon as they are within range. Such WLAN clients can then simply connect over the existing network connection with your device.</p> <p>The function is activated by choosing <i>Enabled</i>.</p> <p>The function is enabled by default.</p>

#### Fields in the MAC Filter menu

Field	Description
ACL Mode	<p>Select whether only certain clients are to be permitted for this wireless network.</p> <p>The function is activated by choosing <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
Allowed Addresses	<p>Use <b>Add</b> to make entries and enter the MAC addresses (<b>MAC Address</b>) of the clients to be permitted.</p>

### 13.1.3 WDS Links

If you operate your device in access point mode (**Wireless LAN** -> **WLAN** -> **Radio Settings** ->  -> **Operating Mode** = *Access Point*), you can set up and edit the desired WDS links in the **Wireless LAN** -> **WLAN** -> **WDS links** ->  -> **New** menu.



#### Important

The WDS link can only be configured in the 2.4 GHz band and in the 5 GHz band indoor if the channel is NOT *Auto*.

The number of channels you can selected depends on the country setting. Please consult the data sheet for your device.

WDS links (WDS = Wireless Distribution System) are static links between access points (AP), which are generally used to connect clients with networks that are not directly accessible to them e.g. because the distance is too great. The access point sends from one client to another access point, which then forwards the data to another client.



#### Important

Note that the data is transferred between the access points in unencrypted form over the WDS link in the default configuration. You are therefore urgently advised to apply one of the available security methods (WEP40 or WEP104) to protect data on WDS links.

WDS links are configured as interfaces with the prefix *wds*. They behave like VSS interface and only differ from these with respect to the predefined routing. A WDS link is defined as a transit network: this relates to a point-to-point connection or point-to-multipoint connection between two access points that are included in different networks.

#### 13.1.3.1 WDS Links -> New

Choose the  icon to edit existing entries. Choose the **New** button to configure other WDS links.

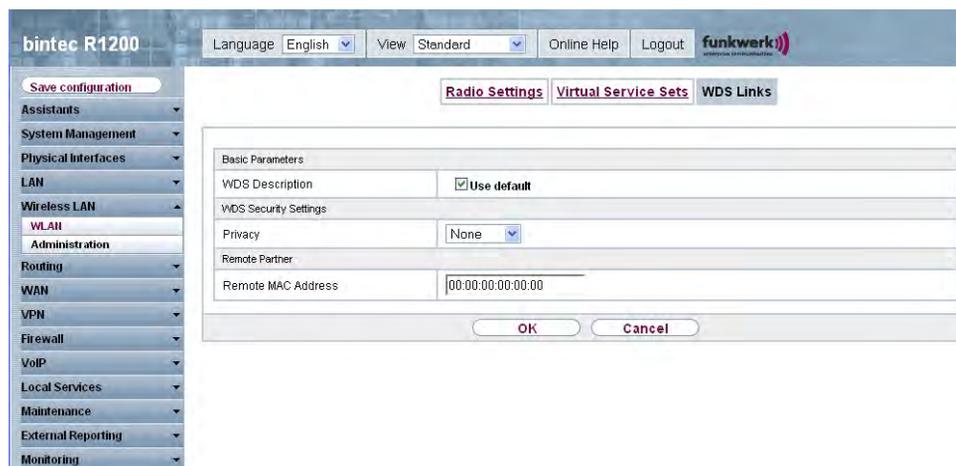


Fig. 77: Wireless LAN -> WLAN -> WDS Links ->  ->/New

The **Wireless LAN -> WLAN -> WDS Links ->  ->/New** menu consists of the following fields:

#### Fields in the WDS Links Basic Parameters menu

Field	Description
WDS Description	<p>Enter a name for the WDS link.</p> <p>If the <i>Use Standard</i> option is activated, the generated name of the interface is automatically used.</p> <p>If the option is not activated, you can enter a suitable name in the input field.</p> <p>The <i>Use Standard</i> option is enabled by default.</p>

#### Fields in the WDS Security Settings menu

Field	Description
Privacy	<p>Select whether an encryption method is to be used for this WDS link and if so, which one.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li><i>None</i> (default value): Data traffic on this WDS link is not encrypted.</li> <li><i>WEP40</i>: Data traffic on this WDS link is encrypted with WEP40. In <b>WEP Key 1 - 4</b>, enter the key for this WDS link</li> </ul>

Field	Description
	<p>and in <b>Transmission Key</b>, select the default key.</p> <ul style="list-style-type: none"> <li>• <i>WEP104</i>: Data traffic on this WDS link is encrypted with WEP104. In <b>WEP Key 1 - 4</b>, enter the key for this WDS link and in <b>Transmission Key</b>, select the default key.</li> <li>• <i>WPA</i>: Data traffic on this WDS link is encrypted with WPA. Enter the key for this WDS link in <b>Preshared Key</b>.</li> <li>• <i>WPA 2</i>: Data traffic on this WDS link is encrypted with WPA. Enter the key for this WDS link in <b>Preshared Key</b>.</li> </ul>
Transmit Key	<p>Only if <b>Privacy</b> = <i>WEP40</i> , <i>WEP104</i></p> <p>Select one of the keys configured in <b>WEP Key &lt;1 - 4&gt;</b> as the default key.</p> <p>The default value is <i>Key 1</i>.</p>
WEP Key 1 - 4	<p>Only if <b>Privacy</b> = <i>WEP40</i>, <i>WEP104</i></p> <p>Enter the WEP key. There are two ways of entering a WEP key:</p> <ul style="list-style-type: none"> <li>• Direct entry in hexadecimal form</li> </ul> <p>If the entry starts with <i>0x</i>, the generator is deactivated. Enter a hexadecimal string with exactly the right number of characters for the selected WEP mode. 10 characters for <i>WEP40</i> or 26 characters for <i>WEP104</i> e.g. <i>WEP40: 0xA0B23574C5</i>, <i>WEP104: 0x81DC9BDB52D04DC20036DBD831</i></p> <ul style="list-style-type: none"> <li>• Direct entry of ASCII characters</li> </ul> <p>Enter a character string with the right number of characters for the selected WEP mode. For <i>WEP40</i> you need a string of 5 characters, <i>WEP104</i> 13 characters. For example <i>hello</i> for <i>WEP40</i>, <i>funkwerk-wep1</i> for <i>WEP104</i>.</p>
Preshared Key	<p>Only if <b>Privacy</b> = <i>WPA</i> , <i>WPA 2</i></p> <p>Enter the WPA password.</p> <p>Enter an ASCII string with 8 - 63 characters.</p>

### Fields in the Remote Partner menu

Field	Description
Remote MAC Address	Enter the MAC Address of the WDS partner.

## 13.1.4 Client Link

If you operate your device in access client mode (**Wireless LAN -> WLAN -> Wireless Module Settings ->  -> Operating Mode = *Access Client***), you can set up and edit the available Client Links in the **Wireless LAN -> WLAN -> Client Links ->  ->** menu.

Client mode can operate in infrastructure mode or in ad-hoc mode. In a network in infrastructure mode, all clients communicate with each other exclusively via access points. There is no direct communication between the individual clients.

In ad-hoc mode, an access client can be used as central interface between a number of terminals. In this way, devices such as computers and printers can be wirelessly interconnected.

### 13.1.4.1 Client Link ->

Choose the  icon to edit existing entries.



Fig. 78: **Wireless LAN -> WLAN -> Client Link ->  ->**

The **Wireless LAN -> WLAN -> Client Link ->  ->** menu consists of the following fields:

**Fields in the Client Link Basic Parameters menu**

Field	Description
Network Name (SSID)	Enter the name of the wireless network (SSID).  Enter an ASCII string with a maximum of 32 characters.

**Fields in the Client Link Security Settings menu**

Field	Description
Security Mode	Select the security mode (encryption and authentication) for the wireless network.  Possible values: <ul style="list-style-type: none"> <li>• <i>Inactive</i> (default value): Neither encryption nor authentication</li> <li>• <i>WEP 40</i>: WEP 40 Bit</li> <li>• <i>WEP 104</i>: WEP 104 Bit</li> <li>• <i>WPA None</i>: Only if <b>Client Mode</b> = <i>Ad Hoc</i>. WPA None:</li> <li>• <i>WPA-PSK</i>: Only if <b>Client Mode</b> = <i>Infrastructure</i>. WPA Preshared Key</li> </ul>
Transmit Key	Only if <b>Security Mode</b> = <i>WEP 40</i> , <i>WEP 104</i>  Select one of the keys configured in <b>WEP Key &lt;1 - 4&gt;</b> as the default key.  The default value is <i>Key 1</i> .
WEP Key 1-4	Only if <b>Security Mode</b> = <i>WEP 40</i> , <i>WEP 104</i>  Enter the WEP key.  Enter a character string with the right number of characters for the selected WEP mode. For <i>WEP 40</i> you need a string of 5 characters, <i>WEP 104</i> 13 characters. For example <i>hello</i> for <i>WEP 40</i> , <i>funkwerk-wep1</i> for <i>WEP 104</i> .
WPA Mode	Only if <b>Security Mode</b> = <i>WPA-PSK</i>  Select whether you want to use WPA (with TKIP encryption) or WPA 2 (with AES encryption), or both.  Possible values:

Field	Description
	<ul style="list-style-type: none"> <li>• <i>WPA</i> (default value): Only WPA is used.</li> <li>• <i>WPA 2</i> : Only WPA2 is used.</li> </ul>
Preshared Key	<p>Only if <b>Security Mode</b> = <i>WPA-PSK</i></p> <p>Enter the WPA password.</p> <p>Enter an ASCII string with 8 - 63 characters.</p>
WPA Cipher	<p>Only for <b>Security Mode</b> = <i>WPA-PSK</i> and <b>WPA Mode</b> = <i>WPA</i></p> <p>Select which encryption method should be used.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>TKIP</i> (default value): Temporal Key Integrity Protocol.</li> <li>• <i>AES</i>: Advanced Encryption Standard.</li> <li>• <i>AES and TKIP</i></li> </ul> <p>Both encryption methods are rated as secure, with AES offering better performance.</p>
WPA2 Cipher	<p>Only for <b>Security Mode</b> = <i>WPA-PSK</i> and <b>WPA Mode</b> = <i>WPA2</i></p> <p>Select which encryption method should be used.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>TKIP</i> (default value): Temporal Key Integrity Protocol.</li> <li>• <i>AES</i>: Advanced Encryption Standard.</li> <li>• <i>AES and TKIP</i></li> </ul> <p>Both encryption methods are rated as secure, with AES offering better performance.</p>

### 13.1.4.2 Client Link Scan

After the desired **Client Links** have been configured, the  icon is shown in the list.

You use this icon to open the **Scan** menu.

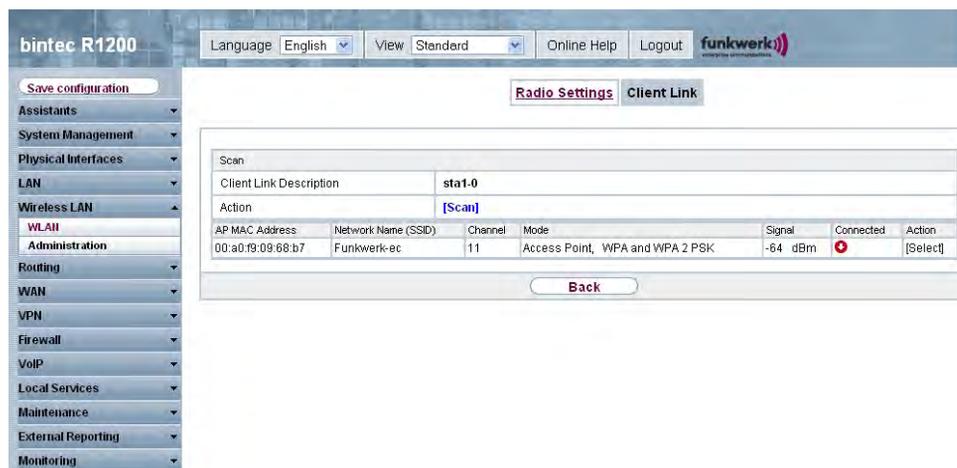


Fig. 79: Wireless LAN -> WLAN -> Client Link -> Scan

After successful scanning, a selection of potential scan partners is displayed in the scan list. In the **Action** column, click **[Select]** to connect the local clients with this client. If the partners are connected with one another, the icon appears in the **Connected** column. The icon appears in the **Connected** column if the connection is active.

The **Wireless LAN -> WLAN-> Client Link -> Scan** menu consists of the following fields:

#### Fields in the Client Link Scan menu

Field	Description
Client Link Description	Displays the name of the client link you configured.
Action	<p>Start the scan by clicking on <b>Scan</b>.</p> <p>If the antennas are installed correctly on both sides and LOS is free, the client finds available clients and displays them in the following list.</p> <p>If the partner client cannot be found, check the line of sight and the antenna installation. Then carry out the <b>Scan</b> again. The partner should then be found.</p>
AP MAC Address	Shows the MAC Address of the remote client.
Network Name (SSID)	Displays the name of the remote client.
Channel	Shows the <b>Channel</b> used.
Mode	Shows the security mode (encryption and authentication) for the wireless network.

Field	Description
Signal	Displays the signal strength of the detected client link in dBm.
Connected	Displays the status of the link on your client.
Action	You can change the status of the client link. The available actions are displayed in this field.

## 13.2 Administration

The **Wireless LAN -> Administration** menu contains basic settings for running your gateway as an access point (AP).

### 13.2.1 Basic Setup



Fig. 80: **Wireless LAN -> Administration -> Basic Settings**

The **Wireless LAN -> Administration -> Basic Settings** menu consists of the following fields:

#### Field in the Basic Settings WLAN Administration menu

Field	Description
Region	Select the country in which the access point is to be run.  Possible values are all the countries configured on the gateway's wireless module.  The range of channels available for selection ( <b>Channel</b> in the

Field	Description
	<p><b>WLAN Wireless Modules</b> menu) changes depending on the country setting.</p> <p>The default value is <i>Germany</i>.</p>

## Chapter 14 Routing

### 14.1 Routes

#### Default Route

With a default route, all data is automatically forwarded to one connection if no other suitable route is available. If you set up access to the Internet, you must configure the route to your Internet Service Provider (ISP) as a default route. If, for example, you configure a corporate network connection, only enter the route to the head office or branch office as a default route if you do not configure Internet access over your device. If, for example, you configure both Internet access and a corporate network connection, enter a default route to the ISP and a network route to the head office. You can enter several default routes on your device, but only one default route can be active at any one time. If you enter several default routes, you should make sure the values for **Metric** are different.

#### 14.1.1 IP Routes

In the **Routing** -> **Routes** -> **IP Routes** menu a list of all configured routes is shown.

##### 14.1.1.1 Edit/New

Choose the  icon to edit existing entries. Choose the **New** button to create routes.

The screenshot shows the 'bintec R1200' web interface. The left sidebar contains a navigation menu with 'Routing' expanded to 'Routes'. The main content area is titled 'IP Routes' and 'Options'. The 'Route Class' section has 'Extended Route' set to  Enabled. Below this, the 'Route Parameters' section includes: 'Route Type' (Network Route), 'Destination IP Address / Netmask' (empty), 'Interface' (None), 'Network Type' (Direct), 'Local IP Address' (0.0.0.0), and 'Metric' (1). 'OK' and 'Cancel' buttons are at the bottom.

Fig. 81: Routing -> Routes -> IP Routes-> New with Extended Route = Not activated

If the *Extended Route* option is selected for **Route Class**, an extra configuration section opens.

The screenshot shows the 'bintec R1200' web interface. The left sidebar contains a navigation menu with 'Routing' expanded to 'Routes'. The main content area is titled 'IP Routes' and 'Options'. The 'Route Class' section has 'Extended Route' set to  Enabled. Below this, the 'Route Parameters' section includes: 'Route Type' (Network Route), 'Destination IP Address / Netmask' (empty), 'Interface' (None), 'Network Type' (Direct), 'Local IP Address' (0.0.0.0), and 'Metric' (1). An 'Extended Route Parameters' section is also visible, containing: 'Source Interface' (None), 'Source IP Address/Netmask' (0.0.0.0 / 0.0.0.0), 'Layer 4 Protocol' (Any), 'Source Port' (Any Port -1 to Port -1), 'Destination Port' (Any Port -1 to Port -1), 'DSCP / TOS Value' (Ignore), and 'Mode' (Dialup and wait). 'OK' and 'Cancel' buttons are at the bottom.

Fig. 82: Routing -> Routes -> IP Routes-> New with Extended Route = Activated

The **Routing -> Routes -> IP Routes-> New** menu consists of the following fields:

#### Fields in the IP Routes Route Class menu

Field	Description
Extended Route	<p>Select whether the route is to be defined with extended parameters. If the function is active, a route is created with extended routing parameters such as source interface and source IP address, as well as protocol, source and destination port, type of service (TOS) and the status of the device interface.</p> <p>The function is activated by choosing <i>Enabled</i>.</p> <p>The function is disabled by default.</p>

#### Fields in the IP Routes Route Parameters menu

Field	Description
Route Type	<p>Select the type of route.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Network Route</i> (default value): Route to a network.</li> <li>• <i>Default Route</i>: Is used if no other suitable route is available.</li> <li>• <i>Host Route</i>: Route to a single host.</li> </ul>
Destination IP Address/ Netmask	<p>Only if <b>Route Type</b> <i>Host Route</i> or <i>Network Route</i></p> <p>Enter the IP address of the destination host.</p> <p>If <b>Route Type</b> = <i>Network Route</i> also enter the netmask in the second field. If no entry is made, your device uses a default netmask.</p>
Interface	If necessary, enter the interface to be used for this route.
Network Type	<p>Not for <b>Route Type</b> = <i>Standard Route</i></p> <p>Also select the network type.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Direct</i> (default value): <ul style="list-style-type: none"> <li>• in the LAN: You define another IP address for the interface.</li> </ul> </li> </ul>

Field	Description
	<ul style="list-style-type: none"> <li>in the WAN: You define a route without a transit network.</li> <li><i>Indirect</i>: <ul style="list-style-type: none"> <li>in the LAN: You define a gateway route.</li> <li>in the WAN: You define a route with a transit network.</li> </ul> </li> </ul>
Local IP Address	<p>Only for <b>Network Type</b> = <i>Direct</i>.</p> <p>Enter the IP address of the gateway to which your device is to forward the IP packets.</p>
Gateway	<p>Only for <b>Network Type</b> = <i>Indirect</i>.</p> <p>Enter the IP address of the host to which your device is to forward the IP packets.</p>
Metric	<p>Select the priority of the route.</p> <p>The lower the value, the higher the priority of the route.</p> <p>Value range from 0 to 15, The default value is 1.</p>

#### Fields in the IP Routes Extended Route Parameters menu

Field	Description
Source Interface	<p>Select the interface over which the data packets are to reach the device.</p> <p>The default value is <i>None</i></p>
Source IP Address/Net-mask	<p>Enter the IP address and netmask of the source host or source network.</p>
Layer 4 Protocol	<p>Select a protocol.</p> <p>Possible values: <i>ICMP</i>, <i>TCP</i>, <i>UDP</i>, <i>GRE</i>, <i>ESP</i>, <i>AH</i>, <i>OSPF</i>, <i>L2TP</i>, <i>Any</i>.</p> <p>The default value is <i>Any</i></p>
Source Port	<p>Only if <b>Layer 4 Protocol</b> = <i>TCP</i> or <i>UDP</i>.</p> <p>Enter the source port.</p>

Field	Description
	<p>First select the port number range.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Any</i> (default value): The route is valid for all port numbers.</li> <li>• <i>Single</i>: Enables the entry of a port number.</li> <li>• <i>Range</i>: Enables the entry of a range of port numbers.</li> <li>• <i>Privileged</i>: Entry of privileged port numbers: 0 ... 1023.</li> <li>• <i>Server</i>: Entry of server port numbers: 5000 ... 32767.</li> <li>• <i>Clients 1</i>: Entry of client port numbers: 1024 ... 4999.</li> <li>• <i>Clients 2</i>: Entry of client port numbers: 32768 ... 65535.</li> <li>• <i>Not privileged</i>: Entry of unprivileged port numbers: 1024 ... 65535.</li> </ul> <p>Enter the appropriate values for the individual port or start port of a range in <b>Port</b> and, for a range, the end port in <b>to Port</b>.</p>
Destination Port	<p>Only if <b>Layer 4 Protocol</b> = <i>TCP</i> or <i>UDP</i>.</p> <p>Enter the destination port.</p> <p>First select the port number range.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Any</i> (default value): The route is valid for all port numbers.</li> <li>• <i>Single</i>: Enables the entry of a port number.</li> <li>• <i>Range</i>: Enables the entry of a range of port numbers.</li> <li>• <i>Privileged</i>: Entry of privileged port numbers: 0 ... 1023.</li> <li>• <i>Server</i>: Entry of server port numbers: 5000 ... 32767.</li> <li>• <i>Clients 1</i>: Entry of client port numbers: 1024 ... 4999.</li> <li>• <i>Clients 2</i>: Entry of client port numbers: 32768 ... 65535.</li> <li>• <i>Not privileged</i>: Entry of unprivileged port numbers: 1024 ... 65535.</li> </ul> <p>Enter the appropriate values for the individual port or start port of a range in <b>Port</b> and, for a range, the end port in <b>to Port</b>.</p>
DSCP / TOS Value	Select the Type of Service (TOS).

Field	Description
	<p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Ignore</i> (default value): The type of service is ignored.</li> <li>• <i>DSCP Binary Value</i>: Differentiated Services Code Point according to RFC 3260 is used to signal the priority of IP packets (indicated in binary format; currently not implemented).</li> <li>• <i>DSCP Decimal Value</i>: Differentiated Services Code Point according to RFC 3260 is used to signal the priority of IP packets (indicated in decimal format; currently not implemented).</li> <li>• <i>TOS Binary Value</i>: The TOS value is specified in binary format, e.g. 00111111.</li> <li>• <i>TOS Decimal Value</i>: The TOS value is specified in decimal format, e.g. 63.</li> </ul> <p>Enter the relevant value for <i>DSCP</i>, <i>TOS Binary Value</i> and <i>TOS Decimal Value</i>.</p>
Mode	<p>Select when the interface defined in <b>Route Parameters</b> -&gt; <b>Interface</b> is to be used.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Dialup and wait</i> (default value): The route can be used if the interface is "up". If the interface is "dormant", then dial and wait until the interface is "up".</li> <li>• <i>Authoritative</i>: The route can always be used.</li> <li>• <i>Dialup and continue</i>: The route can be used if the interface is "up". If the interface is "dormant", then select and use the alternative route (rerouting) until the interface is "up".</li> <li>• <i>Never dialup</i>: The route can be used if the interface is "up".</li> <li>• <i>Always dialup</i>: The route can be used if the interface is "up". If the interface is "dormant", then dial and wait until the interface is "up". In this case, an alternative interface with a poorer metric is used for routing until the interface is "up".</li> </ul>

## 14.1.2 Options

### Back Route Verify

The term Back Route Verify describes a very simple but powerful function. If a check is activated for an interface, incoming data packets are only accepted over this interface if outgoing response packets are routed over the same interface. You can therefore prevent the acceptance of packets with false IP addresses - even without using filters.

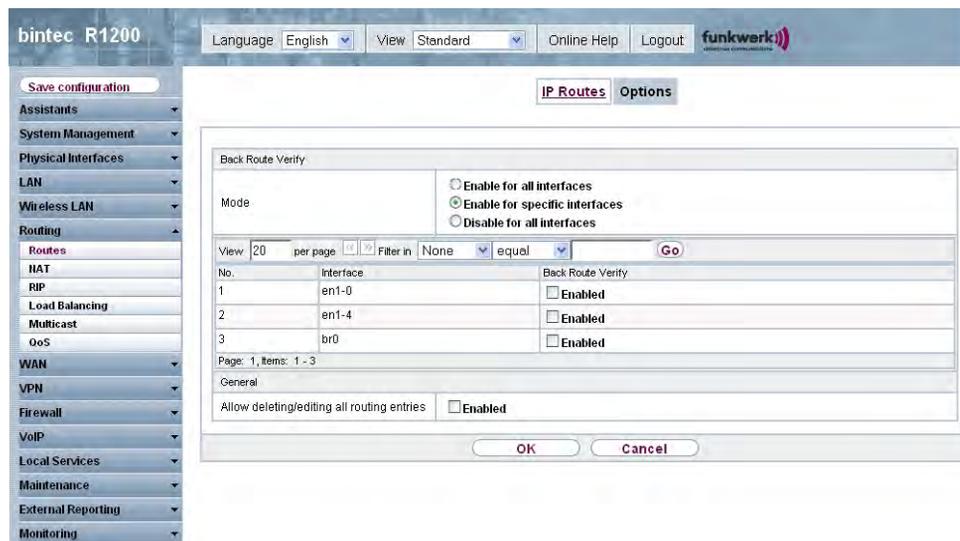


Fig. 83: Routing -> Routes -> Options

The **Routing -> Routes -> Options** menu consists of the following fields:

#### Fields in the Options Return Route Checking menu

Field	Description
Mode	<p>Select how the interfaces to be activated for Back Route Verify are to be specified.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li><i>Enable for all interfaces</i>: Back Route Verify is activated for all interfaces.</li> <li><i>Enable for specific interfaces</i> (default value): A list of all interfaces is displayed in which Back Route Verify is only enabled for specific interfaces.</li> </ul>

Field	Description
	<ul style="list-style-type: none"> <li>• <i>Disable for all interfaces</i>: Back Route Verify is disabled for all interfaces.</li> </ul>
No.	<p>Only for <b>Mode</b> = <i>Enable for specific interfaces</i></p> <p>Displays the serial number of the list entry.</p>
Interface	<p>Only for <b>Mode</b> = <i>Enable for specific interfaces</i></p> <p>Displays the name of the interface.</p>
Back Route Verify	<p>Only for <b>Mode</b> = <i>Enable for specific interfaces</i></p> <p>Select whether <i>Return Route Checking</i> is to be enabled for this interface.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>By default, the function is deactivated for all interfaces.</p>

#### Fields in the Options General menu

Field	Description
Allow deleting/editing all routing entries	<p>Define whether all the routes entered on your device can be edited and deleted in the <b>Routing</b> -&gt; <b>Routes</b> -&gt; <b>Routes</b> menu.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>By default, the function is deactivated for all interfaces.</p>

## 14.2 NAT

Network Address Translation (NAT) is a function on your device for defined conversion of source and destination addresses of IP packets. If NAT is activated, IP connections are still only allowed by default in one direction, outgoing (forward) (= protective function). Exceptions to the rule can be configured (in [NAT Configuration](#) on page 224).

### 14.2.1 NAT Interfaces

In the **Routing** -> **NAT** -> **NAT Interfaces** menu, a list of all NAT interfaces is shown.

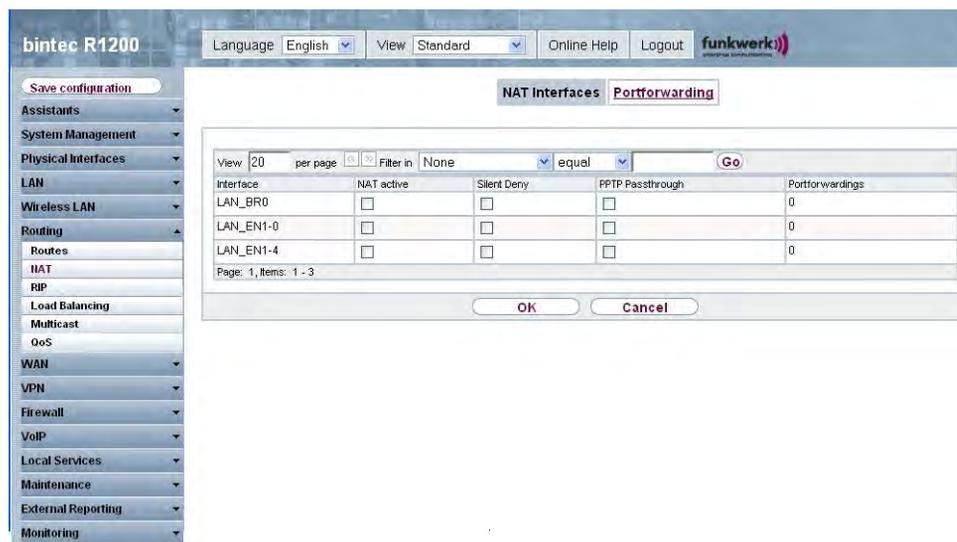


Fig. 84: Routing -> NAT -> NAT Interfaces

For each NAT interface, you can select the options *NAT Active*, *Silent Deny* and *PPTP Passthrough*.

In addition, *Portforwardings* displays how many port forwarding rules were configured for this interface.

#### Options in the menu NAT Interfaces

Field	Description
NAT active	Select whether NAT is to be activated for the interface.  The function is disabled by default.
Silent Deny	Select whether IP packets are to be silently denied by NAT. If this function is deactivated, the sender of the denied IP packet is informed by means of an ICMP or TCP RST message.  The function is disabled by default.
PPTP Passthrough	Select whether the setup and operation of several simultaneous, outgoing PPTP connections from hosts in the network are also to be permitted if NAT is activated.  The function is disabled by default.  If <b>PPTP Passthrough</b> is enabled, the device itself cannot be configured as a tunnel endpoint.

Field	Description
Portforwardings	Shows the number of portforwarding rules configured in <b>Routing -&gt; NAT -&gt; NAT Configuration</b> .

## 14.2.2 NAT Configuration

In the **Routing -> NAT -> NAT Configuration** menu you can exclude data from NAT in a simple and convenient manner. You can configure various NAT methods. You can determine how an external host establishes a connection to an internal host (refer to RFC 3489).

### 14.2.2.1 New

Choose the **New** button to set up NAT.

The screenshot shows the web interface for a bintec R1200 device. The left sidebar contains a navigation menu with options like 'Save configuration', 'Assistants', 'System Management', 'Physical Interfaces', 'LAN', 'Wireless LAN', 'Routing', 'Routes', 'NAT', 'RIP', 'Load Balancing', 'Multicast', 'QoS', 'WAN', 'VPN', 'Firewall', 'VoIP', 'Local Services', 'Maintenance', 'External Reporting', and 'Monitoring'. The 'Routing' menu is expanded, and the 'NAT' option is selected. The main content area displays the 'NAT Configuration' dialog box. The dialog has a title bar with 'NAT Interfaces' and 'NAT Configuration' tabs. Below the title bar is the 'Basic Parameters' section, which includes the following fields:

- Description: A text input field.
- Interface: A dropdown menu set to 'Any'.
- Type of traffic: A dropdown menu set to 'incoming (Destination NAT)'.
- Specify original traffic: A section header.
- Service: A dropdown menu set to 'User-defined'.
- Protocol: A dropdown menu set to 'Any'.
- Source IP Address/Netmask: A dropdown menu set to 'Any'.
- Source Port/Range: A dropdown menu set to '-All-' followed by a 'to' field.
- Destination IP Address/Netmask: A dropdown menu set to 'Any'.
- Destination Port/Range: A dropdown menu set to '-All-' followed by a 'to' field.
- Replacement Values: A section header.
- New Destination IP Address/Netmask: A dropdown menu set to 'Host' followed by a text input field containing '0.0.0.0'.
- New Destination Port: A dropdown menu set to 'Original' with a checked checkbox.

At the bottom of the dialog are 'OK' and 'Cancel' buttons.

Fig. 85: Routing -> NAT -> NAT Configuration -> New

The **Routing -> NAT -> NAT Configuration -> New** menu consists of the following fields:

#### Fields in the NAT Configuration Basic Parameters menu

Field	Description
Description	Enter a description for the NAT Configuration.
Interface	Select the interface for which NAT is to be configured.

Field	Description
	<p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Any</i> (default value): NAT is to be configured for all interfaces.</li> <li>• <i>&lt;interface name&gt;</i>: Select an interface from the list.</li> </ul>
Type of traffic	<p>Select the type of data traffic for which NAT is to be configured.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>incoming (Destination NAT)</i> (default value): The data traffic that comes from outside.</li> <li>• <i>outgoing (Source NAT)</i>: The data traffic that goes outside.</li> <li>• <i>excluding (Without NAT)</i>: The data traffic that is excluded from NAT.</li> </ul>
NAT method	<p>Only for <b>Type of traffic</b> = <i>outgoing (Source NAT)</i>.</p> <p>Select the NAT method for outgoing data traffic. The starting point for choosing the NAT method is a NAT scenario where an "internal" source host has initialized an IP connection to an "external" destination host over a NAT interface and where an internal valid source address and an internal valid source port are mapped to an external valid source address and an external valid source port.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>full-cone</i>(only UDP): Any external host may send IP packets to the initializing source address and the initial source port via external address and external port.</li> <li>• <i>restricted-cone</i>(only UDP): The same as full-cone NAT; for the external host, however, the initial "external" destination host must be used.</li> <li>• <i>port-restricted-cone</i>(only UDP): The same as restricted-cone NAT; but only data from the initial destination port are allowed.</li> <li>• <i>symmetric</i> (default value) any protocol: In outgoing direction, an external valid source address and an external valid source port are administratively set. In incoming direction, only response packets within the established connection are permitted.</li> </ul>

In the **NAT Configuration** -> **Specify original traffic** menu you can configure for which data traffic NAT is to be used.

#### Fields in the NAT Configuration Specify original traffic menu

Field	Description
Service	<p>Not for <b>Type of traffic</b> = <i>outgoing (Source NAT)</i> and <b>NAT method</b> = <i>full-cone, restricted-cone or port-restricted-cone</i>.</p> <p>Select one of the preconfigured services.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>User-defined</i> (default value)</li> <li>• <i>&lt;Service name&gt;</i></li> </ul>
Protocol	<p>For certain services only.</p> <p>Not for <b>Type of traffic</b> = <i>outgoing (Source NAT)</i> and <b>NAT method</b> = <i>full-cone, restricted-cone or port-restricted-cone</i>. In this case, UDP is selected automatically.</p> <p>Select a protocol. Depending on the selected service different protocols are available.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Any</i> (default value)</li> <li>• <i>AH</i></li> <li>• <i>Chaos</i></li> <li>• <i>EGP</i></li> <li>• <i>ESP</i></li> <li>• <i>GGP</i></li> <li>• <i>GRE</i></li> <li>• <i>HMP</i></li> <li>• <i>ICMP</i></li> <li>• <b>igmp</b></li> <li>• <i>IGP</i></li> <li>• <i>IGRP</i></li> <li>• <i>IP</i></li> </ul>

Field	Description
	<ul style="list-style-type: none"> <li>• <i>IPinIP</i></li> <li>• <i>IPv6</i></li> <li>• <i>IPX in IP</i></li> <li>• <i>ISO-IP</i></li> <li>• <i>Kryptolan</i></li> <li>• <i>L2TP</i></li> <li>• <i>OSPF</i></li> <li>• <i>PUP</i></li> <li>• <i>RDP</i></li> <li>• <i>RSVP</i></li> <li>• <i>SKIP</i></li> <li>• <i>TCP</i></li> <li>• <i>TLSP</i></li> <li>• <i>UDP</i></li> <li>• <i>VRRP</i></li> <li>• <i>XNS-IDP</i></li> </ul>
Source IP Address / Netmask	Enter the source IP address and, if required, the corresponding netmask of the original data packets.
Source Port	Only for <b>Type of traffic</b> = <i>outgoing (Source NAT)</i> , <b>NAT method</b> = <i>symmetrisch</i> and <b>Service</b> = <i>User-defined</i> . Enter the source port of the original data packets. The default setting <i>All</i> means that the port is not specified.
Source Port/Range	Not for <b>Type of traffic</b> = <i>outgoing (Source NAT)</i> Enter the source port or the source port range of the original data packets. The default setting <i>All</i> means that the port is not specified.
Destination IP Address / Netmask	Enter the destination IP address and, if required, the corresponding netmask of the original data packets.
Destination Port/Range	Only for <b>Service</b> = <i>User-defined</i>  Enter the destination port or the destination port range of the original data packets. The default setting <i>All</i> means that the port is not specified.

In the **NAT Configuration** ->**Replacement Values** menu you can define new address and

ports, depending on whether the data traffic is incoming or outgoing, to which specific address and ports are translated from the **NAT Configuration** -> **Specify original traffic** menu.

#### Fields in the NAT Configuration Replacement Values menu

Field	Description
New Destination IP Address/Netmask	<p>Only for <b>Type of Traffic</b> = <i>incoming</i> (<i>Destination NAT</i>).</p> <p>Enter the destination IP address and, if required, the corresponding netmask to which the original destination IP address is to be translated.</p>
New Destination Port	<p>Only for <b>Type of Traffic</b> = <i>incoming</i> (<i>Destination NAT</i>).</p> <p>Leave the destination port as it appears or enter the destination port to which the original destination port is to be translated.</p> <p>Selecting <i>Original</i> leaves the original destination port. If you disable <i>Original</i>, an input field appears in which you can enter a new destination port.</p> <p><i>Original</i> is active by default.</p>
Source IP Address / Netmask	<p>Only for <b>Type of Traffic</b> = <i>outgoing</i> (<i>Source NAT</i>) and <b>NAT method</b> = <i>symmetric</i>.</p> <p>Enter the source IP address and, if required, the corresponding netmask to which the original source IP address is to be translated.</p>
New Source Port	<p>Only for <b>Type of Traffic</b> = <i>outgoing</i> (<i>Source NAT</i>) and <b>NAT method</b> = <i>symmetric</i>.</p> <p>Leave the source port as it appears or enter a new source port to which the original source port is to be translated.</p> <p>Selecting <i>Original</i> leaves the original source port. If you disable <i>Original</i>, an input field appears in which you can enter a new source port.</p> <p><i>Original</i> is active by default.</p>

## 14.3 RIP

The entries in the routing table can be defined statically or the routing table can be updated constantly by dynamic exchange of routing information between several devices. This exchange is controlled by a Routing Protocol, e.g. RIP (Routing Information Protocol). By default, about every 30 seconds (this value can be changed in **Update Timer**), a device sends messages to remote networks using information from its own current routing table. The complete routing table is always exchanged in this process. If triggered RIP is used, information is only exchanged if the routing information has changed. In this case, only the changed information is sent.

Observing the information sent by other devices enables new routes and shorter paths for existing routes to be saved in the routing table. As intermediate routes between networks can become unreachable, RIP removes routes that are older than 5 minutes (i.e. routes not verified in the last 300 seconds - **Garbage Collection Timer + Route Timeout**). Routes learnt with triggered RIP are not deleted.

Your device supports both version 1 and version 2 of RIP, either individually or together.

### 14.3.1 RIP Interfaces

In the **Routing -> RIP -> RIP Interfaces** menu, a list of all RIP interfaces is shown.

The screenshot shows the web interface for a bintec R1200 device. The navigation menu on the left includes 'Routing' -> 'RIP' -> 'RIP Interfaces'. The main content area displays a table of RIP interfaces. The table has the following data:

No.	Interface	Send Version	Receive Version	Route Announce
1	en1-0	None	None	Up only
2	en1-4	None	None	Up only
3	br0	None	None	Up only

Page: 1, Items: 1 - 3

Fig. 86: Routing -> RIP -> RIP Interfaces

### 14.3.1.1 Edit

For each RIP interface, you can, in the  menu, select the options *Send Version*, *Receive Version* and *Route Announce*.

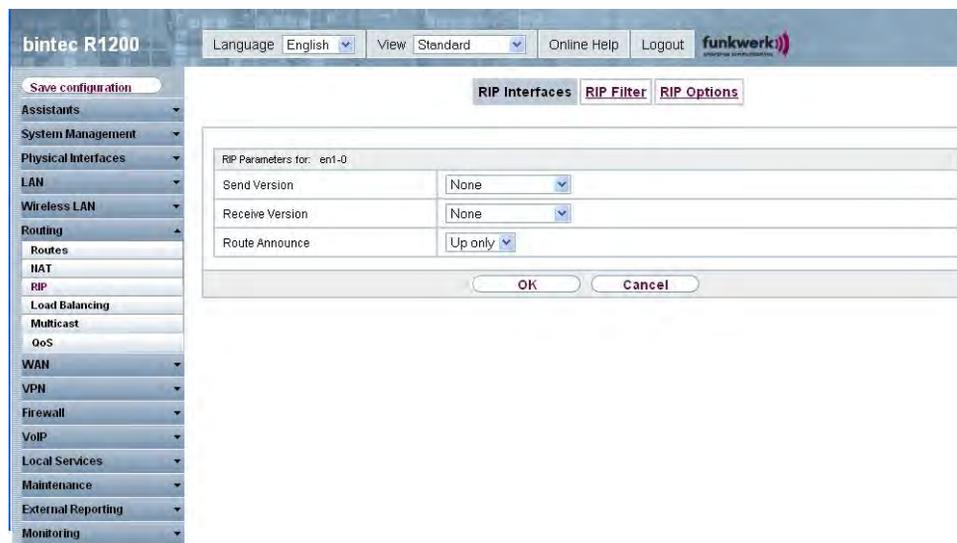


Fig. 87: Routing -> RIP -> RIP Interfaces->

The **Routing -> RIP -> RIP Interfaces->** menu consists of the following fields:

#### Fields in the RIP Parameters for <Interface> menu

Field	Description
Send Version	<p>Decide whether routes are to be propagated via RIP and if so, select the RIP version for sending RIP packets over the interface in send direction.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>None</i> (default value): RIP is not enabled.</li> <li>• <i>RIP V1</i>: Enables sending and receiving of version 1 RIP packets.</li> <li>• <i>RIP V2</i>: Enables sending and receiving of version 2 RIP packets.</li> <li>• <i>RIP V1/V2</i>: Enables sending and receiving of both version 1 and version 2 RIP packets.</li> </ul>

Field	Description
	<ul style="list-style-type: none"> <li>• <i>RIP V2 Multicast</i>: For sending RIP V2 messages over the multicast address 224.0.0.9.</li> <li>• <i>RIP V1 Triggered</i>: RIP V1 messages are sent, received and processed as per RFC 2091 (triggered RIP).</li> <li>• <i>RIP V2 Triggered</i>: RIP V2 messages are sent, received and processed as per RFC 2091 (triggered RIP).</li> </ul>
Receive Version	<p>Decide whether routes are to be imported via RIP and if so, select the RIP version for receiving RIP packets over the interface in receive direction.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>None</i> (default value): RIP is not enabled.</li> <li>• <i>RIP V1</i>: Enables sending and receiving of version 1 RIP packets.</li> <li>• <i>RIP V2</i>: Enables sending and receiving of version 2 RIP packets.</li> <li>• <i>RIP V1/V2</i>: Enables sending and receiving of both version 1 and version 2 RIP packets.</li> <li>• <i>RIP V1 Triggered</i>: RIP V1 messages are sent, received and processed as per RFC 2091 (triggered RIP).</li> <li>• <i>RIP V2 Triggered</i>: RIP V2 messages are sent, received and processed as per RFC 2091 (triggered RIP).</li> </ul>
Route Announce	<p>Select this option if you want to set the time at which any activated routing protocols (e.g. RIP) are to propagate the IP routes defined for this interface.</p> <p>Note: This setting does not affect the interface-specific RIP configuration mentioned above.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Up or Dormant</i> (not for LAN interfaces, interfaces in Bridge mode and interfaces for leased lines): Routes are propagated if the interface status is up or ready.</li> <li>• <i>Up Only</i>: Routes are only propagated if the interface status is up.</li> <li>• <i>Always</i>: Routes are always propagated independent of operational status.</li> </ul>

## 14.3.2 RIP Filter

In this menu, you can specify exactly which routes are to be exported or imported.

You can use the following strategies for this:

- You explicitly deactivate the import or export of certain routes. The import or export of all other routes that are not listed is still allowed.
- You explicitly activate the import or export of certain routes. In this case, you must also explicitly deactivate the import or export of all other routes. You can do this using a filter for **IP Address** = no entry (this corresponds to the IP address 0.0.0.0) with **Netmask** = no entry (this corresponds to the netmask 0.0.0.0). To make sure this filter is used last, it must be placed at the lowest position.

You configure a filter for a default route with the following values:

- **IP Address** = no entry (this corresponds to the IP address 0.0.0.0) with **Netmask** = 255.255.255.255

In the **Routing** -> **RIP** -> **RIP Filters** menu, a list of all RIP filters is shown.



Fig. 88: **Routing** -> **RIP** -> **RIP Filters**

You can use the  button to insert another filter above the list entry. The configuration menu for creating a new window opens.

You can use the  button to move the list entry. A dialog box opens, in which you can se-

lect the position to which the filter is to be moved.

### 14.3.2.1 New

Choose the **New** button to set up more RIP filters.

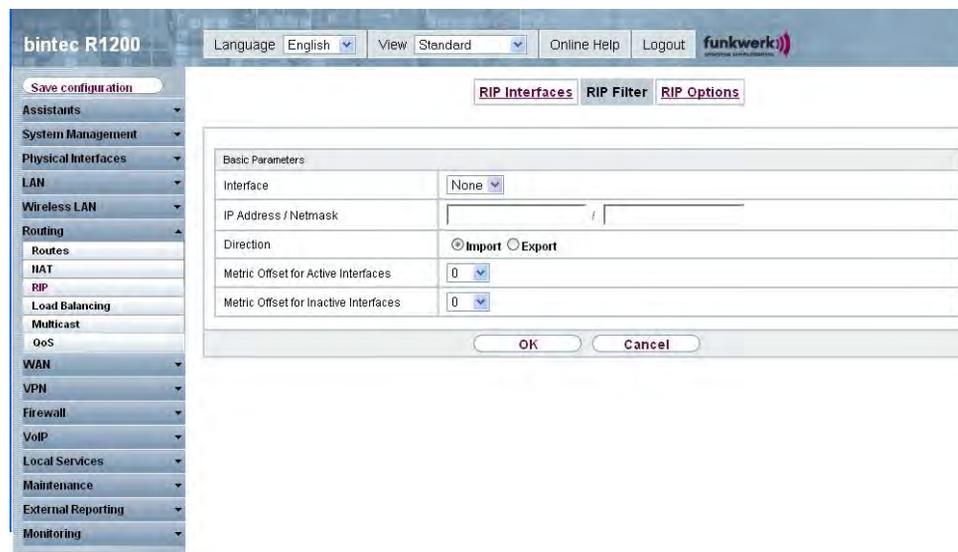


Fig. 89: Routing -> RIP -> RIP Filters -> New

The **Routing -> RIP -> RIP Filter -> New** menu consists of the following fields:

#### Fields in the RIP Filter Basic Parameters menu

Field	Description
Interface	Select the interface to which the rule to be configured applies.
IP Address/Netmask	Enter the IP address and netmask to which the rule is to be applied. This address can be in the LAN or WAN.  The rules for incoming and outgoing RIP packets (import or export) for the same IP address must be separately configured.  You can enter individual host addresses or network addresses.
Direction	Select whether the filter applies to the export or import of routes.  Possible values: <ul style="list-style-type: none"> <li><i>Import</i> (default value)</li> </ul>

Field	Description
	<ul style="list-style-type: none"> <li><i>Export</i></li> </ul>
Metric Offset for Active Interfaces	<p>Select the value to be added to the route metric if the status of the interface is "up". During export, the value is added to the exported metric if the interface status is "up".</p> <p>Possible values are <math>-16</math> to <math>16</math>.</p> <p>The default value is <math>0</math>.</p>
Metric Offset for Inactive Interfaces	<p>Select the value to be added to the route metric if the status of the interface is "dormant". During export, the value is added to the exported metric if the interface status is "dormant".</p> <p>Possible values are <math>-16</math> to <math>16</math>.</p> <p>The default value is <math>0</math>.</p>

### 14.3.3 RIP Options

The screenshot shows the configuration interface for RIP Options on a bintec R1200 device. The interface includes a navigation sidebar on the left and a main configuration area. The 'RIP Options' tab is selected, displaying the following parameters:

Global RIP Parameters	
RIP UDP Port	520
Default Route Distribution	<input checked="" type="checkbox"/> Enabled
Poisoned Reverse	<input type="checkbox"/> Enabled
RFC 2453 Variable Timer	<input checked="" type="checkbox"/> Enabled
RFC 2091 Variable Timer	<input type="checkbox"/> Enabled
Timer for RIP V2 (RFC 2453)	
Update Timer	30 Seconds
Route Timeout	180 Seconds
Garbage Collection Timer	120 Seconds

Fig. 90: Routing -> RIP -> RIP Options

The Routing-> RIP ->RIP Options menu consists of the following fields:

**Fields in the RIP Options Global RIP Parameters menu**

Field	Description
RIP UDP Port	<p>The setting option UDP Port, which is used for sending and receiving RIP updates, is only for test purposes. If the setting is changed, this can mean that your device sends and listens at a port that no other devices use. The default value 520 should be retained.</p>
Default Route Distribution	<p>Select whether the default route of your device is to be propagated via RIP updates.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is enabled by default.</p>
Poisoned Reverse	<p>Select the procedure for preventing routing loops.</p> <p>With standard RIP, the routes learnt are propagated over all interfaces with RIP SEND activated. With <b>Poisoned Reverse</b>, however, your device propagates over the interface over which it learnt the routes, with the metric (Next Hop Count) 16 (=“Network is not reachable”).</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
RFC 2453 Variable Timer	<p>For the timers described in RFC 2453, select whether the same values that you can configure in the <b>Timer for RIP V2 (RFC 2453)</b> menu.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is enabled by default.</p> <p>If you deactivate the function, the times defined in RFC are retained for the timeouts.</p>
RFC 2091 Variable Timer	<p>For the timers described in RFC 2091, select whether the same values that you can configure in the <b>Timer for Triggered RIP (RFC 2091)</b> menu.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p> <p>If the function is not activated, the times defined in RFC are re-</p>

Field	Description
	tained for the timeouts.

#### Fields in the RIP Options Timer for RIP V2 (RFC 2453) menu

Field	Description
Update Timer	<p>Only for <b>RFC 2453 Variable Timer</b> = <i>Enabled</i></p> <p>An RIP update is sent on expiry of this period of time.</p> <p>The default value is 30 (seconds).</p>
Route Timeout	<p>Only for <b>RFC 2453 Variable Timer</b> = <i>Enabled</i></p> <p>After the last update of a route, the route time is active.</p> <p>After timeout, the route is deactivated and the Garbage Collection Timer is started.</p> <p>The default value is 180 (seconds).</p>
Garbage Collection Timer	<p>Only for <b>RFC 2453 Variable Timer</b> = <i>Enabled</i></p> <p>The Garbage Collection Timer is started as soon as the route timeout has expired.</p> <p>After this timeout, the invalid route is deleted from the IPROUTETABLE if no update is carried out for the route.</p> <p>The default value is 120 (seconds).</p>

#### Fields in the RIP Options Timer for Triggered RIP (RFC 2091) menu

Field	Description
Hold Down Timer	<p>Only for <b>RFC 2091 Variable Timer</b> = <i>Enabled</i></p> <p>The hold down timer is activated as soon as your device receives an unreachable route (metric 16). The route may be deleted once this period has elapsed.</p> <p>The default value is 120 (seconds).</p>
Retransmission Timer	<p>Only for <b>RFC 2091 Variable Timer</b> = <i>Enabled</i></p> <p>After this timeout, update request or update response packets are sent again until an update flush or update acknowledge</p>

Field	Description
	packet arrives. The default value is 5 (seconds).

## 14.4 Load Balancing

The increasing amount of data traffic over the Internet means it is necessary to send data over different interfaces to increase the total bandwidth available. IP load balancing enables the distribution of data traffic within a certain group of interfaces to be controlled.

### 14.4.1 Load Balancing Groups

If interfaces are combined to form groups, the data traffic within a group is divided according to the following principles:

- In contrast to Multilink PPP-based solutions, load balancing also functions with accounts with different providers.
- Session-based load balancing is achieved.
- Related (dependent) sessions are always routed over the same interface.
- A decision on distribution is only made for outgoing sessions.

In the **Routing -> Load Balancing -> Load Balancing Groups** menu a list of all configured load balancing groups is shown.

#### 14.4.1.1 New

Choose the **New** button to set up new groups.

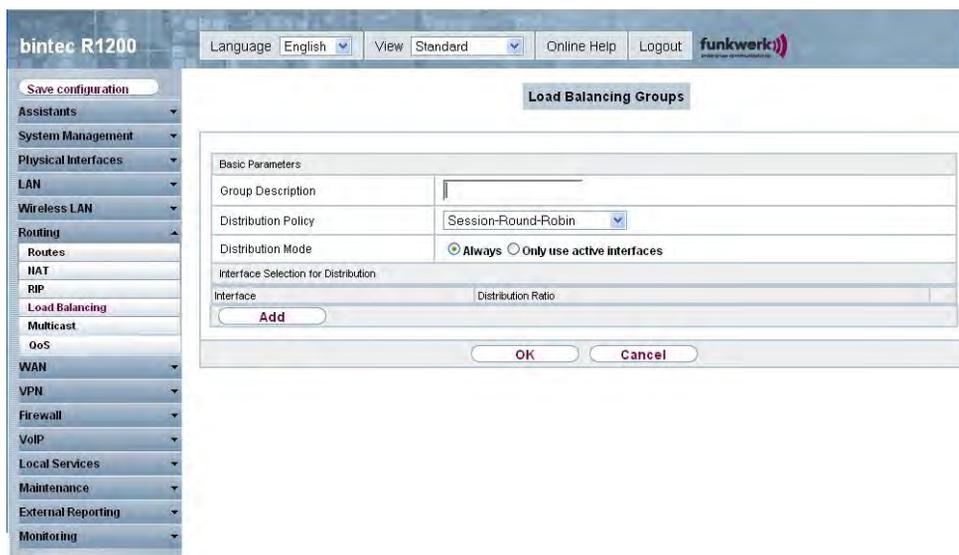


Fig. 91: Routing -> Load Balancing -> Load Balancing Groups -> New

The **Routing -> Load Balancing -> Load Balancing Groups -> New** menu consists of the following fields:

#### Fields in the Load Balancing Groups Basic Parameters menu

Field	Description
Group Description	Enter the desired description of the interface group.
Distribution Policy	Select the way the data traffic is to be distributed to the interfaces configured for the group.  Possible values: <ul style="list-style-type: none"> <li><i>Session-Round-Robin</i> (default value): A newly added session is assigned to one of the group interfaces according to the percentage assignment of sessions to the interfaces. The number of sessions is decisive.</li> <li><i>Load-dependent Bandwidth</i>: A newly added session is assigned to one of the group interfaces according to the share of the total data rate handled by the interfaces. The current data rate based on the data traffic is decisive in both the send and receive direction.</li> </ul>
Consider	Only for <b>Load Balancing Policy</b> = <i>Bandwidth</i> , <i>load-dependent</i>

Field	Description
	<p>Choose the direction in which the current data rate is to be considered.</p> <p>Options:</p> <ul style="list-style-type: none"> <li>• <i>Download</i>: Only the data rate in the receive direction is considered.</li> <li>• <i>Upload</i>: Only the data rate in the send direction is considered.</li> </ul> <p>The <i>Download</i> and <i>Upload</i> are deactivated by default.</p>
Distribution Mode	<p>Select the state the interfaces in the group may have if they are to be included in load balancing.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Always</i>(default value): Also includes idle interfaces.</li> <li>• <i>Only use active interfaces</i>: Only interfaces in the up state are included.</li> </ul>

In the **Interface Selection for Distribution** area, you add and configure interfaces that match the current group context. You can also delete interfaces.

Use **Add** to create entries.

#### Fields in the Load Balancing Groups Interface Selection for Distribution menu

Field	Description
Interface	Select the interfaces that are to belong to the group from the available interfaces.
Distribution Ratio	<p>Enter the percentage of the data traffic to be assigned to an interface.</p> <p>The meaning differs according to the <b>Distribution Policy</b> used:</p> <ul style="list-style-type: none"> <li>• Based on the number of sessions to be distributed for <i>Session-Round-Robin</i>.</li> <li>• For <i>Bandwidth Load Dependent</i> the data rate is the decisive factor.</li> </ul>

## 14.5 Multicast

### What is multicasting?

Many new communication technologies are based on communication from one sender to several recipients. Therefore, modern telecommunication systems such as voice over IP or video and audio streaming (e.g. IPTV or Webradio) focus on reducing data traffic, e.g. by offering TriplePlay (voice, video, data). Multicast is a cost-effective solution for effective use of bandwidth because the sender of the data packet, which can be received by several recipients, only needs to send the packet once. The packet is sent to a virtual address defined as a multicast group. Interested recipients log in to these groups.

### Other areas of use

One classic area in which multicast is used is for conferences (audio/video) with several recipients. The most well-known are probably the Mbone Multimedia Audio Tool (VAT), Video Conferencing Tool (VIC) and Whiteboard (WB). VAT can be used to hold audio conferences. All subscribers are displayed in a window and the speaker(s) are indicated by a black box. Other areas of use are of particular interest to companies. Here, multicasting makes it possible to synchronise the databases of several servers, which is valuable for multinationals or even companies with just a few locations.

### Address range for multicast

For, IPv4 the IP addresses 224.0.0.0 to 239.255.255.255 (224.0.0.0/4) are reserved for multicast in the class D network. An IP address from this range represents a multicast group to which several recipients can log in. The multicast router then forwards the required packets to all subnets with logged in recipients.

### Multicast basics

Multicast is connectionless, which means that any trouble-shooting or flow control needs to be guaranteed at application level.

At transport level, UDP is used almost exclusively, as, in contrast to TCP, it is not based on a point-to-point connection.

At IP level, the main difference is therefore that the destination address does not address a dedicated host, but rather a group, i.e. during the routing of multicast packets, the decisive factor is whether a recipient is in a logged-in subnet.

In the local network, all hosts are required to accept all multicast packets. For Ethernet or FDD, this is based on MAC mapping, where the group address is encoded into the destination MAC Address. For routing between several networks, the routers first need to make themselves known to all potential recipients in the subnet. This is achieved by means of Membership Management protocols such as IGMP for IPv4 and MLP for IPv6.

## Membership Management protocol

In IPv4, IGMP (Internet Group Management Protocol) is a protocol that hosts can use to provide the router with multicast membership information. IP addresses of the class D address range are used for addressing. An IP address in this class represents a group. A sender (e.g. Internet radio) sends data to this group. The addresses (IP) of the various senders within a group are called the source (addresses). Several senders (with different IP addresses) can therefore transmit to the same multicast group, leading to a 1-to-n relationship between groups and source addresses. This information is forwarded to the router by means of reports. In the case of incoming multicast data traffic, a router can use this information to decide whether a host in its subnet wants to receive it. Your device supports the current version IGMP V3, which is upwardly compatible, which means that both V3 and V1/V2 hosts can be managed.

Your device supports the following multicast mechanisms:

- Forwarding: This relates to static forwarding, i.e. incoming data traffic for a group is passed in all cases. This is a useful option if multicast data traffic is to be permanently passed.
- IGMP: IGMP is used to gather information about the potential recipients in a subnet. In the case of a hop, incoming multicast data traffic can thus be selected.



### Tip

With multicast, the focus is on excluding data traffic from unwanted multicast groups. Note that if forwarding is combined with IGMP, the packets can be forwarded to the groups specified in the forwarding request.

## 14.5.1 Forwarding

In this menu, you specify which multicast groups are always passed between the interfaces of your device.

### 14.5.1.1 New

Choose the **New** button to create forwarding rules for new multicast groups.

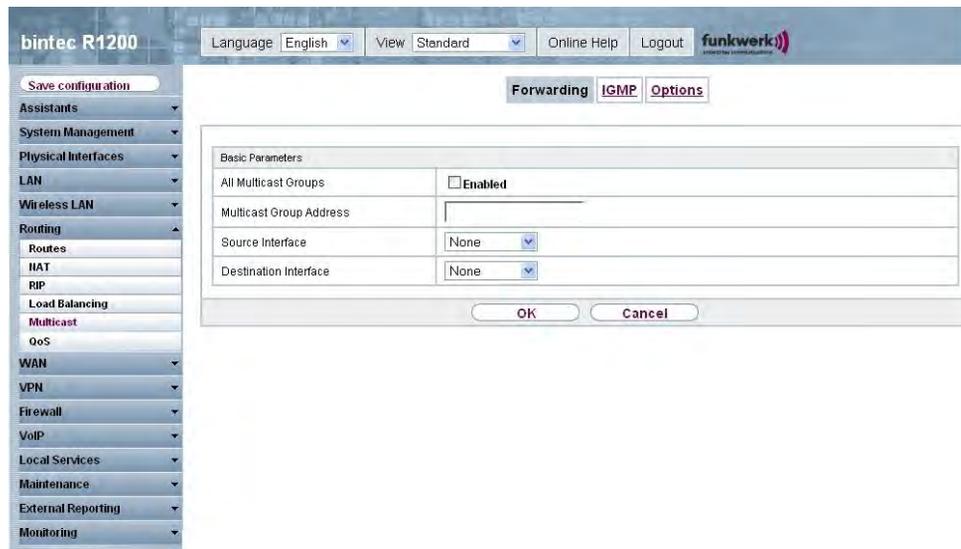


Fig. 92: Routing -> Multicast -> Forwarding -> /New

The Routing -> Multicast -> Forwarding -> /New menu consists of the following fields:

#### Fields in the Forwarding Basic Parameters menu

Field	Description
All Multicast Groups	<p>Select whether all multicast groups, i.e. the complete multicast address range 224.0.0.0/4, are to be forwarded from the defined <b>Source Interface</b> to the defined <b>Destination Interface</b>. To do this, check <b>Enabled</b>.</p> <p>Disable the option if you only want to forward one defined multicast group to a particular interface.</p> <p>The option is deactivated by default.</p>
Multicast Group Address	<p>Only for <b>All Multicast-Groups = disabled</b></p> <p>Enter here the address of the multicast group you want to forward from a defined <b>Source Interface</b> to a defined <b>Destination Interface</b>.</p>

Field	Description
Source Interface	Select the interface on your device to which the selected multicast group is sent.
Destination Interface	Select the interface on your device to which the selected multicast group is to be forwarded.

## 14.5.2 IGMP

IGMP (Internet Group Management Protocol, see RFC 3376) is used to signal the information about group (membership) in a subnet. As a result, only the packets explicitly wanted by a host enter the subnet.

Special mechanisms ensure that the requirements of the individual clients are taken into consideration. At the moment there are three versions of IGMP (V1 - V3); most current systems use V3, and less often V2.

Two packet types play a central role in IGMP: queries and reports.

Queries are only transmitted from a router. If several IGMP routers exist in a network, the router with the lowest IP address is the "querier". We differentiate here between a general query (sent to 224.0.0.1), a group-specific query (sent to a group address) and the group-and-source-specific query (sent to a specific group address). Reports are only sent by hosts to respond to queries.

In this menu, you configure the interfaces on which IGMP is to be enabled.

### 14.5.2.1 New

Choose the **New** button to configure IGMP on other interfaces.

The screenshot shows the configuration interface for a bintec R1200 device. The left sidebar contains a navigation menu with categories like Assistants, System Management, Physical Interfaces, LAN, Wireless LAN, Routing, HAT, RIP, Load Balancing, Multicast, QoS, WAN, VPN, Firewall, VoIP, Local Services, Maintenance, External Reporting, and Monitoring. The 'Routing' category is expanded, and the 'Multicast' sub-menu is selected, leading to the 'IGMP' configuration page. The 'IGMP Settings' section includes fields for Interface (set to None), Query Interval (125 Seconds), Maximum Response Time (10 Seconds), Robustness (2), Last Member Query Interval (1 Seconds), IGMP State Limit (0 Messages per Second), and Mode (Host and Routing selected). Below this is the 'Advanced Settings' section with IGMP Proxy (Enabled) and Proxy Interface (Select one). Buttons for 'OK' and 'Cancel' are at the bottom.

Fig. 93: Routing -> Multicast -> IGMP -> /New

The Routing -> Multicast -> IGMP -> /New menu consists of the following fields:

#### Fields in the IGMP IGMP Settings menu

Field	Description
Interface	Select the interface on which IGMP is to be enabled, i.e. queries are sent and responses are accepted.
Query Interval	Enter the interval in seconds in which IGMP queries are to be sent.  Possible values are 0 to 600.  The default value is 125.
Maximum Response Time	For the sending of queries, enter the time interval in seconds within which hosts must respond. The hosts randomly select a time delay from this interval before sending the response. This spreads the load in networks with several hosts, improving performance.  Possible values are 0 to 100.  The default value is 100.
Robustness	Select the multiplier for controlling the timer values. A higher

Field	Description
	<p>value can e.g. compensate for packet loss in a network susceptible to loss. If the value is too high, however, the time between logging off and stopping of the data traffic can be increased (leave latency).</p> <p>Possible values are <i>2</i> to <i>8</i>.</p> <p>The default value is <i>2</i>.</p>
Last Member Query Interval	<p>Define the time after a query for which the router waits for an answer.</p> <p>If you shorten the interval, it will be more quickly detected that the last member has left a group so that no more packets for this group should be forwarded to this interface.</p> <p>Possible values are <i>0</i> to <i>255</i>.</p> <p>The default value is <i>10</i>.</p>
IGMP State Limit	<p>Limit the number of reports/queries per second for the selected interface.</p>
Mode	<p>Specify whether the interface defined here only works in host mode or in both host mode and routing mode.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Routing</i> (default value): The interface is operated in routing mode and in host mode.</li> <li>• <i>Host</i>: The interface is only operated in host mode.</li> </ul>

### IGMP Proxy

IGMP Proxy enables you to simulate several locally connected interfaces as a subnet to an adjacent router. Queries coming in to the IGMP Proxy interface are forwarded to the local subnets. Local reports are forwarded on the IPGM Proxy interface.

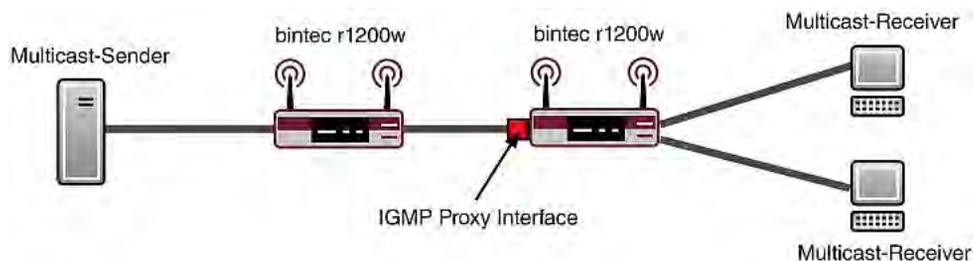


Fig. 94: IGMP Proxy

The **Advanced Settings** menu consists of the following fields:

#### Fields in the menu Advanced Settings

Field	Description
IGMP Proxy	Select whether your device is to forward the hosts' IGMP messages in the subnet via its defined <b>Proxy Interface</b> .
Proxy Interface	Select the interface on your device via which queries are to be received and collected.

### 14.5.3 Options

In this menu, you can enable and disable IGMP on your system. You can also define whether IGMP is to be used in compatibility mode or only IGMP V3 hosts are to be accepted.

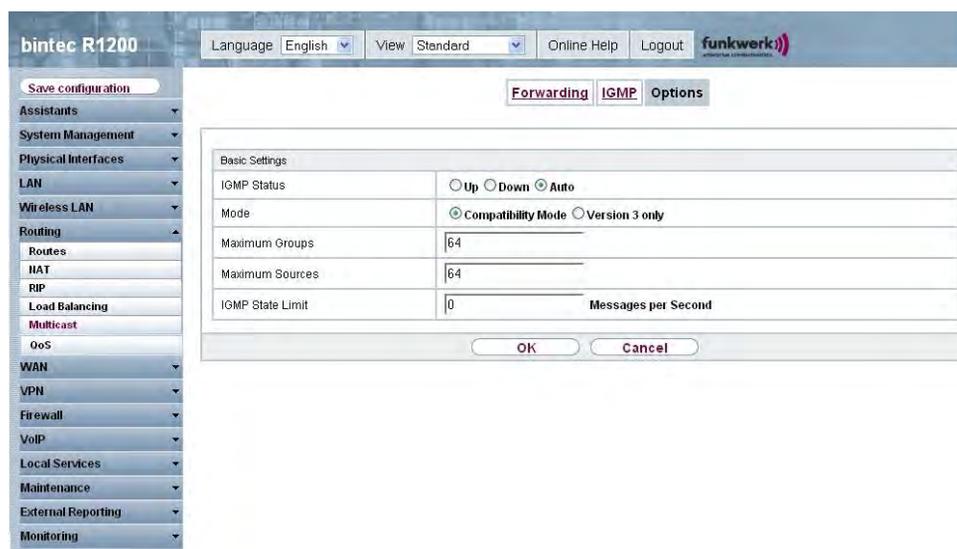


Fig. 95: Routing -> Multicast -> Options

The **Routing -> Multicast -> Options** menu consists of the following fields:

#### Fields in the Options Basic Settings menu

Field	Description
IGMP Status	Select the IGMP status.  Possible values: <ul style="list-style-type: none"> <li>• <i>auto</i> (default value) Multicast is activated automatically for hosts if the hosts open applications that use multicast.</li> <li>• <i>Active</i>: Multicast is always on.</li> <li>• <i>Down</i> : Multicast is always off.</li> </ul>
Mode	Only for <b>IGMP Status</b> = <i>Active</i> or <i>Auto</i>  Select Multicast Mode.  Possible values: <ul style="list-style-type: none"> <li>• <i>Compatibility Mode</i> (default value): The router uses IGMP version 3. If it notices a lower version in the network, it uses the lowest version it could detect.</li> <li>• <i>Version 3 only</i>: Only IGMP version 3 is used.</li> </ul>
Maximum Groups	Enter the maximum number of groups to be permitted, both in-

Field	Description
	ternally and in reports.
Maximum Sources	Enter the maximum number of sources that are specified in version 3 reports and the maximum number of internally managed sources per group.
IGMP State Limit	Enter the maximum permitted total number of incoming queries and messages per second.  The default value is 0, i.e. the number of IGMP status messages is not limited.

## 14.6 QoS

QoS (Quality of Service) makes it possible to distribute the available bandwidths effectively and intelligently. Certain applications can be given preference and bandwidth reserved for them. This is an advantage, especially for time-critical applications such as VoIP.

The QoS configuration consists of three parts:

- Creating IP filters
- Classifying data
- Prioritising data.

### 14.6.1 QoS Filter

IP filters are configured in the **Routing -> QoS -> QoS Filter** menu.

#### 14.6.1.1 New

Choose the **New** button to define more IP filters.

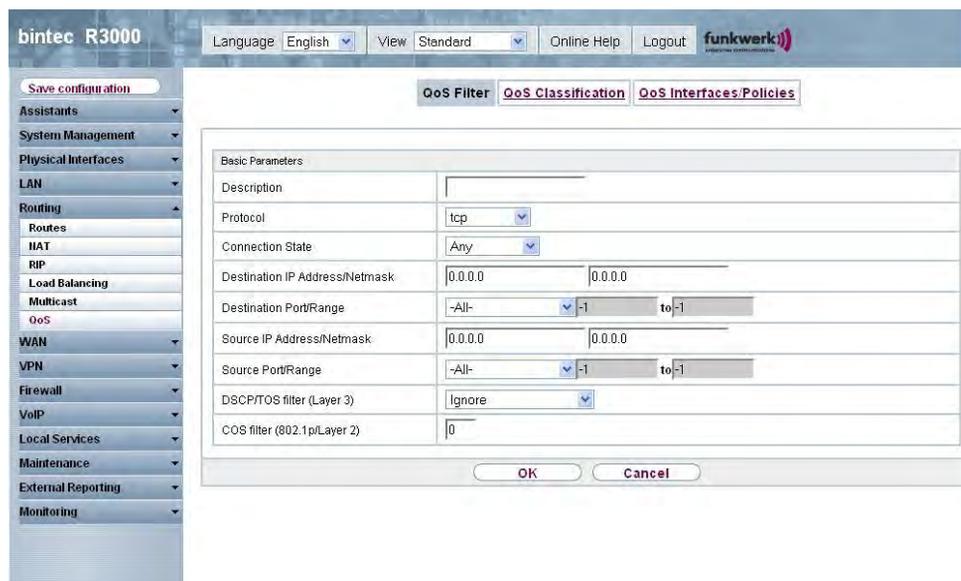


Fig. 96: Routing -> QoS -> QoS Filter -> New

The **Routing-> QoS -> QoS Filter -> New** menu consists of the following fields:

#### Fields in the QoS Filter Basic Parameters menu

Field	Description
Description	Enter the name of the filter.
Protocol	Select a protocol.  Possible values: <i>l2tp, ah, Chaos, dont-verify, egp, esp, ggp, gre, hmp, icmp, igmp, IGP, igrp, IP, ipip, ipv6, IPX in IP, ISO-IP, Kryptolan, ospf, pim, pup, rdp, rsvp, SKIP, tcp, TLSP, udp, VRRP, xns-idp.</i>  The <i>Do not verify</i> option (default value) matches any protocol.
Type	Only if <b>Protocol</b> = <i>icmp</i>  Select the type.  Possible values: <i>Any, Echo reply, Destination unreachable, Source quench, Redirect, Echo, Time expired, Timestamp, Timestamp reply.</i>

Field	Description
	<p>See RFC 792.</p> <p>The default value is <i>Any</i>.</p>
Connection State	<p>If <b>Protocol</b> = <i>tcp</i>, you can define a filter that takes the status of the TCP connections into account.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Established</i>: All TCP packets that would not establish any new TCP session on routing over the gateway match the filter.</li> <li>• <i>Any</i> (default value): The filter is independent from the connection state.</li> </ul>
Destination IP Address / Netmask	Enter the destination IP address of the data packets and the corresponding netmask.
Destination Port/Range	<p>Only if <b>Protocol</b> = <i>tcp</i> or <i>udp</i></p> <p>Enter a destination port number or a range of destination port numbers.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>All</i> (default value): The destination port is not specified.</li> <li>• <i>Specify port</i>: Enter a destination port.</li> <li>• <i>Specify port range</i>: Enter a destination port range.</li> </ul>
Source IP Address / Netmask	Enter the source IP address of the data packets and the corresponding netmask.
Source Port/Range	<p>Only if <b>Protocol</b> = <i>tcp</i> or <i>udp</i></p> <p>Enter a source port number or a range of source port numbers.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>All</i> (default value): The destination port is not specified.</li> <li>• <i>Specify port</i>: Enter a destination port.</li> <li>• <i>Specify port range</i>: Enter a destination port range.</li> </ul>
DSCP/TOS filter (Layer 3)	<p>Specify how the priority of the IP packets is signalled.</p> <p>Possible values:</p>

Field	Description
	<ul style="list-style-type: none"> <li>• <i>Ignore</i> (default value): No priority signalling is used.</li> <li>• <i>DSCP Binary Value</i>: Differentiated Services Code Point is used to signal the priority of IP packets (indicated in binary format; currently not implemented).</li> <li>• <i>DSCP Decimal Value</i>: Differentiated Services Code Point is used to signal the priority of IP packets (indicated in decimal format; possible values 0 to 63; currently not implemented).</li> <li>• <i>TOS Binary Value</i>: Type of Service is used to signal the priority of IP packets (indicated in binary format).</li> <li>• <i>TOS Decimal Value</i>: Type of Service is used to signal the priority of IP packets (indicated in decimal format; possible values 0 to 255).</li> </ul>
COS filter (802.1p/Layer 2)	<p>Enter the service class of the IP packets (Class of service, CoS).</p> <p>Possible values: 0 and 7.</p> <p>The default value is 0.</p>

## 14.6.2 QoS Classification

The data traffic is classified in the **Routing -> QoS -> QoS Classification** menu, i.e. the data traffic is associated using class IDs of various classes. To do this, create class plans for classifying IP packets based on pre-defined IP filters. Each class plan is associated to at least one interface via its first filter.

### 14.6.2.1 New

Choose the **New** button to set up other data classes.

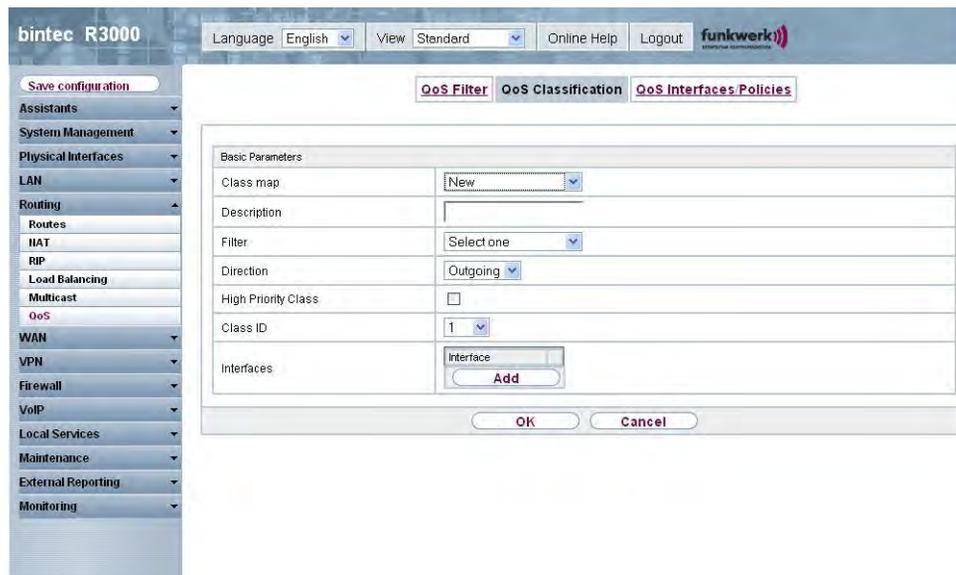


Fig. 97: Routing -> QoS -> QoS Classification -> New

The Routing -> QoS -> QoS Classification -> New menu consists of the following fields:

#### Fields in the QoS Classification Basic Parameters menu

Field	Description
Class map	<p>Choose the class plan you want to create or edit.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li><i>New</i> (default value): You can create a new class plan with this setting.</li> <li><i>&lt;Name of class plan&gt;</i>: Shows a class plan that has already been created, which you can select and edit.</li> </ul>
Description	<p>Only if <b>Class map</b> = <b>New</b>.</p> <p>Enter the name of the class plan.</p>
Filter	<p>Select an IP filter.</p> <p>If the class plan is new, select the filter to be set at the first point of the class plan.</p> <p>If the class plan already exists, select the filter to be attached to the class plan.</p>

Field	Description
	To select a filter, at least one filter must be configured in the <b>Routing -&gt; QoS -&gt; QoS Filter</b> menu.
Direction	<p>Select the direction of the data packets to be classified.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Incoming</i>: Incoming data packets are to be classified.</li> <li>• <i>Outgoing</i> (default value): Outgoing data packets are to be classified.</li> <li>• <i>Both</i>: Incoming and outgoing data packets are to be classified.</li> </ul>
High Priority Class	<p>Enable or disable the high priority class. If the high priority class is active, the data packets are associated with the class with the highest priority and priority 0 is set automatically.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
Class ID	<p>Only if <b>High Priority Class</b> is inactive.</p> <p>Choose a number which assigns the data packets to a class.</p> <p>Note: The class ID is a label to assign data packets to specific classes. (The class ID defines the priority.)</p> <p>Possible values are whole numbers between <i>1</i> and <i>254</i>.</p>
Interfaces	<p>Only if <b>Class map</b> = <i>New</i>.</p> <p>When creating a new class plan, select the interfaces to which you want to link the class plan. A class plan can be assigned to multiple interfaces.</p>

### 14.6.3 QoS Interfaces/Policies

You can define the priority in the **Routing -> QoS -> QoS Interfaces/Policies** menu.

**Note**

Data can only be prioritized in the outgoing direction.

Packets in the high-priority class always take priority over data with class IDs 1... 254.

It is possible to assign or guarantee each queue and thus each data class a certain part of the total bandwidth of the interface. In addition, you can optimise the transmission of voice data (real time data).

Depending on the respective interface, a queue is created automatically for each class, but only for data traffic classified as outgoing and for data traffic classified in both directions. A priority is assigned to these automatic queues. The value of the priority is equal to the value of the class ID. You can change the default priority of a queue. If you add new queues, you can also use classes in other class plans via the class IDs.

### 14.6.3.1 New

Choose the **New** button to set up other priorities.

Fig. 98: Routing -> QoS -> QoS Interfaces/Policies -> New

The **Routing-> QoS -> QoS Interfaces/Policies -> New** menu consists of the following fields:

#### Fields in the QoS Interfaces/Policies Basic Parameters menu

Field	Description
Interface	Select the interface for which QoS is to be configured.
Priorisation algorithm	<p>Select the algorithm according to which the queues are to be processed. This activates and deactivates QoS on the selected interface.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Priority Queueing</i>(default value): QoS is activated on the interface. The available bandwidth is distributed strictly according to the queue priority.</li> <li>• <i>Weighted Round Robin</i>: QoS is activated on the interface. The available bandwidth is distributed according to the weighting (weight) of the queue. Exception: High-priority packets are always handled with priority.</li> <li>• <i>Weighted Fair Queueing</i>: QoS is activated on the interface. The available bandwidth is distributed as “fairly” as possible among the (automatically detected) traffic flows in a queue. Exception: High-priority packets are always handled with priority.</li> <li>• <i>Disabled</i>: QoS is deactivated on the interface. The existing configuration is not deleted, but can be activated again if required.</li> </ul>
Traffic shaping	<p>Activate or deactivate data rate limiting in the send direction.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
Maximum Upload Speed	<p>Only enabled for <b>Traffic shaping</b> .</p> <p>Enter a maximum data rate for the interfaces in the send direction in kbits.</p> <p>Possible values are <i>1</i> to <i>1000000</i>.</p> <p>The default value is <i>0</i>, i.e. no limits are set, the queue can occupy the maximum bandwidth.</p>
Protocol Header Size below Layer 3	Choose the interface type to include the size of the respective overheads of a datagram when calculating the bandwidth.

Field	Description
	<p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Custom</i> (value in Byte; possible values are 0 to 100.)</li> <li>• <i>Ethernet</i> (default value)</li> <li>• <i>Ethernet and VLAN</i></li> <li>• <i>PPPoE</i></li> <li>• <i>PPPoE and VLAN</i></li> <li>• <i>IPSec over Ethernet</i></li> <li>• <i>IPSec over Ethernet and VLAN</i></li> <li>• <i>IPSec via PPP over Ethernet</i></li> <li>• <i>IPSec via PPPoE and VLAN</i></li> </ul>
Real Time Jitter Control	<p>Only enabled for <b>Transmit Shaping</b>.</p> <p>Real Time Jitter Control optimises latency when forwarding real time datagrams. The function ensures that large data packets are fragmented according to the available upload bandwidth.</p> <p>Real Time Jitter Control is useful for small upload bandwidths (&lt; 800 kbps).</p> <p>Activate or deactivate Real Time Jitter Control.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
Control Mode	<p>Only if <b>Real Time Jitter Control</b> = Enabled.</p> <p>Select the mode for optimising voice transmission.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>All RTP Streams</i>: All RTP streams are optimised. The function activates the RTP stream detection mechanism for the automatic detection of RTP streams. In this mode, the Real Time Jitter Control is activated as soon as an RTP stream has been detected.</li> <li>• <i>Inactive</i>: Voice data transmission is not optimised.</li> <li>• <i>Controlled RTP Streams only</i>(default value): This mode is used if either the VoIP Application Layer Gateway (ALG) or the VoIP Media Gateway (MGW) is active. Real</li> </ul>

Field	Description
	<p>Time Jitter Control is activated by the control instances ALG or MGW.</p> <ul style="list-style-type: none"> <li>• <i>Always</i>: Real Time Jitter Control is always active, even if no real time data is routed.</li> </ul>
Queues/Policies	<p>Configure the desired QoS queues.</p> <p>For each class created from the class plan, which is associated with the selected interface, a queue is generated automatically and displayed here (only for outgoing classified data traffic and for data traffic classified in both directions).</p> <p>Add a new entry with <b>Add</b>. The <b>Edit Queues/Policies</b> menu opens.</p>

The **Edit Queues/Policies** menu consists of the following fields:

#### Fields in the Edit queues/policies menu

Field	Description
Description	Enter the name of the queue/policy.
Outgoing Interface	Shows the interface for which the QoS queues are being configured.
Priorisation queue	<p>Select the queue priority type.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Class Based</i> (default value): Queue for data classified as "normal".</li> <li>• <i>High Priority</i>: Queue for data classified as "high priority".</li> <li>• <i>Default</i>: Queue for data that has not been classified or data of a class for which no specific queue has been configured.</li> </ul>
Class ID	<p>Only if <b>Priority Queue</b> = <i>Class based</i>.</p> <p>Select the QoS packet class to which this queue is to apply.</p> <p>To do this, at least one class ID must be given in the <b>Routing -&gt; QoS -&gt; QoS Classification</b> menu.</p>
Priority	Only if <b>Priority Queue</b> = <i>Class based</i> .

Field	Description
	<p>Choose the priority of the queue. Possible values are <i>1</i> to <i>254</i>.</p> <p>The default value is <i>1</i>.</p>
RTT Mode (Realtime Traffic Mode)	<p>Active or deactivate the real time transmission of the data.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p> <p>RTT Mode should be activated for QoS classes in which real time data has priority. This mode improves latency when forwarding real time datagrams.</p> <p>It is possible to configure multiple queues when RTT Mode is enabled. Queues with enabled RTT mode must always have a higher priority than queues with disabled RTT Mode.</p>
Traffic Shaping	<p>Activate or deactivate data rate (=Traffic Shaping) limiting in the send direction.</p> <p>The data rate limit applies to the selected queue. (This is not the limit that can be defined on the interface.)</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
Maximum Upload Speed	<p>Only for <b>Traffic Shaping</b> = Enabled.</p> <p>Enter a maximum data rate for the queue in kbits.</p> <p>Possible values are <i>0</i> to <i>1000000</i>.</p> <p>The default value is <i>0</i>.</p>
Overbooking allowed	<p>Only for <b>Traffic Shaping</b> = Enabled.</p> <p>Enable or disable the function. The function controls the bandwidth limit.</p> <p>If <b>Overbooking allows</b> is activated, the bandwidth limit set for this queue can be exceeded, as long as free bandwidth exists on the interface.</p> <p>If <b>Overbooking allowed</b> is deactivated, the queue can never</p>

Field	Description
	<p>occupy bandwidth beyond the bandwidth limit that has been set.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
Burst size	<p>Only for <b>Traffic Shaping</b> = Enabled.</p> <p>Enter the maximum number of bytes that may still be transmitted temporarily when the data rate permitted for this queue has been reached.</p> <p>Possible values are <i>0</i> to <i>64000</i>.</p> <p>The default value is <i>0</i>.</p>

The **Advanced Settings** menu consists of the following fields:

#### Fields in the menu **Advanced Settings**

Field	Description
Dropping algorithm	<p>Choose the procedure for rejecting packets in the QoS Queue, if the maximum size of the queue is exceeded.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Tail Drop</i> (default value): The newest packet received is dropped.</li> <li>• <i>Head Drop</i>: The oldest packet in the queue is dropped.</li> <li>• <i>Random Drop</i>: A randomly selected packet is dropped from the queue.</li> </ul>
Min. queue size	<p>Enter the minimum size of the queue in bytes.</p> <p>Possible values are <i>0</i> to <i>16384</i>.</p> <p>The default value is <i>0</i>.</p>
Max. queue size	<p>Enter the maximum size of the queue in bytes.</p> <p>Possible values are <i>0</i> to <i>16384</i>.</p> <p>The default value is <i>16384</i>.</p>

## Chapter 15 WAN

This menu offers various options for configuring accesses or connections from your LAN to the WAN. You can also optimise voice transmission here for telephone calls over the Internet.

### 15.1 Internet + Dialup

In this menu, you can set up Internet access or dialup connections.

To enable your device to set up connections to networks or hosts outside your LAN, you must configure the partners you want to connect to on your device. This applies to outgoing connections (your device dials its WAN partner) and incoming connections (a remote partner dials the number of your device).

If you want to set up Internet access, you must set up a connection to your Internet Service Provider (ISP). For broadband Internet access, your device provides the PPP-over-Ethernet (PPPoE), PPP-over-PPTP and PPP-over-ATM (PPPoA) protocols. You can also configure Internet access over ISDN.



#### Note

Note your provider's instructions.

Dialin connections over ISDN are used to establish a connection to networks or hosts outside your LANs.

All the entered connections are displayed in the corresponding list, which contains the **Description**, the **User Name**, the **Authentication** and the current **Status**.

The **Status** field can take the following values:

#### Possible values for Status:

Field	Description
	connected
	not connected (dialup connection); connection setup possible
	not connected (e.g. because of an error during setup of an outgoing connection, a renewed attempt is only possible after a specified number of seconds)

Field	Description
	administratively set to down (deactivated); connection setup not possible for leased lines:

## Default Route

With a default route, all data is automatically forwarded to one connection if no other suitable route is available. Access to the Internet should always be set up as the default route to the Internet Service Provider (ISP). Further information on possible route types can be found under **Routing** -> **Routes**.

## Activating NAT

With Network Address Translation (NAT), you conceal your whole network to the outside world behind one IP address. You should certainly do this for your connection to the Internet Service Provider (ISP).

Only outgoing sessions are allowed initially if NAT is activated. To allow certain connections from outside to hosts within the LAN, these must be explicitly defined and admitted.

## Connection Idle Timeout

The connection idle timeout is determined in order to clear the connection automatically if it is not being used, i.e. if data is no longer being sent, to help you save costs.

## Block after Connection Failure

You use this function to set up a waiting time for outgoing connection attempts after which your device's connection attempt is regarded as having failed.

## Authentication

When a call is received on ISDN connections, the calling party number is always sent over the ISDN D-channel. This number enables your device to identify the caller (CLID), provided the caller is entered on your device. After identification with CLID, your device can additionally carry out PPP authentication with the connection partner before it accepts the call.

Your device needs the necessary data for this, which you should enter here, for all PPP connections. Establish the type of authentication process that should be performed, then enter a common password and two codes. You get this information, for example, from your Internet Service Provider (ISP) or the system administrator at your head office. If the data

you entered on your device is the same as the caller's data, the call is accepted. The call is rejected if the data is not the same.

## Callback

The callback mechanism can be used for every connection over an ISDN or over an AUX interface to obtain additional security regarding the connection partner or to clearly allocate the costs of connections. A connection is not set up until the calling party has been clearly identified by calling back. Your device can answer an incoming call with a callback or request a callback from a connection partner. Identification can be based on the calling party number or PAP/CHAP/MS-CHAP authentication. Identification is made in the former case without call acceptance, as the calling party number is transferred over the ISDN D-channel, and in the latter case with call acceptance.

## Channel Bundling

Your device supports dynamic and static channel bundling for dialup connections. Channel bundling can only be used for ISDN connections for a bandwidth increase or as a backup. Only one B channel is initially opened when a connection is set up.

### Dynamic

Dynamic channel bundling means that your device connects other ISDN B channels to increase the throughput for connections if this is required, e.g. for large data rates. If the amount of data traffic drops, the additional B-channels are closed again.

If devices from other manufacturers are to be used at the far end, ensure that these support dynamic channel bundling for a bandwidth increase or as a backup.

### Static

In static channel bundling, you specify right from the start how many B channels your device is to use for connections, regardless of the transferred data rate.

## 15.1.1 PPPoE

In the **WAN -> Internet + Dialup -> PPPoE** menu, a list of all PPPoE interfaces is shown.

PPP over Ethernet (PPPoE) is the use of the Point-to-Point Protocol (PPP) network protocol over an Ethernet connection. Today, PPPoE is used for ADSL connections in Germany. In Austria, the Point To Point Tunnelling Protocol (PPTP) was originally used for ADSL access. However, PPPoE is now offered here too by some providers.

### 15.1.1.1 New

Choose the **New** button to set up new PPPoE interfaces.

The screenshot shows the configuration interface for a PPPoE interface on a bintec R1200 device. The interface is divided into two main sections: Basic Parameters and Advanced Settings. The Basic Parameters section includes fields for Description, PPPoE Mode (Standard or Multilink), PPPoE Ethernet Interface, User Name, Password, Always on, and Connection Idle Timeout. The Advanced Settings section includes fields for Block after connection failure for, Maximum Number of Dialup Retries, Authentication, DNS Negotiation, Prioritize TCP ACK Packets, and LCP Alive Check. The 'New' button is highlighted in the top navigation bar.

Fig. 99: WAN -> Internet + Dialup -> PPPoE -> New

The WAN -> Internet + Dialup -> PPPoE -> New menu consists of the following fields:

#### Fields in the PPPoE Basic Parameters menu

Field	Description
Description	Enter a name to uniquely identify the PPPoE partner. The first character in this field must not be a number and no special characters or umlauts must be used.
PPPoE Mode	Select whether you want to use a standard Internet connection over PPPoE ( <i>standard</i> ) or your Internet access is to be set up over several interfaces ( <i>Multilink</i> ). If you choose <i>Multilink</i> , you can connect several DSL connections from a provider over PPP as a static bundle in order to obtain more bandwidth. Each of these DSL connections should use a separate

Field	Description
	<p>Ethernet connection for this. At the moment, many providers are still in the process of preparing the PPPoE Multilink function.</p> <p>For PPPoE Multilink, we recommend using your device's Ethernet switch in Split-Port mode and to use a separate Ethernet interface e.g. <i>en1-1</i>, <i>en1-2</i> for each PPPoE connection.</p> <p>If you also want to use an external modem for PPPoE Multilink, you must run your device's Ethernet switch in Split-Port mode.</p>
PPPoE Ethernet Interface	<p>Only if <b>PPPoE Mode</b> = <i>Standard</i></p> <p>Select the Ethernet interface specified for a standard PPPoE connection.</p> <p>If you want to use an external DSL modem, select the Ethernet port to which the modem is connected.</p> <p>When using the internal DSL modem, select here the EthoA interface configured in <b>Physical Interfaces</b>-&gt; <b>ATM</b>-&gt; <b>Profiles</b>-&gt; <b>New</b>.</p> <p>The default value is <i>Not specified</i>.</p>
PPPoE Interfaces for Multilink	<p>Only if <b>PPPoE Mode</b> = <i>Multilink</i></p> <p>Select the interfaces you want to use for your Internet connection. Click the <b>Add</b> button to create new entries.</p>
User Name	Enter the user name.
Password	Enter the password.
Always on	<p>Select whether the interface should always be activated.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p> <p>Only activate this option if you have Internet access with a flat-rate charge.</p>
Connection Idle Timeout	<p>Only if <b>Always on</b> is disabled.</p> <p>Enter the idle time in seconds for static short hold. The static short hold setting determines how many seconds should pass</p>

Field	Description
	<p>between sending the last traffic data packet and clearing the connection.</p> <p>Possible values are <i>0</i> to <i>3600</i> (seconds). <i>0</i> deactivates the short hold.</p> <p>The default value is <i>300</i>.</p> <p>Example: <i>10</i> for FTP transmission, <i>20</i> for LAN-to-LAN transmission, <i>90</i> for Internet connections.</p>

#### Fields in the PPPoEIP Mode and Routes menu

Field	Description
IP Address Mode	<p>Select whether your device is to be assigned a static IP address or whether it should be assigned this dynamically.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Get IP Address</i> (default value): Your device is dynamically assigned an IP address.</li> <li>• <i>Static</i>: You enter a static IP address.</li> </ul>
Default Route	<p>Select whether the route to this connection partner is to be defined as the default route.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is enabled by default.</p>
Create NAT Policy	<p>Specify whether Network Address Translation (NAT) is to be activated.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is enabled by default.</p>
Local IP Address	<p>Only if <b>IP Address Mode</b> = <i>Static</i></p> <p>Enter the static IP address of the connection partner.</p>
Route Entries	<p>Only if <b>IP Address Mode</b> = <i>Static</i></p> <p>Define other routing entries for this connection partner.</p>

Field	Description
	<p>Add a new entry with <b>Add</b>.</p> <ul style="list-style-type: none"> <li>• <i>Remote IP Address</i>: IP address of the destination host or network.</li> <li>• <i>Netmask</i>: Netmask of <b>Remote IP Address</b>. If no entry is made, your device uses a default netmask.</li> <li>• <i>Metric</i>: The lower the value, the higher the priority of the route (possible values 0... 15). The default value is 1.</li> </ul>

The **Advanced Settings** menu consists of the following fields:

#### Fields in the menu Advanced Settings

Field	Description
Block after connection failure for	Enter the wait time in seconds before the device should try again after an attempt to set up a connection has failed. The default value is 60.
Maximum Number of Dialup Retries	<p>Enter the number of unsuccessful attempts to setup a connection before the interface is blocked.</p> <p>Possible values are 0 to 100.</p> <p>The default value is 5.</p>
Authentication	<p>Select the authentication protocol for this connection partner. Select the authentication specified by your provider.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>PAP</i> (default value) Only run <i>PAP</i> (PPP Password Authentication Protocol); the password is transferred unencrypted.</li> <li>• <i>CHAP</i>: Only run <i>CHAP</i> (PPP Challenge Handshake Authentication Protocol as per RFC 1994); the password is transferred encrypted.</li> <li>• <i>PAP/CHAP</i>: Primarily run CHAP, otherwise PAP.</li> <li>• <i>MS-CHAPv1</i>: Only run MS-CHAP version 1 (PPP Microsoft Challenge Handshake Authentication Protocol).</li> <li>• <i>PAP/CHAP/MS-CHAP</i>: Primarily run CHAP, on denial then the authentication protocol required by the connection partner. (MSCHAP version 1 or 2 possible.)</li> <li>• <i>MS-CHAPv2</i>: Run MS-CHAP version 2 only.</li> </ul>

Field	Description
	<ul style="list-style-type: none"> <li><i>None</i>: Some providers use no authentication. In this case, select this option.</li> </ul>
DNS Negotiation	<p>Select whether your device receives IP addresses for <b>Primary DNS Server</b> and <b>Secondary DNS Server</b> from the connection partner or sends these to the connection partner.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is enabled by default.</p>
Prioritize TCP ACK Packets	<p>Select whether the TCP download is to be optimised in the event of intensive TCP upload. This function can be specially applied for asymmetrical bandwidths (ADSL).</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
LCP Alive Check	<p>Check whether the reachability of the remote terminal is to be checked by sending LCP echo requests or replies. This makes it possible to switch to a backup connection more quickly in the event of line faults.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>

## 15.1.2 PPTP

In the **WAN** -> **Internet + Dialup** -> **PPTP** menu, a list of all PPTP interfaces is shown.

In this menu, you configure an Internet connection that uses the Point Tunnelling Protocol (PPTP) to set up a connection, e.g. required in Austria.

### 15.1.2.1 New

Choose the **New** button to set up new PPTP interfaces.

The screenshot shows the configuration page for a new PPTP connection in the bintec R1200 web interface. The left sidebar contains a navigation menu with categories like Assistants, System Management, Physical Interfaces, LAN, Wireless LAN, Routing, WAN, VPN, Firewall, VoIP, Local Services, Maintenance, External Reporting, and Monitoring. The WAN section is expanded to show 'Internet + Dialup', 'Leased Line', and 'Real Time Jitter Control'. The 'Internet + Dialup' section is further expanded to show 'PPTP' and 'New'. The main configuration area has tabs for PPPoE, PPTP, ISDN, AUX, and IP Pools. The 'Basic Parameters' section includes fields for Description, PPTP Interface (a dropdown menu), User Name, Password (masked with dots), Always on (checkbox), and Connection Idle Timeout (300 seconds). The 'Advanced Settings' section includes Block after connection failure for (60 seconds), Maximum Number of Dialup Retries (5), Authentication (PAP), DNS Negotiation (checkbox), Prioritize TCP ACK Packets (checkbox), PPTP Address Mode (Static), Local PPTP IP Address (10.0.0.140), Remote PPTP IP Address (10.0.0.138), and LCP Alive Check (checkbox). Buttons for OK and Cancel are at the bottom.

Fig. 100: WAN -> Internet + Dialup -> PPTP -> New

The WAN -> Internet + Dialup -> PPTP -> New menu consists of the following fields:

#### Fields in the PPTP Basic Parameters menu

Field	Description
Description	<p>Enter a name for uniquely identifying the internet connection.</p> <p>The first character in this field must not be a number and no special characters or umlauts must be used.</p>
PPTP Interface	<p>Select the IP interface over which packets are to be transported to the remote PPTP terminal.</p> <p>If you want to use an external DSL modem, select the Ethernet port to which the modem is connected.</p> <p>When using the internal DSL modem, select here the EthoA interface, e.g. <i>ethoa50-0</i>, configured for this connection in</p>

Field	Description
	<p><b>Physical Interfaces-&gt; ATM-&gt; Profiles-&gt; New.</b></p> <p>The default value is <i>Not specified</i>.</p>
User Name	Enter the user name.
Password	Enter the password.
Always on	<p>Select whether the interface should always be activated.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p> <p>Only activate this option if you have Internet access with a flat-rate charge.</p>
Connection Idle Timeout	<p>Only if <b>Always on</b> is disabled.</p> <p>Enter the idle interval in seconds. This determines how many seconds should pass between sending the last traffic data packet and clearing the connection.</p> <p>Possible values are <i>0 to 3600</i> (seconds). <i>0</i> deactivates the timeout.</p> <p>The default value is <i>300</i>.</p> <p>Example: <i>10</i> for FTP transmission, <i>20</i> for LAN-to-LAN transmission, <i>90</i> for Internet connections.</p>

#### Fields in the PPTP IP Mode and Routes menu

Field	Description
IP Address Mode	<p>Select whether your device is to be assigned a static IP address or whether it should be assigned this dynamically.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Get IP Address</i> (default value): Your device is automatically assigned a temporarily valid IP address from the provider.</li> <li>• <i>Static</i>: You enter a static IP address.</li> </ul>
Default Route	Select whether the route to this connection partner is to be defined as the default route.

Field	Description
	<p>The function is activated with <i>Enabled</i>.</p> <p>The function is enabled by default.</p>
Create NAT Policy	<p>Specify whether Network Address Translation (NAT) is to be activated.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is enabled by default.</p>
Local IP Address	<p>Only for <b>IP Address Mode</b> = <i>Static</i></p> <p>Assign an IP address from your LAN to the PPT interface, which is to be used as your device's internal source address.</p>
Route Entries	<p>Only if <b>IP Address Mode</b> = <i>Static</i></p> <p>Define other routing entries for this PPTP partner.</p> <p>Add a new entry with <b>Add</b>.</p> <ul style="list-style-type: none"> <li>• <i>Remote IP Address</i>: IP address of the destination host or destination network.</li> <li>• <i>Netmask</i>: Netmask of <b>Remote IP Address</b>. If no entry is made, your device uses a default netmask.</li> <li>• <i>Metric</i>: The lower the value, the higher the priority of the route (possible values <i>0... 15</i>). The default value is <i>1</i>.</li> </ul>

The **Advanced Settings** menu consists of the following fields:

#### Fields in the menu Advanced Settings

Field	Description
Block after connection failure for	<p>Enter the wait time in seconds before the device should try again after an attempt to set up a connection has failed. The default value is <i>60</i>.</p>
Maximum Number of Dialup Retries	<p>Enter the number of unsuccessful attempts to setup a connection before the interface is blocked.</p> <p>Possible values are <i>0 to 100</i>.</p> <p>The default value is <i>5</i>.</p>

Field	Description
Authentication	<p>Select the authentication protocol for this Internet connection. Select the authentication specified by your provider.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>PAP</i> (default value) Only run <i>PAP</i> (PPP Password Authentication Protocol); the password is transferred unencrypted.</li> <li>• <i>CHAP</i>: Only run <i>CHAP</i> (PPP Challenge Handshake Authentication Protocol as per RFC 1994); the password is transferred encrypted.</li> <li>• <i>PAP/CHAP</i>: Primarily run CHAP, otherwise PAP.</li> <li>• <i>MS-CHAPv1</i>: Only run MS-CHAP version 1 (PPP Microsoft Challenge Handshake Authentication Protocol).</li> <li>• <i>PAP/CHAP/MS-CHAP</i> : Run primarily CHAP, if denied then the authentication protocol required by the PPTP partner (MSCHAP version 1 or 2 possible).</li> <li>• <i>MS-CHAPv2</i>: Run MS-CHAP version 2 only.</li> <li>• <i>None</i>: Some providers use no authentication. In this case, select this option.</li> </ul>
DNS Negotiation	<p>Select whether your device receives IP addresses for <b>Primary DNS Server</b> and <b>Secondary DNS Server</b> from the connection partner or sends these to the connection partner.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is enabled by default.</p>
Prioritize TCP ACK Packets	<p>Select whether the TCP download is to be optimised in the event of intensive TCP upload. This function can be specially applied for asymmetrical bandwidths (ADSL).</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
PPTP Address Mode	<p>Displays the address mode. The value cannot be changed.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Static</i>: The IP address of the Ethernet port selected in <b>PPTP Interface</b> will be used.</li> </ul>

Field	Description
Local PPTP IP Address	Assign the PPTP interface an IP address that is used as the source address.  The default value is <i>10.0.0.140</i> .
Remote PPTP IP Address	Enter the IP address of the PPTP partner.  The default value is <i>10.0.0.138</i> .
LCP Alive Check	Check whether the reachability of the remote terminal is to be checked by sending LCP echo requests or replies. This makes it possible to switch to a backup connection more quickly in the event of line faults.  The function is activated with <i>Enabled</i> .  The function is disabled by default.

### 15.1.3 PPPoA

In the **WAN** -> **Internet + Dialup** -> **PPPoA** menu, a list of all PPPoA interfaces is shown.

In this menu, you configure a xDSL connection used to set up PPPoA connections. With PPPoA, the connection is configured so that the PPP data flow is transported directly over an ATM network (RFC 2364). This is required by some providers. Note your provider's specifications.

When using the internal DSL modem, select here a PPPoA interface must be configured for this connection in **WAN** -> **ATM** -> **Profiles** -> **New** with **Client Type** = *On Demand*.

#### 15.1.3.1 New

Choose the **New** button to set up new PPPoA interfaces.

The screenshot shows the configuration interface for a bintec R3800 device. The left sidebar contains a navigation menu with categories like Assistants, System Management, Physical Interfaces, LAN, Routing, WAN, VPN, Firewall, VoIP, Local Services, Maintenance, External Reporting, and Monitoring. The WAN menu is expanded to show 'Internet + Dialup', 'ATM', 'Leased Line', and 'Real Time Jitter Control'. The 'Internet + Dialup' menu is further expanded to show 'PPPoE', 'PPTP', 'PPPoA', 'ISDN', 'AUX', and 'IP Pools'. The 'PPPoA' tab is selected, displaying the configuration for a new PPPoA connection. The 'Basic Parameters' section includes fields for Description, ATM PVC (a dropdown menu), User Name, Password (masked with dots), and an 'Always on' checkbox. The 'Connection Idle Timeout' is set to 300 seconds. The 'IP Mode and Routes' section includes radio buttons for 'Static' and 'Get IP Address', a checked 'Default Route' checkbox, and a checked 'Create NAT Policy' checkbox. The 'Advanced Settings' section includes a 'Block after connection failure for' field set to 60 seconds, a 'Maximum Number of Dialup Retries' field set to 5, a 'Authentication' dropdown set to 'PAP', and checkboxes for 'DNS Negotiation', 'Prioritize TCP ACK Packets', and 'LCP Alive Check', all of which are checked. At the bottom of the configuration area are 'OK' and 'Cancel' buttons.

Fig. 101: WAN -> Internet + Dialup -> PPPoA -> New

The WAN -> Internet + Dialup -> PPPoA -> New menu consists of the following fields:

#### Fields in the PPPoA Basic Parameters menu

Field	Description
Description	Enter a name for uniquely identifying the connection partner. The first character in this field must not be a number and no special characters or umlauts must be used.
ATM PVC	Select an ATM profile created in the <b>ATM -&gt; Profiles</b> menu, indicated by the global identifiers VPI and VCI specified by the provider.
User Name	Enter the user name.
Password	Enter the password for the PPPoA connection.
Always on	Select whether the interface should always be activated.  The function is activated with <i>Enabled</i> .

Field	Description
	<p>The function is disabled by default.</p> <p>Only activate this option if you have Internet access with a flat-rate charge.</p>
Connection Idle Timeout	<p>Only if <b>Always on</b> is disabled.</p> <p>Enter the idle time in seconds for static short hold. The static short hold setting determines how many seconds should pass between sending the last traffic data packet and clearing the connection.</p> <p>Possible values are <i>0</i> to <i>3600</i> (seconds). <i>0</i> deactivates the short hold.</p> <p>The default value is <i>300</i>.</p> <p>Example: <i>10</i> for FTP transmission, <i>20</i> for LAN-to-LAN transmission, <i>90</i> for Internet connections.</p>

#### Fields in the PPPoA IP Mode and Routes menu

Field	Description
IP Address Mode	<p>Choose whether your device has a static IP address or is assigned one dynamically.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Get IP Address</i> (default value): Your device is dynamically assigned an IP address.</li> <li>• <i>Static</i>: You enter a static IP address.</li> </ul>
Default Route	<p>Select whether the route to this connection partner is to be defined as the default route.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is enabled by default.</p>
Create NAT Policy	<p>Specify whether Network Address Translation (NAT) is to be activated.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is enabled by default.</p>

Field	Description
Local IP Address	<p>Only for <b>IP Address Mode</b> = <i>Static</i></p> <p>Enter the static IP address you received from your provider.</p>
Route Entries	<p>Only if <b>IP Address Mode</b> = <i>Static</i></p> <p>Define other routing entries for this connection partner.</p> <p>Add a new entry with <b>Add</b>.</p> <ul style="list-style-type: none"> <li>• <i>Remote IP Address</i>: IP address of the destination host or LAN.</li> <li>• <i>Netmask</i>: Netmask of <b>Remote IP Address</b>.</li> <li>• <i>Metric</i>: The lower the value, the higher the priority of the route (possible values 0...15). The default value is 1.</li> </ul>

The **Advanced Settings** menu consists of the following fields:

#### Fields in the menu Advanced Settings

Field	Description
Block after connection failure for	<p>Enter the wait time in seconds before the device should try again after an attempt to set up a connection has failed. The default value is 60.</p>
Maximum Number of Dialup Retries	<p>Enter the number of unsuccessful attempts to setup a connection before the interface is blocked.</p> <p>Possible values are 0 to 100.</p> <p>The default value is 5.</p>
Authentication	<p>Select the authentication protocol for this Internet connection. Select the authentication specified by your provider.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>PAP</i> (default value) Only run <i>PAP</i> (PPP Password Authentication Protocol); the password is transferred unencrypted.</li> <li>• <i>CHAP</i>: Only run <i>CHAP</i> (PPP Challenge Handshake Authentication Protocol as per RFC 1994); the password is transferred encrypted.</li> <li>• <i>PAP/CHAP</i>: Primarily run CHAP, otherwise PAP.</li> </ul>

Field	Description
	<ul style="list-style-type: none"> <li>• <i>MS-CHAPv1</i>: Only run MS-CHAP version 1 (PPP Microsoft Challenge Handshake Authentication Protocol).</li> <li>• <i>PAP/CHAP/MS-CHAP</i>: Primarily run CHAP, on denial, the authentication protocol required by the PPTP partner. (MSCHAP version 1 or 2 possible.)</li> <li>• <i>MS-CHAPv2</i>: Run MS-CHAP version 2 only.</li> <li>• <i>None</i>: Some providers use no authentication. In this case, select this option.</li> </ul>
DNS Negotiation	<p>Select whether your device receives IP addresses for <b>primary domain name server</b> and <b>secondary domain name server</b> from the connection partner or sends these to the connection partner.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is enabled by default.</p>
Prioritize TCP ACK Packets	<p>Select whether the TCP download is to be optimised in the event of intensive TCP upload. This function can be specially applied for asymmetrical bandwidths (ADSL).</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
LCP Alive Check	<p>Check whether the reachability of the remote terminal is to be checked by sending LCP echo requests or replies. This is recommended for leased lines, PPTP and L2TP connections.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>

### 15.1.4 ISDN

In the **WAN -> Internet + Dialup -> ISDN** menu, a list of all ISDN interfaces is shown.

In this menu, you configure the following ISDN connections:

- Internet access over ISDN
- LAN-to-LAN connection over ISDN

- Remote (Mobile) Dialin
- Use of the ISDN Callback function

### 15.1.4.1 New

Choose the **New** button to set up new ISDN interfaces.

The screenshot shows the configuration page for a new ISDN interface in the bintec R1200 web interface. The page is titled "bintec R1200" and has a navigation menu on the left. The main content area is divided into "Basic Parameters" and "Advanced Settings" sections.

**Basic Parameters:**

- Description: [Text Field]
- Connection Type: ISDN 64 kbps
- User Name: [Text Field]
- Remote User (for Dialin only): [Text Field]
- Password: [Text Field]
- Always on:  Enabled
- Connection Idle Timeout: 20 Seconds
- IP Mode and Routes:
  - IP Address Mode:  Static  Provide IP Address  Get IP Address
  - Default Route:  Enabled
  - Create NAT Policy:  Enabled
- Local IP Address: [Text Field]
- Route Entries:
 

Remote IP Address	Netmask	Metric
[Text Field]	[Text Field]	1

**Advanced Settings:**

- Block after connection failure for: 300 Seconds
- Maximum Number of Dialup Retries: 5
- Usage Type:  Standard  Dialin only  Multi-User (Dialin only)
- Authentication: PAP/CHAP/MS-CHAP
- Callback Mode:  None  Active  Passive
- Bandwidth on Demand Options: [Text Field]
- Channel Bundling: None
- Dial Numbers:
 

Entries	Mode	Number	Number of Used Ports
[Text Field]	[Text Field]	[Text Field]	[Text Field]
- IP Options:
  - OSPF Mode:  Passive  Active  Inactive
  - Proxy ARP Mode:  Inactive  Up or Dormant  Up only
  - DNS Negotiation:  Enabled

Buttons: OK, Cancel

Fig. 102: WAN -> Internet + Dialup -> ISDN -> New

The WAN -> Internet + Dialup -> ISDN -> New menu consists of the following fields:

**Fields in the ISDN Basic Parameters menu**

Field	Description
Description	<p>Enter a name for uniquely identifying the connection partner.</p> <p>The first character in this field must not be a number and no special characters or umlauts must be used.</p>
Connection Type	<p>Select which layer 1 protocol your device should use.</p> <p>This setting applies for outgoing connections to the connection partner and only for incoming connections from the connection partner if they could be identified on the basis of the calling party number.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>ISDN 64kbps</i>: For 64-kbps ISDN data connections.</li> <li>• <i>ISDN 56kbps</i>: For 56-kbps ISDN data connections.</li> </ul>
User Name	Enter your device code (local PPP user name).
Remote User (for Dialin only)	Enter the code of the remote terminal (remote PPP user name).
Password	Enter the password.
Always on	<p>Select whether the interface should always be activated.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p> <p>Only activate this option if you have Internet access with a flat-rate charge.</p>
Connection Idle Timeout	<p>Enter the idle time in seconds for static short hold. The static short hold setting determines how many seconds should pass between sending the last traffic data packet and clearing the connection.</p> <p>Possible values are <i>-1</i> to <i>3600</i> (seconds). A value of <i>-1</i> means that the connection is set up again immediately after disconnection and <i>0</i> deactivates short hold. The default value is <i>20</i>.</p>

#### Fields in the ISDN IP Mode and Routes menu

Field	Description
IP Address Mode	<p>Select whether your device is to be assigned a static IP address or whether it should be assigned this dynamically.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Static</i> (default value): You enter a static IP address.</li> <li>• <i>Provide IP Address</i>: Your device dynamically assigns an IP address to the remote terminal.</li> <li>• <i>Get IP Address</i>: Your device is dynamically assigned an IP address.</li> </ul>
Default Route	<p>Only if <b>IP Address Mode</b> = <i>Static</i> and <i>Get IP Address</i></p> <p>Select whether the route to this connection partner is to be defined as the default route.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
Create NAT Policy	<p>Only if <b>IP Address Mode</b> = <i>Static</i> and <i>Get IP Address</i></p> <p>When you configure an ISDN Internet connection, specify whether Network Address Translation (NAT) is to be activated.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
Local IP Address	<p>Only if <b>IP Address Mode</b> = <i>Static</i></p> <p>Assign the IP address from your LAN to the ISDN interface which is to be used as your device's internal source address.</p>
Route Entries	<p>Only if <b>IP Address Mode</b> = <i>Static</i></p> <p>Define other routing entries for this connection partner.</p> <ul style="list-style-type: none"> <li>• <i>Remote IP Address</i>: IP address of the destination host or LAN.</li> <li>• <i>Netmask</i>: Netmask of <b>Remote IP Address</b>.</li> </ul>

Field	Description
	<ul style="list-style-type: none"> <li>• <i>Metric</i>: The lower the value, the higher the priority of the route (possible values <i>0 . . . 15</i>). The default value is <i>1</i>.</li> </ul>
IP Assignment Pool	<p>Only if <b>IP Address Mode</b> = <i>Provide IP Address</i></p> <p>Select an IP pool configured in the <b>WAN -&gt; Internet + Dialup -&gt; IP Pools</b> menu. If an IP pool has not been configured here yet, the message <i>Not yet defined</i> appears in this field.</p>

The **Advanced Settings** menu consists of the following fields:

#### Fields in the menu Advanced Settings

Field	Description
Block after connection failure for	<p>Enter the wait time in seconds before the device should try again after an attempt to set up a connection has failed.</p> <p>The default value is <i>300</i>.</p>
Maximum Number of Dialup Retries	<p>Enter the number of unsuccessful attempts to setup a connection before the interface is blocked.</p> <p>Possible values are <i>0</i> to <i>100</i>.</p> <p>The default value is <i>5</i>.</p>
Usage Type	<p>If necessary, select a special interface use.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Standard</i> (default value): No special type is selected.</li> <li>• <i>Dialin only</i>: The interface is used for incoming dialup connections and callbacks initiated externally.</li> <li>• <i>Multi-User (Dialin only)</i>: The interface is defined as multi-user connection partner, i.e. several clients dial in with the same user name and password.</li> </ul>
Authentication	<p>Select the authentication protocol for this PPTP partner.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>PAP/CHAP/MS-CHAP</i> (default value): Primarily run CHAP, on denial, the authentication protocol required by the PPTP partner. (MSCHAP version 1 or 2 possible.)</li> </ul>

Field	Description
	<ul style="list-style-type: none"> <li>• <i>PAP</i>: Only run <i>PAP</i> (PPP Password Authentication Protocol); the password is transferred unencrypted.</li> <li>• <i>CHAP</i>: Only run <i>CHAP</i> (PPP Challenge Handshake Authentication Protocol as per RFC 1994); the password is transferred encrypted.</li> <li>• <i>PAP/CHAP</i>: Primarily run <i>CHAP</i>, otherwise <i>PAP</i>.</li> <li>• <i>MS-CHAPv1</i>: Only run MS-CHAP version 1 (PPP Microsoft Challenge Handshake Authentication Protocol).</li> <li>• <i>MS-CHAPv2</i>: Run MS-CHAP version 2 only.</li> <li>• <i>None</i>: Some providers use no authentication. In this case, select this option.</li> </ul>
Encryption	<p>Only if <b>Authentication</b> = <i>MS-CHAPv2</i></p> <p>If necessary, select the type of encryption that should be used for data traffic to the connection partner. This is only possible if STAC or MS-STAC compression is not activated for the connection. If <b>Encryption</b> is set, the remote terminal must also support it, otherwise a connection cannot be set up.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>None</i> (default value): MPP encryption is not used.</li> <li>• <i>Enabled</i>. MPP encryption V2 with 128 bit is used to RFC 3078.</li> <li>• <i>Windows compatible</i>: MPP encryption V2 with 128 bit is used as compatible with Microsoft and Cisco.</li> </ul>
Callback Mode	<p>Select the Callback Mode function.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>None</i> (default value): Your device does not call back.</li> <li>• <i>Active</i>: Select one of the following options: <ul style="list-style-type: none"> <li>• <i>No PPP negotiation</i>: Your device calls the connection partner to request a callback.</li> <li>• <i>Windows Client Mode</i>: Your device calls the connection partner to request a callback via CBCP (Callback Control Protocol). Needed for Windows clients.</li> </ul> </li> <li>• <i>Passive</i>: Select one of the following options:</li> </ul>

Field	Description
	<ul style="list-style-type: none"> <li>• <i>Enabled</i>. Your device calls back immediately when requested to do so by the connection partner.</li> <li>• <i>Windows Server Mode</i>: Your device calls back after a period of time proposed by the Microsoft client (NT: 10 seconds, new systems: 12 seconds. It uses the subscriber number (<b>Entries-&gt; Number (MSN)</b>) with the <b>Mode</b> <i>Outgoing</i> or <i>Both</i> that has been entered for the other party. If no number is entered, the required number can be reported by the caller in a PPP negotiation. This setting should be avoided where possible for security reasons. Currently cannot be avoided for the connection of mobile Microsoft clients via DCN.</li> <li>• <i>Delayed, CLID only</i>: Your device calls back after approx. four seconds if your device is requested to do so by the connection partner. Only makes sense for CLID.</li> <li>• <i>Windows Server Mode, Callback optional</i>: Like <i>Windows Server Mode</i> but with the option of aborting. This setting should be avoided for security reasons. The Microsoft client also has the option of aborting callback and maintaining the initial connection to your device without callback. This only applies if no fixed, outgoing number has been configured for the connection partner. This is done by pressing CANCEL to close the dialog box that appears.</li> </ul>

#### Fields in the Advanced Settings Options for On-demand Bandwidth menu

Field	Description
Channel Bundling	<p>Select whether channel bundling is to be used for ISDN connections with the connection partner, and if so, what type.</p> <p>Your device supports dynamic and static channel bundling for dialup connections. Only one B channel is initially opened when a connection is set up. Dynamic channel bundling means that your device connects other ISDN B channels to increase the throughput for connections if this is required, e.g. for large data rates. If the amount of data traffic drops, the additional B-channels are closed again. In static channel bundling, you specify right from the start how many B channels your device is to use, regardless of the transferred data rate.</p> <p>Possible values:</p>

Field	Description
	<ul style="list-style-type: none"> <li>• <i>None</i> (default value): No channel bundling, only one B channel is ever available for connections.</li> <li>• <i>Static</i>: Static channel bundling.</li> <li>• <i>Dynamic</i>: Dynamic channel bundling.</li> </ul>
Number of B Channels	Select how many B channels your device should use.

#### Fields in the Advanced Settings Dial Numbers menu

Field	Description
Entries	<p>Displays the numbers of the connection partner.</p> <p>Add new entries with <b>Add</b>. Edit existing entries with .</p>

#### Fields in the Dial Number Configuration Entry: <1>(only appears for Entries = Add)

Field	Description
Mode	<p>Select whether <b>Call Number</b> is to be used for incoming or outgoing calls or for both. Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Both</i> (default value): For incoming and outgoing calls.</li> <li>• <i>Incoming</i>: For incoming calls, where your connection partner dials in to your device.</li> <li>• <i>Outgoing</i>: For outgoing calls, where you dial your connection partner.</li> </ul> <p>The calling party number of the incoming call is compared with the number entered under <b>Call Number</b>.</p>
Call Number	Enter the connection partner's number.
Port Usage	Select which ISDN interfaces are used.

#### Fields in the Advanced Settings IP Options menu

Field	Description
OSPF Mode	<p>Select whether and how routes are propagated via the interface and/or OSPF protocol packets are sent.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Passive</i> (default value): OSPF is not activated for this interface, i.e. no routes are propagated or OSPF protocol packets sent over this interface. Networks reachable over this inter-</li> </ul>

Field	Description
	<p>face are, however, included when calculating the routing information and propagated over active interfaces.</p> <ul style="list-style-type: none"> <li>• <i>Active</i>: OSPF is activated for this interface, i.e. routes are propagated or OSPF protocol packets sent over this interface.</li> <li>• <i>Inactive</i>: OSPF is disabled for this interface.</li> </ul>
Proxy ARP Mode	<p>Select whether and how ARP requests from your own LAN are to be responded to for the specified connection partner.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Inactive</i> (default value): Deactivates Proxy ARP for this connection partner.</li> <li>• <i>Up or Dormant</i>: Your device only responds to an ARP request if the status of the connection to the connection partner is <i>Up</i> or <i>Dormant</i>. In the case of <i>Dormant</i>, your device only responds to the ARP request; the connection is not set up until someone actually wants to use the route.</li> <li>• <i>Up Only</i>: Your device responds to an ARP request only if the status of the connection to the connection partner is <i>Up</i> (active), i.e. a connection already exists to the connection partner.</li> </ul>
DNS Negotiation	<p>Select whether your device receives IP addresses for <b>Primary DNS Server, Secondary DNS Server, primary WINS</b> and <b>secondary WINS</b> from the connection partner or sends these to the connection partner.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is enabled by default.</p>

### 15.1.5 GPRS/UMTS



#### Note

Note that the **GPRS/UMTS** menu is only available if a UMTS modem card is inserted in the CardBus slot and is integrated in the system! Not all **bintec** gateways have a CardBus interface. Refer to the data sheet to determine whether your gateway has this interface type.

In the **WAN -> Internet + Dialup -> GPRS/UMTS** menu, a list of all GPRS/UMTS interfaces is shown.

Thanks to its CardBus interface (PCCARD), the **bintec** gateway supports the integration of a UMTS CardBus modem in the system. This enables you to set up a connection to the Internet over UMTS.

### 15.1.5.1 New

Choose the **New** button to set up additional connections.

The screenshot shows the configuration interface for a bintec R1200 gateway. The left sidebar contains a navigation menu with categories like Assistants, System Management, Physical Interfaces, LAN, Wireless LAN, Routing, WAN, VPN, Firewall, VoIP, Local Services, Maintenance, External Reporting, and Monitoring. The 'WAN' category is expanded, showing 'Internet + Dialup', 'Leased Line', and 'Real Time Jitter Control'. The 'Internet + Dialup' category is further expanded to show 'GPRS/UMTS', which is selected. The main area displays the configuration for a new GPRS/UMTS interface. At the top, there are tabs for 'PPPoE', 'PPTP', 'ISDN', 'GPRS/UMTS', 'AUX', and 'IP Pools'. The 'GPRS/UMTS' tab is active. Below the tabs, there are two sections: 'Basic Parameters' and 'Advanced Settings'. The 'Basic Parameters' section includes fields for Description, GPRS/UMTS Interface (set to 'Slot 6 Unit 0 UMTS'), User Name, Password (masked with dots), Always on (checkbox), Connection Idle Timeout (300 Seconds), IP Mode and Routes (Static selected, Get IP Address selected), Default Route (checkbox), and Create NAT Policy (checkbox). The 'Advanced Settings' section includes fields for Block after connection failure for (60 Seconds), Maximum Number of Dialup Retries (5), Authentication (PAP), DNS Negotiation (checkbox), Prioritize TCP ACK Packets (checkbox), and LCP Alive Check (checkbox). At the bottom of the form are 'OK' and 'Cancel' buttons.

Fig. 103: **WAN -> Internet + Dialup -> GPRS/UMTS -> New**

The **WAN -> Internet + Dialup -> GPRS/UMTS -> New** menu consists of the following fields:

#### Fields in the GPRS/UMTS Basic Parameters menu

Field	Description
Description	Enter a name for uniquely identifying the internet connection. The first character in this field must not be a number and no special characters or umlauts must be used.

Field	Description
GPRS/UMTS Interface	Select the GPRS/UMTS interface.
User Name	Enter the user name.
Password	Enter the password.
Always on	<p>Select whether the interface should always be activated.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p> <p>Only activate this option if you have Internet access with a flat-rate charge.</p>
Connection Idle Timeout	<p>Only if <b>Always up</b> is disabled.</p> <p>Enter the idle time in seconds for static short hold. The static short hold setting determines how many seconds should pass between sending the last traffic data packet and clearing the connection.</p> <p>Possible values are <i>0 to 3600</i> (seconds). <i>0</i> deactivates the short hold.</p> <p>The default value is <i>300</i>.</p>

#### Fields in the GPRS/UMTS IP Mode and Routes menu

Field	Description
IP Address Mode	<p>Select whether your device is to be assigned a static IP address or whether it should be assigned this dynamically.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Get IP Address</i> (default value): Your device is dynamically assigned an IP address.</li> <li>• <i>Static</i>: You enter a static IP address.</li> </ul>
Default Route	<p>Select whether the route to this connection partner is to be defined as the default route.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is enabled by default.</p>

Field	Description
Create NAT Policy	<p>Specify whether Network Address Translation (NAT) is to be activated.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is enabled by default.</p>
Local IP Address	<p>Only if <b>IP Address Mode</b> = <i>Static</i></p> <p>Enter the static IP address of the connection partner.</p>
Route Entries	<p>Only if <b>IP Address Mode</b> = <i>Static</i></p> <p>Define other routing entries for this connection partner.</p> <p>Add a new entry with <b>Add</b>.</p> <ul style="list-style-type: none"> <li>• <i>Remote IP Address</i>: IP address of the destination host or network.</li> <li>• <i>Netmask</i>: Netmask of <b>Remote IP Address</b>. If no entry is made, your device uses a default netmask.</li> <li>• <i>Metric</i>: The lower the value, the higher the priority of the route (possible values <i>0... 15</i>). The default value is <i>1</i>.</li> </ul>

The **Advanced Settings** menu consists of the following fields:

#### Fields in the menu **Advanced Settings**

Field	Description
Block after connection failure for	<p>Enter the wait time in seconds before the device should try again after an attempt to set up a connection has failed. The default value is <i>60</i>.</p>
Maximum Number of Dialup Retries	<p>Enter the number of unsuccessful attempts to setup a connection before the interface is blocked.</p> <p>Possible values are <i>0 to 100</i>.</p> <p>The default value is <i>5</i>.</p>
Authentication	<p>Select the authentication protocol for this connection partner. Select the authentication specified by your provider.</p> <p>Possible values:</p>

Field	Description
	<ul style="list-style-type: none"> <li>• <i>PAP</i> (default value) Only run <i>PAP</i> (PPP Password Authentication Protocol); the password is transferred unencrypted.</li> <li>• <i>CHAP</i>: Only run <i>CHAP</i> (PPP Challenge Handshake Authentication Protocol as per RFC 1994); the password is transferred encrypted.</li> <li>• <i>PAP/CHAP</i>: Primarily run CHAP, otherwise PAP.</li> <li>• <i>MS-CHAPv1</i>: Only run MS-CHAP version 1 (PPP Microsoft Challenge Handshake Authentication Protocol).</li> <li>• <i>PAP/CHAP/MS-CHAP</i> : Primarily run CHAP, on denial then the authentication protocol required by the connection partner. (MSCHAP version 1 or 2 possible.)</li> <li>• <i>MS-CHAPv2</i>: Run MS-CHAP version 2 only.</li> <li>• <i>None</i>: Some providers use no authentication. In this case, select this option.</li> </ul>
DNS Negotiation	<p>Select whether your device receives IP addresses for <b>Primary DNS Server</b> and <b>Secondary DNS Server</b> from the connection partner or sends these to the connection partner.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is enabled by default.</p>
Prioritize TCP ACK Packets	<p>Select whether the TCP download is to be optimised in the event of intensive TCP upload. This function can be specially applied for asymmetrical bandwidths (ADSL).</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
LCP Alive Check	<p>Check whether the reachability of the remote terminal is to be checked by sending LCP echo requests or replies. This makes it possible to switch to a backup connection more quickly in the event of line faults.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>

## 15.1.6 AUX

In the **WAN -> Internet + Dialup -> AUX** menu, a list of all AUX interfaces is shown.

You can define various settings for communication between the gateway and modem in this menu. You require a special cable for the console port of your gateway (e.g. AUX Backup cable) to connect an external analogue modem to the AUX port on a **bintec** gateway.

### 15.1.6.1 New

Choose the **New** button to set up new AUX interfaces.

The screenshot shows the configuration interface for a bintec R1200 gateway. The left sidebar contains a navigation menu with categories like Assistants, System Management, Physical Interfaces, LAN, Wireless LAN, Routing, WAN, VPN, Firewall, VoIP, Local Services, Maintenance, External Reporting, and Monitoring. The main content area is titled 'bintec R1200' and includes a language dropdown (English), view dropdown (Standard), and buttons for Online Help and Logout. Below the navigation menu, there are tabs for PPPoE, PPTP, ISDN, AUX, and IP Pools. The 'AUX' tab is selected, showing a configuration form with two main sections: Basic Parameters and Advanced Settings.

**Basic Parameters**

Description	<input type="text"/>
User Name	<input type="text"/>
Password	<input type="password" value="••••••"/>
Always on	<input type="checkbox"/> Enabled
Connection Idle Timeout	<input type="text" value="600"/> Seconds

**IP Mode and Routes**

IP Address Mode	<input type="radio"/> Static <input type="radio"/> Provide IP Address <input checked="" type="radio"/> Get IP Address
Default Route	<input checked="" type="checkbox"/> Enabled
Create NAT Policy	<input checked="" type="checkbox"/> Enabled

**Advanced Settings**

Block after connection failure for	<input type="text" value="50"/> Seconds
Maximum Number of Dialup Retries	<input type="text" value="5"/>
Usage Type	<input checked="" type="radio"/> Standard <input type="radio"/> Dialin only <input type="radio"/> Multi-User (Dialin only)
Authentication	<input type="text" value="PAP"/>
DNS Negotiation	<input checked="" type="checkbox"/> Enabled
Prioritize TCP ACK Packets	<input type="checkbox"/> Enabled
LCP Alive Check	<input type="checkbox"/> Enabled
Callback Mode	<input checked="" type="radio"/> None <input type="radio"/> Active <input type="radio"/> Passive

**Dial Numbers**

Entries	Mode: <input type="text"/> Number: <input type="text"/> <input type="button" value="Add"/>
---------	---

**IP Options**

Proxy ARP Mode	<input checked="" type="radio"/> Inactive <input type="radio"/> Up or Dormant <input type="radio"/> Up only
----------------	---

Buttons:

Fig. 104: **WAN -> Internet + Dialup -> AUX -> New**

The **WAN -> Internet + Dialup -> AUX -> New** menu consists of the following fields:

#### Fields in the AUX Basic Parameters menu

Field	Description
Description	Enter a name for uniquely identifying the WAN partner. The first character in this field must not be a number and no special characters or umlauts must be used.
User Name	Enter the user name.
Password	Enter the password.
Always on	Select whether the interface should always be activated.  The function is activated with <i>Enabled</i> .  The function is disabled by default.  Only activate this option if you have Internet access with a flat-rate charge.
Connection Idle Timeout	Only if <b>Always up</b> is disabled.  Enter the idle time in seconds for static short hold. The static short hold setting determines how many seconds should pass between sending the last traffic data packet and clearing the connection.  Possible values are 0 to 3600 (seconds). 0 deactivates the short hold.  The default value is 600.

#### Fields in the AUX IP Mode and Routes menu

Field	Description
IP Address Mode	Select whether your device is to be assigned a static IP address or whether it should be assigned this dynamically.  Possible values: <ul style="list-style-type: none"> <li>• <i>Get IP Address</i> (default value): Your device is dynamically assigned an IP address.</li> <li>• <i>Static</i>: You enter a static IP address.</li> <li>• <i>Provide IP Address</i>: Your device dynamically assigns an IP address to the remote terminal.</li> </ul>
Default Route	Select whether the route to this connection partner is to be

Field	Description
	<p>defined as the default route.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is enabled by default.</p>
Create NAT Policy	<p>Specify whether Network Address Translation (NAT) is to be activated.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is enabled by default.</p>
Local IP Address	<p>Only if <b>IP Address Mode</b> = <i>Static</i></p> <p>Enter the static IP address of the connection partner.</p>
Route Entries	<p>Only if <b>IP Address Mode</b> = <i>Static</i></p> <p>Define other routing entries for this connection partner.</p> <p>Add a new entry with <b>Add</b>.</p> <ul style="list-style-type: none"> <li>• <i>Remote IP Address</i>: IP address of the destination host or network.</li> <li>• <i>Netmask</i>: Netmask of <b>Remote IP Address</b>. If no entry is made, your device uses a default netmask.</li> <li>• <i>Metric</i>: The lower the value, the higher the priority of the route (possible values 0... 15). The default value is 1.</li> </ul>
IP Assignment Pool	<p>Only if <b>IP Address Mode</b> = <i>Provide IP Address</i></p> <p>Select an IP pool configured in the <b>WAN -&gt; Internet + Dialup -&gt; IP Pools</b> menu. If an IP pool has not been configured here yet, the message <i>Not yet defined</i> appears in this field.</p>

The **Advanced Settings** menu consists of the following fields:

#### Fields in the menu Advanced Settings

Field	Description
Block after connection failure for	<p>Enter the wait time in seconds before the device should try again after an attempt to set up a connection has failed.</p> <p>The default value is 50.</p>

Field	Description
Maximum Number of Dialup Retries	<p>Enter the number of unsuccessful attempts to setup a connection before the interface is blocked.</p> <p>Possible values are <i>0</i> to <i>100</i>.</p> <p>The default value is <i>5</i>.</p>
Usage Type	<p>If necessary, select a special interface use.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Standard</i> (default value): No special type is selected.</li> <li>• <i>Dialin only</i>: The interface is used for incoming dialup connections and callbacks initiated externally.</li> <li>• <i>Multi-User (Dialin only)</i>: The interface is defined as multi-user connection partner, i.e. several clients dial in with the same user name and password.</li> </ul>
Authentication	<p>Select the authentication protocol for this PPTP partner.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>PAP/CHAP/MS-CHAP</i>: Primarily run CHAP, on denial, the authentication protocol required by the PPTP partner. (MSCHAP version 1 or 2 possible.)</li> <li>• <i>PAP</i> (default value) Only run <i>PAP</i> (PPP Password Authentication Protocol); the password is transferred unencrypted.</li> <li>• <i>CHAP</i>: Only run <i>CHAP</i> (PPP Challenge Handshake Authentication Protocol as per RFC 1994); the password is transferred encrypted.</li> <li>• <i>PAP/CHAP</i>: Primarily run CHAP, otherwise PAP.</li> <li>• <i>MS-CHAPv1</i>: Only run MS-CHAP version 1 (PPP Microsoft Challenge Handshake Authentication Protocol).</li> <li>• <i>MS-CHAPv2</i>: Run MS-CHAP version 2 only.</li> <li>• <i>None</i>: Some providers use no authentication. In this case, select this option.</li> </ul>
DNS Negotiation	<p>Select whether your device receives IP addresses for <b>Primary DNS Server</b> and <b>Secondary DNS Server</b> from the connection partner or sends these to the connection partner.</p> <p>The function is activated with <i>Enabled</i>.</p>

Field	Description
	The function is enabled by default.
Prioritize TCP ACK Packets	<p>Select whether the TCP download is to be optimised in the event of intensive TCP upload. This function can be specially applied for asymmetrical bandwidths (ADSL).</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
LCP Alive Check	<p>Check whether the reachability of the remote terminal is to be checked by sending LCP echo requests or replies. This makes it possible to switch to a backup connection more quickly in the event of line faults.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
Callback Mode	<p>Select the Callback Mode function.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>None</i> (default value): Your device does not call back.</li> <li>• <i>Active</i>: Select one of the following options: <ul style="list-style-type: none"> <li>• <i>No PPP negotiation</i>: Your device calls the connection partner to request a callback.</li> <li>• <i>Windows Client Mode</i>: Your device calls the connection partner to request a callback via CBCP (Callback Control Protocol). Needed for Windows clients.</li> </ul> </li> <li>• <i>Passive</i>: Select one of the following options: <ul style="list-style-type: none"> <li>• <i>PPP Negotiation or CLID</i>: Your device calls back immediately when requested to do so by the connection partner.</li> <li>• <i>Windows Server Mode</i>: Your device calls back after a period of time proposed by the Microsoft client (NT: 10 seconds, new systems: 12 seconds. It uses the subscriber number (<b>Entries-&gt; Number (MSN)</b>) with the <b>Mode</b> <i>Outgoing</i> or <i>Both</i> that has been entered for the other party. If no number is entered, the required number can be reported by the caller in a PPP negotiation. This setting should be avoided where possible for security reasons. Currently can-</li> </ul> </li> </ul>

Field	Description
	<p>not be avoided for the connection of mobile Microsoft clients via DCN.</p> <ul style="list-style-type: none"> <li>• <i>Delayed, CLID only</i>: Your device calls back after approx. four seconds if your device is requested to do so by the connection partner. Only makes sense for CLID.</li> <li>• <i>Windows Server Mode, Callback optional</i>: Like <i>Windows Server Mode</i> but with the option of aborting. This setting should be avoided for security reasons. The Microsoft client also has the option of aborting callback and maintaining the initial connection to your device without callback. This only applies if no fixed, outgoing number has been configured for the connection partner. This is done by pressing CANCEL to close the dialog box that appears.</li> </ul>

#### Fields in the Advanced Settings Dial Numbers menu

Field	Description
Entries	Add new entries with <b>Add</b> .

#### Fields in the Dial Number Configuration Entry: <1> (only appears for Entries = Add)

Field	Description
Mode	<p>Only if <b>Entries</b> = <i>Add</i>.</p> <p>Select whether <b>Subscriber Number (MSN)</b> is to be used for incoming or outgoing calls or for both. Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Both</i> (default value): For incoming and outgoing calls.</li> <li>• <i>Incoming</i>: For incoming calls, where your connection partner dials in to your device.</li> <li>• <i>Outgoing</i>: For outgoing calls, where you dial your connection partner.</li> </ul> <p>The calling party number of the incoming call is compared with the number entered under <b>Subscriber Number (MSN)</b>.</p>
Call Number	Enter the connection partner's numbers.
Port Usage	Select which port is used.

#### Fields in the Advanced Settings IP Options menu

Field	Description
Proxy ARP Mode	Select whether and how ARP requests from your own LAN are to be responded to for the specified connection partner.

Field	Description
	<p>Possible values:</p> <ul style="list-style-type: none"><li>• <i>Inactive</i> (default value): Deactivates Proxy ARP for this connection partner.</li><li>• <i>Up or Dormant</i>: Your device only responds to an ARP request if the status of the connection to the connection partner is <i>Up</i> or <i>Dormant</i>. In the case of <i>Dormant</i>, your device only responds to the ARP request; the connection is not set up until someone actually wants to use the route.</li><li>• <i>Up Only</i>: Your device responds to an ARP request only if the status of the connection to the connection partner is <i>Up</i> (active), i.e. a connection already exists to the connection partner.</li></ul>

## 15.1.7 IP Pools

In the **IP Pools** menu a list of all IP pools is displayed.

Your device can operate as a dynamic IP address server for PPP connections. You can use this function by providing one or more pools of IP addresses. These IP addresses can be assigned to dialling-in connection partners for the duration of the connection.

Any host routes entered always have priority over IP addresses from the address pools. This means if an incoming call has been authenticated, your device first checks whether a host route is entered in the routing table for this caller. If not, your device can allocate an IP address from an address pool (if available). If address pools have more than one IP address, you cannot specify which connection partner receives which address. The addresses are initially assigned in order. If a new dial-in takes place within an interval of one hour, an attempt is made to allocate the same IP address assigned to this partner the last time.

Use the **Add** button to set up new IP pools.

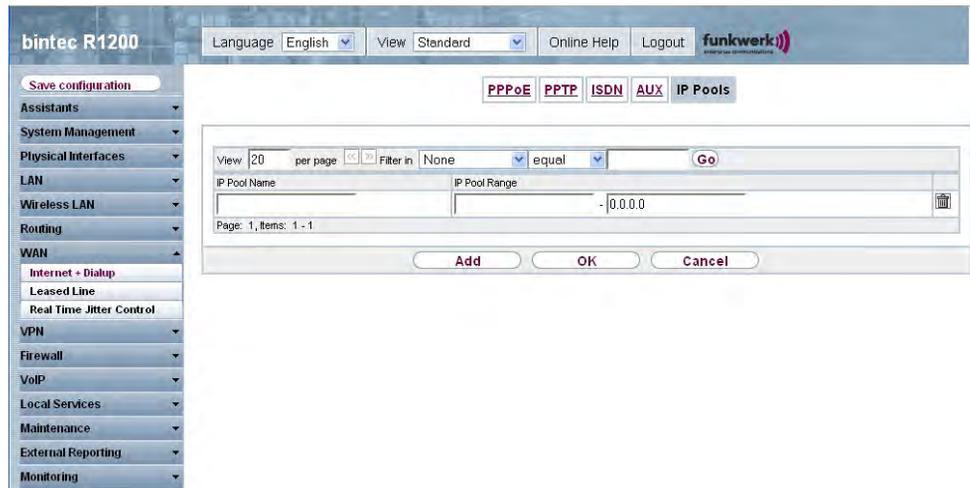


Fig. 105: WAN -> Internet + Dialup -> IP Pools -> Add

The WAN -> Internet + Dialup -> IP Pools -> Add menu consists of the following fields:

#### Fields in the Options IP Pools menu

Field	Description
IP Pool Name	Enter the name of the IP pool.
IP Pool Range	In the first field, enter the first IP address of the range. In the second field, enter the last IP address of the range.

## 15.2 ATM

ATM (Asynchronous Transfer Mode) is a data transmission procedure that was originally designed for broadband ISDN.

ATM is currently used in high-speed networks. You will need ATM, for example, if you want high-speed access to the Internet via the integrated ADSL or SHDSL modem.

In an ATM network, different applications such as speech, video and data, can be transmitted side-by-side in the asynchronous time multiplex procedure. Each transmitter is provided with time sections for transmitting data. With asynchronous transmission, unused time sections of a transmitter are used by another transmitter.

With ATM, the packet switching procedure is connected-based. A virtual connection is used for data transmission that negotiates between the transmitter and recipient or is configured on both sides. This determines the route that the data should take, for example. Multiple

virtual connections can be set up over a single physical interface.

The data is transmitted in so-called cells or slots of constant size. Each cell consists of 48 bytes of usage data and 5 bytes of control information. The control information contains, amongst other things, the ATM address which is similar to the Internet address. The ATM address is made up of the Virtual Path Identifier (VPI) and the Virtual Connection Identifier (VCI); this identifies the virtual connection.

Various types of traffic flows are transported over ATM. To take account of the various demands of these traffic flows on the networks, e.g. in terms of cell loss and delay time, suitable values can be defined using the service categories. Uncompressed video data, for example, requires different parameters to time-uncritical data.

In ATM networks Quality of Service (QoS) is available, i.e. the size of various network parameters, such as bit rate, delay and jitter can be guaranteed.

OAM (Operation, Administration and Maintenance) is used to monitor the data transmission in ATM. OAM includes configuration management, error management and performance measurement.

## 15.2.1 Profiles

In the **WAN** -> **ATM** -> **Profiles** menu, a list of all ATM profiles is shown.

If the connection for your Internet access is set up using the internal modem, the ATM connection parameters must be set for this. An ATM profile combines a set of parameters for a specific provider.

By default an ATM profile with the description *AUTO-CREATED* is preconfigured. Its values (VPI 1 and VCI 32) are suitable for a Telekom ATM connection, for example.



### Note

The ATM encapsulations are described in RFCs 1483 and 2684. You will find the RFCs on the relevant pages of the IETF ([www.ietf.org/rfc.html](http://www.ietf.org/rfc.html)).

### 15.2.1.1 New

Choose the **New** button to set up new ATM profiles.

Fig. 106: WAN -> ATM -> Profiles -> New

The WAN -> ATM -> Profiles -> New menu consists of the following fields:

#### Fields in the Profiles ATM Profiles Parameter menu

Field	Description
Provider	Select one of the preconfigured ATM profiles for your provider from the list or manually define the profile using <i>- User-Specified -</i> .
Description	Only for <b>Provider</b> = <i>- User-defined -</i> Enter the desired description for the connection.
Type	Only for <b>Provider</b> = <i>- User-defined -</i> Select the protocol for the ATM connection. Possible values: <ul style="list-style-type: none"> <li><i>Ethernet over ATM</i> (default value): Ethernet over ATM (EthoA) is used for the ATM connection (Permanent Virtual Circuit, PVC).</li> <li><i>Routed Protocols over ATM</i>: Routed Protocols over ATM (RPoA) is used for the ATM connection (Permanent Virtual Circuit, PVC).</li> </ul>

Field	Description
	<ul style="list-style-type: none"> <li>• <i>PPP over ATM</i>: PPP over ATM (PPPoA) is used for the ATM connection (Permanent Virtual Circuit, PVC).</li> </ul>
Virtual Path Identifier (VPI)	<p>Only for <b>Provider</b> = - <i>User-defined</i> -</p> <p>Enter the VPI value of the ATM connection. The VPI is the identification number of the virtual path to be used. Note your provider's instructions.</p> <p>Possible values are 0 to 255.</p> <p>The default value is 8.</p>
Virtual Channel Identifier (VCI)	<p>Only for <b>Provider</b> = - <i>User-defined</i> -</p> <p>Enter the VCI value of the ATM connection. The VCI is the identification number of the virtual channel. A virtual channel is the logical connection for the transport of ATM cells between two or more points. Note your provider's instructions.</p> <p>Possible values are 32 to 65535.</p> <p>The default value is 32.</p>
Encapsulation	<p>Only for <b>Provider</b> = - <i>User-defined</i> -</p> <p>Select the encapsulation to be used. Note your provider's instructions.</p> <p>Possible values (in accordance with RFC 2684):</p> <ul style="list-style-type: none"> <li>• <i>LLC Bridged no FCS</i> (default value for Ethernet over ATM): Only shown for <b>Type</b> = <i>Ethernet over ATM</i>. Bridged Ethernet with LLC/SNAP encapsulation without Frame Check Sequence (checksums).</li> <li>• <i>LLC Bridged FCS</i>: Only shown for <b>Type</b> = <i>Ethernet over ATM</i>. Bridged Ethernet with LLC/SNAP encapsulation with Frame Check Sequence (checksums).</li> <li>• <i>non ISO</i> (default value for Routed Protocols over ATM): Only shown for <b>Type</b> = <i>Routed Protocols over ATM</i>. Encapsulation with LLC/SNAP header, suitable for IP routing.</li> </ul>

Field	Description
	<ul style="list-style-type: none"> <li>• <i>LLC</i>: Only shown for <b>Type</b> = <i>PPP over ATM</i>. Encapsulation with LLC header.</li> <li>• <i>VC Multiplexing</i> (default value for PPP over ATM): Bridged Ethernet without additional encapsulation (Null Encapsulation) with Frame Check Sequence (checksums).</li> </ul>

#### Fields in the Settings for Ethernet over ATM menu (only shown for Type = Ethernet over ATM)

Field	Description
Default Ethernet for PPPoE Interfaces	<p>Only for <b>Type</b> = <i>Ethernet over ATM</i></p> <p>Select whether this Ethernet-over-ATM interface is to be used for all PPPoE connections</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
Address Mode	<p>Only for <b>Type</b> = <i>Ethernet over ATM</i></p> <p>Select how an IP address is to be assigned to the interface.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Static</i> (default value): A static IP address is assigned to the interface in <b>IP Address/Netmask</b>.</li> <li>• <i>DHCP</i>: An IP address is assigned to the interface dynamically via DHCP.</li> </ul>
IP Address/Netmask	<p>Only if <b>Address Mode</b> = <i>Static</i></p> <p>Enter the IP addresses (<b>IP Address</b>) and the corresponding netmasks (<b>Netmask</b>) of the ATM interfaces. Add new entries with <b>Add</b>.</p>
MAC Address	<p>Enter a MAC Address for the internal router interface of ATM connection, e.g. <i>00:a0:f9:06:bf:03</i>. An entry is only required in special cases.</p> <p>For Internet connections, it is sufficient to select the <b>Use built-in</b> option (default setting), in which case the MAC address of <i>en1-0</i> is used.</p>

Field	Description
DHCP MAC Address	<p>Only if <b>Address Mode</b> = <i>DHCP</i></p> <p>Enter the MAC Address of the internal router interface of ATM connection, e.g. <i>00:e1:f9:06:bf:03</i>.</p> <p>If your provider has assigned you a MAC Address for DHCP, enter this here.</p> <p>You can select the <b>Use built-in</b> option (default setting), in which case the MAC address of <i>en1-0</i> is used.</p>
DHCP Hostname	<p>Only if <b>Address Mode</b> = <i>DHCP</i></p> <p>If necessary, enter the host name registered with the provider to be used by your device for DHCP requests.</p> <p>The maximum length of the entry is 45 characters.</p>

#### Fields in the Settings for Routed Protocols over ATM menu (only shown for Type = Routed Protocols over ATM)

Field	Description
IP Address/Netmask	<p>Enter the IP addresses (<b>IP Address</b>) and the corresponding netmasks (<b>Netmask</b>) of the ATM interface. Add new entries with <b>Add</b>.</p>
Prioritize TCP ACK Packets	<p>Select whether the TCP download is to be optimised in the event of intensive TCP upload. This function can be specially applied for asymmetrical bandwidths (ADSL).</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>

#### Fields in the PPP over ATM Settings menu (only shown for Type = PPP over ATM), see also

Field	Description
Client Type	<p>Select whether the PPPoA connection is to be set up permanently or on demand.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>On Demand</i> (default value): The PPPoA is only set up on de-</li> </ul>

Field	Description
	mand, e.g. for Internet access.

## 15.2.2 Service Categories

In the **WAN -> ATM -> Service Categories** menu, a list of ATM connections (PVC, Permanent Virtual Circuit) already configured with specific assigned data traffic parameters is shown.

Your device supports QoS (Quality of Service) for ATM interfaces.



### Caution

ATM QoS should only be used if your provider specifies a list of data traffic parameters (traffic contract).

The configuration of ATM QoS requires extensive knowledge of ATM technology and the way the **bintec** devices function. An incorrect configuration can cause considerable disruption during operation. If applicable, save the original configuration on your PC.

### 15.2.2.1 New

Choose the **New** button to set up new categories.

The screenshot shows the web interface for a bintec R3800 device. The top navigation bar includes 'Language English', 'View Standard', 'Online Help', and 'Logout'. The main menu on the left lists various configuration areas, with 'WAN' expanded to show 'Internet + Dialup', 'ATM', 'Leased Line', and 'Real Time Jitter Control'. The 'ATM' menu item is selected, leading to the 'Service Categories' configuration window. This window has three tabs: 'Profiles', 'Service Categories', and 'OAM Controlling'. The 'Service Categories' tab is active, showing a 'Basic Parameters' section with the following fields:

Virtual Channel Connection (VCC)	VPI8, VCI32
ATM Service Category	Select one
Peak Cell Rate (PCR)	0 bps
Sustained Cell Rate (SCR)	0 bps
Maximum Burst Size (MBS)	0 bps

At the bottom of the window are 'OK' and 'Cancel' buttons.

Fig. 107: WAN -> ATM -> Service Categories -> New

The **WAN -> ATM -> Service Categories -> New** menu consists of the following fields:

#### Fields in the Service Categories Basic Parameters menu

Field	Description
Virtual Channel Connection (VCC)	Select the already configured ATM connection (displayed by the combination of VPI and VCI) for which the service category is to be defined.
ATM Service Category	<p>Select how the data traffic of the ATM connection is to be controlled.</p> <p>When you select the ATM service category a priority is implicitly assigned: from CBR (highest priority) through VBR.1 /VBR.3 to VBR (lowest priority).</p> <p>Possible settings:</p> <ul style="list-style-type: none"> <li>• <i>Unspecified Bit Rate (UBR)</i> (default value): (Unspecified Bit Rate) A particular data rate is not guaranteed for the connection. The <b>Peak Cell Rate (PCR)</b> defines the limit above which data is discarded. This category is suitable for non-critical applications.</li> <li>• <i>Constant Bit Rate (CBR)</i> : (Constant Bit Rate) The connection is assigned a guaranteed data rate determined by the <b>Peak Cell Rate (PCR)</b> . This category is suitable for critical (real-time) applications that require a guaranteed data rate.</li> <li>• <i>Variable Bit Rate V.1 (VBR.1)</i> : (Variable Bit Rate) The connection is assigned a guaranteed data rate (<b>Sustained Cell Rate (SCR)</b>). This may be exceeded by the volume configured in <b>Maximum Burst Size</b>. Any additional ATM traffic is discarded. The <b>Peak Cell Rate (PCR)</b> represents the maximum possible data rate. This category is suitable for non-critical applications with burst data traffic.</li> <li>• <i>Variable Bit Rate V.3 (VBR.3)</i> : (Variable Bit Rate) The connection is assigned a guaranteed data rate (<b>Sustained Cell Rate (SCR)</b>). This may be exceeded by the volume configured in <b>Maximum Burst Size (MBS)</b>. Additional ATM traffic is marked and handled with low priority based on the utilisation of the destination network, i.e. is discarded if necessary. The <b>Peak Cell Rate (PCR)</b> represents the maximum possible data rate. This category is suitable for critical applications with burst data traffic.</li> </ul>

Field	Description
Peak Cell Rate (PCR)	<p>Enter a value for the maximum data rate in bits per second.</p> <p>Possible values: 0 to 10000000.</p> <p>The default value is 0.</p>
Sustained Cell Rate (SCR)	<p>Only for <b>ATM Service Category</b> = <i>Variable Bit Rate V.1 (VBR.1)</i> or <i>Variable Bit Rate V.3 (VBR.3)</i></p> <p>Enter a value for the minimum available, guaranteed data rate in bits per second.</p> <p>Possible values: 0 to 10000000.</p> <p>The default value is 0.</p>
Maximum Burst Size (MBS)	<p>Only for <b>ATM Service Category</b> = <i>Variable Bit Rate V.1 (VBR.1)</i> or <i>Variable Bit Rate V.3 (VBR.3)</i></p> <p>Enter a value for the maximum number of bits per second by which the PCR can be exceeded briefly.</p> <p>Possible values: 0 to 100000.</p> <p>The default value is 0.</p>

### 15.2.3 OAM Controlling

OAM is a service for monitoring ATM connections. A total of five hierarchies (flow level F1 to F5) are defined for OAM information flow. The most important information flows for an ATM connection are F4 and F5. The F4 information flow concerns the virtual path (VP) and the F5 information flow the virtual channel (VC). The VP is defined by the VPI value, the VC by VPI and VCI.



#### Note

Generally, monitoring is not carried out by the terminal but is initiated by the ISP. Your device then only needs to react correctly to the signals received. This is ensured without a specific OAM configuration for both flow level 4 and flow level 5.

Two mechanisms are available for monitoring the ATM connection: Loopback Tests and OAM Continuity Check (OAM CC). These can be configured independently of each other.



### Caution

The configuration of OAM requires extensive knowledge of ATM technology and the way the **bintec** devices functions. An incorrect configuration can cause considerable disruption during operation. If applicable, save the original configuration on your PC.

In the **WAN -> ATM -> OAM Controlling** menu, a list of all monitored OAM flow levels is shown.

#### 15.2.3.1 New

Choose the **New** button to set up monitoring for other flow levels.

The screenshot shows the 'bintec R3800' web interface. The left sidebar contains a navigation menu with categories like Assistants, System Management, Physical Interfaces, LAN, Routing, WAN, Internet + Dialup, ATM, Leased Line, Real Time Jitter Control, VPN, Firewall, VoIP, Local Services, Maintenance, External Reporting, and Monitoring. The 'WAN' category is expanded, and 'ATM' is selected. The 'OAM Controlling' tab is active in the main configuration area. The 'OAM Flow Configuration' dialog box is open, showing the following settings:

- OAM Flow Level: F5
- Virtual Channel Connection (VCC): VPI8, VCI32
- Loopback End-to-End:  Enabled
- Loopback Segment:  Enabled
- Continuity Check (CC) End-to-End: Passive
- Continuity Check (CC) Segment: Passive

Buttons for 'OK' and 'Cancel' are visible at the bottom of the dialog.

Fig. 108: WAN -> ATM -> OAM Controlling -> New

The **WAN -> ATM -> OAM Control->ling New** menu consists of the following fields:

#### Fields in the OAM Controlling OAM Flow Configuration

Field	Description
OAM Flow Level	<p>Select the OAM flow level to be monitored.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li><b>F5:</b> (virtual channel level) The OAM settings are used for the virtual channel (default value).</li> <li><b>F4:</b> (virtual path level) The OAM settings are used for the vir-</li> </ul>

Field	Description
	tual path.
Virtual Channel Connection (VCC)	Only for <b>OAM Flow Level</b> = <i>F5</i> Select the already configured ATM connection to be monitored (displayed by the combination of VPI and VCI).
Virtual Path Connection (VPC)	Only for <b>OAM Flow Level</b> = <i>F4</i> Select the already configured virtual path connection to be monitored (displayed by the VPI).

#### Fields in the OAM Control Loopback

Field	Description
Loopback End-to-End	Select whether you activate the loopback test for the connection between the endpoints of the VCC or VPC.  The function is activated with <i>Enabled</i> .  The function is disabled by default.
End-to-End Send Interval	Only if <b>Loopback End-to-End</b> is enabled.  Enter the time in seconds after which a loopback cell is to be sent.  Possible values are <i>0</i> to <i>999</i> .  The default value is <i>5</i> .
End-to-End Pending Requests	Only if <b>Loopback End-to-End</b> is enabled.  Enter the number of directly consecutive loopback cells that may fail to materialise before the connection is regarded as interrupted ("down"). Possible values are <i>1</i> to <i>99</i> .  The default value is <i>5</i> .
Loopback Segment	Select whether you want to activate the loopback test for the segment connection (segment = connection of the local endpoint to the next connection point) of the VCC or VPC.  The function is activated with <i>Enabled</i> .

Field	Description
	The function is disabled by default.
Segment Send Interval	<p>Only if <b>Loopback Segment</b> is enabled.</p> <p>Enter the time in seconds after which a loopback cell is sent.</p> <p>Possible values are <i>0</i> to <i>999</i>.</p> <p>The default value is <i>5</i>.</p>
Segment Pending Requests	<p>Only if <b>Loopback Segment</b> is enabled.</p> <p>Enter the number of directly consecutive loopback cells that may fail to materialise before the connection is regarded as interrupted ("down").</p> <p>Possible values are <i>1</i> to <i>99</i>.</p> <p>The default value is <i>5</i>.</p>

#### Fields in the OAM Control CC Activation

Field	Description
Continuity Check (CC) End-to-End	<p>Select whether you activate the OAM-CC test for the connection between the endpoints of the VCC or VPC.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Passive</i> (default value): OAM CC requests are responded to after CC negotiation (CC activation negotiation).</li> <li>• <i>Active</i>: OAM CC requests are sent after CC negotiation (CC activation negotiation).</li> <li>• <i>Both</i>: OAM CC requests are sent and answered after CC negotiation (CC activation negotiation).</li> <li>• <i>No negotiation</i>: Depending on the setting in the <b>Direction</b> field, OAM CC requests are either sent and/or responded to. There is no CC negotiation.</li> <li>• <i>None</i>: The function is disabled.</li> </ul> <p>Also select whether the test cells of the OAM CC are to be sent or received.</p> <p>Possible values:</p>

Field	Description
	<ul style="list-style-type: none"> <li>• <i>Both</i> (default value): CC data is both received and generated.</li> <li>• <i>Sink</i>: CC data is received.</li> <li>• <i>Source</i>: CC data is generated.</li> </ul>
Continuity Check (CC) Segment	<p>Select whether you want to activate the OAM-CC test for the segment connection (segment = connection of the local end-point to the next connection point) of the VCC or VPC.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Passive</i> (default value): OAM CC requests are responded to after CC negotiation (CC activation negotiation).</li> <li>• <i>Active</i>: OAM CC requests are sent after CC negotiation (CC activation negotiation).</li> <li>• <i>Both</i>: OAM CC requests are sent and answered after CC negotiation (CC activation negotiation).</li> <li>• <i>No negotiation</i>: Depending on the setting in the <b>Direction</b> field, OAM CC requests are either sent and/or responded to. There is no CC negotiation.</li> <li>• <i>None</i>: The function is disabled.</li> </ul> <p>Also select whether the test cells of the OAM CC are to be sent or received.</p> <p>Possible settings:</p> <ul style="list-style-type: none"> <li>• <i>Both</i> (default value): CC data is both received and generated.</li> <li>• <i>Sink</i>: CC data is received.</li> <li>• <i>Source</i>: CC data is generated.</li> </ul>

## 15.3 Leased Line

A leased line is a permanent (fixed) connection between two communication partners via a telecommunications network. Unlike a switched line, the entire transmission channels is always available. The leased line cannot be set up by the subscriber by dialing and therefore has no call number. The connection must be set up by the network operator.

## 15.3.1 Interfaces

In the **WAN -> Leased Line -> Interfaces** menu, a list of all automatically generated leased line connections is shown. Automatic generation requires the corresponding ISDN interface to be configured.

The screenshot shows the 'bintec R4100' web interface. The top navigation bar includes 'Language English', 'View Standard', 'Online Help', 'Logout', and the 'funkwerk' logo. The left sidebar contains a menu with categories like 'Assistants', 'System Management', 'Physical Interfaces', 'LAN', 'Routing', 'WAN', 'VPN', 'Firewall', 'VoIP', 'Local Services', 'Maintenance', 'External Reporting', and 'Monitoring'. The 'WAN' category is expanded, showing 'Internet + Dialup', 'Leased Line', and 'Real Time Jitter Control'. The 'Leased Line' sub-menu is selected, leading to the 'Interfaces' page.

The 'Interfaces' page displays three tables of automatically generated interfaces:

- Autogenerated from BRI (ISDN-S0)**

Description	Type	Protocol	Port	Status	Action
bundle20	Leased Line B1+B2 64S2	PPP	bri2-0	+	↑ ↓ ↻
- Autogenerated from PRI (ISDN-S2M)**


Description	Type	Protocol	Port	Status	Action
pri2-4-0	Leased Line, 1 Hyperchannel (G.703 + G.704)	PPP	pri2-4	+	↑ ↓ ↻
- Autogenerated from Serial**

Description	Type	Protocol	Port	Status	Action
si4-0	None	PPP		+	↑ ↓ ↻

Fig. 109: **WAN -> Leased Line -> Interfaces**

### 15.3.1.1 Edit

Choose the  button to edit the configuration of the corresponding leased line.

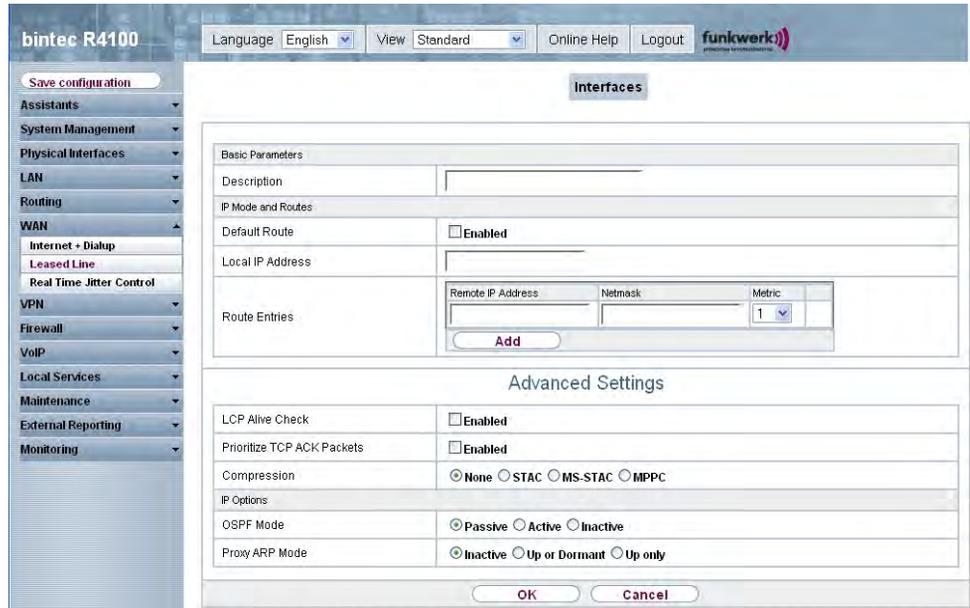

The screenshot shows the configuration page for a leased line interface. The left sidebar contains a navigation menu with categories like Assistants, System Management, Physical Interfaces, LAN, Routing, WAN, and others. The main content area is titled 'Interfaces' and is divided into two sections: 'Basic Parameters' and 'Advanced Settings'.

**Basic Parameters:**

- Description: [Text input field]
- IP Mode and Routes:
  - Default Route:  Enabled
  - Local IP Address: [Text input field]
  - Route Entries: A table with columns for Remote IP Address, Netmask, and Metric (set to 1). An 'Add' button is below the table.

**Advanced Settings:**

- LCP Alive Check:  Enabled
- Prioritize TCP ACK Packets:  Enabled
- Compression:  None  STAC  MS-STAC  MPPC
- IP Options: [Dropdown menu]
- OSPF Mode:  Passive  Active  Inactive
- Proxy ARP Mode:  Inactive  Up or Dormant  Up only

At the bottom of the configuration area are 'OK' and 'Cancel' buttons.

Fig. 110: WAN -> Leased Line -> Interfaces -> Autogenerated from BRI (ISDN-S0) -> 

The WAN -> Leased Line -> Interfaces -> Autogenerated from BRI (ISDN-S0) ->  menu consists of the following fields:

#### Fields in the Leased Line Basic Parameters menu

Field	Description
Description	Enter the desired description for the connection.

#### Fields in the Interfaces IP Mode and Routes menu

Field	Description
Default Route	Select whether the route to this connection partner is to be defined as the default route.  The function is activated with <i>Enabled</i> .  The function is disabled by default.
Local IP Address	Enter the IP address you received from your network operator.

Field	Description
Route Entries	<p>Define other routing entries for this connection class.</p> <p>Add a new entry with <b>Add</b>.</p>

The **Advanced Settings** menu consists of the following fields:

#### Fields in the menu Advanced Settings

Field	Description
LCP Alive Check	<p>Select whether the reachability of the remote terminal is to be checked.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
Prioritize TCP ACK Packets	<p>Select whether the TCP download is to be optimised in the event of intensive TCP upload.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
Compression	<p>If necessary, select the type of encryption that should be used for data traffic to the connection partner. If encryption is set, the remote terminal must also support it, otherwise a connection cannot be set up.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>None</i> (default value): Encryption is not used.</li> <li>• <i>STAC</i></li> <li>• <i>MS-STAC</i></li> <li>• <i>MPPC</i>: Microsoft Point-to-Point Compression</li> </ul>

#### Fields in the Advanced Settings IP Options menu

Field	Description
OSPF Mode	<p>Specify whether OSPF protocol packets are sent over the interface.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Passive</i> (default value): OSPF is not activated for this interface, i.e. no OSPF protocol packets sent over this interface.</li> </ul>

Field	Description
	<p>Networks reachable over this interface are, however, included when calculating the routing information and propagated over active interfaces.</p> <ul style="list-style-type: none"> <li>• <i>Active</i>: OSPF is not activated for this interface, i.e. OSPF protocol packets sent over this interface.</li> <li>• <i>Inactive</i>: OSPF is disabled for this interface.</li> </ul>
Proxy ARP Mode	<p>Select whether and how ARP requests are to be responded to for the specified connection partner.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Inactive</i> (default value): Deactivates Proxy ARP for this connection partner.</li> <li>• <i>Up or Dormant</i>: Your device only responds to an ARP request if the status of the connection to the connection partner is <i>Up</i> or <i>Dormant</i>. In the case of <i>Dormant</i>, your device only responds to the ARP request; the connection is not set up until someone actually wants to use the route.</li> <li>• <i>Up Only</i>: Your device responds to an ARP request only if the status of the connection to the connection partner is <i>Up</i> (active), i.e. a connection already exists to the connection partner.</li> </ul>

Choose the  button to edit the configuration of the corresponding leased line for a PRI interface.

The screenshot shows the configuration page for a WAN interface. The left sidebar contains a navigation menu with categories like Assistants, System Management, Physical Interfaces, LAN, Routing, WAN, VPN, Firewall, VoIP, Local Services, Maintenance, External Reporting, and Monitoring. The main content area is titled 'Interfaces' and has two main sections: 'Basic Parameters' and 'Advanced Settings'. The 'Basic Parameters' section includes a 'Description' field, an 'IP Mode and Routes' section with an 'Enabled' checkbox, a 'Local IP Address' field, and a 'Route Entries' table with columns for 'Remote IP Address', 'Netmask', and 'Metric'. The 'Advanced Settings' section includes 'LCP Alive Check' and 'Prioritize TCP ACK Packets' (both with 'Enabled' checkboxes), 'Compression' (with radio buttons for None, STAC, MS-STAC, and MPPC), 'IP Options' (with radio buttons for Passive, Active, and Inactive), and 'Proxy ARP Mode' (with radio buttons for Inactive, Up or Dormant, and Up only). At the bottom of the form are 'OK' and 'Cancel' buttons.

Fig. 111: WAN -> Leased Line -> Interfaces -> Autogenerated from PRI (ISDN-S2M) -> 

The WAN -> Leased Line -> Interfaces -> Autogenerated from PRI (ISDN-S2M) ->  menu consists of the following fields:

#### Fields in the Interfaces Basic Parameters menu

Field	Description
Description	Enter the desired description for the connection.

#### Fields in the Interfaces IP Mode and Routes menu

Field	Description
Default Route	Select whether the route to this connection partner is to be defined as the default route.  The function is activated with <i>Enabled</i> .  The function is disabled by default.
Local IP Address	Enter the IP address you received from your network operator.
Route Entries	Define other routing entries for this connection class.  Add a new entry with <b>Add</b> .

The **Advanced Settings** menu consists of the following fields:

### Fields in the menu Advanced Settings


Field	Description
LCP Alive Check	<p>Select whether the reachability of the remote terminal is to be checked.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
Prioritize TCP ACK Packets	<p>Select whether the TCP download is to be optimised in the event of intensive TCP upload.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
Compression	<p>If necessary, select the type of encryption that should be used for data traffic to the connection partner. If encryption is set, the remote terminal must also support it, otherwise a connection cannot be set up.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>None</i> (default value): Encryption is not used.</li> <li>• <i>STAC</i></li> <li>• <i>MS-STAC</i></li> <li>• <i>MPPC</i>: Microsoft Point-to-Point Compression</li> </ul>

### Fields in the Advanced Settings IP Options menu

Field	Description
OSPF Mode	<p>Specify whether OSPF protocol packets are sent over the interface.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Passive</i> (default value): OSPF is not activated for this interface, i.e. no OSPF protocol packets sent over this interface. Networks reachable over this interface are, however, included when calculating the routing information and propagated over active interfaces.</li> <li>• <i>Active</i>: OSPF is not activated for this interface, i.e. OSPF protocol packets sent over this interface.</li> <li>• <i>Inactive</i>: OSPF is disabled for this interface.</li> </ul>

Field	Description
Proxy ARP Mode	<p>Select whether and how ARP requests are to be responded to for the specified connection partner.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Inactive</i> (default value): Deactivates Proxy ARP for this connection partner.</li> <li>• <i>Up or Dormant</i>: Your device only responds to an ARP request if the status of the connection to the connection partner is <i>Up</i> or <i>Dormant</i>. In the case of <i>Dormant</i>, your device only responds to the ARP request; the connection is not set up until someone actually wants to use the route.</li> <li>• <i>Up Only</i>: Your device responds to an ARP request only if the status of the connection to the connection partner is <i>Up</i> (active), i.e. a connection already exists to the connection partner.</li> </ul>

Choose the  button to edit the configuration of the corresponding leased line for a serial interface.

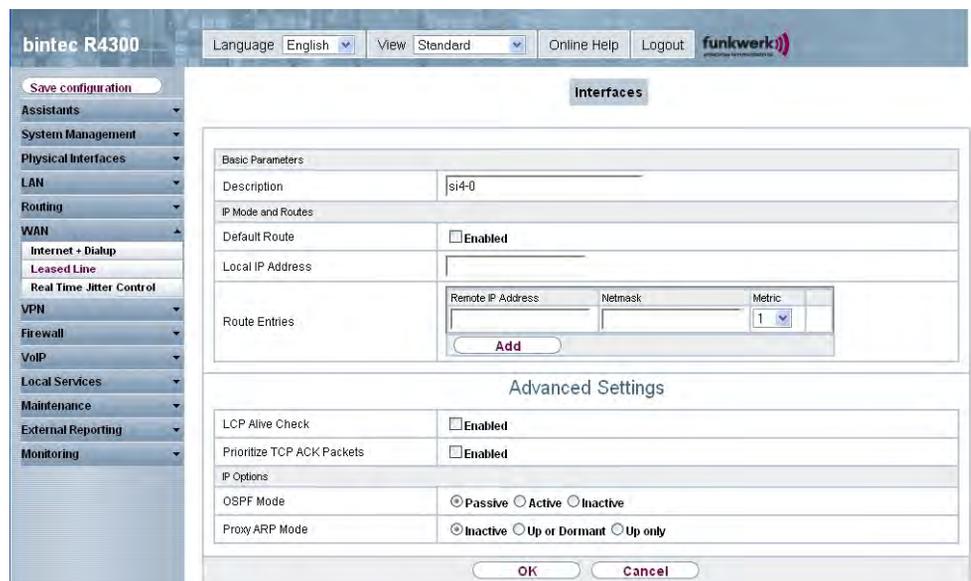

The screenshot shows the configuration page for a WAN Leased Line interface on a bintec R4300 device. The interface is titled "Interfaces" and is divided into "Basic Parameters" and "Advanced Settings".

**Basic Parameters:**

- Description: si4-0
- IP Mode and Routes: Default Route  Enabled
- Local IP Address: [Empty field]
- Route Entries: A table with columns for Remote IP Address, Netmask, and Metric. The Metric column has a dropdown menu set to 1. An "Add" button is located below the table.

**Advanced Settings:**

- LCP Alive Check:  Enabled
- Prioritize TCP ACK Packets:  Enabled
- IP Options:
  - OSPF Mode:  Passive  Active  Inactive
  - Proxy ARP Mode:  Inactive  Up or Dormant  Up only

At the bottom of the configuration page, there are "OK" and "Cancel" buttons.

Fig. 112: WAN -> Leased Line -> Interfaces-> Autogenerated from Serial -> 

The WAN -> Leased Line -> Interfaces-> Autogenerated from Serial ->  menu consists of the following fields:

**Fields in the Interfaces Basic Parameters menu**

Field	Description
Description	Enter the desired description for the connection.

**Fields in the Interfaces IP Mode and Routes menu**

Field	Description
Default Route	Select whether the route to this connection partner is to be defined as the default route.  The function is activated with <i>Enabled</i> .  The function is disabled by default.
Local IP Address	Enter the IP address you received from your network operator.
Route Entries	Define other routing entries for this connection class.  Add a new entry with <b>Add</b> .

The **Advanced Settings** menu consists of the following fields:

**Fields in the menu Advanced Settings**

Field	Description
LCP Alive Check	Select whether the reachability of the remote terminal is to be checked.  The function is activated with <i>Enabled</i> .  The function is disabled by default.
Prioritize TCP ACK Packets	Select whether the TCP download is to be optimised in the event of intensive TCP upload.  The function is activated with <i>Enabled</i> .  The function is disabled by default.
Compression	If necessary, select the type of encryption that should be used for data traffic to the connection partner. If encryption is set, the remote terminal must also support it, otherwise a connection cannot be set up.  Possible values:  <ul style="list-style-type: none"> <li>• <i>None</i> (default value): Encryption is not used.</li> </ul>

Field	Description
	<ul style="list-style-type: none"> <li>• <i>STAC</i></li> <li>• <i>MS-STAC</i></li> <li>• <i>MPPC</i>: Microsoft Point-to-Point Compression</li> </ul>

### Fields in the Advanced Settings IP Options menu

Field	Description
OSPF Mode	<p>Specify whether OSPF protocol packets are sent over the interface.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Passive</i> (default value): OSPF is not activated for this interface, i.e. no OSPF protocol packets sent over this interface. Networks reachable over this interface are, however, included when calculating the routing information and propagated over active interfaces.</li> <li>• <i>Active</i>: OSPF is not activated for this interface, i.e. OSPF protocol packets sent over this interface.</li> <li>• <i>Inactive</i>: OSPF is disabled for this interface.</li> </ul>
Proxy ARP Mode	<p>Select whether and how ARP requests are to be responded to for the specified connection partner.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Inactive</i> (default value): Deactivates Proxy ARP for this connection partner.</li> <li>• <i>Up or Dormant</i>: Your device only responds to an ARP request if the status of the connection to the connection partner is <i>Up</i> or <i>Dormant</i>. In the case of <i>Dormant</i>, your device only responds to the ARP request; the connection is not set up until someone actually wants to use the route.</li> <li>• <i>Up Only</i>: Your device responds to an ARP request only if the status of the connection to the connection partner is <i>Up</i> (active), i.e. a connection already exists to the connection partner.</li> </ul>

## 15.4 Real Time Jitter Control

When telephoning over the Internet, voice data packets normally have the highest priority. Nevertheless, if the upstream bandwidth is low, noticeable delays in voice transmission can occur when other packets are routed at the same time.

The real time jitter control function solves this problem. So that the "line" is not blocked for too long for the voice data packets, the size of the other packets can be reduced, if required, during a telephone call.

### 15.4.1 Controlled Interfaces

In the **WAN -> Real Time Jitter Control -> Controlled Interfaces** menu, a list of all interfaces is shown for which the real time jitter control has been configured.

#### 15.4.1.1 New

Click on the **New** button to set up port forwarding for other interfaces.

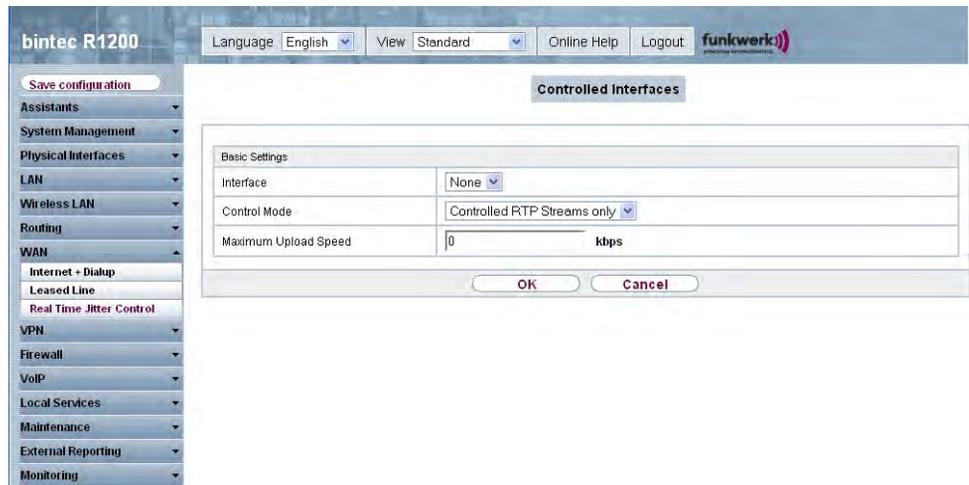


Fig. 113: **WAN -> Real Time Jitter Control -> Controlled Interfaces -> New**

The **WAN -> Real Time Jitter Control -> Controlled Interfaces -> New** menu consists of the following fields:

#### Fields in the Controlled Interfaces Basic Settings menu

Field	Description
Interface	Define for which interfaces voice transmission is to be optimised.
Control Mode	Select the mode for the optimisation.  Possible values: <ul style="list-style-type: none"><li>• <i>Only Controlled RTP Streams</i>(default value): By means of the data routed via the media gateway, the system detects voice data traffic and optimises the voice transmission.</li><li>• <i>All RTP Streams</i>: All RTP streams are optimised.</li><li>• <i>Inactive</i> : Voice data transmission is not optimised.</li><li>• <i>Always</i>: Voice data transmission is always optimised.</li></ul>
Maximum Upload Speed	Enter the maximum available upstream bandwidth in kbps for the selected interface.

## Chapter 16 VPN

A connection that uses the Internet as a "transport medium" but is not publicly accessible is referred to as a VPN (Virtual Private Network). Only authorised users have access to such a VPN, which is seemingly also referred to as a VPN tunnel. Normally the data transported over a VPN is encrypted.

A VPN allows field staff or staff working from home offices to access data on the company's network. Subsidiaries can also connect to head office over VPN.

Various protocols are available for creating a VPN tunnel, e.g. IPSec or PPTP.

The connection partner is authenticated with a password, using preshared keys or certificates.

With IPSec the data is encrypted using AES or 3DES, for example; with PPTP, you can use MPPE.

### 16.1 IPSec

IPSec enables secure connections to be set up between two locations (VPN). This enables sensitive business data to be transferred via an unsecure medium such as the Internet. The devices used function here as the endpoints of the VPN tunnel. IPSec involves a number of Internet Engineering Task Force (IETF) standards, which specify mechanisms for the protection and authentication of IP packets. IPSec offers mechanisms for encrypting and decrypting the data transferred in the IP packets. The IPSec implementation can also be smoothly integrated in a Public Key Infrastructure (PKI, see [Certificates](#) on page 134). The funkwerk IPSec implementation achieves this firstly by using the Authentication Header (AH) protocol and Encapsulated Security Payload (ESP) protocol, and secondly through the use of cryptographic key administration mechanisms like the Internet Key Exchange (IKE) protocol.

#### 16.1.1 IPSec Peers

An endpoint of a communication is defined as peer in a computer network. Each peer offers its services and uses the services of other peers.

In the **VPN -> IPSec -> IPSec Peers** menu a list of all configured IPSec peers is shown.

The screenshot shows the web interface for a bintec R1200 device. The top navigation bar includes 'Language English', 'View Standard', 'Online Help', and 'Logout'. The 'funkwerk' logo is in the top right. A left sidebar contains a menu with categories like 'Save configuration', 'Assistants', 'System Management', 'Physical Interfaces', 'LAN', 'Wireless LAN', 'Routing', 'WAN', 'VPN', 'IPSec', 'L2TP', 'PPTP', 'GRE', 'Certificates', 'Firewall', 'VoIP', 'Local Services', 'Maintenance', 'External Reporting', and 'Monitoring'. The 'VPN' menu is expanded, showing 'IPSec' selected. The main content area has tabs for 'IPSec Peers', 'Phase-1 Profiles', 'Phase-2 Profiles', 'XAUTH Profiles', 'IP Pools', and 'Options'. Below the tabs is a search and filter section with 'View 10 per page', 'Filter in None', and 'equal'. A table with columns 'Prio', 'Description', 'Peer Address', 'Peer ID', 'Phase-1 Profile', 'Phase-2 Profile', and 'Status' is shown, with 'Page: 1' below it. A 'New' button is centered below the table.

Fig. 114: VPN -> IPsec -> IPsec Peers

## Peer Monitoring

The menu for monitoring a peer is called by selecting the  button for the peer in the peer list. See [Values in the list IPsec Tunnels](#) on page 511.

### 16.1.1.1 New

Choose the **New** button to set up more IPsec peers.

The screenshot shows the configuration page for a new IPsec Peer in the bintec R1200 interface. The page is titled "bintec R1200" and includes a navigation menu on the left with categories like Assistants, System Management, Physical Interfaces, LAN, Wireless LAN, Routing, WAN, VPN, Firewall, VoIP, Local Services, Maintenance, External Reporting, and Monitoring. The main content area is divided into several sections:

- Peer Parameters:**
  - Administrative Status:  Up  Down
  - Description: Peer-1
  - Peer Address: [Empty field]
  - Peer ID: Fully Qualified Domain Name (FQDN) dropdown, Peer-1
  - Preshared Key: [Empty field]
- Interface Routes:**
  - IP Address Assignment: Static
  - Default Route:  Enabled
  - Local IP Address: [Empty field]
  - Route Entries: A table with columns for Remote IP Address, Netmask, and Metric. The first entry has a metric of 1. An "Add" button is below the table.
- Advanced Settings:**
  - Advanced IPsec Options:
    - Phase-1 Profile: None (use default profile)
    - Phase-2 Profile: None (use default profile)
    - XAUTH Profile: Select one
    - Number of Admitted Connections:  One User  Multiple Users
    - Start Mode:  On Demand  Always up
  - Advanced IP Options:
    - Back Route Verify:  Enabled
    - Proxy ARP:  Inactive  Up or Dormant  Up only
  - IPsec Callback:
    - Mode: Inactive

At the bottom of the form are "OK" and "Cancel" buttons.

Fig. 115: VPN -> IPsec -> IPsec Peers -> New

The VPN -> IPsec -> IPsec Peers -> New menu consists of the following fields:

#### Fields in the IPsec Peers Peer Parameters menu

Field	Description
Administrative Status	<p>Select the status to which you wish to set the peer after saving the peer configuration.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li><i>Up</i> (default value): The peer is available for setting up a tunnel immediately after saving the configuration.</li> <li><i>Down</i> : The peer is initially not available after the configuration has been saved.</li> </ul>

Field	Description
Description	<p>Enter a description of the peer that identifies it.</p> <p>The maximum length of the entry is 255 characters.</p>
Peer Address	<p>Enter the official IP address of the peer or its resolvable host name.</p> <p>The entry can be omitted in certain configurations, whereby your device then cannot initiate an IPSec connection.</p>
Peer ID	<p>Select the ID type and enter the peer ID.</p> <p>This entry is not necessary in certain configurations.</p> <p>The maximum length of the entry is 255 characters.</p> <p>Possible ID types:</p> <ul style="list-style-type: none"> <li>• <i>Fully Qualified Domain Name (FQDN)</i></li> <li>• <i>E-mail Address</i></li> <li>• <i>IPV4 Address</i></li> <li>• <i>ASN.1-DN (Distinguished Name)</i></li> </ul> <p>On the peer device, this ID corresponds to the parameter <b>Local ID Value</b>.</p>
Preshared Key	<p>Enter the password agreed with the peer.</p> <p>The maximum length of the entry is 50 characters. All characters are possible except for <i>0x</i> at the start of the entry.</p>

#### Fields in the IPSec Peers Interface Routes menu

Field	Description
IP Address Assignment	<p>Select the configuration mode of the interface.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Static</i> (default value): Enter a static IP address.</li> <li>• <i>IKE Config Mode Client</i>: Select this option if your gateway receives an IP address from the server as IPSec client.</li> <li>• <i>IKE Config Mode Server</i>: Select this option if your gateway assigns an IP address as DHCP server for connecting cli-</li> </ul>

Field	Description
	ents. This is taken from the selected <b>IP Assignment Pool</b> .
IP Assignment Pool	<p>Only if <b>IP Address Assignment</b> = <i>IKE Config Mode Server</i></p> <p>Select an IP pool configured in the <b>VPN -&gt; IP Pools</b> menu. If an IP pool has not been configured here yet, the message <i>Not yet defined</i> appears in this field.</p>
Default Route	<p>Only for <b>IP Address Assignment</b> = <i>Static</i></p> <p>Select whether the route to this IPsec peer is to be defined as the default route.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
Local IP Address	<p>Only if <b>IP Address Assignment</b> = <i>Static</i> and <i>IKE Config Mode Server</i></p> <p>Enter the WAN IP address of your IPsec tunnel. This can be the same IP address as the address configured on your router as the LAN IP address.</p>
Route Entries	<p>Define routing entries for this connection partner.</p> <ul style="list-style-type: none"> <li>• <i>Remote IP Address</i>: IP address of the destination host or LAN.</li> <li>• <i>Netmask</i>: Netmask of <b>Remote IP Address</b>.</li> <li>• <i>Metric</i>: The lower the value, the higher the priority of the route (possible values <i>0 . . . 15</i>). The default value is <i>1</i>.</li> </ul>

The **Advanced Settings** menu consists of the following fields:

#### Fields in the Advanced Settings Advanced IPsec Options menu

Field	Description
Phase 1 Profile	For phase 1, select a profile already configured in the <b>Phase-1 Profiles</b> menu. You can also select the profile marked as the default in <b>Phase-1 Profiles</b> : <i>None (use Default Profile)</i> .
Phase 2 Profile	For phase 2, select a profile already configured in the <b>Phase-2</b>

Field	Description
	<b>Profiles</b> menu. You can also select the profile marked as the default in <b>Phase-2 Profiles</b> : <i>None (use Default Profile)</i> .
XAUTH Profile	Select a profile created in <b>VPN -&gt; IPSec -&gt; XAUTH profiles</b> if you wish to use this IPSec peer XAuth for authentication.  If XAuth is used together with IKE Config Mode, the transactions for XAuth are carried out before the transactions for IKE Config Mode.
Number of Admitted Connections	Choose how many users can connect using this peer profile.  Possible values: <ul style="list-style-type: none"> <li>• <i>One User</i> (default value): Only one peer can be connected with the data defined in this profile.</li> <li>• <i>Multiple Users</i>: Several peers can be connected with the data defined in this profile. The peer entry is duplicated for each connection request with the data defined in this profile.</li> </ul>
Start Mode	Select how the peer is to be switched to the active state.  Possible values: <ul style="list-style-type: none"> <li>• <i>On Demand</i> (default value): The peer is switched to the active state by a trigger.</li> <li>• <i>Always up</i>: The peer is always active.</li> </ul>

#### Fields in the Advanced Settings Advanced IP Options menu

Field	Description
Back Route Verify	Select whether a check on the back route should be activated for the interface to the connection partner.  The function is activated with <i>Enabled</i> .  The function is disabled by default.
Proxy ARP	Select whether your device is to respond to ARP requests from its own LAN on behalf of the specific connection partner.  Possible values: <ul style="list-style-type: none"> <li>• <i>Inactive</i> (default value): Deactivates Proxy ARP for this</li> </ul>

Field	Description
	<p>IPSec peer.</p> <ul style="list-style-type: none"> <li>• <i>Up or Dormant</i>: Your device only responds to an ARP request if the status of the connection to the IPSec peer is <i>Up</i> (active) or <i>Dormant</i>. In the case of <i>Dormant</i>, your device only responds to the ARP request; the connection is not set up until someone actually wants to use the route.</li> <li>• <i>Up Only</i>: Your device responds to an ARP request only if the status of the connection to the IPSec peer is <i>Up</i> (active), i.e. a connection already exists to the IPSec peer.</li> </ul>

### IPSec Callback

**bintec** devices support the DynDNS service to enable hosts without fixed IP addresses to obtain a secure connection over the Internet. This service enables a peer to be identified using a host name that can be resolved by DNS. You do not need to configure the IP address of the peer.

The DynDNS service does not signal whether a peer is actually online and cannot cause a peer to set up an Internet connection to enable an IPSec tunnel over the Internet. This possibility is created with IPSec callback: Using a direct ISDN call to a peer, you can signal that you are online and waiting for the peer to set up an IPSec tunnel over the Internet. If the called peer currently has no connection to the Internet, the ISDN call causes a connection to be set up. This ISDN call costs nothing (depending on country), as it does not have to be accepted by your device. The identification of the caller from his or her ISDN number is enough information to initiate setting up a tunnel.

Before you can configure this service, you must first configure a number for IPSec callback on the passive page in the **Physical Interfaces** -> **ISDN Ports** -> **MSN Configuration** -> **New** menu. The value `IPSec` is available for this purpose in the **Service** field. This entry ensures that incoming calls for this number are routed to the IPSec service.

If callback is active, the peer is caused to initiate setting up an IPSec tunnel by an ISDN call as soon as this tunnel is required. With passive callback, the set-up of a tunnel to the peer is always initiated if an ISDN call to the corresponding number (**MSN** in the **Physical Interfaces** -> **ISDN Ports** -> **MSN Configuration** -> **New for Service** `IPSec` menu) is received. This ensures that both peers are reachable and that the connection can be set up over the Internet. The only case in which callback is not executed is if SAs (Security Associations) already exist, i.e. the tunnel to the peer already exists.

**Note**

If a tunnel is to be set up to a peer, the interface over which the tunnel is to be implemented is activated first by the IPsec Daemon. If IPsec with DynDNS is configured on the local device, the own IP address is propagated first and then the ISDN call is sent to the remote device. This ensures that the remote device can actually reach the local device if it initiates the tunnel setup.

**Transfer of IP Address over ISDN**

Transferring the IP address of a device over ISDN (in the D channel and/or B channel) opens up new possibilities for the configuration of IPsec VPNs. This enables restrictions that occur in IPsec configuration with dynamic IP addresses to be avoided.

**Note**

To use the IP address transfer over ISDN function, you must obtain a free-of-charge extra licence.

You can obtain the licence data for extra licences via the online licensing pages in the support section at [www.funkwerk-ec.com](http://www.funkwerk-ec.com). Please follow the online licensing instructions.

Before System Software Release 7.1.4, IPsec ISDN callback only supported tunnel setup if the current IP address of the initiator could be determined by indirect means (e.g. via DynDNS). However, DynDNS has serious disadvantages, such as the latency until the IP address is actually updated in the database. This can mean that the IP address propagated via DynDNS is not correct. This problem is avoided by transferring the IP address over ISDN. This type of transfer of dynamic IP addresses also enables the more secure ID Protect mode (main mode) to be used for tunnel setup.

Method of operation: Various modes are available for transferring your own IP address to the peer: The address can be transferred free in the D channel or in the B channel, but here the call must be accepted by the remote station and therefore incurs costs. If a peer whose IP address has been assigned dynamically wants to arrange for another peer to set up an IPsec tunnel, it can transfer its own IP address as per the settings described in *Fields in the Advanced Settings IPsec Callback menu* on page 328. Not all transfer modes are supported by all telephone companies. If you are not sure, automatic selection by the device can be used to ensure that all the available possibilities can be used.

**Note**

The callback configuration on the two devices should be the same so your device of the called peer can identify the IP address information.

The following roles are possible:

- One side takes on the active role, the other the passive role.
- Both sides can take on both roles (both).

The IP address transfer and the start of IKE phase 1 negotiation take place in the following steps:

- (1) Peer A (the callback initiator) sets up a connection to the Internet in order to be assigned a dynamic IP address and be reachable for peer B over the Internet.
- (2) Your device creates a token with a limited validity and saves it together with the current IP address in the MIB entry belonging to peer B.
- (3) Your device sends the initial ISDN call to peer B, which transfers the IP address of peer A and the token as per the callback configuration.
- (4) Peer B extracts the IP address of peer A and the token from the ISDN call and assigns them to peer A based on the calling party number configured (the ISDN number used by peer A to send the initial call to peer B).
- (5) The IPSec Daemon at peer B's device can use the transferred IP address to initiate phase 1 negotiation with peer A. Here the token is returned to peer A in part of the payload in IKE negotiation.
- (6) Peer A is now able to compare the token returned by peer B with the entries in the MIB and so identify the peer without knowing its IP address.

As peer A and peer B can now mutually identify each other, negotiations can also be conducted in the ID Protect mode using preshared keys.

**Note**

In some countries (e.g. Switzerland), the call in the D channel can also incur costs. An incorrect configuration at the called side can mean that the called side opens the B channel the calling side incurs costs.

**Fields in the Advanced Settings IPSec Callback menu**

Field	Description
Mode	Select the Callback Mode.

Field	Description
	<p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Inactive</i> (default value): IPSec callback is deactivated. The local device neither reacts to incoming ISDN calls nor initiates ISDN calls to the remote device.</li> <li>• <i>Passive</i>: The local device only reacts to incoming ISDN calls and, if necessary, initiates setting up an IPSec tunnel to the peer. No ISDN calls are sent to the remote device to cause this to set up an IPSec tunnel.</li> <li>• <i>Active</i>: The local device sends an ISDN call to the remote device to cause this to set up an IPSec tunnel. The device does not react to incoming ISDN calls.</li> <li>• <i>Both</i>: Your device can react to incoming ISDN calls and send ISDN calls to the remote device. The setting up of an IPSec tunnel is executed (after an incoming ISDN call) and initiated (by an outgoing ISDN call).</li> </ul>
Incoming ISDN Number	<p>Only for <b>Mode</b> = <i>Passive</i> or <i>Both</i>.</p> <p>Enter the ISDN number from which the remote device calls the local device (calling party number). Wildcards may also be used.</p>
Outgoing ISDN Number	<p>Only for <b>Mode</b> = <i>Active</i> or <i>Both</i>.</p> <p>Enter the ISDN number with which the local device calls the remote device calls (called party number). Wildcards may also be used.</p>
Transfer own IP address over ISDN	<p>Select whether the IP address of your own device is to be transferred over ISDN for IPSec callback.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
Transfer Mode	<p>Only if <b>Transfer Own IP Address over ISDN</b> = activated</p> <p>Select the mode in which your device is to attempt to transfer its IP address to the peer.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Autodetect best mode</i>: Your device automatically de-</li> </ul>

Field	Description
	<p>termines the most favourable mode. It first tries all D channel modes before switching to the B channel. (Costs are incurred for using the B channel.)</p> <ul style="list-style-type: none"> <li>• <i>Autodetect only D Channel Modes</i>: Your device automatically determines the most favourable D channel mode. The use of the B channel is excluded.</li> <li>• <i>Use specific D Channel Mode</i>: Your device tries to transfer the IP address in the mode set in the <b>D Channel Mode</b> field.</li> <li>• <i>Try specific D Channel Mode, fall back to B Channel</i>: Your device tries to transfer the IP address in the mode set in the <b>D Channel Mode</b> field. If this does not succeed, the IP address is transferred in the B channel. (This incurs costs.)</li> <li>• <i>Use only B Channel Mode</i>: Your device transfers the IP address in the B channel. This incurs costs.</li> </ul>
D Channel Mode	<p>Only if <b>Transfer Mode</b> = <i>Use specific D Channel Mode</i> or <i>Try specific D Channel Mode, Fallback to B Channel</i></p> <p>Select the D channel mode in which your device tries to transfer the IP address.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>LLC</i> (default value): The IP address is transferred in the "LLC information elements" of the D channel.</li> <li>• <i>SUBADDR</i>: The IP address is transferred in the subaddress "information elements" of the D channel.</li> <li>• <i>LLC and SUBADDR</i>: The IP address is transferred in both the "LLC" and "subaddress information elements".</li> </ul>

## 16.1.2 Phase-1 Profiles

In the **VPN -> IPSec -> Phase-1 Profiles** menu a list of all configured IPSec phase-1 profiles is shown.

The screenshot shows the web interface for a bintec R1200 device. The top navigation bar includes 'Language English', 'View Standard', 'Online Help', and 'Logout'. The 'funkwerk()' logo is in the top right. A left sidebar contains a menu with categories like 'Save configuration', 'Assistants', 'System Management', 'Physical Interfaces', 'LAN', 'Wireless LAN', 'Routing', 'WAN', 'VPN', 'Firewall', 'VoIP', 'Local Services', 'Maintenance', 'External Reporting', and 'Monitoring'. The 'VPN' category is expanded to show 'IPSec', 'L2TP', 'PPTP', and 'GRE'. The 'IPSec' sub-menu is active, showing tabs for 'IPSec Peers', 'Phase-1 Profiles', 'Phase-2 Profiles', 'XAUTH Profiles', 'IP Pools', and 'Options'. The 'Phase-1 Profiles' tab is selected, displaying a table with columns: Default, Description, Proposals, Authentication, Mode, DH Group, and Lifetime. The table is currently empty. Below the table are 'New', 'OK', and 'Cancel' buttons. A search bar at the top of the table area includes 'View 20 per page', 'Filter in None', and 'equal'.

Fig. 116: VPN -> IPSec -> Phase-1 Profiles

In the **Standard** column, you can mark the profile to be used as the default profile.

#### 16.1.2.1 New

Choose the **New** button to set up new profiles.

The screenshot shows the configuration interface for a bintec R1200 device. The left sidebar contains a navigation menu with categories like Assistants, System Management, Physical Interfaces, LAN, Wireless LAN, Routing, WAN, VPN, Firewall, VoIP, Local Services, Maintenance, External Reporting, and Monitoring. The main area is titled 'Phase-1 Profiles' and contains the following fields:

- Phase-1 (IKE) Parameters**
  - Description: PSK Multiproposal
  - Proposals: A table with columns for Encryption, Authentication, and Enabled. It contains three rows, all with AES encryption and MD5 authentication, and the first row is checked.
  - DH Group: Radio buttons for 1(768 Bit), 2(1024 Bit) (selected), and 5(1536 Bit).
  - Lifetime: 14400 Seconds, 0 kBytes
  - Authentication Method: Preshared Keys
  - Mode: Radio buttons for Main Mode (ID Protect), Aggressive (selected), and Strict.
  - Local ID Type: Fully Qualified Domain Name (FQDN)
  - Local ID Value: r1200
- Advanced Settings**
  - Alive Check: Autodetect
  - Block Time: 30 Seconds
  - NAT Traversal:  Enabled

Buttons for 'OK' and 'Cancel' are at the bottom.

Fig. 117: VPN -> IPsec -> Phase-1 Profiles -> New

The VPN -> IPsec -> Phase-1 Profile -> New menu consists of the following fields:

#### Fields in the Phase-1 Profile Phase-1 (IKE) Parameters menu

Field	Description
Description	Enter a description that uniquely defines the type of rule.
Proposals	<p>In this field, you can select any combination of encryption and message hash algorithms for IKE phase 1 on your device. The combination of six encryption algorithms and four message hash algorithms gives 24 possible values in this field. At least one proposal must exist. Therefore the first line of the table cannot be deactivated.</p> <p>Encryption algorithms (<b>Encryption</b>):</p> <ul style="list-style-type: none"> <li><i>3DES</i> (default value): 3DES is an extension of the DES algorithm with an effective key length of 112 bits, which is rated as secure. It is the slowest algorithm currently supported.</li> <li><i>Twofish</i>: Twofish was a final candidate for the AES (Advanced Encryption Standard). It is rated as just as secure as Rijndael (AES), but is slower.</li> </ul>

Field	Description
	<ul style="list-style-type: none"> <li>• <i>Blowfish</i>: Blowfish is a very secure and fast algorithm. Twofish can be regarded as the successor to Blowfish.</li> <li>• <i>CAST</i>: CAST is also a very secure algorithm, marginally slower than Blowfish, but faster than 3DES.</li> <li>• <i>DES</i>: DES is an older encryption algorithm, which is rated as weak due to its small effective length of 56 bits.</li> <li>• <i>AES</i>: Rijndael has been nominated as AES due to its fast key setup, low memory requirements, high level of security against attacks and general speed.</li> <li>• <i>AES-128</i>: Rijndael has been nominated as AES due to its fast key setup, low memory requirements, high level of security against attacks and general speed. Here, it is used with a key length of 128 bits.</li> <li>• <i>AES-192</i>: Rijndael has been nominated as AES due to its fast key setup, low memory requirements, high level of security against attacks and general speed. Here, it is used with a key length of 192 bits.</li> <li>• <i>AES-256</i>: Rijndael has been nominated as AES due to its fast key setup, low memory requirements, high level of security against attacks and general speed. Here, it is used with a key length of 256 bits.</li> </ul> <p>Hash algorithms (<b>Authentication</b>):</p> <ul style="list-style-type: none"> <li>• <i>MD5</i> (default value): MD 5 (Message Digest #5) is an older hash algorithm. It is used with a 96 bit digest length for IPsec.</li> <li>• <i>SHA1</i> : SHA1 (Secure Hash Algorithm #1) is a hash algorithm developed by the NSA (United States National Security Association). It is rated as secure, but is slower than MD5. It is used with a 96 bit digest length for IPsec.</li> <li>• <i>RipeMD 160</i>: RipeMD 160 is a 160 bit hash algorithm. It is used as a secure replacement for MD5 and RipeMD.</li> <li>• <i>Tiger192</i>: Tiger 192 is a relatively new and very fast algorithm.</li> </ul> <p>Please note that the description of the encryption and authentication or the hash algorithms is based on the author's knowledge and opinion at the time of creating this User Guide. In particular, the quality of the algorithms is subject to relative aspects and may change due to mathematical or cryptographic developments.</p>

Field	Description
DH Group	<p>The Diffie-Hellman group defines the parameter set used as the basis for the key calculation during phase 1. "MODP" as supported by <b>bintec</b> devices stands for "modular exponentiation".</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>1 (768 Bit)</i>: During the Diffie-Hellman key calculation, modular exponentiation at 768 bits is used to create the encryption material.</li> <li>• <i>2 (1024 Bit)</i>: During the Diffie-Hellman key calculation, modular exponentiation at 1024 bits is used to create the encryption material.</li> <li>• <i>5 (1536 Bit)</i>: During the Diffie-Hellman key calculation, modular exponentiation at 1536 bits is used to create the encryption material.</li> </ul>
Lifetime	<p>Create a lifetime for phase 1 keys.</p> <p>As for RFC 2407, the default value is eight hours, which means the key must be renewed once eight hours have elapsed.</p> <p>The following options are available for defining the lifetime:</p> <p>Entry in <b>Seconds</b>: Enter the lifetime for phase 1 key in seconds. The value can be a whole number from 0 to 2147483647. The default value is <i>14400</i>.</p> <p>Entry in <b>KBytes</b>: Enter the lifetime for phase 1 keys as amount of data processed in kBytes. The value can be a whole number from 0 to 2147483647. The default value is <i>0</i>.</p> <p>The standard value as per RFC is used <i>0</i> seconds and <i>0</i> Kbytes are entered.</p>
Authentication Method	<p>Select the authentication method.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Preshared Keys</i> (default value): If you do not use certificates for the authentication, you can select Preshared Keys. These are configured during peer configuration in the <b>IPSec Peers</b> menu. The preshared key is the shared password.</li> <li>• <i>DSA Signature</i>: Phase 1 key calculations are authenticated using the DSA algorithm.</li> </ul>

Field	Description
	<ul style="list-style-type: none"> <li>• <i>RSA Signature</i>: Phase 1 key calculations are authenticated using the RSA algorithm.</li> <li>• <i>RSA Encryption</i>: In RSA encryption the ID payload is also encrypted for additional security.</li> </ul>
Local Certificate	<p>Only if <b>Authentication Method</b> = <i>DSA Signature, RSA Signature</i> or <i>RSA Encryption</i></p> <p>This field enables you to select one of your own certificates for authentication. It shows the index number of this certificate and the name under which it is saved. This field is only shown for authentication settings based on certificates and indicates that a certificate is essential.</p>
Mode	<p>Select the phase 1 mode.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Aggressive</i> (default value): The Aggressive Mode is necessary if one of the peers does not have a static IP address and preshared keys are used for authentication; it requires only three messages for configuring a secure channel.</li> <li>• <i>Main Mode (ID Protect)</i> : This mode (also designated Main Mode) requires six messages for a Diffie-Hellman key calculation and thus for configuring a secure channel, over which the IPSec SAs can be negotiated. A condition is that both peers have static IP addresses if preshared keys are used for authentication.</li> </ul> <p>Also define whether the selected mode is used exclusively (<b>Strict</b>), or the peer can also propose another mode.</p>
Local ID Type	<p>Select the local ID type.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Fully Qualified Domain Name (FQDN)</i></li> <li>• <i>E-mail Address</i></li> <li>• <i>IPV4 Address</i></li> <li>• <i>ASN.1-DN (Distinguished Name)</i></li> </ul>
Local ID Value	<p>Enter the ID of your device.</p>

Field	Description
	<p>For <b>Authentication Method</b> = <i>DSA Signature, RSA Signature</i> or <i>RSA Encryption</i>, the <b>Use Subject Name from certificate</b> option is shown.</p> <p>If you enable the <b>Use Subjectname from Certificate</b> option, the first alternative subject name indicated in the certificate is used, or, if none is specified, the subject name of the certificate is used.</p> <p>Note: If you use certificates for authentication and your certificate contains alternative subject names (see <a href="#">Certificates</a> on page 134), you must make sure your device selects the first alternative subject name by default. Make sure you and your peer both use the same name, i.e. that your local ID and the peer ID your partner configures for you are identical.</p>

### Alive Check

During communication between two IPSec peers, one of the peers may become unavailable, e.g. due to routing problems or a reboot. However, this can only be detected when the end of the lifetime of the security connection is reached. Up until this point the data packets are lost. These are various methods of performing an alive check to prevent this happening. In the **Alive Check** field you can specify whether a method should be used to check the availability of a peer.

Two methods are available: Heartbeats and Dead Peer Detection.

The **Advanced Settings** menu consists of the following fields:

#### Fields in the menu Advanced Settings

Field	Description
Alive Check	<p>Select the method to be used to check the functionality of the IPSec connection.</p> <p>In addition to the default method Dead Peer Detection (DPD), the (proprietary) Heartbeat method is implemented. This sends and receives signals every 5 seconds, depending on the configuration. If these signals are not received after 20 seconds, the SA is discarded as invalid.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Autodetect</i> (default value): Your device detects and uses</li> </ul>

Field	Description
	<p>the mode supported by the remote terminal.</p> <ul style="list-style-type: none"> <li>• <i>Inactive</i>: Your device sends and expects no heartbeat. Set this option if you use devices from other manufacturers.</li> <li>• <i>Heartbeats (Expect only)</i>: Your device expects a heartbeat from the peer but does not send one itself.</li> <li>• <i>Heartbeats (Send only)</i>: Your device expects no heartbeat from the peer, but sends one itself.</li> <li>• <i>Heartbeats (send &amp; expect)</i>: Your device expects a heartbeat from the peer and sends one itself.</li> <li>• <i>Dead Peer Detection</i>: Use DPD (dead peer detection) in accordance with RFC 3706. DPD uses a request-reply protocol to check the availability of the remote terminal and can be configured independently on both sides. This option only checks the availability of the peer if data is to be sent to it.</li> <li>• <i>Dead Peer Detection (Idle)</i>: Use DPD (dead peer detection) in accordance with RFC 3706. DPD uses a request-reply protocol to check the availability of the remote terminal and can be configured independently on both sides. This option is used to carry out a check at certain intervals depending on forthcoming data transfers.</li> </ul>
Block Time	<p>Define how long a peer is blocked for tunnel setups after a phase 1 tunnel setup has failed. This only affects locally initiated setup attempts.</p> <p>Possible values are <code>-1</code> to <code>86400</code> (seconds); <code>-1</code> means the value in the default profile is used and <code>0</code> means that the peer is never blocked.</p> <p>The default value is <code>30</code>.</p>
NAT Traversal	<p>NAT Traversal (NAT-T) also enables IPSec tunnels to be opened via one or more devices on which network address translation (NAT) is activated.</p> <p>Without NAT-T, incompatibilities may arise between IPSec and NAT (see RFC 3715, section 2). These primarily prevent the setup of an IPSec tunnel from a host within a LANs and behind a NAT device to another host or device. NAT-T enables these kinds of tunnels without conflicts with NAT device, activated NAT is automatically detected by the IPSec Daemon and NAT-T</p>

Field	Description
	<p>is used.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is enabled by default.</p>
CA Certificates	<p>Only if <b>Authentication Method</b> = <i>DSA Signature, RSA Signature or RSA Encryption</i></p> <p>If you enable the <b>Trust the following CA certificates</b> option, you can select up to three additional CA certificates that are accepted for this profile.</p> <p>This option can only be configured if certificates are loaded.</p>

### 16.1.3 Phase-2 Profiles

You can define profiles for phase 2 of the tunnel setup just as for phase 1.

In the **VPN -> IPSec -> Phase-2 Profiles** menu a list of all configured IPSec phase-2 profiles is shown.

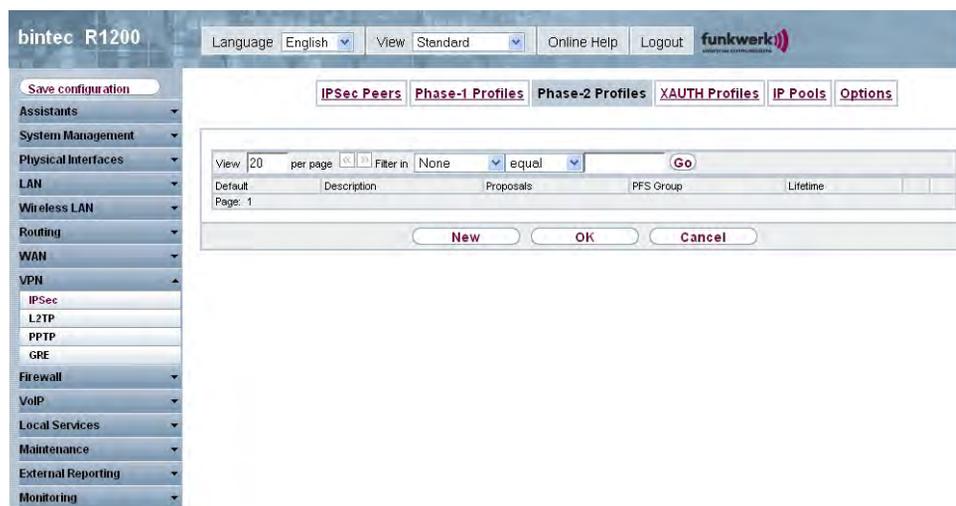


Fig. 118: VPN -> IPSec -> Phase-2 Profiles

In the **Standard** column, you can mark the profile to be used as the default profile.

### 16.1.3.1 New

Choose the **New** button to set up new profiles.

The screenshot shows the configuration interface for a bintec R1200 device. The left sidebar contains a navigation menu with categories like Assistants, System Management, Physical Interfaces, LAN, Wireless LAN, Routing, WAN, VPN, IPsec, L2TP, PPTP, GRE, Firewall, VoIP, Local Services, Maintenance, External Reporting, and Monitoring. The main content area is titled 'Phase-2 Profiles' and includes tabs for IPsec Peers, Phase-1 Profiles, Phase-2 Profiles, XAUTH Profiles, IP Pools, and Options. The 'Phase-2 Profiles' tab is active, showing the 'Phase-2 (IPSEC) Parameters' section. The 'Description' field is set to 'Multi-Proposal'. The 'Proposals' section contains a table with columns for Encryption, Authentication, and Enabled. The 'Use PFS Group' section has 'Enabled' selected. The 'Lifetime' is set to 7200 seconds. The 'Advanced Settings' section includes 'IP Compression' (disabled), 'Alive Check' (Autodetect), and 'Propagate PMTU' (enabled). 'OK' and 'Cancel' buttons are at the bottom.

Fig. 119: VPN -> IPsec -> Phase-2 Profiles -> New

The VPN -> IPsec -> Phase-2 Profiles -> New menu consists of the following fields:

#### Fields in the Phase-2 Profiles Phase-2 (IPSEC) Parameters menu

Field	Description
Description	Enter a description that uniquely identifies the profile.  The maximum length of the entry is 255 characters.
Proposals	In this field, you can select any combination of encryption and message hash algorithms for IKE phase 2 on your default. The combination of six encryption algorithms and two message hash algorithms gives 12 possible values in this field.  Encryption algorithms ( <b>Encryption</b> ): <ul style="list-style-type: none"> <li>• <i>3DES</i> (default value): 3DES is an extension of the DES algorithm with an effective key length of 112 bits, which is rated as secure. It is the slowest algorithm currently supported.</li> <li>• <i>-ALL-</i>: All options can be used.</li> <li>• <i>AES-128</i>: Rijndael has been nominated as AES due to its</li> </ul>

Field	Description
	<p>fast key setup, low memory requirements, high level of security against attacks and general speed. Here, it is used with a key length of 128 bits.</p> <ul style="list-style-type: none"> <li>• <i>AES-192</i>: Rijndael has been nominated as AES due to its fast key setup, low memory requirements, high level of security against attacks and general speed. Here, it is used with a key length of 192 bits.</li> <li>• <i>AES-256</i>: Rijndael has been nominated as AES due to its fast key setup, low memory requirements, high level of security against attacks and general speed. Here, it is used with a key length of 256 bits.</li> <li>• <i>Twofish</i>: Twofish was a final candidate for the AES (Advanced Encryption Standard). It is rated as just as secure as Rijndael (AES), but is slower.</li> <li>• <i>Blowfish</i>: Blowfish is a very secure and fast algorithm. Twofish can be regarded as the successor to Blowfish.</li> <li>• <i>CAST</i>: CAST is also a very secure algorithm, marginally slower than Blowfish, but faster than 3DES.</li> <li>• <i>DES</i>: DES is an older encryption algorithm, which is rated as weak due to its small effective length of 56 bits.</li> </ul> <p>Hash algorithms (<b>Authentication</b>):</p> <ul style="list-style-type: none"> <li>• <i>MD 5</i> (default value): MD 5 (Message Digest #5) is an older hash algorithm. It is used with a 96 bit digest length for IPsec.</li> <li>• <i>-ALL-</i>: All options can be used.</li> <li>• <i>SHA 1</i> : SHA1 (Secure Hash Algorithm #1) is a hash algorithm developed by the NSA (United States National Security Association). It is rated as secure, but is slower than MD5. It is used with a 96 bit digest length for IPsec.</li> </ul> <p>Note that RipeMD 160 and Tiger 192 are not available for message hashing in phase 2.</p>
Use PFS Group	<p>As PFS (Perfect Forward Secrecy) requires another Diffie-Hellman key calculation to create new encryption material, you must select the exponentiation features. If you enable PFS ( <b>Enabled</b>), the options are the same as for the configuration in <b>Phase 1: Group</b>. PFS is used to protect the keys of a renewed phase 2 SA, even if the keys of the phase 1 SA have become known.</p>

Field	Description
	<p>The field has the following options:</p> <ul style="list-style-type: none"> <li>• <i>1 (768 Bit)</i>: During the Diffie-Hellman key calculation, modular exponentiation at 768 bits is used to create the encryption material.</li> <li>• <i>2 (1024 Bit)</i> (default value): During the Diffie-Hellman key calculation, modular exponentiation at 1024 bits is used to create the encryption material.</li> <li>• <i>5 (1536 Bit)</i>: During the Diffie-Hellman key calculation, modular exponentiation at 1536 bits is used to create the encryption material.</li> </ul>
Lifetime	<p>Define how the lifetime is defined that will expire before phase 2 SAs need to be renewed.</p> <p>The new SAs are negotiated shortly before expiry of the current SAs. As for RFC 2407, the default value is eight hours, which means the key must be renewed once eight hours have elapsed.</p> <p>The following options are available for defining the lifetime:</p> <p>Entry in <i>Seconds</i>: Enter the lifetime for phase 2 key in seconds. The value can be a whole number from 0 to 2147483647. The default value is 7200.</p> <p>Entry in <i>KBytes</i>: Enter the lifetime for phase 2 keys as amount of data processed in Kbytes. The value can be a whole number from 0 to 2147483647. The default value is 0.</p>

The **Advanced Settings** menu consists of the following fields:

#### Fields in the menu Advanced Settings

Field	Description
IP Compression	<p>Select whether compression is to be activated before data encryption. If data is compressed effectively, this can result in higher performance and a lower volume of data to be transferred. In the case of fast lines or data that cannot be compressed, you are advised against using this option as the performance can be significantly affected by the increased effort during compression.</p>

Field	Description
	<p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
Alive Check	<p>Select whether and how IPSec heartbeats are used.</p> <p>A <b>bintec</b> IPSec heartbeat is implemented to determine whether or not a Security Association (SA) is still valid. This function sends and receives signals every 5 seconds, depending on the configuration. If these signals are not received after 20 seconds, the SA is discarded as invalid.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Inactive</i>: Your device sends and expects no heartbeat. Set this option if you use devices from other manufacturers.</li> <li>• <i>Heartbeats (Expect only)</i>: Your device expects a heartbeat from the peer but does not send one itself.</li> <li>• <i>Heartbeats (Send only)</i>: Your device expects no heartbeat from the peer, but sends one itself.</li> <li>• <i>Heartbeats (send &amp; expect)</i>: Your device expects a heartbeat from the peer and sends one itself.</li> <li>• <i>Autodetect</i>: Automatic detection of whether the remote terminal is a <b>bintec</b> device. If it is, Heartbeat Both (for a remote terminal with <b>bintec</b>) or None (for a remote terminal without <b>bintec</b>) is set.</li> </ul>
Propagate PMTU	<p>Select whether the PMTU (Path Maximum Transfer Unit) is to be propagated during phase 2.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is enabled by default.</p>

## 16.1.4 XAUTH Profiles

In the **XAUTH Profiles** menu a list of all XAuth users is displayed.

Extended Authentication for IPSec (XAuth) is an additional authentication method for IPSec tunnel users.

The gateway can take on two different roles when using XAuth as it can act as a server or

as a client:

- As a server the gateway requires a proof of authorisation.
- As a client the gateway provides proof of authorisation.

In server mode multiple users can obtain authentication via XAuth, e.g. users of Apple iPhones. Authorisation is verified either on the basis of a list or via a Radius Server. If using a one time password (OTP), the password check can be carried out by a token server (e.g. SecOVID from Kobil), which is installed behind the Radius Server. If a company's headquarters is connected to several branches via IPSec, several peers can be configured. A specific user can then use the IPSec tunnel over various peers depending on the assignment of various profiles. This is useful, for example, if an employee works alternately in different branches, if each peer represents a branch and if the employee wishes to have on-site access to the tunnel.

XAuth is carried out once IPSec IKE (Phase 1) has been completed successfully and before IKE (Phase 2) begins.

If XAuth is used together with IKE Config Mode, the transactions for XAuth are carried out before the transactions for IKE Config Mode.

### 16.1.4.1 New

Choose the **New** button to set up new profiles.

The screenshot shows the web interface for a bintec R1200 device. The top navigation bar includes 'Language English', 'View Standard', 'Online Help', 'Logout', and the 'funkwerk' logo. The left sidebar contains a menu with categories like 'System Management', 'Physical Interfaces', 'LAN', 'Wireless LAN', 'Routing', 'WAN', 'VPN', 'IPSec', 'L2TP', 'PPTP', 'GRE', 'Firewall', 'VoIP', 'Local Services', 'Maintenance', 'External Reporting', and 'Monitoring'. The 'VPN' menu is expanded, showing 'IPSec' as the selected option. The main content area has tabs for 'IPSec Peers', 'Phase-1 Profiles', 'Phase-2 Profiles', 'XAUTH Profiles', 'IP Pools', and 'Options'. The 'XAUTH Profiles' tab is active, displaying a 'Basic Parameters' form. The form has the following fields:

Description	<input type="text"/>
Role	Server
Mode	radius
RADIUS Server Group ID	No Radius Server configured for XAUTH

At the bottom of the form are 'OK' and 'Cancel' buttons.

Fig. 120: VPN -> IPSec -> XAUTH Profiles -> New

The VPN -> IPSec -> XAUTH Profiles -> New menu consists of the following fields:

## Fields in the XAUTH Profiles Basic Parameters menu

Field	Description
Description	Enter a description for this XAuth profile.
Role	<p>Select the role of the gateway for XAuth authentication.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Server</i> (default value): The gateway requires a proof of authorisation.</li> <li>• <i>Client</i>: The gateway provides proof of authorisation.</li> </ul>
Mode	<p>Only if <b>Role</b> = <i>Server</i></p> <p>Select how authentication is carried out.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>RADIUS</i> (default value): Authentication is carried out via a Radius server. This is configured in the <b>System Management -&gt; Remote Authentication -&gt; RADIUS</b> menu and selected in the <b>RADIUS Server Group ID</b> field.</li> <li>• <i>Local</i>: Authentication is carried out via a local list.</li> </ul>
Name	<p>Only if <b>Role</b> = <i>Client</i></p> <p>Enter the authentication name of the client.</p>
Password	<p>Only if <b>Role</b> = <i>Client</i></p> <p>Enter the authentication password.</p>
RADIUS Server Group ID	<p>Only if <b>Role</b> = <i>Server</i></p> <p>Select the desired RADIUS group configured in <b>System Management -&gt; Remote Authentication -&gt; RADIUS</b>.</p>
Users	<p>Only if <b>Role</b> = <i>Server</i> and <b>Mode</b> = <i>Local</i></p> <p>If your gateway is configured as an XAuth server, the clients can be authenticated via a locally configured user list. Define the members of the user group of this XAUTH profile here by entering the authentication name of the client (<b>Name</b>) and the authentication password (<b>Password</b>). Add new members with</p>

Field	Description
	<b>Add.</b>

### 16.1.5 IP Pools

In the **IP Pools** menu a list of all IP pools for your configured IPsec connections is displayed.

If have set **IP Address Assignment** *IKE Config Mode Server* for an IPsec peer, you must define the IP pools from which the IP addresses are assigned.

Use the **Add** button to set up new IP pools.

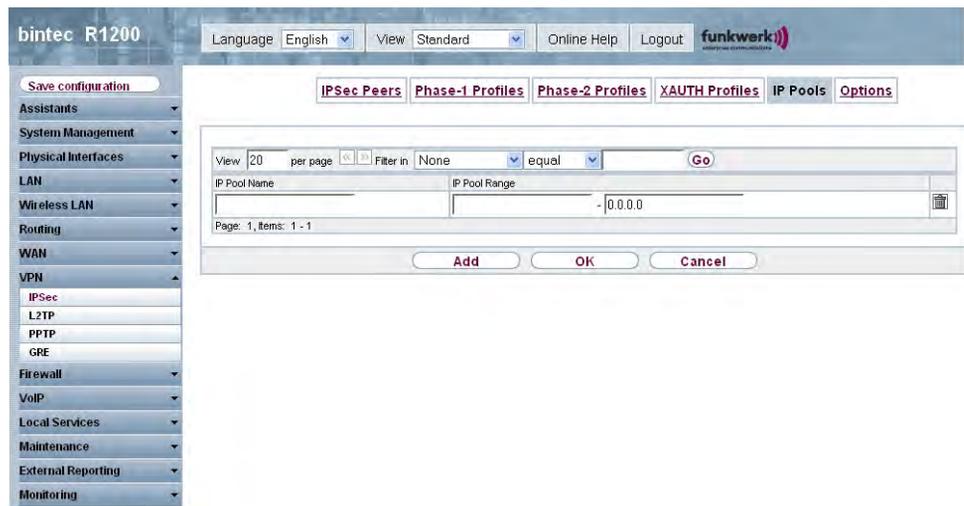


Fig. 121: VPN -> IPsec -> IP Pools -> Add

The **VPN -> IPsec -> IP Pools -> Add** menu consists of the following fields:

#### Fields in the Options IP Pools menu

Field	Description
IP Pool Name	Enter the name of the IP pool.
IP Pool Range	In the first field, enter the first IP address of the range. In the second field, enter the last IP address of the range.

## 16.1.6 Options

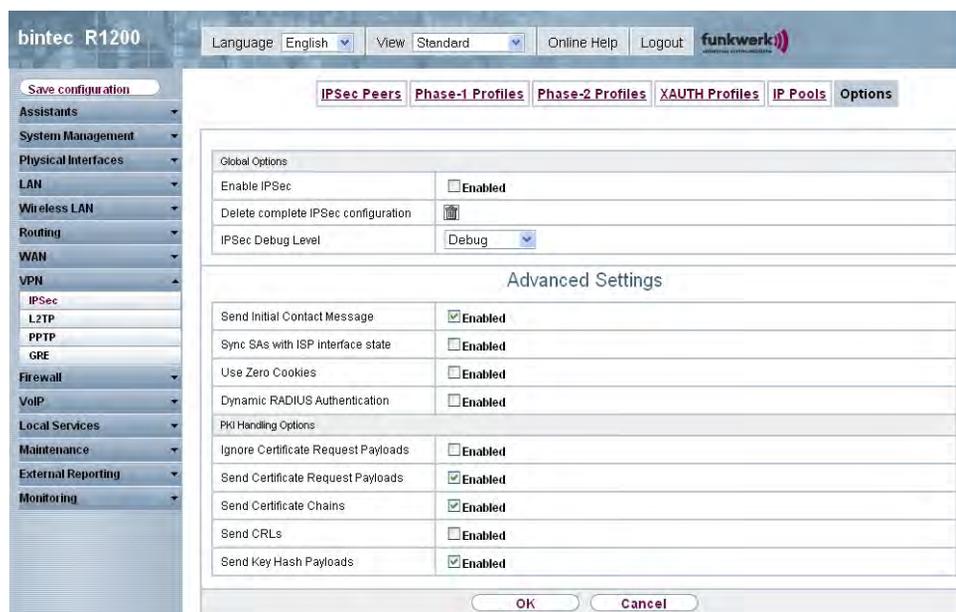


Fig. 122: VPN -> IPsec -> Options

The VPN -> IPsec -> Options menu consists of the following fields:

### Fields in the Options Global Options menu

Field	Description
Enable IPsec	Select whether you want to activate IPsec.  The function is activated with <i>Enabled</i> .  The function is active as soon as an IPsec Peer is configured.
Delete complete IPsec configuration	If you click the  icon, delete the complete IPsec configuration of your device.  This cancels all settings made during the IPsec configuration. Once the configuration is deleted, you can start with a completely new IPsec configuration.  You can only delete the configuration if <b>Enable IPsec</b> = <i>Not activated</i> .

Field	Description
IPSec Debug Level	<p>Select the priority of the syslog messages of the IPSec subsystem to be recorded internally.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Emergency</i> (highest priority)</li> <li>• <i>Alert</i></li> <li>• <i>Critical</i></li> <li>• <i>Error</i></li> <li>• <i>Warning</i></li> <li>• <i>Notice</i></li> <li>• <i>Information</i></li> <li>• <i>Debug</i> (default value, lowest priority)</li> </ul> <p>Syslog messages are only recorded internally if they have a higher or identical priority to that indicated, i.e. all messages generated are recorded at syslog level debug.</p>

The **Advanced Settings** menu is for adapting certain functions and features to the special requirements of your environment, i.e. mostly interoperability flags are set. The default values are globally valid and enable your system to work correctly to other **bintec** devices, so that you only need to change these values if the remote terminal is a third-party product or you know special settings are necessary. These may be needed, for example, if the remote end operates with older IPSec implementations.

The **Advanced Settings** menu consists of the following fields:

#### Fields in the Options Advanced Settings menu

Field	Description
Send Initial Contact Message	<p>Select whether IKE Initial Contact messages are to be sent during IKE (phase 1) if no SAs with a peer exist.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is enabled by default.</p>
Sync SAs with ISP interface state	<p>Select whether all SAs are to be deleted whose data traffic was routed via an interface on which the status has changed from <i>Up</i> to <i>Down</i>, <i>Dormant</i> or <i>Blocked</i>.</p> <p>The function is activated with <i>Enabled</i>.</p>

Field	Description
	The function is disabled by default.
Use Zero Cookies	<p>Select whether zeroed ISAKMP Cookies are to be sent.</p> <p>These are equivalent to the SPI (Security Parameter Index) in IKE proposals; as they are redundant, they are normally set to the value of the negotiation currently in progress. Alternatively, your device can use zeroes for all values of the cookie. In this case choose <i>Enabled</i>.</p>
Zero Cookie Size	<p>Only if <b>Use Zero Cookies</b> = activated.</p> <p>Enter the length in bytes of the zeroed SPI used in IKE proposals.</p> <p>The default value is <i>32</i>.</p>
Dynamic RADIUS Authentication	<p>Select whether RADIUS authentication is to be activated via IPsec.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>

#### Fields in the Advanced Settings PKI Editing Options menu

Field	Description
Ignore Certificate Request Payloads	<p>Select whether certificate requests received from the remote end during IKE (phase 1) are to be ignored.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
Send Certificate Request Payloads	<p>Select whether certificate requests are to be sent during IKE (phase 1).</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is enabled by default.</p>
Send Certificate Chains	<p>Select whether complete certificate chains are to be sent during IKE (phase 1).</p> <p>The function is activated with <i>Enabled</i>.</p>

Field	Description
	<p>The function is enabled by default.</p> <p>Deactivate this function if you do not wish to send the peer the certificates of all levels (from your level to the CA level).</p>
Send CRLs	<p>Select whether CRLs are to be sent during IKE (phase 1).</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
Send Key Hash Payloads	<p>Select whether key hash payloads are to be sent during IKE (phase 1).</p> <p>In the default setting, the public key hash of the remote end is sent together with the other authentication data. Only applies for RSA encryption; activate this function with <i>Enabled</i> to suppress this behaviour.</p>

## 16.2 L2TP

The layer 2 tunnel protocol (L2TP) enables PPP connections to be tunnelled via a UDP connection.

Your **bintec** device supports the following two modes:

- L2TP LNS Mode (L2TP Network Server): for incoming connections only
- L2TP LAC Mode (L2TP Access Concentrator): for outgoing connections only

Note the following when configuring the server and client: An L2TP tunnel profile must be created on each of the two sides (LAC and LNS). The corresponding L2TP tunnel profile is used on the initiator side (LAC) to set up the connection. The L2TP tunnel profile is needed on the responder side (LNS) to accept the connection.

### 16.2.1 Tunnel Profiles

In the **VPN -> L2TP -> Tunnel Profiles** menu a list of all configured tunnel profiles is shown.

#### 16.2.1.1 New

Choose the **New** button to set up new tunnel profiles.

The screenshot shows the configuration interface for a bintec R1200 device. The left sidebar contains a navigation menu with categories like Assistants, System Management, Physical Interfaces, LAN, Wireless LAN, Routing, WAN, VPN, IPsec, L2TP, PPTP, GRE, Firewall, VoIP, Local Services, Maintenance, External Reporting, and Monitoring. The 'VPN' menu is expanded, showing sub-items for IPsec, L2TP, PPTP, GRE, Firewall, and VoIP. The 'L2TP' sub-item is selected, leading to the 'Tunnel Profiles' configuration page. The page has tabs for 'Tunnel Profiles', 'Users', and 'Options'. The 'Tunnel Profiles' tab is active, showing a form with two sections: 'Basic Parameters' and 'Advanced Settings'. The 'Basic Parameters' section includes fields for Description (L2TP1), Local Hostname, Remote Hostname, and Password (masked with dots). The 'Advanced Settings' section includes fields for Local IP Address, Hello Interval (30 Seconds), Minimum Time between Retries (1 Seconds), Maximum Time between Retries (16 Seconds), Maximum Retries (5), and Data Packets Sequence Numbers (checkbox for Enabled). At the bottom of the form are 'OK' and 'Cancel' buttons.

Fig. 123: VPN -> L2TP -> Tunnel Profiles -> New

The VPN -> L2TP -> Tunnel Profiles -> New menu consists of the following fields:

#### Fields in the Tunnel Profiles Basic Parameters menu

Field	Description
Description	<p>Enter a description for the current profile.</p> <p>The device automatically names the profiles <i>L2TP</i> and numbers them, but the value can be changed.</p>
Local Hostname	<p>Enter the host name for LNS or LAC.</p> <ul style="list-style-type: none"> <li>• LAC: The <b>Local Hostname</b> is used in outgoing tunnel setup messages to identify this device and is associated with the <b>Remote Hostname</b> of a tunnel profile configured on the LNS. These tunnel setup messages are SCCRQs (Start Control Connection Request) sent from the LAC and SCCRPs (Start Control Connection Reply) sent from the LNS.</li> <li>• LNS: Is the same as the value for <b>Remote Hostname</b> of the incoming tunnel setup message from the LAC.</li> </ul>

Field	Description
Remote Hostname	<p>Enter the host name of the LNS or LAC.</p> <ul style="list-style-type: none"> <li>• LAC: Defines the value for <b>Local Host Name</b> of the LNS (contained in the SCCRQs received from the LNS and the SCCRPp received from the LAC). The <b>Local Hostname</b> configured in the LAC must match the <b>Remote Hostname</b> configured for the intended profile in the LNS and vice versa.</li> <li>• LNS: Defines the <b>Local Host Name</b> of the LAC. If the <b>Remote Hostname</b> field remains empty on the LNS, the related profile qualifies as the standard entry and is used for all incoming calls for which a profile with a matching <b>Remote Hostname</b> can be found.</li> </ul>
Password	<p>Enter the password to be used for tunnel authentication. Authentication between LAC and LNS takes place in both directions, i.e. the LNS checks the <b>Local Hostname</b> and the <b>Password</b> contained in the SCCRQ of the LAC and compares them with those specified in the relevant profile. The LAC does the same with the fields of the SCCRP of the LNS.</p> <p>If this field remains empty, authentication data in the tunnel setup messages are not sent and are ignored.</p>

#### Fields in the Tunnel Profiles LAC Mode Parameters menu

Field	Description
Remote IP Address	<p>Enter the fixed IP address of the LNS used as the destination address for connections based on this profile.</p> <p>The destination must be a device that can behave like an LNS.</p>
UDP Source Port	<p>Enter how the port number to be used as the source port for all outgoing L2TP connections based on this profile is to be determined.</p> <p>By default, the <b>Fixed</b> option is disabled, which means that ports are dynamically assigned to the connections that use this profile.</p> <p>If you want to enter a fixed port, enable the <b>Fixed</b> option. Select this option if you encounter problems with the firewall or NAT.</p> <p>The available values are 0 to 65535.</p>

Field	Description
UDP Destination Port	<p>Enter the destination port number to be used for all calls based on this profile. The remote LNS that receives the call must monitor this port on L2TP connections.</p> <p>Possible values are 0 ... 65535.</p> <p>The default value is 1701 (RFC 2661).</p>

The **Advanced Settings** menu consists of the following fields:

#### Fields in the menu Advanced Settings

Field	Description
Local IP Address	<p>Enter the IP address to be used as the source address for all L2TP connections based on this profile.</p> <p>If this field is left empty, your device uses the IP address of the interface used to reach <b>Remote IP Address</b> by the L2TP tunnel.</p>
Hello Interval	<p>Enter the interval (in seconds) between the sending of two L2TP HELLO messages. These messages are used to keep the tunnel open.</p> <p>The available values are 0 to 255, the default value is 30. The value 0 means that no L2TP HELLO messages are sent.</p>
Minimum Time between Retries	<p>Enter the minimum time (in seconds) that your device waits before resending a L2TP control packet for which it received no response.</p> <p>The wait time is dynamically extended until it reaches the <b>Maximum Time between Retries</b>. The available values are 1 to 255, the default value is 1.</p>
Maximum Time between Retries	<p>Enter the maximum time (in seconds) that your device waits before resending a L2TP control packet for which it received no response.</p> <p>The available values are 8 to 255, the default value is 16.</p>
Maximum Retries	<p>Enter the maximum number of times your device is to try to resend the L2TP control packet for which is received no response.</p>

Field	Description
	The available values are <i>8</i> to <i>255</i> , the default value is <i>5</i> .
Data Packets Sequence Numbers	Select whether your device is to use sequence numbers for data packets sent through a tunnel on the basis of this profile.  The function is not currently used.  The function is activated with <i>Enabled</i> .  The function is disabled by default.

## 16.2.2 Users

In the **VPN** -> **L2TP** -> **Users** menu a list of all configured L2TP partners is shown.

### 16.2.2.1 New

Choose the **New** button to set up new L2TP partners.

The screenshot shows the configuration interface for a bintec R1200 device. The left sidebar contains a navigation menu with categories like Assistants, System Management, Physical Interfaces, LAN, Wireless LAN, Routing, WAN, VPN, Firewall, and Monitoring. The main area is titled 'Users' and contains two sections: 'Basic Parameters' and 'Advanced Settings'.

**Basic Parameters:**

- Description: [Text Field]
- Connection Type:  LNS  LAC
- User Name: [Text Field]
- Password: [Masked Password Field]
- Always on:  Enabled
- Connection Idle Timeout: 300 Seconds
- IP Mode and Routes:
  - IP Address Mode:  Static  Provide IP Address
  - Default Route:  Enabled
  - Create NAT Policy:  Enabled
  - Local IP Address: [Text Field]
  - Route Entries: [Table with columns for Remote IP Address, Netmask, Metric, and an Add button]

**Advanced Settings:**

- Block after connection failure for: 300 Seconds
- Authentication: MS-CHAPv2
- Encryption:  None  Enabled  Windows compatible
- LCP Alive Check:  Enabled
- Prioritize TCP ACK Packets:  Enabled
- IP Options:
  - OSPF Mode:  Passive  Active  Inactive
  - Proxy ARP Mode:  Inactive  Up or Dormant  Up only
  - DNS Negotiation:  Enabled

Buttons for 'OK' and 'Cancel' are located at the bottom of the configuration area.

Fig. 124: VPN -> L2TP -> Users -> New

The VPN -> L2TP -> Users -> New menu consists of the following fields:

#### Fields in the Users Basic Parameters menu

Field	Description
Description	<p>Enter a name for uniquely identifying the L2TP partner.</p> <p>The first character in this field must not be a number and no special characters or umlauts must be used. The maximum length of the entry is 25 characters.</p>
Connection Type	<p>Select whether the L2TP partner is to take on the role of the L2TP network server (LNS) or the functions of a L2TP access concentrator client (LAC client).</p>

Field	Description
	<p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>LNS</i> (default value): If you select this option, the L2TP partner is configured so that it accepts L2TP tunnels and restores the encapsulated PPP traffic flow.</li> <li>• <i>LAC</i>: If you select this option, the L2TP partner is configured so that it encapsulates a PPP traffic flow in L2TP and sets up a L2TP tunnel to a remote LNS.</li> </ul>
Tunnel Profile	<p>Only for <b>Connection Type</b> = <i>LAC</i></p> <p>Select a profile created in the <b>Tunnel Profiles</b> menu for the connection to this L2TP partner.</p>
User Name	Enter the code of your device.
Password	Enter the password.
Always on	<p>Select whether the interface should always be activated.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
Connection Idle Timeout	<p>Only if <b>Always on</b> is disabled.</p> <p>Enter the idle time in seconds for static short hold. The static short hold setting determines how many seconds should pass between sending the last traffic data packet and clearing the connection.</p> <p>Possible values are <i>0</i> to <i>3600</i> (seconds). <i>0</i> deactivates the short hold. The default value is <i>300</i>.</p>

#### Fields in the Users IP Mode and Routes menu

Field	Description
IP Address Mode	<p>Select whether your device is to be assigned a static IP address or whether it should be assigned this dynamically.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Static</i> (default value): You enter a static IP address.</li> <li>• <i>Provide IP Address</i>: Only for <b>Connection Type</b> = <i>LNS</i></li> </ul>

Field	Description
	<p>Your device dynamically assigns an IP address to the remote terminal.</p> <ul style="list-style-type: none"> <li>• <i>Get IP Address</i>: Only for <b>Connection Type = LAC</b> Your device is dynamically assigned an IP address.</li> </ul>
Default Route	<p>Only if <b>IP Address Mode = Get IP Address</b> and <i>Static</i></p> <p>Select whether the route to this connection partner is to be defined as the default route.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
Create NAT Policy	<p>Only if <b>IP Address Mode = Get IP Address</b> and <i>Static</i></p> <p>Specify whether Network Address Translation (NAT) is to be activated for this connection.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
IP Assignment Pool (IPCP)	<p>Only if <b>IP Address Mode = Provide IP Address</b></p> <p>Select an IP pool configured in the <b>WAN -&gt; Internet + Dialup -&gt; IP Pools</b> menu.</p>
Local IP Address	<p>Only for <b>IP Address Mode = Static</b></p> <p>Enter the WAN IP address of your device.</p>
Route Entries	<p>Only for <b>IP Address Mode = Static</b></p> <p>Enter the <b>Remote IP Address</b> and <b>Netmask</b> of the L2TP partner LAN and the corresponding <b>Metric</b>. Add new entries with <b>Add</b>.</p>

The **Advanced Settings** menu consists of the following fields:

#### Fields in the menu Advanced Settings

Field	Description
Block after connection failure for	Enter the wait time in seconds before the device should try again after an attempt to set up a connection has failed. The default value is <i>300</i> .
Authentication	<p>Select the authentication protocol for this L2TP partner.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>PAP/CHAP/MS-CHAP</i> (default value): Primarily run CHAP, on denial, the authentication protocol required by the PPTP partner. (MSCHAP version 1 or 2 possible.)</li> <li>• <i>PAP</i>: Only run <i>PAP</i> (PPP Password Authentication Protocol); the password is transferred unencrypted.</li> <li>• <i>CHAP</i>: Only run <i>CHAP</i> (PPP Challenge Handshake Authentication Protocol as per RFC 1994); the password is transferred encrypted.</li> <li>• <i>PAP/CHAP</i>: Primarily run CHAP, otherwise PAP.</li> <li>• <i>MS-CHAPv1</i>: Only run MS-CHAP version 1 (PPP Microsoft Challenge Handshake Authentication Protocol).</li> <li>• <i>MS-CHAPv2</i>: Run MS-CHAP version 2 only.</li> </ul>
Encryption	<p>If necessary, select the type of encryption that should be used for data traffic to the L2TP partner. This is only possible if STAC or MS-STAC compression is not activated for the connection. If <b>Encryption</b> is set, the remote terminal must also support it, otherwise a connection cannot be set up.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>None</i>: MPP encryption is not used.</li> <li>• <i>Enabled</i> (default value): MPP encryption V2 with 128 bit is used to RFC 3078.</li> <li>• <i>Windows compatible</i>: MPP encryption V2 with 128 bit is used as compatible with Microsoft and Cisco.</li> </ul>
LCP Alive Check	<p>Check whether the reachability of the remote terminal is to be checked by sending LCP echo requests or replies. This is recommended for leased lines, PPTP and L2TP connections.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>

Field	Description
Prioritize TCP ACK Packets	<p>Select whether the TCP download is to be optimised in the event of intensive TCP upload. This function can be specially applied for asymmetrical bandwidths (ADSL).</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>

#### Fields in the Advanced Settings IP Options menu

Field	Description
OSPF Mode	<p>Select whether and how routes are propagated via the interface and/or OSPF protocol packets are to be sent.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Passive</i> (default value): OSPF is not activated for this interface, i.e. no routes are propagated or OSPF protocol packets sent over this interface. Networks reachable over this interface are, however, included when calculating the routing information and propagated over active interfaces.</li> <li>• <i>Active</i>: OSPF is activated for this interface, i.e. routes are propagated or OSPF protocol packets sent over this interface.</li> <li>• <i>Inactive</i>: OSPF is disabled for this interface.</li> </ul>
Proxy ARP Mode	<p>Select whether your device is to respond to ARP requests from its own LAN on behalf of the specific L2TP partner.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Inactive</i> (default value): Deactivates Proxy ARP for this L2TP partner.</li> <li>• <i>Up or Dormant</i>: Your device only responds to an ARP request if the status of the connection to the L2TP partner is <i>Up</i> (active) or <i>Dormant</i>. In the case of <i>Dormant</i>, your device only responds to the ARP request; the connection is not set up until someone actually wants to use the route.</li> <li>• <i>Up Only</i>: Your device responds to an ARP request only if the status of the connection to the L2TP partner is <i>Up</i> (active), i.e. a connection already exists to the L2TP partner.</li> </ul>
DNS Negotiation	<p>Select whether your device receives IP addresses for <b>Primary DNS Server, Secondary DNS Server, primary WINS</b> and <b>sec-</b></p>

Field	Description
	<p><b>andatory WINS</b> from the L2TP partner or sends these to the L2TP partner.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is enabled by default.</p>

### 16.2.3 Options

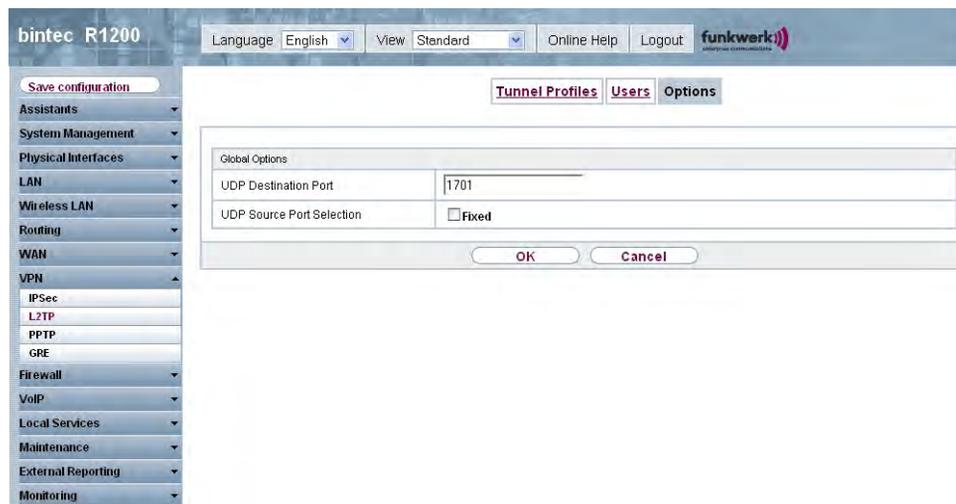


Fig. 125: VPN -> L2TP -> Options

The **VPN -> L2TP -> Options** menu consists of the following fields:

#### Fields in the Options Global Options menu

Field	Description
UDP Destination Port	<p>Enter the port to be monitored by the LNS on incoming L2TP tunnel connections.</p> <p>Available values are all whole numbers from 1 to 65535, the default value is 1701, as specified in RFC 2661.</p>
UDP Source Port Selection	<p>Select whether the LNS should only use the monitored port (<b>UDP destination port</b>) as the local source port for the L2TP connection.</p> <p>The function is activated with <i>Fixed</i>.</p>

Field	Description
	The function is disabled by default.

## 16.3 PPTP

The Point-to-Point Tunnelling Protocol (=PPTP) can be used to set up an encrypted PPTP tunnel to provide security for data traffic over an existing IP connection.

First a connection to an ISP (=Internet Service Provider) is set up at both sites. Once these connections are available, a tunnel is set up to the PPTP partner over the Internet using PPTP.

The PPTP subsystem sets up a control connection between the endpoints of the tunnel. This is used to send control data to set up, keep alive and terminate the connection between the two PPTP tunnel end-points. As soon as this control connection is set up, the PPTP transfers the traffic data packed in GRE packets (GRE = Generic Routing Encapsulation).

### 16.3.1 PPTP Tunnel

In the **PPTP Tunnel** menu, a list of all PPTP tunnels is shown.

### 16.3.1.1 New

Click on **New** to set up further PPTP partners.

The screenshot shows the configuration interface for a PPTP tunnel. The top bar includes 'bintec R1200', 'Language English', 'View Standard', 'Online Help', and 'Logout'. The sidebar menu on the left lists various configuration categories, with 'VPN' expanded to show 'PPTP'. The main configuration area is titled 'PPTP Tunnels Options' and contains the following sections:

- PPTP Partner Parameters:**
  - Description: [Text input field]
  - PPTP Mode:  PNS  Windows Client Mode
  - User Name: [Text input field]
  - Password: [Masked text input field]
  - Always on:  Enabled
  - Connection Idle Timeout: 300 Seconds
  - Remote PPTP IP Address: [Text input field]
- IP Mode and Routes:**
  - IP Address Mode:  Static  Provide IP Address
  - Default Route:  Enabled
  - Create NAT Policy:  Enabled
  - Local IP Address: [Text input field]
- Route Entries:**

Remote IP Address	Netmask	Metric
[Text input field]	[Text input field]	1

[Add button]
- Advanced Settings:**
  - Block after connection failure for: 300 Seconds
  - Authentication: MS-CHAPv2
  - Encryption:  None  Enabled  Windows compatible
  - LCP Alive Check:  Enabled
  - IP Options:
    - OSPF Mode:  Passive  Active  Inactive
    - Proxy ARP Mode:  Inactive  Up or Dormant  Up only
    - DNS Negotiation:  Enabled
  - PPTP Callback:  Enabled

Buttons: [OK] [Cancel]

Fig. 126: VPN -> PPTP -> PPTP Tunnels -> New

The VPN -> PPTP -> PPTP Tunnels -> New menu consists of the following fields:

#### Fields in the menu, PPTP Tunnels PPTP Partner Parameter

Field	Description
Description	Enter a unique name for the tunnel.  The first character in this field must not be a number and no special characters or umlauts must be used.

Field	Description
PPTP Mode	<p>Enter the role to be assigned to the PPTP interface.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>PNS</i> (default value): this assigns the PPTP interface the role of PPTP server.</li> <li>• <i>Windows Client Mode</i>: this assigns the PPTP interface the role of PPTP client.</li> </ul>
User Name	Enter the user name.
Password	Enter the password.
Always on	<p>Select whether the interface should always be activated.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
Connection Idle Timeout	<p>Only if <b>Always on</b> is disabled.</p> <p>Enter the idle interval in seconds. This determines how many seconds should pass between sending the last traffic data packet and clearing the connection.</p> <p>Possible values are <i>0</i> to <i>3600</i> (seconds). <i>0</i> deactivates the timeout.</p> <p>The default value is <i>300</i>.</p> <p>Example: <i>10</i> for FTP transmission, <i>20</i> for LAN-to-LAN transmission, <i>90</i> for Internet connections.</p>
Remote PPTP IP Address	Only for <b>PPTP Mode</b> = <i>PNS</i> Enter the IP address of the PPTP partner.
Remote PPTP IP Address/Hostname	Only for <b>PPTP Mode</b> = <i>Windows Client Mode</i> Enter the IP address of the PPTP partner.

#### Fields in the PPTP Tunnel IP Mode and Routes menu

Field	Description
IP Address Mode	<p>Select whether your device is to be assigned a static IP address or whether it should be assigned this dynamically.</p> <p>Possible values:</p>

Field	Description
	<ul style="list-style-type: none"> <li>• <i>Static</i> (default value): You enter a static IP address.</li> <li>• <i>Provide IP Address</i>: Only if <b>PPTP Mode = PNS</b>Your device dynamically assigns an IP address to the remote terminal.</li> <li>• <i>Get IP Address</i>: Only if <b>PPTP Mode = Windows Client Mode</b>Your device is dynamically assigned an IP address.</li> </ul>
Default Route	<p>Only if <b>IP Address Mode = Static</b></p> <p>Select whether the route to this connection partner is to be defined as the default route.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
Create NAT Policy	<p>Only if <b>IP Address Mode = Static</b></p> <p>When you configure an ISDN connection, specify whether Network Address Translation (NAT) is to be enabled.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
Local IP Address	<p>Only for <b>IP Address Mode = Static</b></p> <p>Assign the IP address from your LAN to the ISDN interface which is to be used as your device's internal source address.</p>
Route Entries	<p>Only if <b>IP Address Mode = Static</b></p> <p>Define routing entries for this connection partner.</p> <ul style="list-style-type: none"> <li>• <i>Remote IP Address</i>: IP address of the destination host or LAN.</li> <li>• <i>Netmask</i>: Netmask of <b>Remote IP Address</b>.</li> <li>• <i>Metric</i>: The lower the value, the higher the priority of the route (possible values 0...15). The default value is 1.</li> </ul>
IP Assignment Pool (IPCP)	<p>Only if <b>IP Address Mode = Provide IP Address</b></p> <p>Select an IP pool configured in the <b>WAN -&gt; Internet + Dialup -&gt; IP Pools</b> menu. If an IP pool has not been configured here yet, the message <i>Not yet defined</i> appears in this field.</p>

The **Advanced Settings** menu consists of the following fields:

### Fields in the menu **Advanced Settings**

Field	Description
Block after connection failure for	<p>Enter the wait time in seconds before the device should try again after an attempt to set up a connection has failed.</p> <p>The default value is <i>300</i>.</p>
Authentication	<p>Select the authentication protocol for this PPTP partner.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>PAP</i>: Only run <i>PAP</i> (PPP Password Authentication Protocol); the password is transferred unencrypted.</li> <li>• <i>CHAP</i>: Only run <i>CHAP</i> (PPP Challenge Handshake Authentication Protocol as per RFC 1994); the password is transferred encrypted.</li> <li>• <i>PAP/CHAP</i>: Primarily run CHAP, otherwise PAP.</li> <li>• <i>MS-CHAPv1</i>: Only run MS-CHAP version 1 (PPP Microsoft Challenge Handshake Authentication Protocol).</li> <li>• <i>PAP/CHAP/MS-CHAP</i>: Give priority to CHAP, if refused use the authentication protocol requested by the PPTP partner. (MSCHAP version 1 or 2 possible.)</li> <li>• <i>MS-CHAPv2</i>(default value): Run MS-CHAP version 2 only.</li> </ul>
Encryption	<p>If necessary, select the type of encryption that should be used for data traffic to the connection partner. If <b>Encryption</b> is set, the remote terminal must also support it, otherwise a connection cannot be set up.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>None</i>: MPP encryption is not used.</li> <li>• <i>Enabled</i> (default value): MPP encryption V2 with 128 bit is used to RFC 3078.</li> <li>• <i>Windows compatible</i>: MPP encryption V2 with 128 bit is used as compatible with Microsoft and Cisco.</li> </ul>
LCP Alive Check	<p>Check whether the reachability of the remote terminal is to be checked by sending LCP echo requests or replies. This is recommended for leased lines, PPTP and L2TP connections.</p>

Field	Description
	The function is activated with <i>Enabled</i> .
	The function is enabled by default.

### Fields in the Advanced Settings IP Options menu

Field	Description
OSPF Mode	<p>Select whether and how routes are propagated via the interface and/or OSPF protocol packets are to be sent.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Passive</i> (default value): OSPF is not activated for this interface, i.e. no routes are propagated or OSPF protocol packets sent over this interface. Networks reachable over this interface are, however, included when calculating the routing information and propagated over active interfaces.</li> <li>• <i>Active</i>: OSPF is activated for this interface, i.e. routes are propagated or OSPF protocol packets sent over this interface.</li> <li>• <i>Inactive</i>: OSPF is disabled for this interface.</li> </ul>
Proxy ARP Mode	<p>Select whether your device is to answer APR requests from your LAN on behalf of the specific PPTP partner.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Inactive</i> (default value): Disables Proxy-ARP (Address Resolution Protocol) for this PPTP partner.</li> <li>• <i>Up or Dormant</i>: Your device answers an APR request only if the status of the connection to the PPTP partner is <i>Up</i> or <i>Dormant</i>. In the case of <i>Dormant</i>, your device only responds to the ARP request; the connection is not set up until someone actually wants to use the route.</li> <li>• <i>Up Only</i>: Your device answers an APR request only if the status of the connection to the PPTP partner is <i>Active</i>, i.e. if a connection to the PPTP partner has already been established.</li> </ul>
DNS Negotiation	<p>Select whether your device should obtain IP addresses for <b>Primary DNS client</b>, <b>Secondary DNS client</b> from the PPTP partner or should send these to the PPTP partner.</p> <p>The function is activated with <i>Enabled</i>.</p>

Field	Description
	The function is enabled by default.

#### Fields in the Advanced Settings PPTP Callback menu

Field	Description
Callback	<p>Enables a PPTP tunnel through the Internet to be set up with a PPTP partner, even if the partner is currently inaccessible. As a rule, the PPTP partner will be requested by means of an ISDN call to go online and set up a PPTP connection.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p> <p>Note that you must activate the relevant option on the gateways of both partners. An ISDN connection is usually required for this function. Without ISDN, callback is only to be activated in special applications.</p>
Incoming ISDN Number	<p>Only if <b>Callback</b> is enabled.</p> <p>Enter the ISDN number from which the remote device calls the local device (calling party number).</p>
Outgoing ISDN Number	<p>Only if <b>Callback</b> is enabled.</p> <p>Enter the ISDN number with which the local device calls the remote device calls (called party number).</p>

#### Fields in the Advanced Settings Dial Port Selection (only if callback = enabled) menu

Field	Description
Selected Ports	<p>Enter the ISDN port over which callback is carried out.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>All Ports</i>: The callback is routed over an available ISDN port.</li> <li>• <i>Specify ports</i>: You can select the required ISDN port under <b>Specific Ports</b>.</li> </ul>
Specific Ports	<p>Only if <b>Selected Ports</b> = <i>Specify port</i> can you use <b>Add</b> to select further ports.</p>

## 16.3.2 Options

In this menu, you can make general settings of the global PPTP profile.

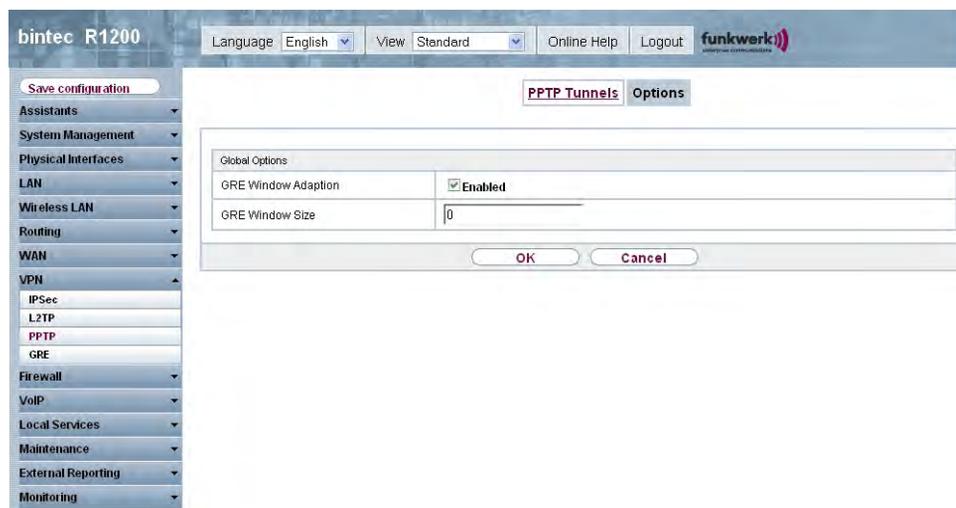


Fig. 127: VPN -> PPTP -> Options

The menu, **VPN -> PPTP -> Options** consists of the following fields:

### Fields in the Options Global Options menu

Field	Description
GRE Window Adaption	<p>Select whether the GRE Window Adaptation is to be enabled.</p> <p>This adaptation only becomes necessary if you have downloaded service pack 1 from the Microsoft Windows XP page and installed it. Since, in SP 1, Microsoft has changed the confirmation algorithm in the GRE protocol, the automatic window adaptation for GRE must be turned off on the funkwerk side.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is enabled by default.</p>
GRE Window Size	<p>Enter the maximum number of GRE packets that can be sent without confirmation.</p> <p>Windows XP uses a higher initial reception window in the GRE, which is why the maximum send window size on the funkwerk side must be adjusted here via the value, <b>GRE Window Size</b>.</p>

Field	Description
	Possible values are 0 to 256.
	The default value is 0.

## 16.4 GRE

Generic Routing Encapsulation (GRE) is a network protocol that encapsulates other protocols and transports them in the form of IP tunnels to the specified recipients.

The specification of the GRE protocol is available in two versions:

- GRE V.1 for use in PPTP connections (RFC 2637, configuration in the **PPTP** menu)
- GRE V.0 (RFC 2784) for general encapsulation using GRE

In this menu you can configure a virtual interface for using GRE V.0. The data traffic routed over this interface is then encapsulated using GRE and sent to the specified recipient.

### 16.4.1 GRE Tunnels

In the **VPN -> GRE -> GRE Tunnels** menu, a list of all configured GRE tunnels is shown.

#### 16.4.1.1 New

Choose the **New** button to set up new GRE tunnels.

The screenshot shows the configuration page for GRE Tunnels in the bintec R1200 web interface. The page title is "GRE Tunnels". On the left is a sidebar menu with various system management options. The main configuration area includes the following fields and controls:

- Basic Parameters:**
  - Description: Text input field
  - Local GRE IP Address: Text input field
  - Remote GRE IP Address: Text input field
  - Default Route:  Enabled
  - Local IP Address: Text input field
- Route Entries:**

Remote IP Address	Netmask	Metric
<input type="text"/>	<input type="text"/>	1

Below the table is an "Add" button.
- MTU: 1500
- Use key:  Enabled

At the bottom of the configuration area are "OK" and "Cancel" buttons.

Fig. 128: VPN -> GRE -> GRE Tunnels

The **VPN -> GRE -> GRE Tunnels** menu consists of the following fields:

#### Fields in the GRE Tunnels Basic Parameters menu

Field	Description
Description	Enter a description for the GRE tunnel.
Local GRE IP Address	<p>Enter the source IP address of the GRE packets to the GRE partner.</p> <p>If no IP address is given (this corresponds to IP address 0.0.0.0), the source IP address of the GRE packets is selected automatically from one of the addresses of the interface via which the GRE partner is reached.</p>
Remote GRE IP Address	Specify the destination IP address of the host or network to which the packets are to be sent through the GRE tunnel.
Default Route	<p>If you enable the <b>Default Route</b>, all data is automatically routed to one connection.</p> <p>The function is disabled by default.</p>
Local IP Address	Enter the IP address to be used as the source address for this GRE connection.
Route Entries	<p>Define other routing entries for this connection partner.</p> <p>Add a new entry with <b>Add</b>.</p> <ul style="list-style-type: none"> <li>• <i>Remote IP Address</i>: IP address of the destination host or network.</li> <li>• <i>Netmask</i>: Netmask of <b>Remote IP Address</b>. If no entry is made, your device uses a default netmask.</li> <li>• <i>Metric</i>: The lower the value, the higher the priority of the route (possible values 0... 15). The default value is 1.</li> </ul>
MTU	<p>Enter the maximum packet size (Maximum Transfer Unit, MTU) in bytes that is allowed for the GRE connection between the partners.</p> <p>Possible values are 1 to 8192.</p> <p>The default value is 1500.</p>
Use key	Enable the key input for the GRE connection, which makes it

Field	Description
	<p>possible to distinguish between several parallel GRE connections between two GRE partners (see RFC 1701).</p> <p>The key is activated with <i>Enable</i>.</p> <p>The function is disabled by default.</p>
Key Value	<p>Only if <b>Use key</b> is enabled.</p> <p>Enter the GRE connection key.</p> <p>Possible values are 0 to 2147483647.</p> <p>The default value is 0.</p>

## Chapter 17 Firewall

The Stateful Inspection Firewall (SIF) provided for **bintec** gateways is a powerful security feature.

The SIF with dynamic packet filtering has a decisive advantage over static packet filtering: The decision whether or not to send a packet cannot be made solely on the basis of source and destination addresses or ports but also using dynamic packet filtering based on the state of the connection to a partner.

This means packets that belong to an already active connection can also be forwarded. The SIF also accepts packets that belong to an "affiliated connection". The negotiation of an FTP connection takes place over port 21, for example, but the actual data exchange can take place over a completely different port.

### SIF and other security features

**bintec**'s Stateful Inspection Firewall fits into the existing security architecture of **bintec** device very well due to its simple configuration. The configuration work for the SIF is comparatively straightforward with systems like Network Address Translation (NAT) and IP Access Lists (IPAL).

As SIF, NAT and IPAL are active in the system simultaneously, attention must be given to possible interaction: If any packet is rejected by one of the security instances, this is done immediately. This is irrelevant whether another instance would accept it or not. Your need for security features should therefore be accurately analysed.

The essential difference between SIF and NAT/IPAL is that the rules for the SIF are generally applied globally, i.e. not restricted to one interface.

In principle, the same filter criteria are applied to the data traffic as those used in NAT and IPAL:

- Source and destination address of the packet (with an associated netmask)
- Service (preconfigured, e.g. Echo, FTP, HTTP)
- Protocol
- Port number(s)

To illustrate the differences in packet filtering, a list of the individual security instances and their method of operation is given below:

## NAT

One of the basic functions of NAT is the translation of the local IP addresses of your LAN into the global IP addresses you are assigned by your ISP and vice versa. All connections initiated externally are first blocked, i.e. every packet your device cannot assign to an existing connection is rejected. This means that a connection can only be set up from inside to outside. Without explicit permission, NAT rejects every access from the WAN to the LAN.

## IP Access Lists

Here packets are permitted or rejected exclusively on the basis of the criteria listed above, i.e. the state of the connection is not considered (except where **Services** = *tcp*).

## SIF

The SIF sorts out all packets that are not explicitly or implicitly allowed. The result can be a "deny", in which case no error message is sent to the sender of the rejected packet, or a "reject", where the sender is informed of the packet rejection.

The incoming packets are processed as follows:

- The SIF first checks if an incoming packet can be assigned to an existing connection. If so, it is forwarded. If the packet cannot be assigned to an existing connection, a check is made to see if a suitable connection is expected (e.g. as affiliated connection of an existing connection). If so, the packet is also accepted.
- If the packet cannot be assigned to any existing or expected connection, the SIF filter rules are applied: If a deny rule matches the packet, the packet is rejected without sending an error message to the sender of the packet; if a reject rule matches, the packet is rejected and an ICMP Host Unreachable message sent to the sender of the packet. The packet is only forwarded if an accept rule matches.
- All packets without matching rules are rejected without sending an error message to the sender when all the existing rules have been checked (=default behaviour).

## 17.1 Policies

## 17.1.1 Filter Rules

The default behavior with **Action** = *Access* consists of two implicit filter rules: If an incoming packet can be assigned to an existing connection and if a suitable connection is expected (e.g. such as an affiliated connection of an existing connection), the packet is allowed.

The sequence of filter rules in the list is relevant: The filter rules are applied to each packet in succession until a rule matches. If overlapping occurs, i.e. more than one filter rule matches a packet, only the first rule is executed. This means that if the first rule denies a packet, whereas a later rule allows it, the packet is rejected. A deny rule also has no effect if a relevant packet has previously been allowed by another filter rule.

In the **Firewall** -> **Policies** -> **Filter Rules** menu, a list of all configured filter rules is shown.



Fig. 129: Firewall -> Policies -> Filter Rules

You can use the  button to insert another policy above the list entry. The configuration menu for creating a new policy opens.

You can use the  button to move the list entry. A dialog box opens, in which you can select the position to which the policy is to be moved.

Moreover, the overview provides the option to show the firewall rules of the underlying settings made in the **System Management** -> **Administrative Access** -> **Access** menu. To do this, enable the **Show administrative access rules** option.

### 17.1.1.1 New

Choose the **New** button to set up new parameters.

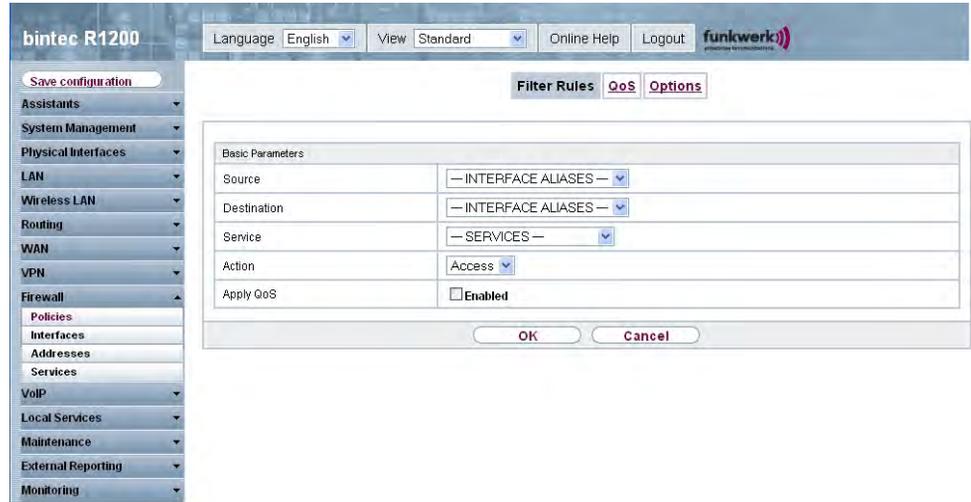


Fig. 130: Firewall -> Policies -> Filter Rules -> New

The **Firewall -> Policies -> Filter Rules -> New** menu consists of the following fields:

#### Fields in the Policies Basic Parameters menu

Field	Description
Source	<p>Select one of the preconfigured aliases for the source of the packet.</p> <p>The list includes all WAN-/LAN interfaces, interface groups (see <b>Firewall -&gt; Interfaces -&gt; Groups</b>), addresses (see <b>Firewall -&gt; Addresses -&gt; Address List</b>) and address groups (see <b>Firewall -&gt; Addresses -&gt; Groups</b>) for selection.</p> <p>The value <i>ANY</i> means that neither the source interface nor the source address is checked.</p>
Destination	<p>Select one of the preconfigured aliases for the destination of the packet.</p> <p>The list includes all WAN-/LAN interfaces, interface groups (see <b>Firewall -&gt; Interfaces -&gt; Groups</b>), addresses (see <b>Firewall -&gt; Addresses -&gt; Address List</b>) and address groups (see <b>Firewall -&gt; Addresses -&gt; Groups</b>) for selection.</p>

Field	Description
	<p>The value <i>Any</i> means that neither the destination interface nor the destination address is checked.</p>
Service	<p>Select one of the preconfigured services to which the packet to be filtered must be assigned.</p> <p>The extensive range of services configured ex works includes the following:</p> <ul style="list-style-type: none"> <li>• <i>FTP</i></li> <li>• <i>TELNET</i></li> <li>• <i>SMTP</i></li> <li>• <i>DNS</i></li> <li>• <i>HTTP</i></li> <li>• <i>NNTP</i></li> <li>• <i>Internet</i></li> <li>• <i>Netmeeting</i></li> </ul> <p>Other services are set up in <b>Firewall</b> -&gt; <b>Services</b> -&gt; <b>Service List</b>.</p> <p>In addition, the service groups configured in <b>Firewall</b> -&gt; <b>Services</b> -&gt; <b>Groups</b> can be selected.</p>
Action	<p>Select the action to be applied to a filtered packet.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Access</i> (default value): The packets are forwarded on the basis of the entries.</li> <li>• <i>Deny</i>: The packets are rejected.</li> <li>• <i>Reject</i>: The packets are rejected. An error message is issued to the sender of the packet.</li> </ul>
Apply QoS	<p>Only for <b>Action</b> = <i>Access</i></p> <p>Select whether you want to enable QoS for this policy with the priority selected in <b>Data Traffic Priority</b></p> <p>The function is activated with <i>Enabled</i>.</p> <p>The option is deactivated by default.</p>

Field	Description
	<p>If QoS is not activated for this policy, bear in mind that the data cannot be prioritised on the sender side either.</p> <p>A policy for which QoS has been enabled is also set for the firewall. Make sure therefore that data traffic that has not been expressly authorised is blocked by the firewall!</p>
Traffic Priority	<p>Only for <b>Apply QoS</b> = <i>enabled</i></p> <p>Select the priority with which the data specified by the policy is handled on the send side.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>None</i> (default value): No priority.</li> <li>• <i>Low Latency</i>: Low Latency Transmission (LTT), i.e. handling of data with the lowest possible latency, e.g. suitable for VoIP data.</li> <li>• <i>High</i></li> <li>• <i>Medium</i></li> <li>• <i>Low</i></li> </ul>

## 17.1.2 QoS

More and more applications need increasingly larger bandwidths, which are not always available. Quality of Service (QoS) makes it possible to distribute the available bandwidths effectively and intelligently. Certain applications can be given preference and bandwidth reserved for them.

In the **Firewall** -> **Policies** -> **QoS** menu, a list of all QoS rules is shown.

### 17.1.2.1 New

Choose the **New** button to set up new QoS rules.

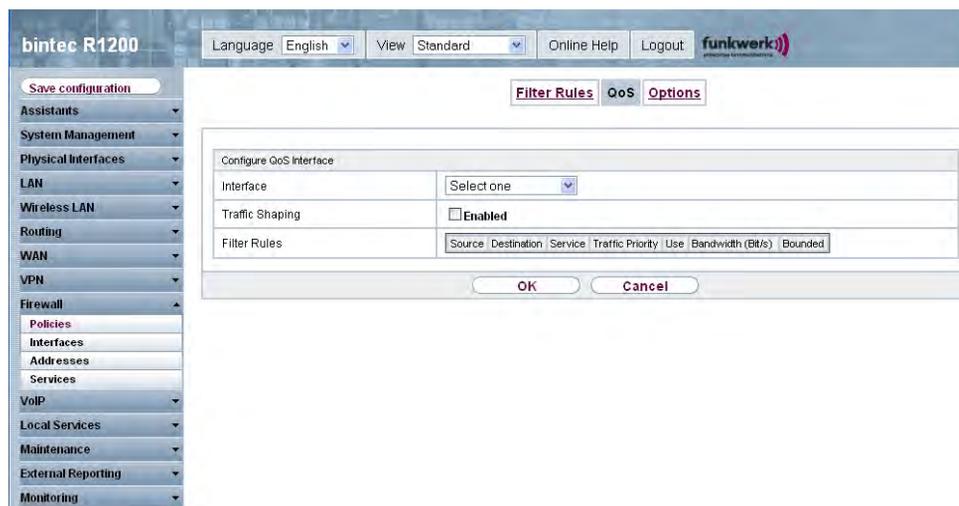


Fig. 131: Firewall -> Policies -> QoS -> New

The **Firewall -> Policies -> QoS -> New** menu consists of the following fields:

#### Fields in the QoS Configure QoS Interface menu

Field	Description
Interface	Select the interface on which bandwidth management is to be carried out.
Traffic Shaping	Select whether you want to activate bandwidth management for the selected interface.  The function is activated with <i>Enabled</i> .  The function is disabled by default.
Specify bandwidth	Only for <b>Traffic Shaping</b> = <i>Enabled</i> .  Enter the maximum available bandwidth in kbps for the selected interface.
Filter Rules	This field contains a list of all configured firewall policies for which QoS was enabled ( <b>Apply QoS</b> = <i>Enabled</i> ). The following options are available for each list entry: <ul style="list-style-type: none"> <li>• <b>Use:</b> Select whether this entry should be assigned to the QoS interface. The option is deactivated by default.</li> <li>• <b>Bandwidth:</b> Enter the maximum available bandwidth in Bps</li> </ul>

Field	Description
	<p>for the service specified under <b>Services</b>. 0 is entered by default.</p> <ul style="list-style-type: none"> <li>• <b>Fixed</b>: Select whether the bandwidth defined in <b>Bandwidth</b> can be exceeded in the longer term. By activating this field, you specify that it cannot be exceeded. If the option is deactivated, the bandwidth can be exceeded and the excess data rate is handled in accordance with the priority defined in the firewall policy. The option is deactivated by default.</li> </ul>

### 17.1.3 Options

In this menu, you can disable or enable the firewall and can log its activities. In addition, you can define after how many seconds of inactivity a session shall be ended.

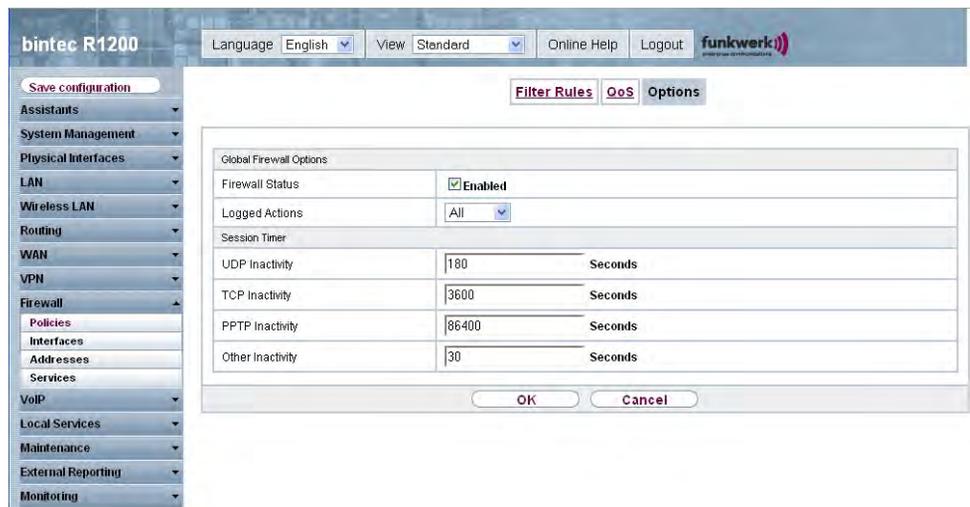


Fig. 132: Firewall -> Policies -> Options

The **Firewall -> Policies -> Options** menu consists of the following fields:

#### Fields in the Options Global Firewall Options menu

Field	Description
Firewall Status	<p>Enable or disable the firewall function.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is enabled by default.</p>

Field	Description
Logged Actions	<p>Select the firewall syslog level.</p> <p>The messages are output together with messages from other subsystems.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>All</i> (default value): All firewall activities are displayed.</li> <li>• <i>Deny</i> : Only reject and deny events are shown, see "Action".</li> <li>• <i>Accept</i> : Only accept events are shown.</li> <li>• <i>None</i>: Syslog messages are not generated.</li> </ul>

#### Fields in the Options Session Timer menu

Field	Description
UDP Inactivity	<p>Enter the inactivity time after which a UDP session is to be regarded as expired (in seconds).</p> <p>Possible values are 30 to 86400.</p> <p>The default value is 180.</p>
TCP Inactivity	<p>Enter the inactivity time after which a TCP session is to be regarded as expired (in seconds).</p> <p>Possible values are 30 to 86400.</p> <p>The default value is 3600.</p>
PPTP Inactivity	<p>Enter the inactivity time after which a PPTP session is to be regarded as expired (in seconds).</p> <p>Possible values are 30 to 86400.</p> <p>The default value is 86400.</p>
Other Inactivity	<p>Enter the inactivity time after which a session of another type is to be regarded as expired (in seconds).</p> <p>Possible values are 30 to 86400.</p> <p>The default value is 30.</p>

## 17.2 Interfaces

### 17.2.1 Groups

In the **Firewall** -> **Interfaces** -> **Groups** menu, a list of all configured interface groups is shown.

You can group together the interfaces of your device. This makes it easier to configure fire-wall rules.

#### 17.2.1.1 New

Choose the **New** button to set up new interface groups.

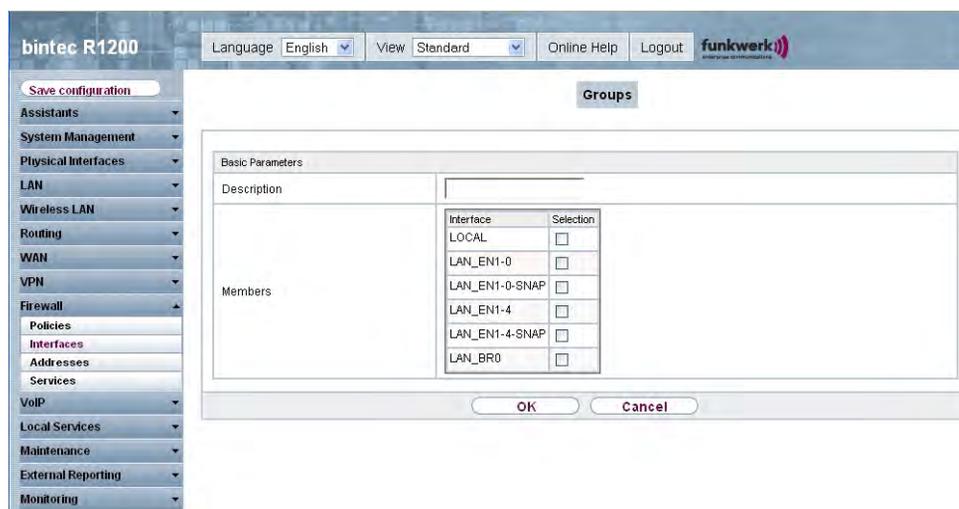


Fig. 133: Firewall -> Interfaces -> Groups -> New

The **Firewall** -> **Interfaces** -> **Groups** -> **New** menu consists of the following fields:

#### Fields in the Groups Basic Parameters menu

Field	Description
Description	Enter the desired description of the interface group.
Members	Select the members of the group from the available interfaces. To do this, activate the field in the <b>Members</b> column.

## 17.3 Addresses

### 17.3.1 Address List

In the **Firewall** -> **Addresses** -> **Address List** menu, a list of all configured addresses is shown.

#### 17.3.1.1 New

Choose the **New** button to set up new addresses.

The screenshot shows the bintec R1200 configuration interface. The top navigation bar includes 'Language English', 'View Standard', 'Online Help', 'Logout', and the 'funkwerk' logo. A left sidebar contains a tree view with categories like 'System Management', 'Physical Interfaces', 'Routing', 'WAN', 'VPN', 'Firewall', 'VoIP', 'Local Services', 'Maintenance', 'External Reporting', and 'Monitoring'. The 'Firewall' section is expanded, showing 'Policies', 'Interfaces', 'Addresses', and 'Services'. The 'Addresses' menu item is highlighted. The main content area displays the 'Address List' dialog box, which has a 'Groups' button and a 'Basic Parameters' section. The 'Basic Parameters' section contains three fields: 'Description' (text input), 'Address Type' (radio buttons for 'Address / Subnet' and 'Address Range'), and 'Address / Subnet' (text input with a slash separator). At the bottom of the dialog are 'OK' and 'Cancel' buttons.

Fig. 134: Firewall -> Addresses -> Address List -> New

The **Firewall** -> **Addresses** -> **Address List** -> **New** menu consists of the following fields:

#### Fields in the Address List Basic Parameters menu

Field	Description
Description	Enter the desired description of the address.
Address Type	Select the type of address you want to specify.  Possible values: <ul style="list-style-type: none"> <li><i>Address / Subnet</i> (default value): Enter an IP address with subnet mask.</li> </ul>

Field	Description
	<ul style="list-style-type: none"> <li><i>Address Range</i>: Enter an IP address range with a start and end address.</li> </ul>
Address / Subnet	<p>Only if <b>Address Type</b> = <i>Address / Subnet</i></p> <p>Enter the IP address of the host or a network address and the related netmask.</p> <p>The default value is <i>0.0.0.0</i>.</p>
Address Range	<p>Only if <b>Address Type</b> = <i>Address Range</i></p> <p>Enter the start and end IP address of the range.</p>

## 17.3.2 Groups

In the **Firewall -> Addresses -> Groups** menu, a list of all configured address groups is shown.

You can group together addresses. This makes it easier to configure firewall rules.

### 17.3.2.1 New

Choose the **New** button to set up new address groups.

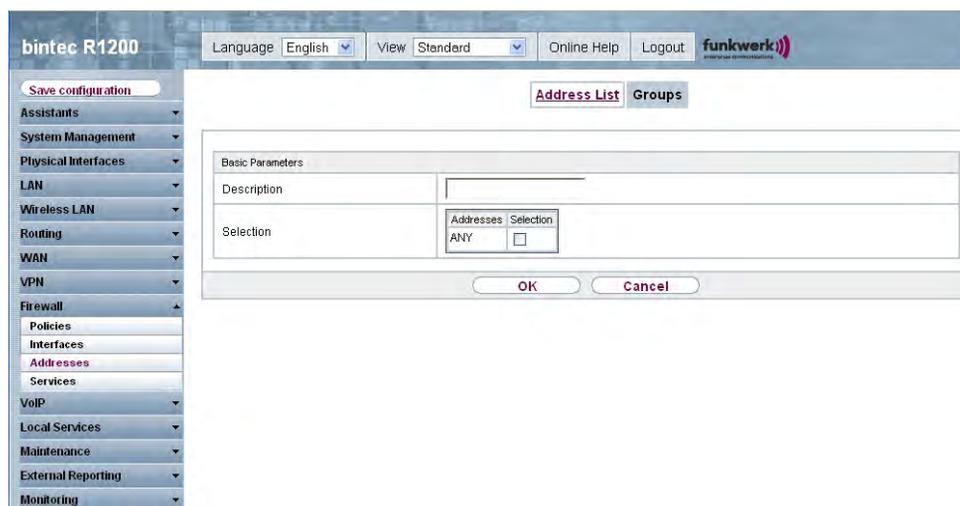


Fig. 135: Firewall -> Addresses -> Groups -> New

The **Firewall -> Addresses -> Groups-> New** menu consists of the following fields:

#### Fields in the Groups Basic Parameters menu

Field	Description
Description	Enter the desired description of the address group.
Selection	Select the members of the group from the available <b>Addresses</b> . To do this, enable the field in the <b>Selection</b> column.

## 17.4 Services

### 17.4.1 Service List

In the **Firewall -> Services -> Service List** menu, a list of all available services is shown.

#### 17.4.1.1 New

Choose the **New** button to set up new services.

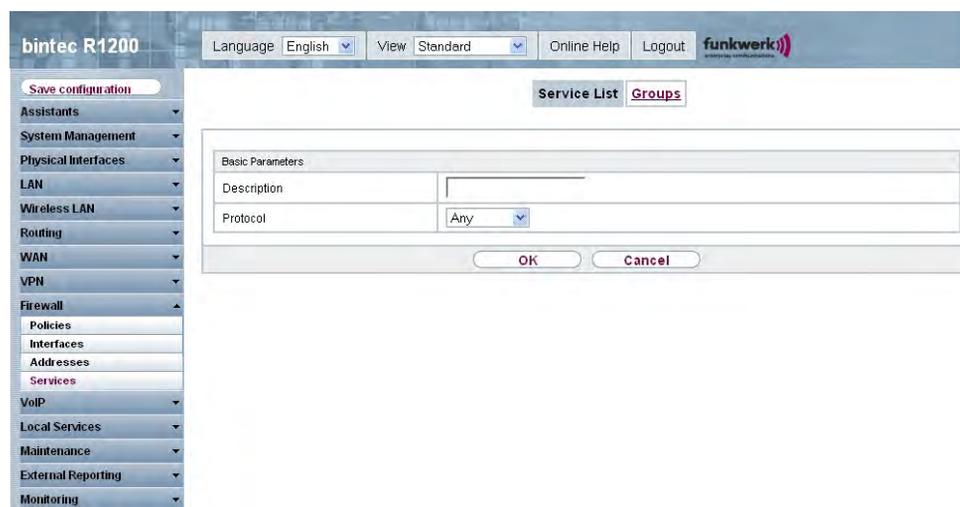


Fig. 136: **Firewall -> Services -> Service List -> New**

The **Firewall -> Services -> Service List -> New** menu consists of the following fields:

#### Fields in the Service List Basic Parameters menu

Field	Description
Description	Enter an alias for the service you want to configure.
Protocol	Select the protocol on which the service is to be based. The most important protocols are available for selection.
Destination Port Range	<p>Only if <b>Protocol</b> = <i>TCP</i> , <i>UDP/TCP</i> or <i>UDP</i></p> <p>In the first field, enter the destination port via which the service is to run.</p> <p>If a port number range is specified, in the second field enter the last port of the port range. By default the field does not contain an entry. If a value is displayed, this means that the previously specified port number is verified. If a port range is to be checked, enter the upper limit here.</p> <p>Possible values are <i>1</i> to <i>65535</i>.</p>
Source Port Range	<p>Only if <b>Protocol</b> = <i>TCP</i> , <i>UDP/TCP</i> or <i>UDP</i></p> <p>In the first field, enter the source port to be checked, if applicable.</p> <p>If a port number range is specified, in the second field enter the last port of the port range. By default the field does not contain an entry. If a value is displayed, this means that the previously specified port number is verified. If a port range is to be checked, enter the upper limit here.</p> <p>Possible values are <i>1</i> to <i>65535</i>.</p>
Type	<p>Only if <b>Protocol</b> = <i>ICMP</i></p> <p>The <b>Type</b> field shows the class of ICMP messages, the <b>Code</b> field specifies the type of message in greater detail.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Any</i> (default value)</li> <li>• <i>Echo Replay</i></li> <li>• <i>Destination Unreachable</i></li> <li>• <i>Source Quench</i></li> <li>• <i>Redirect</i></li> </ul>

Field	Description
	<ul style="list-style-type: none"> <li>• <i>Echo</i></li> <li>• <i>Time Exceeded</i></li> <li>• <i>Parameter Problem</i></li> <li>• <i>Timestamp</i></li> <li>• <i>Timestamp Reply</i></li> <li>• <i>Information Request</i></li> <li>• <i>Information Reply</i></li> <li>• <i>Address Mask Request</i></li> <li>• <i>Address Mask Reply</i></li> </ul>
Code	<p>ICMP code options can only be selected if <b>Type</b> = <i>Destination Unreachable</i>.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Any (default value)</i></li> <li>• <i>Net Unreachable</i></li> <li>• <i>Host Unreachable</i></li> <li>• <i>Protocol Unreachable</i></li> <li>• <i>Port Unreachable</i></li> <li>• <i>Fragmentation Needed</i></li> <li>• <i>Communication with Destination Network is Administratively Prohibited</i></li> <li>• <i>Communication with Destination Host is Administratively Prohibited</i></li> </ul>

## 17.4.2 Groups

In the **Firewall** -> **Services** -> **Groups** menu, a list of all configured service groups is shown.

You can group together services. This makes it easier to configure firewall rules.

### 17.4.2.1 New

Choose the **New** button to set up new service groups.

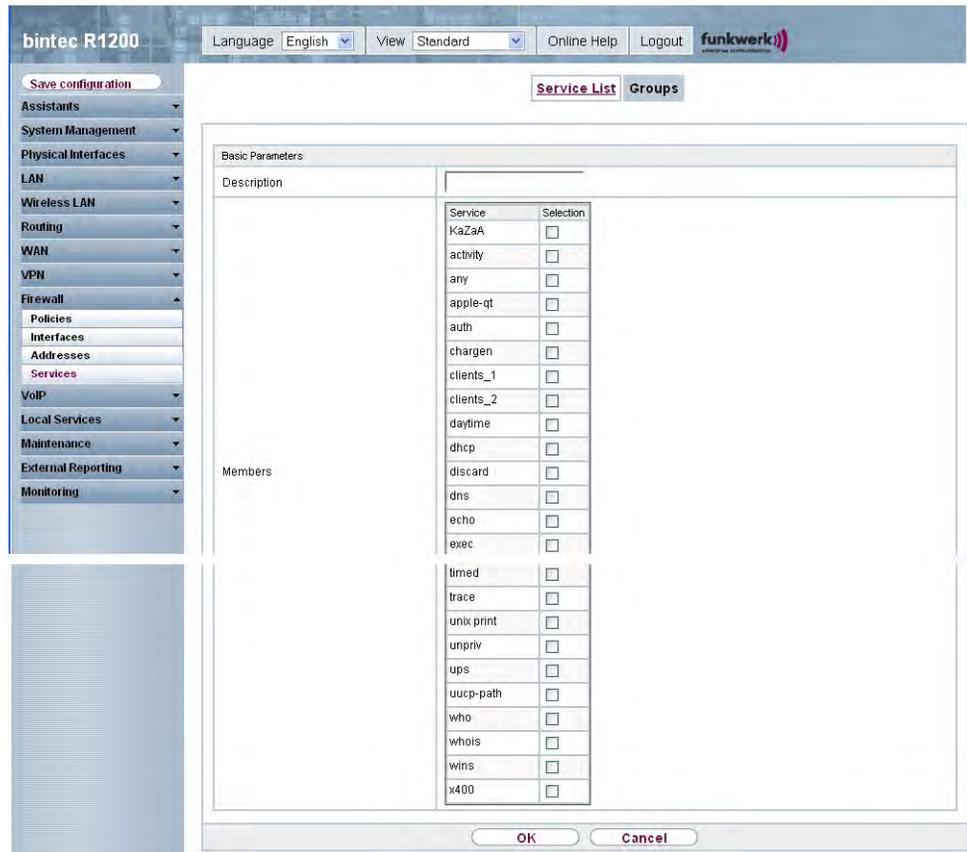


Fig. 137: Firewall -> Services -> Groups -> New

The Firewall -> Services -> Groups -> New menu consists of the following fields:

#### Fields in the Groups Basic Parameters menu

Field	Description
Description	Enter the desired description of the service group.
Members	Select the members of the group from the available service aliases. To do this, activate the field in the <b>Members</b> column.

## Chapter 18 VoIP

Voice over IP (VoIP) uses the IP protocol for voice and video transmission.

The main difference compared with conventional telephony is that the voice information is not transmitted over a switched connection in a telephone network, but divided into data packets by the Internet protocol and these packets are then passed to the destination over undefined paths in a network. This technology uses the existing network infrastructure for voice transmission and shares this with other communication services.

The Session Initiation Protocol (SIP) is used to establish, clear and control a communication session.

### 18.1 Application Level Gateway

To enable IP telephones to connect by SIP to a VoIP Provider your device has an Application Level Gateway (ALG), i.e. an appropriate proxy that implements the necessary NAT and firewall releases.



#### Note

The Application Level Gateway must always be used if NAT is enabled on the interface that makes the connection to the Internet.

#### 18.1.1 SIP Proxies

Here you can view a list of application level gateway entries that have already been configured. These entries enable the ALG. Each entry defines a particular TCP or UDP destination port that is to be supervised by the ALG. In the ex works state, there are two entries configured for the SIP Ports TCP 5060 and UDP 5060 in accordance with the IANA definition.

### 18.1.1.1 Edit/New

Choose the  icon to edit existing entries. Choose the **New** button to create application level gateway entries.

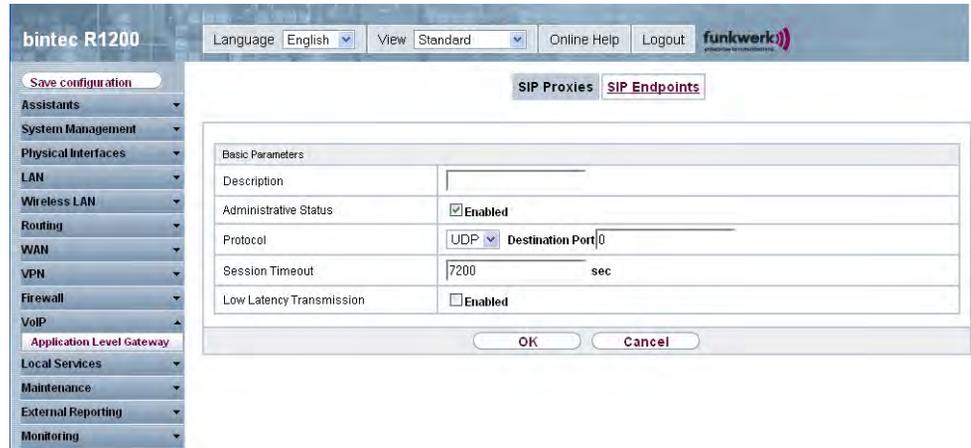


Fig. 138: VoIP -> Application Level Gateway -> SIP Proxies -> Edit/New

The VoIP -> Application Level Gateway -> SIP Proxies -> Edit/New menu, consists of the following fields:

#### Fields in the SIP Proxies Basic Parameters menu

Field	Description
Description	Enter the name of the application level gateway.
Administrative Status	Select whether the SIP proxy should be enabled or disabled.  The function is activated by choosing <i>Enabled</i> .  The function is enabled by default.
Protocol	Select the protocol to be used.  Possible values: <i>UDP</i> (default value) or <i>TCP</i> .  Under <b>Destination Port</b> enter the port to be supervised by the proxy.  or each destination port to which VoIP clients from the LAN can connect, you must configure a proxy.  The ports can be provider-specific.

Field	Description
Session Timeout	<p>Enter the time in seconds for which a session stays up if no data packets are sent or received.</p> <p>This value must be greater than the SIP Expire Time of the connected SIP client (SIP telephone, terminal adapter etc.)</p> <p>The default value is <i>1800</i>.</p>
Low Latency Transmission	<p>Specify whether a mechanism should be used to minimise the transit time of VoIP data packets between two subscribers. This guarantees good voice quality with high line load.</p> <p>Note that low latency transmission only has to be enabled for calls that are not established via the connections configured in <b>VoIP -&gt; Media Gateway</b>.</p> <p>The function is activated by choosing <i>Enabled</i>.</p> <p>The function is disabled by default.</p>

## 18.1.2 SIP Endpoints

Shows the sessions that are currently being managed by ALG.

This includes static entries to make internal SIP servers/proxies (e.g. internal Asterisk server) accessible from the WAN (Internet) by NAPT. In addition, internal SIP clients without registration can be made accessible using a static entry. All active SIP sessions that have been initiated from internal SIP terminals are recognised dynamically and listed here. These are only displayed for monitoring and administration and cannot be edited.



### Note


All automatically created entries that are not used for longer than 24 hours are automatically deleted from the table.

### 18.1.2.1 Edit/New

Choose the **New** button to add static entries for SIP terminals in the LAN that are to be accessible by terminals from the WAN across the NAPT barrier. Choose the  icon to edit existing static entries.

**Note**

Entries created dynamically for active sessions cannot be edited. These entries can only be removed resulting in the immediate termination of the corresponding SIP connection.

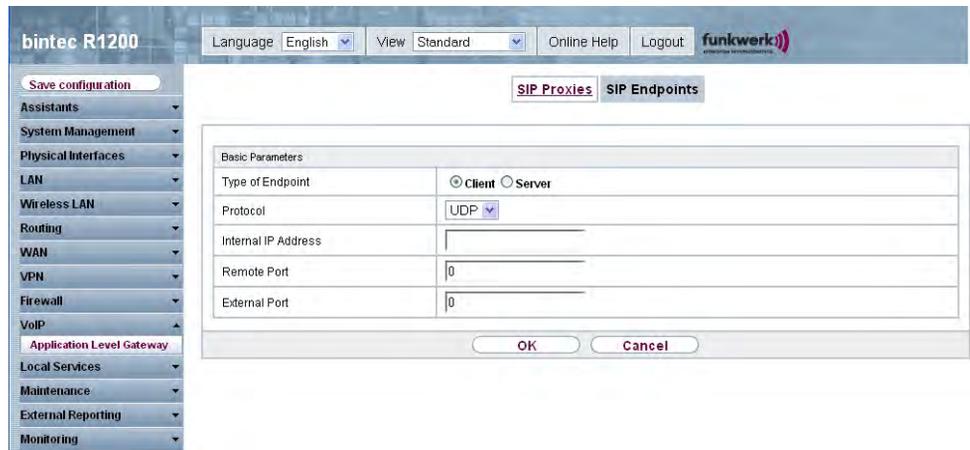

**Fig. 139: VoIP -> Application Level Gateway -> SIP Endpoints -> Edit/New**

The **VoIP -> Application Level Gateway -> SIP Endpoints -> Edit/New** menu, consists of the following fields:

#### Fields in the SIP Endpoints Basic Parameters menu

Field	Description
Type of Endpoint	<p>Select the role for the SIP endpoint in the LAN.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li><i>Client</i> (default value): The internal SIP endpoint is a SIP client (e.g. telephone).</li> <li><i>Server</i>: The internal SIP endpoint is a SIP server into which the SIP endpoint can login externally.</li> </ul>
Protocol	<p>Select the protocol to be used for data transmission.</p> <p>Possible values: <i>UDP</i> (default value) or <i>TCP</i>.</p> <p>If a protocol has been automatically recognised, it should not be changed.</p>

Field	Description
Internal IP Address	Specify the IP address for the internal SIP endpoint in the LAN.
Remote Port	Only for <b>Type of Endpoint</b> = <i>Client</i> . Enter the port of the removed SIP terminal (in the WAN).
Internal Port	Only for <b>Type of Endpoint</b> = <i>Server</i> . Enter the port for the internal SIP endpoint in the LAN.
External Port	Specify the port on the WAN site of the gateway that is used for access through the NAPT barriers to a SIP endpoint in the LAN.  For clients, the external port is recognised automatically and should not be changed.

## 18.2 Media Gateway

A media gateway serves as a translation instance between different telecommunications networks, e.g between the plain old phone network and the next generation networks (IP networks).

With the Funkwerk Media Gateway, a company equipped with an automatic PBX on a wired telephone network can be connected to a SIP Trunking Service Provider on the Internet in order to use IP telephony.

The Funkwerk Media Gateway supports the binding of several SIP Provider Accounts. With this gateway, you can set up extensions, create an extension number plan and configure exchange functions and optimise voice data transmission for low bandwidth of the upload connection.



### Note

Your device must be fitted with a DSP module to be able to use the media gateway functions. Information on building in the DSP module is provided in the installation instructions included with the module.

## 18.2.1 Extension

Here you can configure the numbers of the terminal devices (=Extensions) connected to the media gateway, i.e. the numbers of the SIP terminals and the numbers of the ISDN terminals, depending on the available interfaces.

In the **VoIP -> Media Gateway -> Extensions** menu, a list of all existing extensions is shown. You can define for all extensions whether SIP connections are encrypted over TLS.

### Fields in the list Extensions SIP over TLS

Field	Description
Local Certificate	<p>Select a certificate that you want to use for the TLS connection.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Internal</i> (default value): Select this option if you want to use the certificate built into the device.</li> <li>• <i>&lt;Certificate name&gt;</i>: Select the entered certificate under <b>System Management -&gt; Certificates -&gt; Certificate List</b> .</li> </ul>

### 18.2.1.1 Edit/New

Choose the  icon to edit existing entries. Select the **New** button to create new extensions.

Fig. 140: VoIP -> Media Gateway -> Extensions -> Edit/New

The **VoIP -> Media Gateway -> Extensions -> Edit/New** menu consists of the following fields:

#### Fields in the Extensions Basic Parameters menu

Field	Description
Description	Enter the name of the extension.
Extension / User Name	ISDN terminals: Enter the subscriber number the extension. SIP terminals: Enter the user name. A maximum of 40 characters can be entered.
Interface Type	Select the interface type to be used. The selection depends on the interfaces available. Possible values: <ul style="list-style-type: none"> <li>• <i>SIP</i>: a SIP terminal device is used for the call.</li> </ul>

Field	Description
	<ul style="list-style-type: none"> <li>• <i>ISDN</i>: an ISDN terminal device is used for the call. Can only be selected if ISDN interfaces configured with Euro ISDN point-to-multipoint (NT mode) are available.</li> </ul>
Select ISDN interface	<p>Only for <b>Interface Type</b> = <i>ISDN</i>.</p> <p>Select an ISDN interface. The ISDN interfaces you can select depends on the device used.</p>
Registration	<p>Only for <b>Interface Type</b> = <i>SIP</i>.</p> <p>Specify whether the registration mechanism is to be used by SIP REGISTER. Normally, every SIP client (user) sends its current position to a REGISTRAR server by means of a REGISTER message. This information about the user and his current address is held by the REGISTRAR server and queried by other proxies to find the user.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is enabled by default.</p> <p>Apart from this standard procedure, the relevant data can also be sent to a particular IP address that is already known to the correspondent. Registration and authentication are not then needed and the <b>Registration</b> function is disabled. An example of this method is Microsoft Exchange SIP.</p>
Expire Time	<p>Only if <b>Registration</b> is enabled.</p> <p>Enter the time in seconds after which the current registration becomes invalid and a new registration request is therefore sent.</p> <p>For clients, the external port is recognised automatically and should not be changed.</p> <p>Possible values are 0 to 3600.</p> <p>The default value is 60.</p>
SIP Endpoint IP Address	<p>Only if <b>Registration</b> is disabled.</p> <p>For configurations with no registration (e.g. connection to a Microsoft Exchange Communication Server) the connection can be set up as a static host. This requires you to specify the static</p>

Field	Description
	IP address of the terminal.
Authentication ID	<p>Only for <b>Interface Type</b> = <i>SIP</i></p> <p>Enter a name that is to be used for authentication.</p> <p>A maximum of 20 characters can be entered.</p> <p>The name given here must also be entered on the SIP telephone.</p> <p>If you do not enter a name, the name in the <b>Extension / User Name</b> field is used.</p>
Password	<p>Only for <b>Interface Type</b> = <i>SIP</i></p> <p>Enter a password here.</p> <p>A maximum of 20 characters can be entered.</p> <p>The password given here must also be entered on the SIP telephone.</p>
Protocol	<p>Select the protocol to be used for data transmission.</p> <p>Possible values: <i>UDP</i> (default value), <i>TCP</i> or <i>TLS</i> .</p> <p>If a protocol has been automatically recognised, it should not be changed.</p>
Port	<p>Enter the number of the UDP, TCP or TLS port to be used for the connection to the server or proxy.</p> <p>Possible values are 0 to 65535.</p> <p>The default value is 5060.</p>

#### Fields in the Advanced Settings Codec Settings menu

Field	Description
Codec Proposal Sequence	<p>Choose the order in which the codecs are offered for use by the media gateway. If the first codec cannot be used, the second is tried and so on.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Standard</i> (default value): the codec in the first position in</li> </ul>

Field	Description
	<p>the menu will be used if possible.</p> <ul style="list-style-type: none"> <li>• <i>Quality</i>: the codecs are sorted by quality. If possible, the codec with the best quality is used.</li> <li>• <i>Lowest</i>: the codecs are sorted by required bandwidth. If possible, the codec with the lowest bandwidth requirement is used.</li> <li>• <i>Highest</i>: the codecs are sorted by required bandwidth. If possible, the codec with the highest bandwidth requirement is used.</li> </ul>
Sort Order	<p>Select the codecs to be proposed for the connection. The codecs chosen here are proposed in a certain order depending on the setting in the <b>Codec Proposal Sequence</b> field.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>G.711 uLaw</i>: ISDN codec with US law</li> <li>• <i>G.711 aLaw</i>: ISDN codec with EU law</li> <li>• <i>G0.729</i>: Compressed from 31 to 8 kbps; good voice quality</li> <li>• <i>G.726-40</i>: Compressed from 63 to 40 kbps</li> <li>• <i>G.726-32</i>: Compressed from 55 to 32 kbps</li> <li>• <i>G.726-24</i>: Compressed from 47 to 24 kbps</li> <li>• <i>G.726-16</i>: Compressed from 39 to 16 kbps</li> <li>• <i>DTMF Outband</i>: DTMF Outband. First the system attempts to use RFC 2833. If the remote terminal does not use this standard, SIP Info is used.</li> <li>• <i>T.38 Fax</i>: Allows the transmission of fax messages over data networks.</li> </ul> <p><i>G.711 uLaw</i>, <i>G.711 aLaw</i> and <i>G.729</i> are enabled by default.</p> <p>The codecs actually used are the intersect of the codecs defined here and those signalled by the provider. For outgoing calls, any remaining codecs are dropped from the list that would require more than the available bandwidth.</p>

#### Fields in the Advanced Settings Voice Quality Settings menu

Field	Description
Echo Cancellation	Select whether echo cancellation should be used.

Field	Description
	<p>Echo Cancellation is a technique to suppress echo feedback in voice communication on full duplex lines.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is enabled by default.</p>
Comfort Noise Generation (CNG)	<p>Specify whether Comfort Noise Generation should be used.</p> <p>For digital voice transmission, this function introduces a low level of background noise to avoid the impression that, during pauses at the other end, the connection is lost.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is enabled by default.</p>
Packet Size	<p>Specify how many milliseconds of voice an RTP data packet should contain.</p> <p>Possible values are 5 to 500.</p> <p>The default value is 20.</p>

## 18.2.2 SIP Accounts

If you want your device to connect to other SIP servers (e.g. servers of Internet SIP Service providers), you can configure the necessary entries here. In this case, the media gateway acts as a SIP client.

Furthermore, you can configure the entries for SIP trunking scenarios here. In this case, the media gateway acts as a SIP server for other SIP servers. An example for this is the connection of a SIP PBX (e.g. Asterisk) to the media gateway.

This means that not only all SIP provider accounts are configured here but also direct dial-in PBXs connected with the media gateway.



### Note


In no case should you use this menu to configure SIP extensions, i.e. for SIP clients or PSTN clients such as SIP telephones, terminal adapters or ISDN telephones

SIP extensions can be configured in the **VoIP ->Extensions** menu.

In the **VoIP -> Media Gateway -> SIP Accounts** menu, a list of all existing SIP accounts (SIP client mode and SIP server mode) is shown.

### 18.2.2.1 Edit/New

Select the **New** button to create new SIP accounts. Choose the  icon to edit existing entries. In this menu SIP accounts are configured in SIP client mode as well as in SIP server mode.

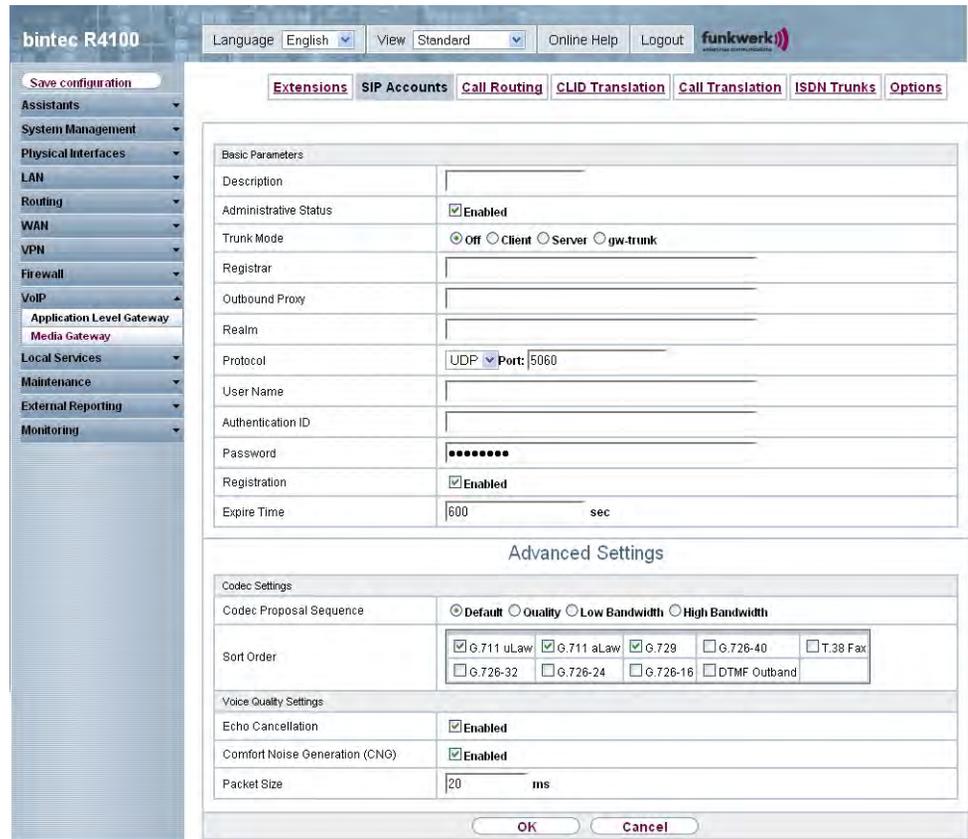

The screenshot shows the configuration interface for SIP Accounts on a bintec R4100 device. The left sidebar contains a navigation menu with categories like Assistants, System Management, Physical Interfaces, LAN, Routing, WAN, VPN, Firewall, VoIP, Application Level Gateway, Media Gateway, Local Services, Maintenance, External Reporting, and Monitoring. The main content area is titled 'SIP Accounts' and has tabs for Extensions, SIP Accounts, Call Routing, CLID Translation, Call Translation, ISDN Trunks, and Options. The configuration is split into two sections: 'Basic Parameters' and 'Advanced Settings'. The 'Basic Parameters' section includes fields for Description, Administrative Status (checked), Trunk Mode (radio buttons for Off, Client, Server, gw-trunk), Registrar, Outbound Proxy, Realm, Protocol (UDP Port: 5060), User Name, Authentication ID, Password (masked), Registration (checked), and Expire Time (600 sec). The 'Advanced Settings' section includes Codec Settings (radio buttons for Default, Quality, Low Bandwidth, High Bandwidth), Sort Order (checkboxes for G.711 uLaw, G.711 aLaw, G.729, G.726-40, T.38 Fax, G.726-32, G.726-24, G.726-16, DTMF Outband), Voice Quality Settings (Echo Cancellation, Comfort Noise Generation (CNG) both checked), and Packet Size (20 ms). Buttons for OK and Cancel are at the bottom.

Fig. 141: VoIP -> Media Gateway -> SIP Accounts -> Edit/New

The **VoIP ->Media Gateway ->SIP Accounts -> Edit/New** menu consists of the following fields:

#### Fields in the SIP Accounts Basic Parameters menu

Field	Description
Description	Enter the name of the SIP account.

Field	Description
Administrative Status	<p>Select whether the SIP account should be enabled or disabled.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is enabled by default.</p>
Trunk Mode	<p>Select whether and in which trunk mode the SIP account should be operated.</p> <p>Trunk mode (DDI, Direct Dial In) allows an incoming call to be assigned correctly to a terminal (DDI). For an outgoing call, the caller can be indicated to the called party.</p> <p>The setting that you can use depends on the provider.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Off</i> (default value) Trunk mode is not used. The SIP account has only one number.</li> <li>• <i>Client</i>: the media gateway is operated as DDI client. It is assigned a DDI.</li> <li>• <i>Server</i>: The media gateway is operated as a DDI server so that DDI clients can connect.</li> <li>• <i>gw-trunk</i>: the media gateway is operated as DDI client, but used as a trunk. This setting is used to connect a software-based IP PBX from Swyx.</li> </ul>
Registrar	<p>Only if <b>Trunk Mode</b> = <i>Off</i>, <i>Client</i> and <i>gw-trunk</i></p> <p>Enter the IP address or domain name (FQDN) of the SIP registrar. The maximum number of characters is 40.</p> <p>Entries with spaces are not allowed.</p>
SIP Endpoint IP Address	<p>Only if <b>Trunk Mode</b> = <i>Server</i> and <b>Registration</b> = <i>Disabled</i></p> <p>Enter the IP address or domain name (FQDN) of the SIP proxy server.</p>
Outbound Proxy	<p>Only if <b>Trunk Mode</b> = <i>Off</i>, <i>Client</i> or <i>gw-trunk</i>.</p> <p>Enter the name or IP address of the SIP outbound proxy server.</p> <p>A maximum of 32 characters can be entered.</p>

Field	Description
	<p>Here you must make an entry only if, for all SIP sessions, the communication is not to be direct but via a further proxy.</p> <p>In SIP client mode: Enter a name or IP address only if this is explicitly specified by the provider.</p>
Realm	<p>Enter a new domain name or a new IP address for the SIP proxy server.</p> <p>If you do not make an entry, the entry in the <b>Registrar</b> field is used.</p> <p>In SIP client mode: Enter a name or IP address only if this is explicitly specified by the provider.</p>
Protocol	<p>Select the protocol to be used for data transport.</p> <p>Possible values: <i>UDP</i> (default value) or <i>TCP</i>.</p> <p>Enter the <b>Port</b> via which the data is to be transported.</p> <p>The default value is <i>5060</i>.</p> <p>In SIP client mode: The ports can be provider-specific.</p>
User Name	<p>In SIP client mode: Enter the username for authentication if your VoIP provider has assigned one for you.</p> <p>In SIP server mode: You must define the user name.</p> <p>A maximum of 40 characters can be entered.</p>
Authentication ID	<p>Enter a name that is to be used for authentication with the out-bound proxy.</p> <p>If you do not enter a name, the name in the <b>User Name</b> field is used.</p> <p>In SIP client mode: Enter a name only if this is explicitly specified by the provider.</p>
Password	<p>In SIP client mode: The VoIP provider gives you a PIN or password for authentication. You must enter this value here.</p> <p>In SIP server mode: Define a PIN or a password.</p>

Field	Description
	A maximum of 40 characters can be entered.
Registration	<p>Specify whether the registration mechanism is to be used by SIP REGISTER. Normally, every SIP client (user) sends its current position to a REGISTRAR server by means of a REGISTER message. This information about the user and his current address is held by the REGISTRAR server and queried by other proxies to find the user.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is enabled by default.</p> <p>Apart from this standard procedure, the relevant data can also be sent to a particular IP address that is already known to the correspondent. Registration and authentication are not then needed and the <b>Registration</b> function is disabled. An example of this method is Microsoft Exchange SIP.</p>
Expire Time	<p>Only if <b>Registration</b> is enabled.</p> <p>Enter the time in seconds after which the current registration becomes invalid and a new registration request is therefore sent.</p> <p>Possible values are <i>0</i> to <i>38400</i>.</p> <p>The default value is <i>600</i>.</p> <p>In answer to a REGISTER request, a server can set another Expire Time which overwrites the setting here.</p>

#### Fields in the SIP Accounts Trunk Settings menu

Field	Description
SIP Header Field(s) for Caller Address	<p>Only if <b>Trunk Mode</b> = <i>Client</i>, <i>Server</i> or <i>gw-trunk</i>.</p> <p>Select the position of the sender ID (e.g. subscriber number) in the SIP header for outgoing calls. (For incoming calls, the subscriber number is taken automatically from the SIP header.)</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Disabled</i> (default value): the sender ID is not sent.</li> <li>• <i>Display and User Name</i>: the sender ID is placed in both "Display" and "User" fields of the SIP header.</li> </ul>

Field	Description
	<ul style="list-style-type: none"> <li>• <i>Display only</i>: the sender ID is placed in the "Display" field of the SIP header.</li> <li>• <i>User only</i>: the sender ID is placed in the "User" field of the SIP header.</li> <li>• <i>P-Preferred</i>: The so-called "p-preferred-identity" field is added to the SIP header and contains the sender ID.</li> <li>• <i>P-Asserted</i>: The so-called "p-asserted-identity" field is added to the SIP header and contains the sender ID.</li> </ul>
Subscriber Number	<p>Only for <b>Trunk Mode</b> = <i>Server</i>.</p> <p>You can set a number that is added as a prefix for outgoing calls to the sender's number and is removed from the destination number for incoming calls. This corresponds to the trunk (exchange) number of an exchange.</p>

#### Fields in the Advanced Settings Codec Settings menu

Field	Description
Codec Proposal Sequence	<p>Choose the order in which the codecs are offered for use by the media gateway. If the first codec cannot be used, the second is tried and so on.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Standard</i> (default value): the codec in the first position in the menu will be used if possible.</li> <li>• <i>Quality</i>: the codecs are sorted by quality. If possible, the codec with the best quality is used.</li> <li>• <i>Low Bandwidth</i>: the codecs are sorted by required bandwidth. If possible, the codec with the lowest bandwidth requirement is used.</li> <li>• <i>High Bandwidth</i>: the codecs are sorted by required bandwidth. If possible, the codec with the highest bandwidth requirement is used.</li> </ul>
Sort Order	<p>Select the codecs to be proposed for the connection. The codecs chosen here are proposed in a certain order depending on the setting in the <b>Codec Proposal Sequence</b> field.</p> <p>Possible values:</p>

Field	Description
	<ul style="list-style-type: none"> <li>• <i>G.711 uLaw</i>: ISDN codec with US law</li> <li>• <i>G.711 aLaw</i>: ISDN codec with EU law</li> <li>• <i>G0.729</i>: Compressed from 31 to 8 kbps; good voice quality</li> <li>• <i>G.726-40</i>: Compressed from 63 to 40 kbps</li> <li>• <i>G.726-32</i>: Compressed from 55 to 32 kbps</li> <li>• <i>G.726-24</i>: Compressed from 47 to 24 kbps</li> <li>• <i>G.726-16</i>: Compressed from 39 to 16 kbps</li> <li>• <i>DTMF Outband</i>: DTMF Outband. First the system attempts to use RFC 2833. If the remote terminal does not use this standard, SIP Info is used.</li> <li>• <i>T.38 Fax</i>: Allows the transmission of fax messages over data networks.</li> </ul> <p><i>G.711 uLaw</i>, <i>G.711 aLaw</i> and <i>G.729</i> are enabled by default.</p> <p>The codecs actually used are the intersect of the codecs defined here and those signalled by the provider. For outgoing calls, any remaining codecs are dropped from the list that would require more than the available bandwidth.</p>

#### Fields in the Advanced Settings Voice Quality Settings menu

Field	Description
Echo Cancellation	<p>Select whether echo cancellation should be used.</p> <p>Echo Cancellation is a technique to suppress echo feedback in voice communication on full duplex lines.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is enabled by default.</p>
Comfort Noise Generation (CNG)	<p>Specify whether Comfort Noise Generation should be used.</p> <p>For digital voice transmission, this function introduces a low level of background noise to avoid the impression that, during pauses at the other end, the connection is lost.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is enabled by default.</p>

Field	Description
Packet Size	Specify how many milliseconds of voice an RTP data packet should contain.  Possible values are 5 to 500.  The default value is 20.


## 18.2.3 Call Routing

Here you can define the conditions for the routing of calls. Define a list with rules or rule chains that are used to manipulate the indicated destination numbers.

In the **VoIP -> Media Gateway -> Call Routing** menu, a list of all existing entries is shown.

### 18.2.3.1 Edit/New

Choose the  icon to edit existing entries. Select the **New** button to create new entries.

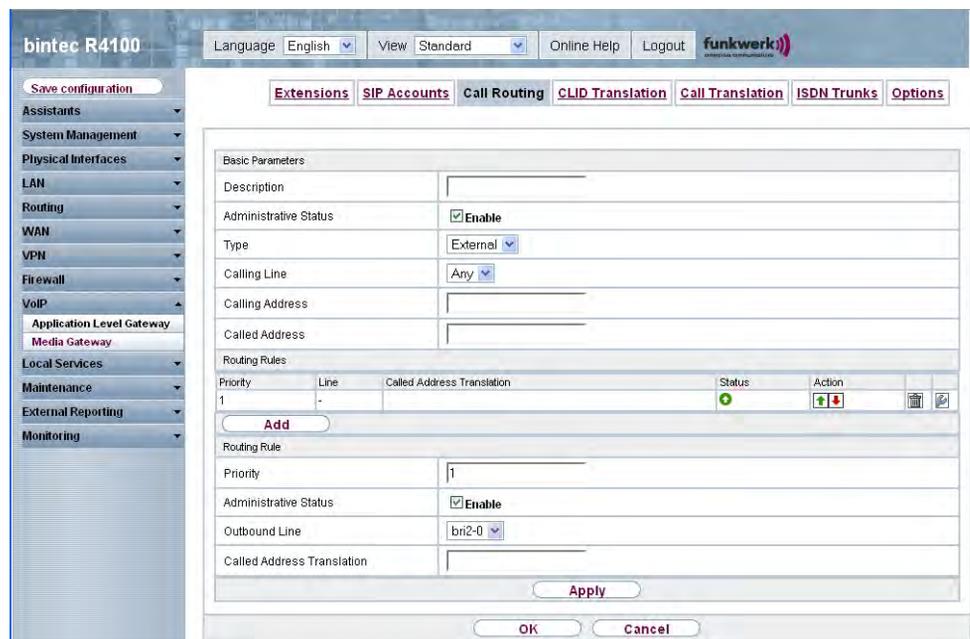

The screenshot shows the 'bintec R4100' web interface. The top navigation bar includes 'Language English', 'View Standard', 'Online Help', and 'Logout'. The 'funkwerk' logo is also present. The left sidebar contains a menu with categories like 'Assistants', 'System Management', 'Physical Interfaces', 'LAN', 'Routing', 'WAN', 'VPN', 'Firewall', 'VoIP', 'Application Level Gateway', 'Media Gateway', 'Local Services', 'Maintenance', 'External Reporting', and 'Monitoring'. The 'Media Gateway' section is expanded, and the 'Call Routing' tab is selected. The main content area shows a table of routing rules with columns for Priority, Line, Called Address Translation, Status, and Action. Below the table is an 'Add' button. A form for editing a routing rule is displayed, with fields for Priority (1), Administrative Status (checked 'Enable'), Outbound Line (bri2-0), and Called Address Translation. An 'Apply' button is at the bottom of the form, and 'OK' and 'Cancel' buttons are at the very bottom.

Fig. 142: **VoIP -> Media Gateway -> Call Routing -> Edit/New**

The **VoIP ->Media Gateway ->Call Routing -> Edit/New** menu consists of the following fields:

**Fields in the Call Routing Basic Parameters menu**

Field	Description
Description	Enter the name of the entry.
Administrative Status	<p>Select whether the entry should be activated.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is enabled by default.</p>
Type	<p>Specify how calls are to be routed.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>External</i> (default value): For calls that are to be routed as outgoing, external calls. This can be done using standard SIP accounts or SIP trunking accounts in DDI client mode.</li> <li>• <i>Trunk</i>: For calls forwarded by the media gateway to a PBX or an ISDN TE connector or a SIP DDI client. For this, the following can be used: PRI interfaces in NT mode, BRI interfaces in NT mode, SIP accounts in trunk mode (server mode).</li> <li>• <i>Deny</i>: For calls that are not to be routed (to be blocked).</li> </ul>
Calling Line	<p>You can restrict the application of the entry to the line on which the call comes in.</p> <p>The selection depends on the interfaces available and on the SIP accounts that have been created.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>pri&lt;Interface Index&gt;</i>: restricts the routing entry to the selected PRI interface.</li> <li>• <i>bri&lt;Interface Index&gt;</i>: restricts the routing entry to the selected BRI interface.</li> <li>• <i>&lt;SIP Account&gt;</i>: restricts the routing entry to the selected SIP account.</li> <li>• <i>Any</i>: No restriction of the entry.</li> </ul>
Calling Address	<p>You can restrict the application of the entry to a particular caller. To do this, you must specify the subscriber number exactly (no wildcards).</p>

Field	Description
Called Address	<p>Enter the called address to which the rule is to be applied.</p> <p>To do this, enter an address numerically (e.g. a subscriber number) or alphanumerically (e.g. for a trunk) that is to be compared with a dialled address.</p> <p>The following wildcards can be used:</p> <ul style="list-style-type: none"> <li>• * means that at the end of a character string any number of characters may follow,</li> <li>• ? is a placeholder for an arbitrary character.</li> </ul> <p>If the configured address agrees with the signalled address, the entry is used.</p>

In the **Routing Rules** menu you can define rules to determine how the subscriber number is manipulated before it is used for dialling.

Use **Add** to create entries.

#### Fields in the Call Routing Routing Rules menu (only if Type = External)

Field	Description
Priority	<p>Enter a whole number starting with 1 in ascending order to define the order of filter rules.</p> <p>The rules are worked through in the order given in the list.</p> <p>If a line or SIP account is not available, the next rule is automatically used.</p>
Administrative Status	<p>Select whether the rule should be activated.</p> <p>The rule is activated with <i>Enabled</i>.</p> <p>The rule is active by default.</p>
Outbound Line	<p>Choose the ISDN line (PRI, BRI) or SIP account used for the outgoing call.</p>
Called Address Translation	<p>Enter how the subscriber number is manipulated before it is used for dialling.</p> <p>Notation: &lt;a:b&gt;, i.e. a is replaced by b. A number of rules can be chained together using semicolons as separators, e.g.</p>

Field	Description
	<p>&lt;a:b&gt;;&lt;c:d&gt;;&lt;e:f&gt;. After confirmation of entry, the rule chain is automatically sorted by the "best match" method.</p> <p>Numerical and alphanumerical values are permissible.</p> <p>? is a placeholder for an arbitrary character.</p> <hr/> <p><b>Example 18.1. Example of a rule</b></p> <ul style="list-style-type: none"> <li>• Rule: &lt;:+49911&gt;</li> <li>• number dialled: 96731234</li> <li>• manipulated number: +4991196731234</li> </ul> <hr/>

#### Fields in the Call Routing Routing Rules menu (only if Type = Trunk)

Field	Description
Trunk Line	Select the line to be used for the outgoing call.
Called Address Translation	<p>Enter how the subscriber number is manipulated before it is used for dialling.</p> <p>Notation: &lt;a:b&gt;, i.e. a is replaced by b. A number of rules can be chained together using semicolons as separators, e.g. &lt;a:b&gt;;&lt;c:d&gt;;&lt;e:f&gt;. After confirmation of entry, the rule chain is automatically sorted by the "best match" method.</p> <p>Numerical and alphanumerical values are permissible.</p> <p>? is a placeholder for an arbitrary character.</p> <hr/> <p><b>Example 18.2. Example of a rule</b></p> <ul style="list-style-type: none"> <li>• Rule: &lt;:+49911&gt;</li> <li>• number dialled: 96731234</li> <li>• manipulated number: +4991196731234</li> </ul> <hr/>

## 18.2.4 CLID Translation

Here you define the processing of the calling party number for incoming calls. You can, for example, add a prefix to a received call number in order to route corresponding outgoing calls via a particular SIP account.

In the **VoIP -> Media Gateway ->CLID Translation** menu, a list of all existing entries is shown on which the received number is edited.

### 18.2.4.1 Edit/New

Choose the  icon to edit existing entries. Select the **New** button to create entries for CLID translation.



The screenshot shows the web interface for a bintec R4100 device. The top navigation bar includes 'Language English', 'View Standard', 'Online Help', and 'Logout'. The 'funkwerk' logo is on the right. A left-hand menu lists various system management options, with 'Media Gateway' highlighted. The main content area features a series of tabs: 'Extensions', 'SIP Accounts', 'Call Routing', 'CLID Translation' (selected), 'Call Translation', 'ISDN Trunks', and 'Options'. Below the tabs is a 'Basic Parameters' form with the following fields:

- Description: A text input field.
- Calling Line: A dropdown menu currently showing 'bri2-0'.
- Called Line: A dropdown menu currently showing 'Any'.
- Called Address: A text input field.
- Calling Address Translation: A text input field.

At the bottom of the form are 'OK' and 'Cancel' buttons.

Fig. 143: VoIP -> Media Gateway -> CLID Translation -> Edit/New

The **VoIP ->Media Gateway -> CLID Translation -> Edit/New** menu consists of the following fields:

#### Fields in the CLID Translation Basic Parameters menu

Field	Description
Description	Enter the name of the entry.
Calling Line	Select the ISDN line or SIP account from which the call comes.  The selection depends on the interfaces available and on the SIP accounts that have been created.  Possible values:

Field	Description
	<ul style="list-style-type: none"> <li>• <i>pri</i>&lt;Interface Index&gt; : Restricts the entry to the selected PRI interface.</li> <li>• <i>bri</i>&lt;Interface Index&gt; : Restricts the entry to the selected BRI interface.</li> <li>• &lt;SIP Account&gt;: restricts the entry to the selected SIP account.</li> <li>• <i>ALL</i>: No restriction of the entry.</li> </ul>
Called Line	<p>Here you have the option of entering the destination line of the call.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>pri</i>&lt;Interface Index&gt; : Restricts the entry to the selected PRI interface.</li> <li>• <i>bri</i>&lt;Interface Index&gt; : Restricts the entry to the selected BRI interface.</li> <li>• &lt;SIP Account&gt;: restricts the entry to the selected SIP account.</li> <li>• <i>Any</i>: No restriction of the entry.</li> </ul> <p>Enter <b>Called Line</b> or <b>Called Address</b>.</p> <p>If a value other than <i>Any</i> is chosen, the <b>Called Address</b> should not be used. If you set <b>Called Line</b> = <i>Any</i> and <b>Called Address</b> is not used, all calls on the <b>Calling Line</b> are processed.</p>
Called Address	<p>Here you have the option of entering the destination address of the call.</p> <p>Enter <b>Called Line</b> or <b>Called Address</b>. If the <b>Called Address</b> is used, <b>Called Line</b> = <i>Any</i> should be set.</p>
Calling Address Translation	<p>Enter the transformation rule applied to the call numbers.</p> <p>Notation: &lt;a:b&gt;, i.e. a is replaced by b. A number of rules can be chained together using semicolons as separators, e.g. &lt;a:b&gt;;&lt;c:d&gt;;&lt;e:f&gt;. After confirmation of entry, the rule chain is automatically sorted by the "best match" method.</p> <p>? is a placeholder for an arbitrary digit.</p>

Field	Description
	<p><b>Example 18.3. Example of a rule</b></p> <ul style="list-style-type: none"> <li>• Rule: &lt;:+49911&gt;</li> <li>• number dialled: 96731234</li> <li>• manipulated number: +4991196731234</li> </ul>

## 18.2.5 Call Translation

You can create a list for the translation of subscriber numbers, i.e. this list associates internal and external numbers.



### Note

Which number (called party number or calling party number) is translated depends on the direction (incoming or outgoing) of the call in question. For incoming calls it is the called party number, for outgoing calls the calling party number that is translated.

For example, the internal number 340 can be shown externally as 09119673900 or a call from outside for the number 09119673200 can be routed internally to the number 340.

In the **VoIP** -> **Media Gateway** -> **Call Translation** menu, a list of all existing translations is shown.

### 18.2.5.1 Edit/New

Choose the  icon to edit existing entries. Select the **New** button to create entries for call translation.

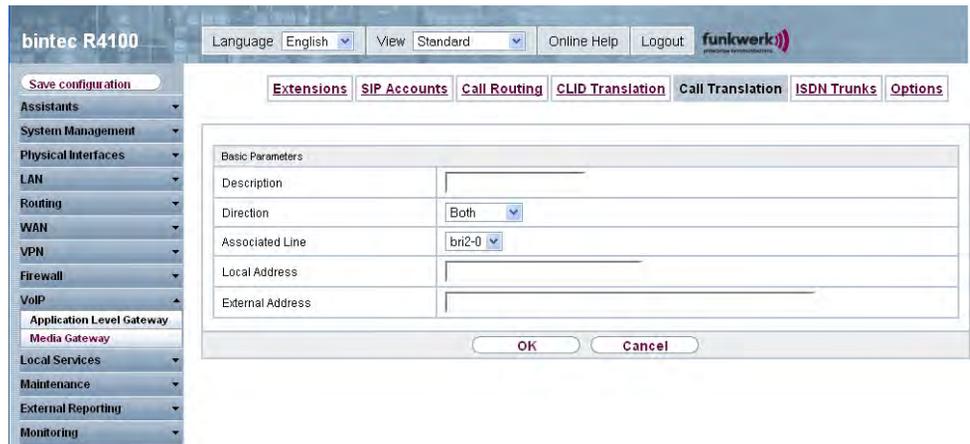


Fig. 144: VoIP -> Media Gateway -> Call Translation -> Edit/New

The VoIP ->Media Gateway ->Call Translation -> Edit/New menu consists of the following fields:

#### Fields in the Call Translation Basic Parameters menu

Field	Description
Description	Enter the name of the call translation.
Direction	Select the direction for the entry.  Possible values: <ul style="list-style-type: none"> <li>• <i>Both</i> (default value): For incoming and outgoing calls (bidirectional).</li> <li>• <i>Incoming</i>: For incoming calls.</li> <li>• <i>Outgoing</i>: For outgoing calls.</li> </ul>
Associated Line	Select the ISDN line or SIP account via which the calls are to be routed.  Possible values: <ul style="list-style-type: none"> <li>• <i>pri&lt;Interface Index&gt;</i>: Restricts the call to the selected PRI interface.</li> <li>• <i>bri&lt;Interface Index&gt;</i>: Restricts the call to the selected BRI interface.</li> <li>• <i>&lt;SIP Account&gt;</i>: restricts the call to the selected SIP account.</li> </ul>

Field	Description
Local Address	<p>Enter the internal number (e.g. extension or PABX number). For incoming calls, the signalled Called Party Number (corresponds in the menu to the <b>External Address</b> field) is translated to the <b>Local Address</b>. For outgoing calls, the signalled Calling Party Number (corresponds in the menu to the <b>Local Address</b> field) is translated to the <b>External Address</b>.</p> <p>Numerical and alphanumeric characters are permissible.</p> <p>? is a placeholder for an arbitrary digit.</p> <p>Note <b>Local Address</b> and <b>External Address</b> must contain the same number of wildcards.</p>
External Address	<p>Enter the external number (e.g. ISDN MSN or SIP account subscriber number). For incoming calls, the signalled Called Party Number (corresponds in the menu to the <b>External Address</b> field) is translated to the <b>Local Address</b>. For outgoing calls, the signalled Calling Party Number (corresponds in the menu to the <b>Local Address</b> field) is translated to the <b>External Address</b>.</p> <p>The <b>External Address</b> is not shown if the field <b>Associated Line</b> = <i>&lt;SIP Account&gt;</i>. In this case, the <b>User Name</b> of the selected SIP account is used as the <b>External Address</b>.</p>

## 18.2.6 ISDN Trunks

The **ISDN Trunks** menu is only displayed if your device has at least two ISDN connections in point-to-point mode (BRI or PRI), which are configured as TE (party line) or NT.



### Note

Note that, for BRI connections, the connection mode (NT mode or TE mode) must be set by jumper in the device.

In this menu, the ISDN party lines (bundles) are defined.

### 18.2.6.1 Edit/New

Choose the  icon to edit existing entries. Select the **New** button to create a new party line.

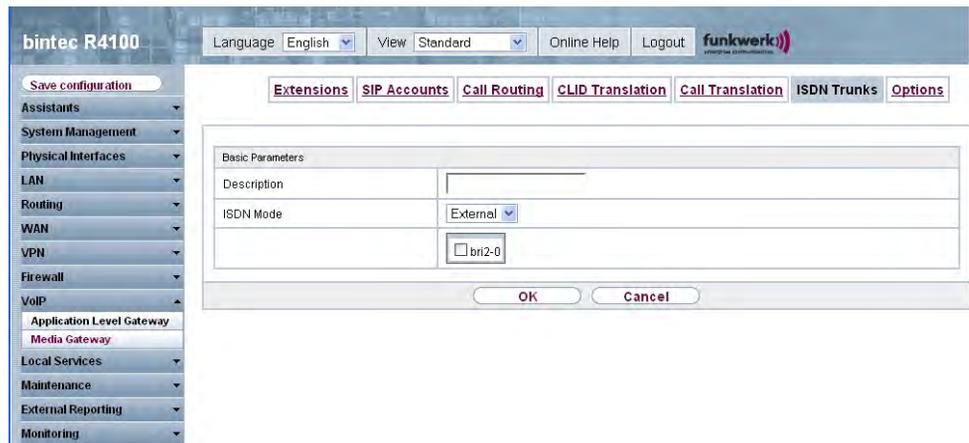


Fig. 145: VoIP -> Media Gateway -> ISDN Trunks

The VoIP ->Media Gateway -> ISDN Trunks menu consists of the following fields:

#### Fields in the ISDN Trunks Basic Parameters menu

Field	Description
Description	<p>Enter the name of the party line.</p> <p>The maximum number of characters is 40.</p>
ISDN Mode	<p>Select the mode in which the party line is to be operated.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li><i>External</i> (default value): Point-to-Point TE connection (telecom party line)</li> <li><i>Trunk</i> Point-to-Point NT connection (for connection of a PABX).</li> </ul>
Members	<p>Select the desired ISDN interfaces to be included with this party line.</p>

## 18.2.7 Options

In the VoIP -> Media Gateway -> Options menu, you can make global settings for the media gateway.



Fig. 146: VoIP -> Media Gateway -> Options

The VoIP ->Media Gateway -> Options menu consists of the following fields:

#### Fields in the Options Basic Parameters menu

Field	Description
Media Gateway Status	<p>Select whether the media gateway function should be enabled.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
Session Border Controller Mode	<p>Specify how the media gateway should behave in conjunction with a session border controller mode.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li><i>Auto</i> (default value) for all extensions that exactly agree with an existing SIP account, the call routing is handled by the session border controller, i.e. all SIP messages configured for the corresponding SIP account are forwarded to the session border controller. For all other extensions, the call routing is handled by the media gateway in accordance with the entries configured under <b>Call Routing</b>. Note that the call routing is handled by the media gateway if the provider is not available (backup).</li> <li><i>Off</i>: Call routing is handled exclusively by the media gateway in accordance with the entries configured under <b>Call Routing</b> and the local extensions. For calls that are to be routed via a particular provider (SIP account), you must configure a cor-</li> </ul>

Field	Description
	<p>responding call routing entry. Internal calls (from internal extension to internal extension) that are only to be routed internally do not require an additional call routing entry.</p> <ul style="list-style-type: none"> <li>• <i>&lt;SIP Trunk&gt;</i>: Select a SIP trunk account configured under <b>VoIP -&gt; Media Gateway -&gt; SIP Accounts</b>. In this case, the call routing for all extensions is handled by the session border controller, all SIP messages are forwarded to the session border controller. Note that the call routing is handled by the media gateway if the provider is not available (backup).</li> </ul> <p>Note: Entries in <b>Call Routing</b> have priority ahead of the session border controller configuration!</p>
Media Stream Termination	<p>Choose how RTP sessions are controlled by the system.</p> <p>If the function is enabled, RTP sessions are terminated on the media gateway, i.e. all RTP streams are controlled by the media gateway and routed via the media gateway. The participating terminal devices (e.g. SIP telephones) are not connected directly with one another. Note that, for VoIP to VoIP connections, there is no code translation for different VoIP terminal codecs. The codecs of media gateway and VoIP terminals must therefore agree.</p> <p>If the function is disabled, RTP sessions are not terminated on the media gateway, i.e. all RTP streams are routed by the media gateway without termination. The RTP data packets can be routed in complex networks and thus also via other gateways.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is enabled by default.</p>
Default Drop Extension	<p>You can specify an extension to which incoming calls are forwarded if they cannot be assigned to an extension or connected PABX.</p>
Dial Latency	<p>Enter the maximum delay time before the system assumes the call number entered is complete and starts the SIP dialling process (sends the SIP INVITE message). This timeout is reset each time that a button is pressed.</p> <p>Possible values are <i>0</i> to <i>15</i>.</p>

Field	Description
	<p>The default value is 5.</p> <p>If you terminate the number entered with #, dialling is immediate.</p>

#### Fields in the menu Advanced Settings

Field	Description
Speed Dialing	<p>Define short sequences of numbers that can be dialled instead of the entire number.</p> <p>Click <b>Add</b> to configure new speeddial numbers.</p> <p>Enter the desired speeddial number for the user, e.g. <i>123</i> under <b>Shortcut</b>.</p> <p>Enter the subscriber number to be dialled in place of the speeddial number, e.g. <i>09119673</i> under <b>Replacement</b>.</p> <p>In the example above, if a user types in <i>*123</i>, the device dials <i>09119673</i>.</p> <p>If the user wishes to call extension <i>111</i>, he types in <i>*123111</i>. The device dials <i>09119673111</i>.</p> <p>A period at the end of the number indicates a complete number. This is dialled immediately the period is recognised.</p>

If you want to use a speeddial number from this list, you must dial \* followed by the speeddial number.

## Chapter 19 Local Services

This menu offers services for the following application areas:

- Name resolution (DNS)
- Locating of dynamic IP addresses using a DynDNS provider
- Configuration of gateway as a DHCP server (assignment of IP addresses)
- Access restriction on the Internet (web filter)
- Assignment of incoming and outgoing data and voice calls to authorised users (CAPI server)
- Automation of tasks according to schedule (scheduling)
- Alive checks for hosts or interfaces, ping tests
- User LAN protection (theft protection)
- Realtime video/audio conferences (Messenger services, universal plug & play)
- Provision of public Internet accesses (hotspot).

### 19.1 DNS

Each device in a TCP/IP network is usually located by its IP address. Because host names are often used in networks to reach different devices, it is necessary for the associated IP address to be known. This task can be performed by a DNS server, which resolves the host names into IP addresses. Alternatively, name resolution can also take place over the HOSTS file, which is available on all PCs.

Your device offers the following options for name resolution:

- DNS Proxy, for forwarding DNS requests sent to your device to a suitable DNS server. This also includes specific forwarding of defined domains (Forwarded Domains).
- DNS cache, for saving the positive and negative results of DNS requests.
- Static entries (static hosts), to manually define or prevent assignments of IP addresses to names.
- DNS monitoring, for providing an overview of DNS requests on your device.

### Global Name Server

The IP addresses of global name servers that are queried if your device is unable to answer requests itself or by forwarding entries are entered in **Local Services -> DNS -> Global Settings -> Basic Parameters**.

For local applications, the IP address of your device or the general loopback address (127.0.0.1) can be entered as the global name server.

Your device can also receive the global name servers dynamically and transfer them dynamically if necessary.

## Strategy for name resolution on your device

A DNS request is handled by your device as follows:

- (1) If possible, the request is answered directly from the static or dynamic cache with IP address or negative response.
- (2) Otherwise, if a suitable forwarding entry exists, the relevant DNS server is asked, depending on the configuration of the Internet or dialin connections, if necessary by setting up a WAN connection at extra cost. If the DNS server can resolve the name, the information is forwarded and a dynamic entry created in the cache.
- (3) Otherwise, if global name servers are entered, the Primary DNS Server then the Secondary DNS Server are asked. If the IP address of your device or the loopback address is entered for local applications, these are ignored here. If one of the DNS servers can resolve the name, the information is forwarded and a dynamic entry created in the cache.
- (4) Otherwise, if a suitable Internet or dialin connection is selected as the standard interface, the relevant DNS server is asked, depending on the configuration of the Internet or dialin connections, if necessary by setting up a WAN connection at extra cost. If one of the DNS servers can resolve the name, the information is forwarded and a dynamic entry created in the cache.
- (5) Otherwise, if overwriting the addresses of the global name servers is allowed (**DNS Server Configuration** = *Dynamic*), a connection is set up – in some cases at extra cost – that is configured to enable DNS server addresses to be requested from DNS servers (**DNS Negotiation** = *Enabled*), if this has not been attempted previously. If name server negotiation is successful, these are entered as global name servers and are therefore available for further requests.
- (6) Otherwise the initial request is answered with a server error.

If one of the DNS servers answers with `non-existent domain`, the initial request is immediately answered accordingly and a corresponding negative entry is made in the DNS cache of your device.

## 19.1.1 Global Settings

The screenshot shows the Funkwerk R1200 web interface. The top bar includes 'Language English', 'View Standard', 'Online Help', and 'Logout'. The left navigation menu is expanded to 'Local Services', with 'DNS' selected. The main content area has tabs for 'Global Settings', 'Static Hosts', 'Domain Forwarding', 'Cache', and 'Statistics'. The 'Global Settings' tab is active, displaying the following configuration options:

**Basic Parameters**

- Domain Name: [Text Input]
- DNS Server Configuration:  Dynamic  Static
- WINS Server:
  - Primary: [0.0.0.0]
  - Secondary: [0.0.0.0]

**Advanced Settings**

- Positive Cache:  Enabled
- Negative Cache:  Enabled
- Cache Size: [100] Entries
- Maximum TTL for Positive Cache Entries: [36400] Seconds
- Maximum TTL for Negative Cache Entries: [36400] Seconds
- Fallback interface to get DNS server: [Automatic]
- IP address to use for DNS/WINS server assignment:
  - As DHCP Server:  None  Own IP Address  Global DNS Setting
  - As IPCP Server:  None  Own IP Address  Global DNS Setting

Buttons for 'OK' and 'Cancel' are located at the bottom of the configuration area.

Fig. 147: Local Services -> DNS -> Global Settings

The menu **Local Services -> DNS -> Global Settings** consists of the following fields:

### Fields in the Global Settings Basic Parameters menu

Field	Description
Domain Name	Enter the standard domain name of your device.
DNS Server Configuration	<p>Select whether the addresses of the global name server on your device can be overwritten by transferred name server addresses.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li><i>Dynamic</i> (default value) The name server addresses can be automatically overwritten.</li> <li><i>Static</i>: The name server addresses are not overwritten.</li> </ul>
DNS Server	Only for <b>DNS Server Configuration = Static</b>

Field	Description
Primary Secondary	Enter the IP address of the first and, if necessary, second global DNS server.
WINS Server Primary Secondary	Enter the IP address of the first and, if necessary, alternative global Windows Internet Name Server (=WINS) or NetBIOS Name Server (=NBNS).

The **Advanced Settings** menu consists of the following fields:

#### Fields in the menu **Advanced Settings**

Field	Description
Positive Cache	<p>Select whether the positive dynamic cache is to be activated, i.e. successfully resolved names and IP addresses are to be stored in the cache.</p> <p>The function is activated by choosing <i>Enabled</i>.</p> <p>The function is enabled by default.</p>
Negative Cache	<p>Select whether the negative dynamic cache is to be activated, i.e. whether queried names for which a DNS server has sent a negative response are stored as negative entries in the cache.</p> <p>The function is activated by choosing <i>Enabled</i>.</p> <p>The function is enabled by default.</p>
Cache Size	<p>Enter the maximum total number of static and dynamic entries.</p> <p>Once this value is reached, the dynamic entry not requested for the longest period of time is deleted when a new entry is added. If the <b>Cache Size</b> is reduced by the user, dynamic entries are deleted if necessary. Static entries are not deleted. <b>Cache Size</b> cannot be set to smaller than the current number of static entries.</p> <p>Possible values: <i>0 .. 1000</i>.</p> <p>The default value is <i>100</i>.</p>
Maximum TTL for Posit-	Enter the value to which the TTL is to be set for a positive dy-

Field	Description
ive Cache Entries	<p>dynamic DNS entry in the cache if its TTL <i>0</i> is or its TTL exceeds the value for <b>Maximum TTL for Positive Cache Entries</b>.</p> <p>The default value is <i>86400</i>.</p>
Maximum TTL for Negative Cache Entries	<p>Enter the value set to which the TTL is to be set in the case of a negative dynamic entry in the cache.</p> <p>The default value is <i>86400</i>.</p>
Fallback interface to get DNS server	<p>Only if <b>DNS Server Configuration</b> = <i>Dynamic</i> Select the interface to which a connection is set up for name server negotiation if other name resolution attempts were not successful.</p> <p>The default value is <i>Automatic</i> i.e. a one-time connection is set up to the first suitable connection partner configured in the system.</p>
IP address to use for DNS/WINS server assignment	<p><b>As DHCP Server</b></p> <p>Select which name server addresses are sent to the DHCP client if your device is used as DHCP server.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>None</i>: No name server address is sent.</li> <li>• <i>Own IP Address</i> (default value): The address of your device is transferred as the name server address.</li> <li>• <i>Global DNS Setting</i>: The addresses of the global name servers entered on your device are sent.</li> </ul> <p><b>As IPCP Server</b></p> <p>Select which name server addresses are to be transmitted by your device in the event of dynamic server name negotiation if your device is used as the IPCP server for PPP connections.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>None</i>: No name server address is sent.</li> <li>• <i>Own IP Address</i>: The address of your device is transferred as the name server address.</li> <li>• <i>Global DNS Setting</i> (default value): The addresses of the global name servers entered on your device are sent.</li> </ul>

## 19.1.2 Static Hosts

In the **Local Services** -> **DNS** -> **Static Hosts** menu, a list of all configured static hosts is shown.

### 19.1.2.1 New

Choose the **New** button to set up new static hosts.

The screenshot shows the bintec R1200 web interface. The top navigation bar includes 'Language English', 'View Standard', 'Online Help', and 'Logout'. The left sidebar lists various system management options, with 'Local Services' expanded to show 'DNS', 'HTTPS', 'DynDNS Client', 'DHCP Server', 'Web Filter', 'CAPI Server', 'Scheduling', 'Surveillance', 'ISDI Theft Protection', 'Funkwerk Discovery', 'UPnP', 'HotSpot Gateway', 'BRPP', 'Maintenance', 'External Reporting', and 'Monitoring'. The main content area displays the 'Static Hosts' configuration window. The 'Basic Parameters' section contains the following fields:

DNS Hostname	<input type="text"/>
Response	Positive
IP Address	0.0.0.0
TTL	86400 Seconds

At the bottom of the window are 'OK' and 'Cancel' buttons.

Fig. 148: Local Services -> DNS -> Static Hosts -> New

The **Local Services** -> **DNS** -> **Static Hosts** -> **New** menu consists of the following fields:

#### Fields in the Static Hosts Basic Parameters menu

Field	Description
DNS Hostname	Enter the host name to which the <b>IP Address</b> defined in this menu is to be assigned if a positive response is received to a DNS request. If a negative response is received to a DNS request, no address is specified.  The entry can also start with the wildcard *, e.g. *.funkwerk.de.

Field	Description
	<p>If a name is entered without a dot, this is completed with <b>&lt;Name&gt;.</b> after confirming with <b>OK</b> " " is added.</p> <p>Entries with spaces are not allowed.</p>
Response	<p>In this entry, select the type of response to DNS requests.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Negative</i> : A DNS request for <b>Name</b> is answered with a negative response.</li> <li>• <i>Positive</i> (default value): A DNS request for <b>Name</b> is answered with the associated <b>IP address</b>.</li> <li>• <i>None</i>: A DNS request is ignored; no answer is given.</li> </ul>
IP Address	<p>Only if <b>Response</b> = <i>Positive</i>.</p> <p>Enter the IP address assigned to <b>Name</b>.</p>
TTL	<p>Enter the the time for which the assignment of <b>Name</b> to <b>IP Address</b> is to be valid in seconds (only relevant if <b>Response</b> = <i>Positive</i> ) that is transferred to requesting hosts.</p> <p>The default value is <i>86400</i> (= 24 h).</p>

### 19.1.3 Domain Forwarding

In the **Local Services** -> **DNS** -> **Domain Forwarding** menu, a list of all configured forwarding for defined domains is shown.

#### 19.1.3.1 New

Choose the **New** button to set up new forwardings.

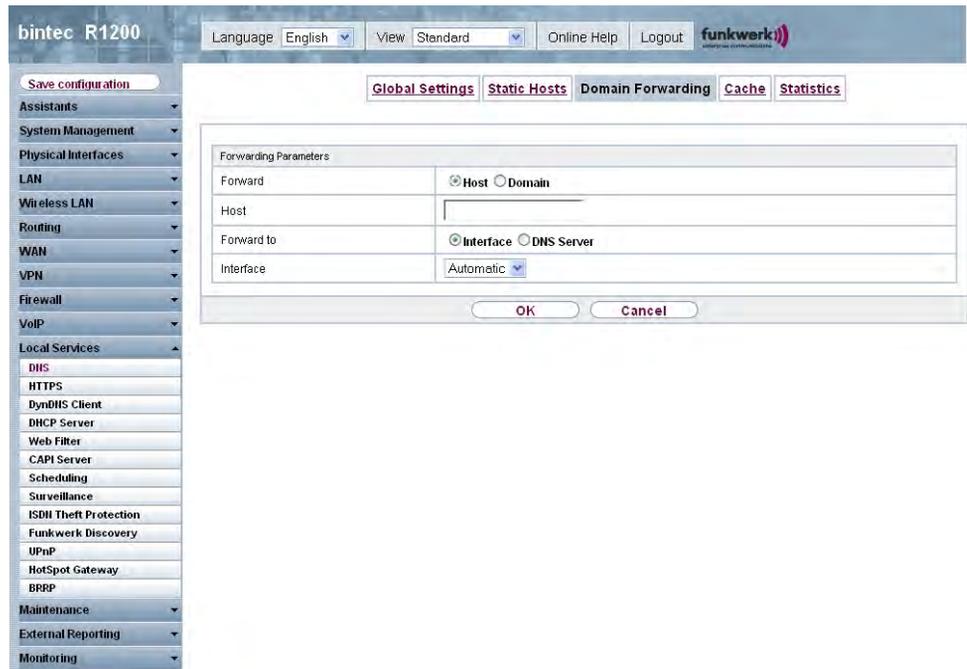


Fig. 149: Local Services -> DNS -> Domain Forwarding -> New

The **Local Services -> DNS -> Domain Forwarding -> New** menu consists of the following fields:

#### Fields in the Domain Forwarding Forwarding Parameters menu

Field	Description
Forward	Select whether a host or domain is to be forwarded.  Possible values: <ul style="list-style-type: none"> <li>• <i>Host</i> (default value)</li> <li>• <i>Domain</i></li> </ul>
Host	Only for <b>Forward</b> = <i>Host</i>  Enter the name of the host to be forwarded.  The entry can also start with the wildcard *, e.g. *.funkwerk.com. If a name is entered without a full stop, once you confirm with <b>OK</b> " <Default Domain>." is added.
Domain	Only for <b>Forward</b> = <i>Domain</i>

Field	Description
	<p>Enter the name of the domain to be forwarded.</p> <p>The entry can also start with the wildcard *, e.g. *.funkwerk.com. If a name is entered without a full stop, once you confirm with <b>OK</b> " &lt;Default Domain&gt;." " is added.</p>
Forward to	<p>Select the forwarding destination requests to the name defined in <b>Host</b> or <b>Domain</b>.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Interface</i> (default setting) The request is forwarded to the defined <b>Interface</b>.</li> <li>• <i>DNS Server</i>: The request is forwarded to the defined <b>DNS server</b>.</li> </ul>
Interface	<p>Only for <b>Forward to</b> = <i>Interface</i></p> <p>Select the interface via which the requests for the defined <b>Domain</b> are to be received and forwarded to the DNS server.</p>
DNS Server	<p>Only for <b>Forward to</b> = <i>DNS server</i></p> <p>Enter the IP address of the primary and Secondary DNS Server.</p>

### 19.1.4 Cache

In the **Local Services** -> **DNS** -> **Cache** menu, a list of all available cache entries is shown.

The screenshot shows the web interface for a bintec R1200 device. The top navigation bar includes 'Language English', 'View Standard', 'Online Help', and 'Logout'. The 'funkwerk' logo is also present. The left sidebar contains a tree view of configuration categories: Assistants, System Management, Physical Interfaces, LAN, Wireless LAN, Routing, WAN, VPN, Firewall, VoIP, and Local Services. Under 'Local Services', the following options are listed: DNS, HTTPS, DynDNS Client, DHCP Server, Web Filter, CAPI Server, Scheduling, Surveillance, ISDI Theft Protection, Funkwerk Discovery, UPnP, HotSpot Gateway, BRP, Maintenance, External Reporting, and Monitoring. The 'DNS' option is highlighted.

The main content area is titled 'Cache' and contains the following elements:

- Buttons: Global Settings, Static Hosts, Domain Forwarding, Cache, Statistics
- Automatic Refresh Interval: 60 Seconds, with an 'Apply' button.
- View: 20 per page, Filter in: None, equal, with a 'Go' button.
- Table with columns: Description, IP Address, Response, TTL, Reference Counter, Select all / Deselect all, Make static.
- Page: 1
- Buttons: OK, Cancel

Fig. 150: Local Services -> DNS -> Cache

You can select individual entries using the checkbox in the corresponding line, or select them all using the **Select All** button.

A dynamic entry can be converted to a static entry by marking the entry and confirming with **Set to Static**. This entry then disappears from the list and is included in the list in the **Static Hosts** menu. The TTL is transferred in this operation.

## 19.1.5 Statistics

The screenshot shows the web interface for a bintec R1200 device. The top bar includes 'Language English', 'View Standard', 'Online Help', 'Logout', and the 'funkwerk' logo. The left navigation menu is expanded to 'Local Services', with 'DNS' selected. The main content area shows the 'Statistics' tab for DNS, with an 'Automatic Refresh Interval' of 60 seconds and an 'Apply' button. Below this is a table of DNS statistics:

DNS Statistics	
Received DNS Packets	0
Invalid DNS Packets	0
DNS Requests	0
Cache Hits	0
Forwarded Requests	0
Cache Hitrate (%)	0
Successfully Answered Queries	0
Server Failures	0

Fig. 151: Local Services -> DNS -> Statistics

In the menu **Local Services -> DNS -> Statistics**, the following statistical values are shown:

### Fields in the Statistics DNS Statistics menu

Field	Description
Received DNS Packets	Shows the number of received DNS packets addressed direct to your device, including the response packets for forwarded requests.
Invalid DNS Packets	Shows the number of invalid DNS packets received and addressed direct to your device.
DNS Requests	Shows the number of valid DNS requests received and addressed direct to your device.
Cache Hits	Shows the number of requests that were answered with static or dynamic entries from the cache.
Forwarded Requests	Shows the number of requests forwarded to other name servers.

Field	Description
Cache Hitrate (%)	Displays the number of <b>Cache Hits</b> per <b>DNS Request</b> in %.
Successfully Answered Queries	Shows the number of successfully answered requests (positive and negative).
Server Failures	Shows the number of requests that were not answered by any name server (either positively or negatively).

## 19.2 HTTPS

You can operate the user interface of your device from any PC with an up-to-date Web browser via an HTTPS connection.

HTTPS (HyperText Transfer Protocol Secure) is the procedure used to establish an encrypted and authenticated connection by SSL between the browser used for configuration and the device.

### 19.2.1 HTTPS server

In the **Local Services** -> **HTTPS** -> **HTTPS Server** menu you configure the parameters of the secure configuration connection over HTTPS.

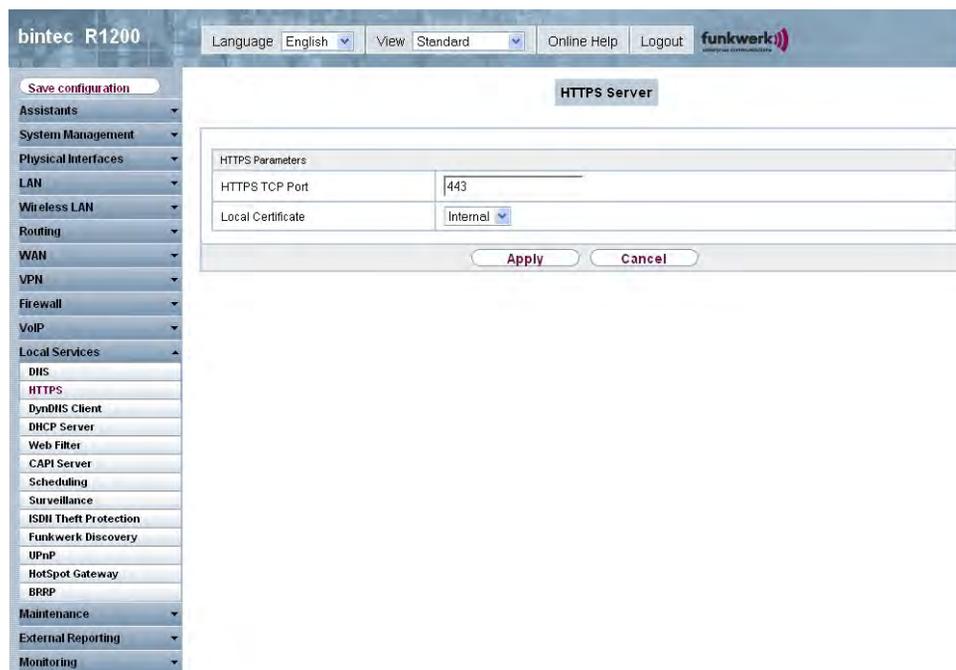


Fig. 152: Local Services -> HTTPS -> HTTPS Server

The **Local Services -> HTTPS -> HTTPS Server** menu consists of the following fields:

#### Fields in the HTTPS Server HTTPS Parameters menu

Field	Description
HTTPS TCP Port	<p>Enter the port via which the HTTPS connection is to be established.</p> <p>Possible values are 0 to 65535.</p> <p>The default value is 443.</p>
Local Certificate	<p>Select a certificate that you want to use for the HTTPS connection.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li><i>Internal</i> (default value): Select this option if you want to use the certificate built into the device.</li> <li>&lt;Certificate name&gt;: Select the entered certificate under <b>System Management -&gt; Certificates -&gt; Certificate List</b>.</li> </ul>

## 19.3 DynDNS Client

The use of dynamic IP addresses has the disadvantage that a host in the network can no longer be found once its IP address has changed. DynDNS ensures that your device can still be reached after a change to the IP address.

The following configuration steps are necessary:

- Registration of a host name at a DynDNS provider
- Configuration of your device

### Registration

The registration of a host name means that you define an individual user name for the DynDNS service, e.g. *dyn\_client*. The service providers offer various domain names for this, so that a unique host name results for your device, e.g.

*dyn\_client.provider.com*. The DynDNS provider relieves you of the task of answering all DNS requests concerning the host *dyn\_client.provider.com* with the dynamic IP address of your device.

To ensure that the provider always knows the current IP address of your device, your device contacts the provider when setting up a new connection and propagates its present IP address.

### 19.3.1 DynDNS Update

In the **Local Services** -> **DynDNS Client** -> **DynDNS Update** menu, a list of all configured DynDNS registrations is shown that are to be updated.

#### 19.3.1.1 New

Choose the **New** button to set up further DynDNS registrations to be updated.

Fig. 153: Local Services -> DynDNS Client -> DynDNS Update -> New

The **Local Services -> DynDNS Client -> DynDNS Update -> New** menu consists of the following fields:

#### Fields in the DynDNS Update Basic Parameters menu

Field	Description
Host Name	Enter the complete host name as registered with the DynDNS provider.
Interface	Select the WAN interface whose IP address is to be propagated over the DynDNS service (e.g. the interface of the Internet Service Provider).
User Name	Enter the user name as registered with the DynDNS provider.
Password	Enter the password as registered with the DynDNS provider.
Provider	Select the DynDNS provider with which the above data is registered.  A choice of DynDNS providers is already available in the unconfigured state and their protocols are supported.

Field	Description
	<p>Other DynDNS providers can be configured in the <b>Local Services -&gt; DynDNS Client-&gt; DynDNS Providers</b> menu.</p> <p>The default value is <i>DynDNS</i>.</p>
Enable update	<p>Select whether the DynDNS entry configured here is to be activated.</p> <p>The function is activated by choosing <i>Enabled</i>.</p> <p>The function is disabled by default.</p>

The **Advanced Settings** menu consists of the following fields:

#### Fields in the menu **Advanced Settings**

Field	Description
Mail Exchanger (MX)	<p>Enter the full host name of a mail server to which e-mails are to be forwarded if the host currently configured is not to receive mail.</p> <p>Ask your provider about this forwarding service and make sure e-mails can be received from the host entered as MX.</p>
Wildcard	<p>Select whether the forwarding of all subdomains of the <b>Host Name</b> are to be enabled for the current IP address of the <b>Interface</b> (advanced name resolution).</p> <p>The function is activated by choosing <i>Enabled</i>.</p> <p>The function is disabled by default.</p>

## 19.3.2 DynDNS Provider

In the **Local Services -> DynDNS Client -> DynDNS Provider** menu, a list of all configured DynDNS providers is shown.

### 19.3.2.1 New

Choose the **New** button to set up new DynDNS providers.

The screenshot shows the configuration interface for a DynDNS Provider. The left sidebar contains a navigation menu with categories like 'System Management', 'Physical Interfaces', 'Routing', 'WAN', 'VPN', 'Firewall', 'VoIP', and 'Local Services'. Under 'Local Services', 'DynDNS Client' is highlighted. The main window displays the 'DynDNS Update' and 'DynDNS Provider' tabs. The 'Basic Parameters' form includes the following fields:

Field	Description
Provider Name	Enter a name for this entry.
Server	Enter the host name or IP address of the server on which the provider's DynDNS service runs.
Update Path	Enter enter the path on the provider's server that contains the script for managing the IP address of your device. Ask your provider for the path to be used.
Port	Enter the port at which your device is to reach your provider's server. Ask your provider for the relevant port. The default value is 80.
Update Interval	300 Seconds

Fig. 154: Local Services -> DynDNS Client -> DynDNS Provider -> New

The **Local Services -> DynDNS Client -> DynDNS Provider -> New** menu consists of the following fields:

#### Fields in the DynDNS Provider Basic Parameters menu

Field	Description
Provider Name	Enter a name for this entry.
Server	Enter the host name or IP address of the server on which the provider's DynDNS service runs.
Update Path	Enter enter the path on the provider's server that contains the script for managing the IP address of your device. Ask your provider for the path to be used.
Port	Enter the port at which your device is to reach your provider's server. Ask your provider for the relevant port. The default value is 80.

Field	Description
Protocol	<p>Select one of the protocols implemented.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>DynDNS</i> (default value)</li> <li>• <i>Static DynDNS</i></li> <li>• <i>ODS</i></li> <li>• <i>HN</i></li> <li>• <i>DYNS</i></li> <li>• <i>GnuDIP-HTML</i></li> <li>• <i>GnuDIP-TCP</i></li> <li>• <i>Custom DynDNS</i></li> <li>• <i>dnsexit</i></li> </ul>
Update Interval	<p>Enter the minimum time (in seconds) that your device must wait before it is allowed to propagate its current IP address to the DynDNS provider again.</p> <p>The default value is <i>300</i> seconds.</p>

## 19.4 DHCP Server

You can configure your device as a DHCP (Dynamic Host Configuration Protocol) server.

Your device and each PC in your LAN requires its own IP address. One option for allocating IP addresses in your LAN is the Dynamic Host Configuration Protocol (DHCP). If you configure your device as a DHCP server, the device automatically assigns IP addresses to requesting PCs in the LAN from a predefined IP address pool. A PC sends out an ARP request and in turn receives its IP address assigned by your device. You therefore do not need to allocate fixed IP addresses to PCs, which reduces the amount of configuration work in your network. To do this, you set up a pool of IP addresses, from which your device assigns IP addresses to hosts in the LAN for a defined period of time. A DHCP server also transfers the addresses of the domain name server entered statically or by PPP negotiation (DNS), NetBIOS name server (WINS) and default gateway.

### 19.4.1 DHCP Pool

To activate your device as a DHCP server, you must first define IP address pools from which the IP addresses are distributed to the requesting clients.

In the **Local Services -> DHCP Server -> DHCP Pool** menu, a list of all configured IP address pools is shown.

In the list, for each entry, you have the possibility under **Pool** of enabling or disabling the configured DHCP pools.

### 19.4.1.1 New

Choose the **New** button to set up new IP address pools. Choose the  icon to edit existing entries.

Fig. 155: **Local Services -> DHCP Server -> DHCP Pool -> New**

The **Local Services -> DHCP Server -> DHCP Pool -> New** menu consists of the following fields:

#### Fields in the DHCP Pool Basic Parameters menu

Field	Description
Interface	Select the interface over which the addresses defined in <b>IP Range</b> are to be assigned to DHCP clients.  When a DHCP request is received over this <b>Interface</b> , one of the addresses from the address pool is assigned.

Field	Description
IP Address Range	Enter the first (first field) and last (second field) IP address of the IP address pool.
Pool Usage	<p>Specify whether the IP pool is used for DHCP requests in the same subnet or for DHCP requests that have been forwarded to your device from another subnet. In this case it is possible to define IP addresses from another network.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Local</i> (default value): The DHCP pool is only used for DHCP requests in the same subnet.</li> <li>• <i>Local/Relay</i>: The DHCP pool is used for DHCP requests in the same subnet and from other subnets.</li> <li>• <i>Relay</i>: The DHCP pool is only used for DHCP requests forwarded from other subnets.</li> </ul>

The **Advanced Settings** menu consists of the following fields:

#### Fields in the menu Advanced Settings

Field	Description
Gateway	<p>Select which IP address is to be transferred to the DHCP client as gateway.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>No gateway</i> (default value): No IP address is sent.</li> <li>• <i>Use router as gateway</i>: The IP address defined for the <b>Interface</b> is transferred.</li> <li>• <i>Specify</i>: Enter the corresponding IP address.</li> </ul>
Lease Time	<p>Enter the length of time (in minutes) for which an address from the pool is to be assigned to a host.</p> <p>After the <b>Lease Time (Minutes)</b> expires, the address can be re-assigned by the server.</p> <p>The default value is <i>120</i>.</p>
DHCP Options	<p>Specify which additional data is forwarded to the DHCP client.</p> <p>Possible values for <b>Option</b>:</p>

Field	Description
	<ul style="list-style-type: none"> <li>• <i>Time Server</i> (default value): Enter the IP address of the time server to be sent to the client.</li> <li>• <i>DNS Server</i>: Enter the IP address of the DNS server to be sent to the client.</li> <li>• <i>DNS Domain Name</i>: Enter the DNS domain to be sent to the client.</li> <li>• <i>WINS/NBNS Server</i>: Enter the IP address of the WINS/NBNS server to be sent to the client.</li> <li>• <i>WINS/NBT Node Type</i>: Enter the type of the WINS/NBT node to be sent to the client.</li> <li>• <i>TFTP Server</i>: Enter the IP address of the TFTP server to be sent to the client.</li> </ul> <p>Several entries are possible. Add new entries with the <b>Add</b> button.</p>

## 19.4.2 IP/MAC Binding

In the **Local Services** -> **DHCP Server** -> **IP/MAC Binding** menu a list is shown of all clients that have received an IP address from your device via DHCP.

You can now allocate an IP address from a defined IP address pool to specific MAC addresses. You can do this by selecting the **Static Binding** option in the list to convert a list entry as a fixed binding, or you manually create a fixed IP/MAC binding by configuring this in the **New** sub-menu.



### Note

You can only create new static IP/MAC bindings if IP address ranges have been configured in **Local Services** -> **DHCP Server** -> **DHCP Pool**.

### 19.4.2.1 New

Choose the **New** button to set up new IP/MAC bindings.

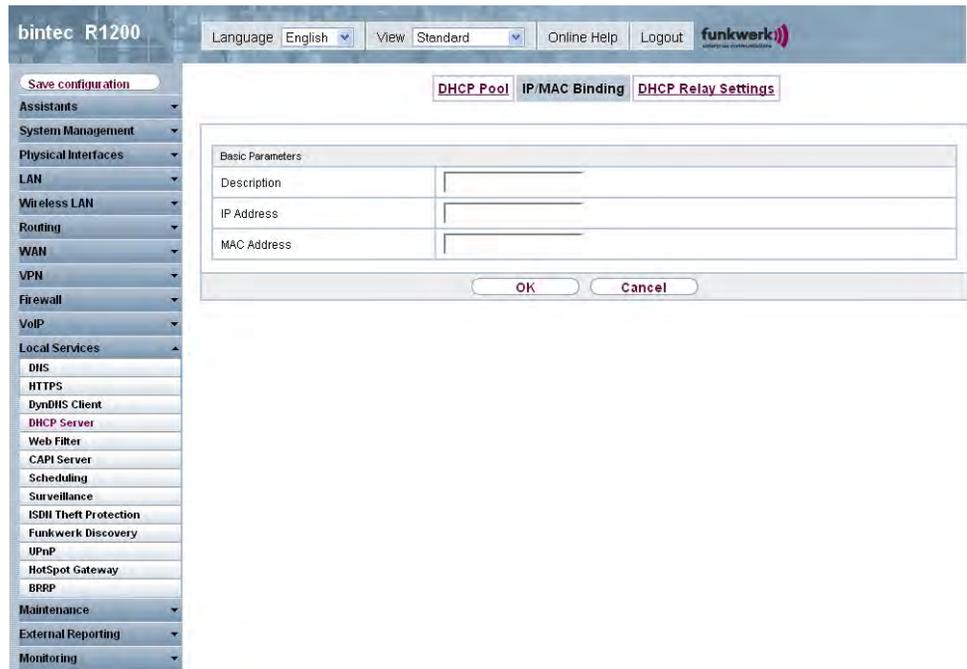


Fig. 156: Local Services -> DHCP Server -> IP/MAC Binding -> New

The **Local Services -> DHCP Server ->DHCP Binding -> New** menu consists of the following fields:

#### Fields in the IP/MAC Binding Basic Parameters menu

Field	Description
Description	Enter the name of the host to the <b>MAC Address</b> of which the <b>IP Address</b> is to be bound.  A character string of up to 256 characters is possible.
IP Address	Enter the IP address to be assigned to the MAC Address specified in <b>MAC Address</b> .
MAC Address	Enter the MAC Address to which the IP address specified in <b>IP Address</b> is to be assigned.

### 19.4.3 DHCP Relay Settings

If your device for the local network does not distribute any IP addresses to the clients by DHCP, it can still forward the DHCP requests on behalf of the local network to a remote DHCP server. The DHCP server then assigns the your device an IP address from its pool, which in turn sends this to the client in the local network.

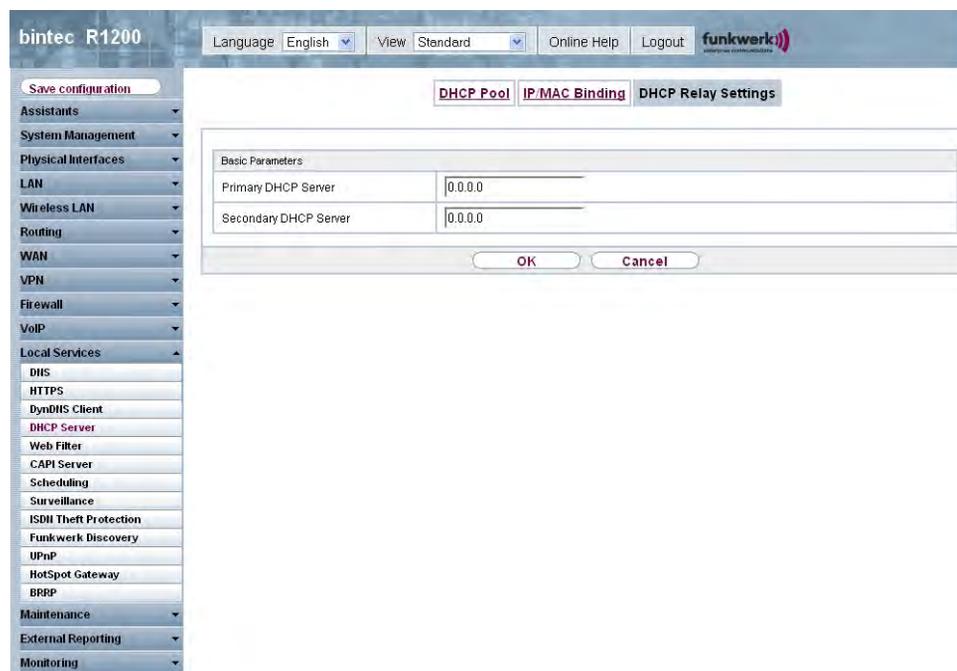


Fig. 157: Local Services -> DHCP Server -> DHCP Relay Settings

The **Local Services -> DHCP Server -> DHCP Relay Settings** menu consists of the following fields:

#### Fields in the DHCP Relay Settings Basic Parameters menu

Field	Description
Primary DHCP Server	Enter the IP address of a server to which BootP or DHCP requests are to be forwarded.
Secondary DHCP Server	Enter the IP address of an alternative BootP or DHCP server.

## 19.5 Web Filter

In the **Local Services** -> **Web Filter** menu, you can configure a URL-based Web filter service, which accesses the Proventia Web Filter from the company Internet Security Systems ([www.iss.net](http://www.iss.net)) and checks how a requested Internet page is categorised by the Proventia Web Filter. The action resulting from the classification is configured on your device.

### 19.5.1 Global Settings

This menu contains the configuration of basic parameters for using the Proventia Web Filter.

The screenshot shows the configuration page for the Web Filter. The top bar includes 'bintec R1200', 'Language English', 'View Standard', 'Online Help', and 'Logout'. The left navigation menu lists various services, with 'Local Services' expanded to show 'Web Filter'. The main content area has tabs for 'Global Settings', 'Filter List', 'Black / White List', and 'History'. The 'Global Settings' tab is selected, displaying the following configuration options:

- Web Filter Options:**
  - Web Filter Status:  Enabled
  - Filtered Input Interface(s):
  - Maximum Number of History Entries:
  - URL Path Depth:
  - Action if server not reachable:  Allow all  Block all  Log all
  - Action if license not registered:  Allow all  Block all  Log all
- License Information:**
  - License Key:  [\[Activate 30 days demo licence\]](#)
  - License Status:
  - License valid until:

An 'Apply' button is located at the bottom of the configuration area.

Fig. 158: Local Services -> Web Filter -> Global Settings

The menu **Lokale Dienste** -> **Web Filter** -> **Global Settings** consists of the following fields:

#### Fields in the Global Settings Web Filter Options menu

Field	Description
Web Filter Status	Activate or deactivate the filter.

Field	Description
	<p>The function is activated by choosing <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
Filtered Input Interface(s)	<p>Select for which of the existing Ethernet interfaces web filtering is to be activated.</p> <p>Press the <b>Add</b> button to add more interfaces. The requests from http Internet pages that reach your device via these interfaces are then monitored by web filtering.</p>
Maximum Number of History Entries	<p>Define the number of entries to be saved in the web filtering history (<b>History</b> menu).</p> <p>Possible values are <i>1</i> to <i>512</i>.</p> <p>The default value is <i>64</i>.</p>
URL Path Depth	<p>Select the path length to which a URL is to be checked by the Cobion Orange Filter.</p>
Action if server not reachable	<p>Select which is to be done with URL requests if the web filtering server cannot be reached.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Allow all</i> (default value): The download is permitted.</li> <li>• <i>Block all</i>: The download of the requested page is blocked.</li> <li>• <i>Log all</i>: The download is permitted, but logged.</li> </ul>
Action if license not registered	<p>Select what is to be done with URL requests if the licence key status is <i>Not Valid</i>.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Allow all</i> (default value): The download is permitted.</li> <li>• <i>Block all</i>: The download of the requested page is blocked.</li> <li>• <i>Log all</i>: The download is permitted, but logged.</li> </ul>

The **License Information** menu consists of the following fields:

#### Fields in the Global Settings License Information menu

Field	Description
Licence Key	<p>Enter the number of your Proventia Web Filter licence. The pre-set code assigned by ISS designates the device type.</p> <p>In the ex works state, you can activate a 30-day demo version of the Proventia Web Filter. Click here on the link <b>[Activate 30-day demo license]</b></p>
Licence Status	Shows the result of the last validity check of the licence. The validity of the licence is checked every 23 hours.
License valid until	This shows the expiry date of the licence (relative to the time set on your device) and cannot be edited.

## 19.5.2 Filter List

In the **Local Services -> Web Filter -> Filter List** menu, configure which categories of Internet pages are to be handled and how.

You configure the relevant filters for this purpose. A list of filters already configured is displayed.

There are basically different approaches for configuring the filters:

- First a filter list can be created that only contains entries for those addresses that are to be blocked. In this case it is necessary to make an entry at the end of the filter list that allows all accesses that do not match a filter. (Setting for this: **Category** = *Default Behavior*, **Action** = *Permit* or *Permit and Log*)
- If you only create entries for those addresses that are to be allowed or logged, it is not necessary to change the default behaviour (= all other calls are blocked).

### 19.5.2.1 New

Choose the **New** button to set up new filters.

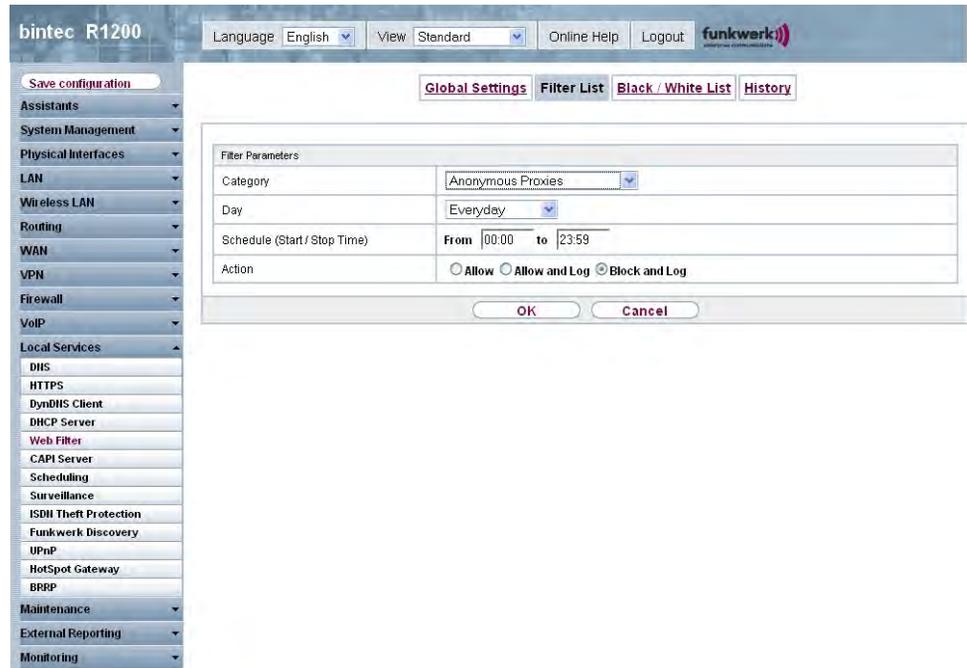


Fig. 159: Local Services -> Web Filter -> Filter List -> New

The **Local Services -> Web Filter -> Filter List -> New** menu consists of the following fields:

#### Fields in the Filter List Filter Parameters menu

Field	Description
Category	<p>Select which category of addresses/URLs the filter is to be used on.</p> <p>The options are first the standard categories of the Proventia Web Filter (default value: <i>Anonymous Proxies</i>). Actions can also be defined for the following special cases, e.g.:</p> <ul style="list-style-type: none"> <li>• <i>Default behaviour</i>: This category applies to all Internet addresses.</li> <li>• <i>Other Category</i>: Some addresses are already known to the Proventia Web Filter, but not yet classified. The action associated with this category is used for such addresses.</li> </ul>

Field	Description
	<ul style="list-style-type: none"> <li>• <i>Unknown URL</i>: If an address is not known to the Proventia Web Filter, the action associated with this category is used.</li> </ul>
Day	<p>Select the days on which the filter is to be active.</p> <p>Possible settings:</p> <ul style="list-style-type: none"> <li>• <i>Everyday</i> (default value): The filter is used every day of the week.</li> <li>• <i>&lt;Weekday&gt;</i>: The filter is used on a certain day of the week. Only one day can be selected per filter; several filters must be configured if several individual days are to be covered.</li> <li>• <i>Monday-Friday</i>: The filter is used from Monday to Friday. The default value is <i>Daily</i>.</li> </ul>
Schedule (Start / Stop Time)	<p>In <b>from</b>, enter from which time the the filter is to be activated. The time is entered in the form hh:mm. Enter the time at which the filter is to be deactivated after the <b>to</b> in the field. The time is entered in the form hh:mm. The default value is 00:00 to 23:59.</p>
Action	<p>Select the action to be executed if the filter matches a call.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Block and Log</i> (default value): The call of the requested page is prevented and logged.</li> <li>• <i>Allow and Log</i>: The download is permitted, but logged. The events log can be viewed in the <b>Local Services -&gt; Web Filters -&gt; Filter List</b> menu.</li> <li>• <i>Allow</i>: The call is allowed and not logged.</li> </ul>

### 19.5.3 Black / White List

The menu **Local Services -> Web Filter -> Black / White List** contains a list of URLs and IP addresses that can be downloaded even if they were blocked as a result of the filter configuration and classification in the Proventia Web Filter (no entries are contained in the default configuration).

### 19.5.3.1 Add

Use the **Add** button to add further URLs or IP addresses to the list.

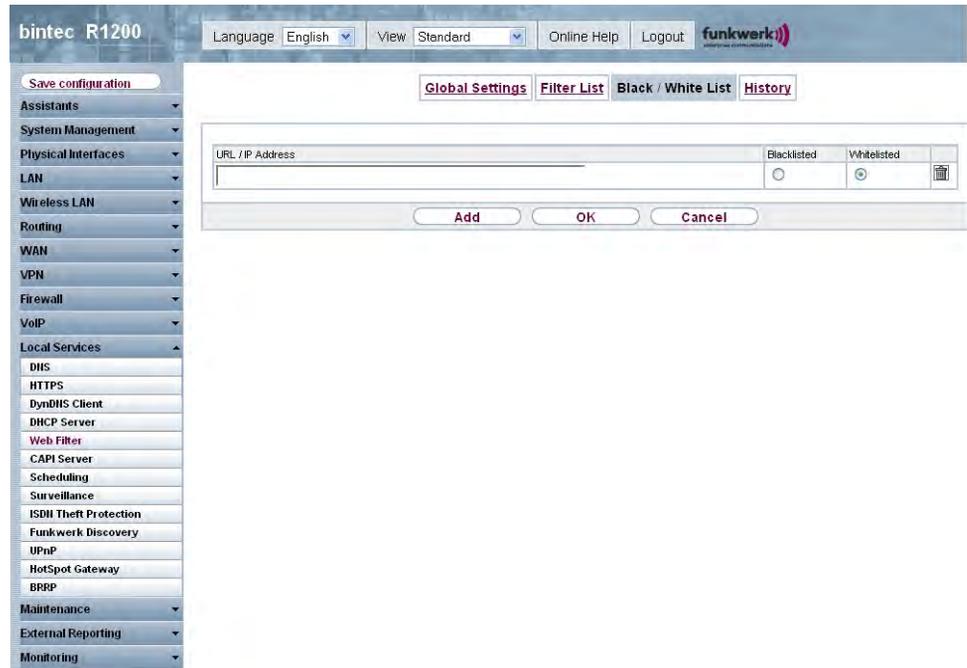


Fig. 160: Local Services -> Web Filter -> Black / White List -> Add

The **Local Services -> Web Filter -> Black / White List -> Add** menu consists of the following fields:

#### Fields in the Black / White List menu

Field	Description
URL / IP Address	You enter a URL or IP address. The length of the entry is limited to 60 characters.
Blacklisted Whitelisted	You can select whether a URL or IP address can always ( <i>in the White List</i> ) or never ( <i>in the Black List</i> ) be downloaded.  <i>Whitelisted</i> is enabled by default.  Addresses listed in the White List are allowed automatically. It is not necessary to configure a suitable filter.

## 19.5.4 History

In the **Local Services** -> **Web Filter** -> **History** menu, you can view the recorded history of the web filter. The history logs all requests that are marked for logging by a relevant filter (**Action** = *Log*), likewise all rejected requests.

The screenshot shows the web interface for a bintec R1200 device. The top bar includes 'Language English', 'View Standard', 'Online Help', 'Logout', and the 'funkwerk' logo. The left navigation menu is expanded to 'Local Services', with 'Web Filter' selected. The main content area has tabs for 'Global Settings', 'Filter List', 'Black / White List', and 'History'. Below the tabs is a search filter with 'View 20 per page' and 'Filter in None equal'. A table header is visible with columns: No., Date, Time, Source, URL, Category, and Result. The page number 'Page: 1' is shown at the bottom left of the table area.

Fig. 161: Local Services -> Web Filter -> History

## 19.6 CAPI Server

You can use the CAPI Server function to assign user names and passwords to users of the CAPI applications on your device. This makes sure that only authorised users can receive incoming calls and make outgoing calls via CAPI.

The CAPI service allows connection of incoming and outgoing data and voice calls to communications applications on hosts in the LAN that access the Remote CAPI interface of your device. This enables, for example, hosts connected to your device to receive and send faxes.



## Note

In the ex works state, a user with the user name *default* and no password is always entered for the CAPI subsystem. All calls to the CAPI are offered to all CAPI applications in the LAN.

Use the Settings menu to distribute incoming calls for the CAPI subsystem to defined users with password. You should then delete the user *default* without password.

## 19.6.1 User

In the **Local Services -> CAPI Server -> User** menu, a list of all configured CAPI users is shown.

### 19.6.1.1 New

Choose the **New** button to set up new CAPI users.

The screenshot shows the web interface for a bintec R1200 device. The top navigation bar includes 'Language' (English), 'View' (Standard), 'Online Help', 'Logout', and the 'funkwerk' logo. A left sidebar contains a menu with categories like 'Assistants', 'System Management', 'Physical Interfaces', 'LAN', 'Wireless LAN', 'Routing', 'WAN', 'VPN', 'Firewall', 'VoIP', and 'Local Services'. Under 'Local Services', 'CAPI Server' is selected. The main content area displays a 'User' configuration dialog with 'Options' selected. The dialog has a 'Basic Parameters' section with the following fields:

User Name	<input type="text"/>
Password	<input type="password" value="••••••"/>
Access	<input checked="" type="checkbox"/> Enabled

At the bottom of the dialog are 'OK' and 'Cancel' buttons.

Fig. 162: **Local Services -> CAPI Server -> User -> New**

The **Local Services -> CAPI Server -> User -> New** menu consists of the following fields:

### Fields in the User Basic Parameters menu

Field	Description
User Name	Enter the user name for which access to the CAPI service is to be allowed or denied.
Password	Enter the password with which the user <b>User Name</b> has to use for identification purposes to gain access to the CAPI service.
Access	Select whether access to the CAPI service is to be permitted or denied for the user.  The function is activated by choosing <i>Enabled</i> .  The function is enabled by default.

## 19.6.2 Options

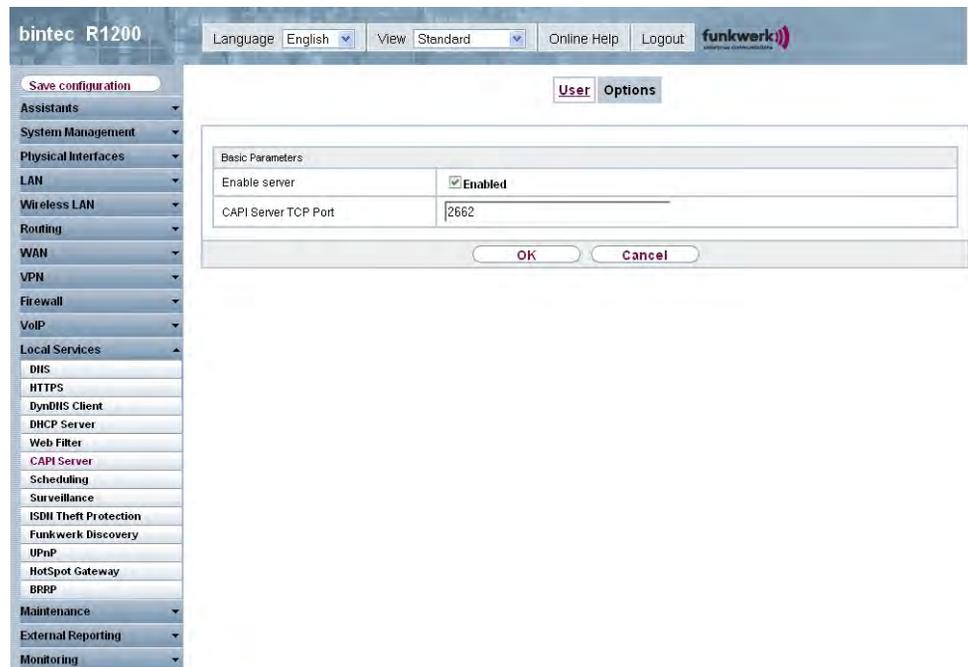


Fig. 163: Local Services -> CAPI Server -> Options

The **Local Services -> CAPI Server -> Options** menu consists of the following fields:

### Fields in the Options Basic Parameters menu

Field	Description
Enable server	<p>Select whether your device is to be enabled as a CAPI server.</p> <p>The function is activated by choosing <i>Enabled</i>.</p> <p>The function is enabled by default.</p>
Faxheader	<p>Select whether the fax header should be printed at the top of outgoing faxes.</p> <p>The function is activated by choosing <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
CAPI Server TCP Port	<p>The field can only be edited if <b>Server Enable</b> is enabled.</p> <p>Enter the TCP port number for remote CAPI connections.</p> <p>The default value is <i>2662</i>.</p>

## 19.7 Scheduling

Your device has a event scheduler, which enables certain standard actions (activation or deactivation of interfaces) to be carried out on a time-dependent basis.



### Note

To run the event scheduler, the date configured on your device must be 1.1.2000 or later.

### 19.7.1 Schedule

In the **Local Services** -> **Scheduling** -> **Time Schedule** menu, a list of all scheduled tasks is shown.

#### 19.7.1.1 New

Choose the **New** button to set up new tasks.

Fig. 164: Local Services -> Scheduling -> Time Schedule -> New

The **Local Services -> Scheduling -> Time Schedule -> New** menu consists of the following fields:

#### Fields in the Time Schedule Basic Parameters menu

Field	Description
Description	Enter the desired name for the scheduled task.

#### Fields in the Time Schedule Action menu

Field	Description
Select action	<p>Select the desired action.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Reboot device</i> (default value): Your device is rebooted.</li> <li>• <i>Activate interface</i>: The interface defined in the <b>Select interface</b> field is activated.</li> <li>• <i>Deactivate interface</i>: The interface defined in the <b>Select interface</b> field is deactivated.</li> <li>• <i>Activate WLAN</i>: The WLAN interface defined in the <b>Select</b></li> </ul>

Field	Description
	<p><b>interface</b> field is activated.</p> <ul style="list-style-type: none"> <li>• <i>Deactivate WLAN</i>: The WLAN interface defined in the <b>Select interface</b> field is deactivated.</li> <li>• <i>Initiate 5 GHz WLAN Bandscan</i>: The wireless module selected in <b>Select Wireless Module</b> is scanned in the 5-GHz frequency band. During the scan, all wireless connections are interrupted.</li> <li>• <i>Trigger software update</i>: A software update is initiated.</li> <li>• <i>Trigger configuration backup</i>: The backup of the device configuration to a TFTP server is initiated.</li> </ul>
Select radio	<p>Only if <b>Select action</b> = <i>Initiate 5 GHz WLAN Bandscan</i></p> <p>Select the wireless module to be used for the scan.</p>
Select interface	<p>Only if <b>Select action</b> = <i>Activate interface</i> or <i>Deactivate interface</i></p> <p>or if</p> <p><b>Select action</b> = <i>Activate WLAN</i> or <i>Deactivate WLAN</i></p> <p>Select which interface is to be activated or deactivated.</p>
Source Location	<p>Only if <b>Select action</b> = <i>Trigger software update</i></p> <p>Select the desired source.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Current software from Funkwerk server</i>: The latest software will be downloaded from the Funkwerk server.</li> <li>• <i>HTTP server</i>: The latest software will be downloaded from an HTTP server that you define in <i>Update URL</i>.</li> </ul>
Update URL	<p>Only if <b>Select action</b> = <i>Trigger software update</i> and <b>Source</b> = <i>HTTP Server</i></p> <p>Enter the name of the HTTP server from which you wish to download a configuration file.</p>
TFTP Server	<p>Only if <b>Select action</b> = <i>Trigger configuration backup</i></p>

Field	Description
	Enter the IP address of the TFTP server to which you wish to transfer a configuration file.
TFTP File Name	Only if <b>Select action</b> = <i>Trigger configuration backup</i>  Enter the name with which configuration file is to be transferred to the TFTP server.

#### Fields in the Time Schedule Select time interval menu

Field	Description
Time Condition	<p>First select the type of time entry in <b>Condition Type</b>.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Weekday</i>: In <b>Condition Settings</b> , select a weekday.</li> <li>• <i>Periods</i> (default setting): In <b>Condition Settings</b> , select a particular period.</li> <li>• <i>Day of Month</i>: In <b>Condition Settings</b> , select a particular day of the month.</li> </ul> <p>Possible values for <b>Condition Settings</b> with <b>Condition Type</b> = <i>Weekday</i>:</p> <p><i>Monday</i> (default value) ... <i>Sunday</i>.</p> <p>Possible values for <b>Condition Settings</b> with <b>Condition Type</b> = <i>Periods</i>:</p> <ul style="list-style-type: none"> <li>• <i>Daily</i>: The initiator becomes active daily (default value).</li> <li>• <i>Monday-Friday</i>: The initiator becomes active daily from Monday to Friday.</li> <li>• <i>Monday-Saturday</i>: The initiator becomes active daily from Monday to Saturday.</li> <li>• <i>Saturday - Sunday</i>: The initiator becomes active on Saturdays and Sundays.</li> </ul> <p>Possible values for <b>Condition Settings</b> with <b>Condition Type</b> = <i>Day of the month</i>:</p> <p><i>1 ... 31</i>.</p>

Field	Description
Start Time	Enter the time from which the initiator is to be activated. Activation is carried on the next scheduling interval. the default value of this interval is 55 seconds.
Stop Time	Not if <b>Select Action</b> = <i>Reboot device</i>  Enter the time from which the initiator is to be deactivated. Deactivation is carried on the next scheduling interval. If you do not enter a <b>Stop Time</b> or set <b>Stop Time</b> = <b>Start Time</b> , the initiator is activated and deactivated after 10 seconds.

## 19.7.2 Options

In the **Local Services** -> **Scheduling** -> **Options** menu, you configure the schedule interval.

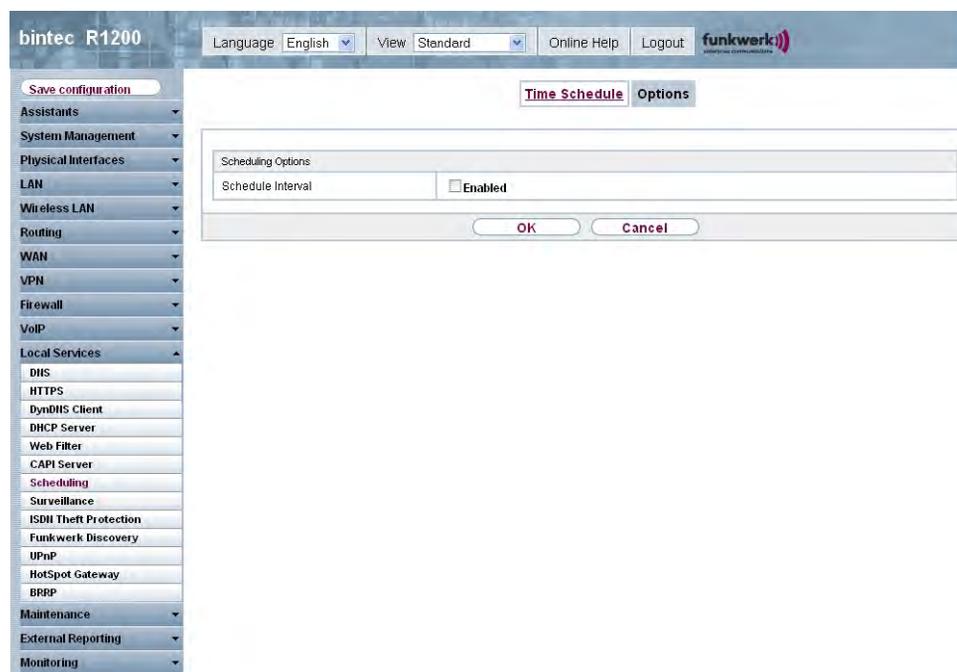


Fig. 165: **Local Services** -> **Scheduling** -> **Options**

The **Local Services** -> **Scheduling** -> **Options** menu consists of the following fields:

### Fields in the Options Scheduling Options menu

Field	Description
Schedule Interval	<p>Select whether the schedule interval is to be enabled for the interface.</p> <p>Enter the interval in seconds during which the system checks whether there are planned tasks.</p> <p>Possible values are 0 to 65535.</p> <p>The value 300 is recommended (5 minute accuracy). Values lower than 60 are generally pointless and are an unnecessary use of system resources.</p> <p>The field is not activated by default.</p>

## 19.8 Surveillance

In this menu, you can configure an automatic availability check for hosts or interfaces and automatic ping tests.



### Note

This function cannot be configured on your device for connections that are authenticated via a RADIUS server.

### 19.8.1 Hosts

In the **Local Services** -> **Surveillance** -> **Hosts** menu, a list of all monitored hosts is shown.

#### 19.8.1.1 Edit/New

Choose the  icon to edit existing entries. Choose the **New** button to set up new surveillance tasks servers.

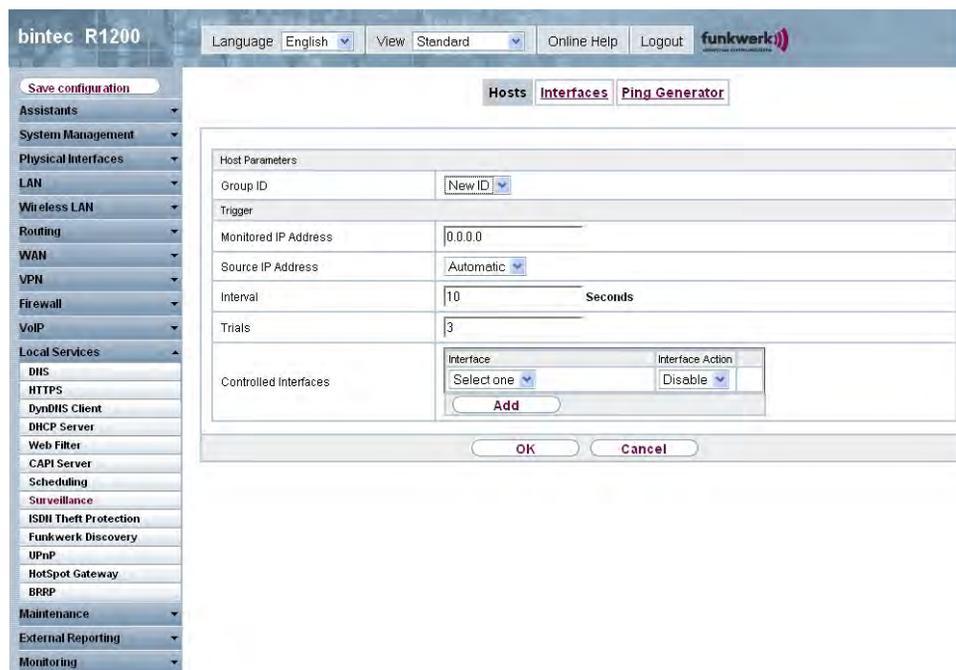


Fig. 166: Local Services -> Surveillance -> Hosts -> New

The **Local Services -> Surveillance -> Hosts-> New** menu consists of the following fields:

#### Fields in the Hosts Host Parameters menu

Field	Description
Group ID	<p>Select an ID for the group of hosts whose availability is to be monitored by your device.</p> <p>The group IDs are automatically created from 0 to 255. If an entry has not yet been created, a new group is created using the <i>New ID</i> option. If entries have been created, you can select one from the list of created groups.</p> <p>Each host to be monitored must be assigned to a group.</p> <p>The action configured in <b>Interface Action</b> is only executed if no other group member can be reached.</p>

#### Fields in the Hosts Trigger menu

Field	Description
Monitored IP Address	Enter the IP address of the host to be monitored.

Field	Description
Source IP Address	<p>Select how the IP address is to be determined that your device uses as the source address of the packet sent to the host to be monitored.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Automatic</i> (default value): The IP address is determined automatically.</li> <li>• <i>Specific</i>: Enter the IP address in the adjacent input field.</li> </ul>
Interval	<p>Enter the time interval (in seconds) to be used for checking the availability of hosts.</p> <p>Possible values are 1 to 65536.</p> <p>The default value is 10.</p> <p>The smallest <b>Interval</b> of the group members is used within a group.</p>
Trials	<p>Enter the number of pings that must remain unanswered for the host to be regarded as unavailable.</p> <p>Possible values are 1 to 65536.</p> <p>The default value is 3.</p>
Controlled Interfaces	<p>Select the interface(s) for which the action defined in <b>Interface Action</b> is to be performed.</p> <p>All physical and virtual interfaces can be selected.</p> <p>For each interface, select whether each interface is to be activated ( <i>Enable</i>) or deactivated ( <i>Disable</i>, default value), reset ( <i>Reset</i>) or if the connection is to be re-established ( <i>Dialup again</i>).</p>

## 19.8.2 Interfaces

In the **Local Services -> Surveillance -> Interfaces** menu, a list of all monitored Interfaces is shown.

### 19.8.2.1 Edit/New

Choose the  icon to edit existing entries. Choose the **New** button to set up monitoring for other interfaces.

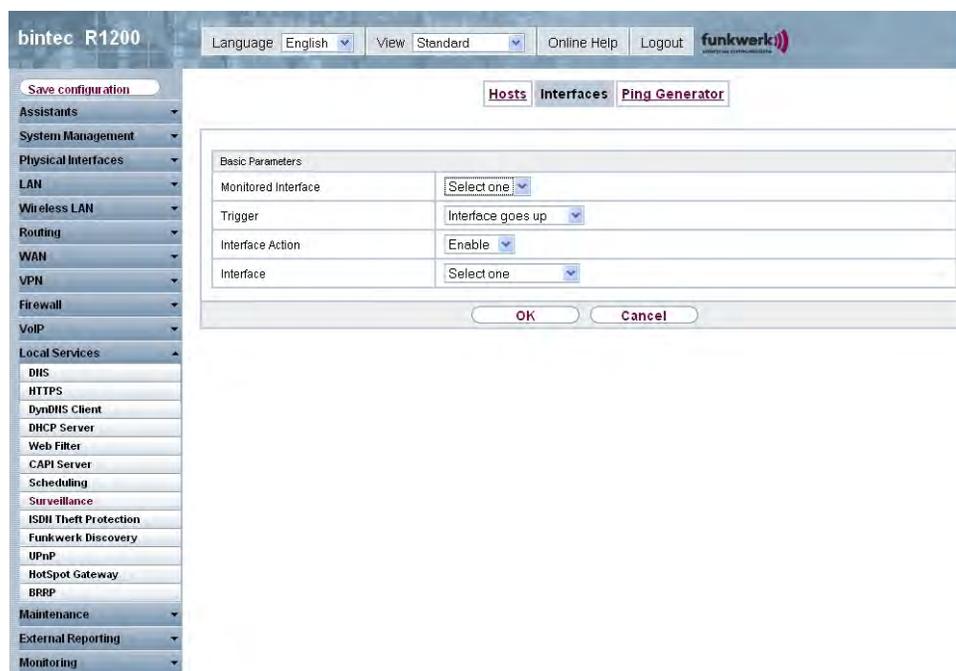


Fig. 167: Local Services -> Surveillance -> Interfaces -> New

The **Local Services -> Surveillance -> Interfaces -> New** menu consists of the following fields:

#### Fields in the Interfaces Basic Parameters menu

Field	Description
Monitored Interface	Select the interface on your device that is to be monitored.
Trigger	Select the state or state transition of <b>Monitored Interfaces</b> that is to trigger a particular <b>Interface Action</b> .  Possible values: <ul style="list-style-type: none"> <li>• <i>Interface goes up</i> (default setting)</li> <li>• <i>Interface goes down</i></li> </ul>

Field	Description
Interface Action	<p>Select the action that is to follow the state or state transition defined in <b>Trigger</b>.</p> <p>The action is applied to the Interface(s) selected in <b>Interface</b>.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Enable</i> (default value): Activation of interface(s)</li> <li>• <i>Disable</i>: Deactivation of interface(s)</li> </ul>
Interface	<p>Select the interface(s) for which the action defined in <b>Interface Action</b> is to be performed.</p> <p>All the physical and virtual interfaces and the options <i>All PPP Interfaces</i> and <i>All IPSec Interfaces</i> can be selected.</p>

### 19.8.3 Ping Generator

In the **Local Services** -> **Surveillance** -> **Ping Generator** menu, a list is shown of all pings configured for automatic generation.

#### 19.8.3.1 Edit/New

Choose the  icon to edit existing entries. Choose the **New** button to set up further pings.

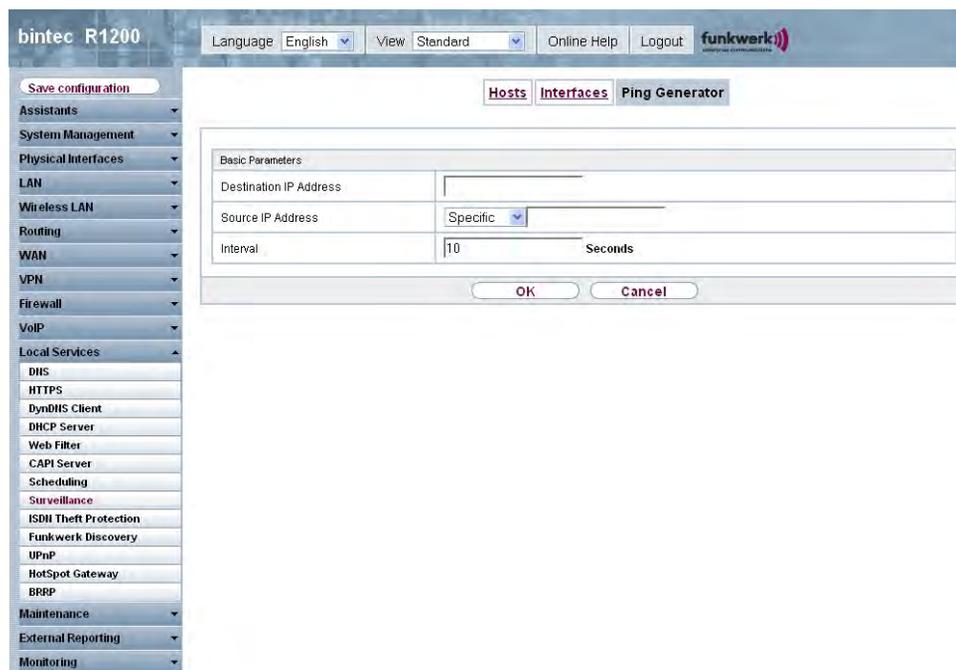


Fig. 168: Local Services -> Surveillance -> Ping Generator -> New

The **Local Services -> Surveillance -> Ping Generator -> New** menu consists of the following fields:

#### Fields in the Ping Generator Basic Parameters menu

Field	Description
Destination IP Address	Enter the IP address to which the ping is automatically sent.
Source IP Address	Enter the source IP address of the outgoing ICMP echo request packets.  Possible values: <ul style="list-style-type: none"> <li>• <i>Automatic</i>: The IP address is determined automatically.</li> <li>• <i>Specific</i> (default value): Enter the IP address in the adjacent input field e.g. to test a particular extended route.</li> </ul>
Interval	Enter the interval in seconds during which the ping is to be sent to the target IP address specified in <b>Target IP Address</b> .  Possible values are 1 to 65536.

Field	Description
	The default value is <i>10</i> .

## 19.9 ISDN Theft Protection

With the ISDN theft protection function, you can prevent a thief who has stolen a gateway from gaining access to the gateway owner's LAN. (Without theft protection, he could dial in to the LAN by ISDN if, under **WAN-> Internet + Dialup -> ISDN ->** , the field **Always on** is enabled.)

### 19.9.1 Options

All interfaces for which the theft protection is enabled are administratively set to "down" when the gateway boots.

The gateway then calls itself by ISDN and checks its location. If the configured ISDN call numbers differ from the numbers dialled, the interfaces remain disabled.

If the numbers agree, the device assumes that it is at the original location and the interfaces are administratively set to "up".

To reduce cost, the function uses the ISDN D channel.



#### Note

Note that the ISDN theft protection function is not available for Ethernet interfaces.

The screenshot shows the web interface for a bintec R1200 device. The top navigation bar includes 'Language English', 'View Standard', 'Online Help', and 'Logout'. The left sidebar contains a menu with categories like 'Assistants', 'System Management', 'Physical Interfaces', 'LAN', 'Wireless LAN', 'Routing', 'WAN', 'VPN', 'Firewall', 'VoIP', 'Local Services', 'Surveillance', 'Maintenance', 'External Reporting', and 'Monitoring'. The 'Local Services' menu is expanded, showing 'ISDN Theft Protection' selected. The main content area is titled 'Options' and is divided into two sections: 'Basic Parameters' and 'Advanced Settings'.

**Basic Parameters:**

- ISDN Theft Protection Service:  Enabled
- Dialling Number:
- Incoming Number:
- Outgoing Number:
- Monitored Interfaces:  Interface

**Advanced Settings:**

- Number of Dialling Retries:
- Timeout:  Seconds

Buttons for 'OK' and 'Cancel' are located at the bottom of the form.

Fig. 169: Local Services -> ISDN Theft Protection -> Options

The menu **Local Services -> ISDN Theft Protection -> Options** consists of the following fields:

#### Fields in the Options Basic Parameters menu

Field	Description
ISDN Theft Protection Service	Enable or disable the ISDN theft protection function.  The function is activated with <i>Enabled</i> .  The function is disabled by default.
Dialling Number	Only if <b>ISDN theft protection service</b> is enabled.  Enter the subscriber number that the gateway dials to call itself.
Incoming Number	Only if <b>ISDN theft protection service</b> is enabled.  Enter the subscriber number to be compared with the current calling party number.
Outgoing Number	Only if <b>ISDN theft protection service</b> is enabled.

Field	Description
	Enter the subscriber number to be set as calling party number.
Monitored Interfaces	<p>Only if <b>ISDN theft protection service</b> is enabled.</p> <p>Use <b>Add</b> to add a new interface to the list.</p> <p>Select from the available interfaces those to which the ISDN theft protection function is to be applied.</p>

#### Fields in the menu **Advanced Settings**

Field	Description
Number of Dialling Re-tries	<p>Enter the number of dial attempts that the gateway is to make to call itself by ISDN after a reboot.</p> <p>Possible values are <i>1</i> to <i>255</i>.</p> <p>The default value is <i>3</i>.</p>
Timeout	<p>Enter the time in seconds that the gateway is to wait before trying again after an unsuccessful attempt to call itself.</p> <p>Possible values are <i>2</i> to <i>20</i>.</p> <p>The default value is <i>5</i>.</p>

## 19.10 Funkwerk Discovery

### 19.10.1 Device Discovery

The funkwerk Discovery protocol is used to identify and configure **bintec** access points that are in the same wired network as your device. Once an access point has been discovered, certain basic parameters (node name, IP address, netmask, and device address) can be configured on the access point (provided you know the administrator password).



#### Note

Any **bintec** access points that exist are determined by means of a multicast. The IP address of the access point is therefore irrelevant.

Please note that the discovered **bintec** access points are not stored in the flash, which

means discovery must be repeated after you reboot your device.

In the **Local Services** -> **Funkwerk Discovery** -> **Device Discovery** menu, under **Results** a list is shown of all access points found on the network. In the **Interface** field, select the interface of your device via which access point discovery is to be carried out. You use the *-All-* option to query all interfaces.

The current discovery status is displayed for each individual interface under Discovery Status. *None* means that discovery is not active. *Discovery* is displayed when discovery is currently being carried out.

This discovery function also enables your device to be discovered and configured by other access points with a discovery function. You configure this in the **Options** sub-menu.

### 19.10.1.1 Discover

Choose the **Discover** button to start **bintec** access point discovery.

The screenshot shows the web interface for a bintec R1200 device. The top navigation bar includes 'Language' (English), 'View' (Standard), 'Online Help', and 'Logout'. The sidebar on the left lists various system management options, with 'Local Services' expanded to show 'Funkwerk Discovery'. The main content area is titled 'Device Discovery' and contains the following elements:

- 'Automatic Refresh Interval' set to 60 seconds with an 'Apply' button.
- 'Discovery Status' field.
- 'Interface' field with 'en1-0' selected and 'Status' field with 'Discovery'.
- 'Initiate Funkwerk Discovery' section with an 'Interface' dropdown menu set to '-All-'.
- 'Results' table showing discovered access points.
- 'Discover' button at the bottom.

Interface	Node Name	IP Address / Mask	MAC Address	Last Write Result
en1-0	wl2040n	10.0.0.232 / 255.255.255.0	00:01:cd:06:76:fa	No error
en1-0	wl1002n	10.0.0.1 / 255.255.255.0	00:01:cd:0e:8f:04	No error

Fig. 170: **Local Services** -> **Funkwerk Discovery** -> **Device Discovery**

If access points were discovered in the network, they are displayed in the list. You use the  button to go to the configuration menu for the access point.

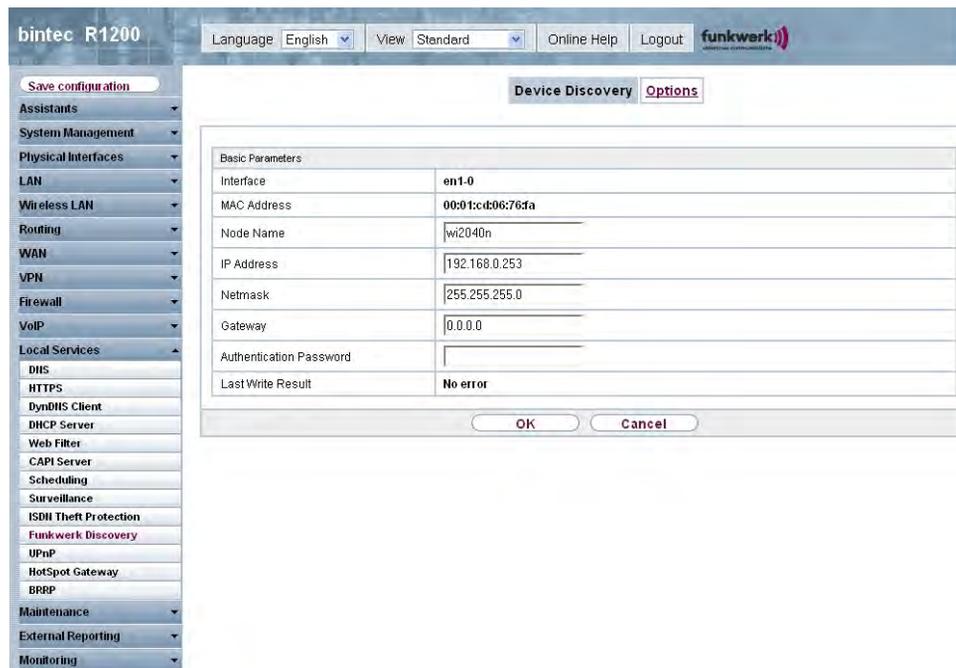


Fig. 171: Local Services -> Funkwerk Discovery -> Device Discovery->

The **Local Services -> Funkwerk Discovery -> Device Discovery->** menu consists of the following fields:

#### Fields in the Funkwerk Discovery Basic Parameters menu

Field	Description
Interface	The value of this field can only be read. Shows the interface of your device on which discovery is carried out.
MAC Address	The value of this field can only be read. Shows the MAC Address of the discovered access point.
Node Name	You can change the name of the discovered access point.
IP Address	You can change the IP address of the discovered access point.
Netmask	You can change the related netmask.

Field	Description
Gateway	You can change the gateway address of the discovered access point.
Authentication Password	You must enter the administrator password for the access point, otherwise you cannot carry out the configuration operation.
Last Write Result	<p>The value of this field can only be read.</p> <p>Displays the result of the last configuration operation.</p> <p>Possible values:</p> <ul style="list-style-type: none"><li>• <i>No Error</i>: The access point reported a successful operation or a configuration change has not yet been made with <b>OK</b>.</li><li>• <i>No Response</i>: The access point has not responded.</li><li>• <i>Access Denied</i>: The access point reported an authorisation error. Check the authentication password.</li><li>• <i>Invalid IP Parameters</i>: There is a problem with the intended IP parameters (IP address, netmask, or gateway address).</li><li>• <i>Destination Unreachable</i>: The access point cannot be reached for internal reasons (e.g. the interface to which the access point is connected is down). A configuration request cannot be sent to the access point.</li><li>• <i>Other AP Error</i>: The access point responds to the configuration request with an unexpected or non-specific error.</li><li>• <i>Internal Error</i>: An internal device problem prevented the configuration option from being carried out.</li></ul>

## 19.10.2 Options

In this menu, you can grant permission for your device to be discovered by other **bintec** devices using the funkwerk Discovery protocol and to be configured by means of this.

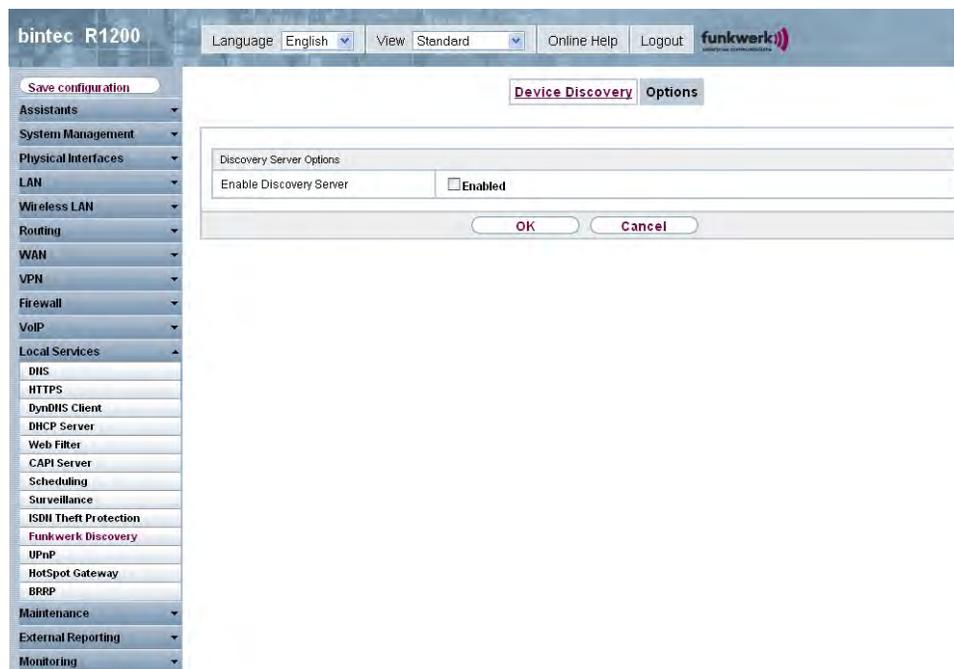


Fig. 172: Local Services -> Funkwerk Discovery -> Options

The **Local Services -> Funkwerk Discovery -> Options** menu consists of the following fields:

### Fields in the Options Discovery Server Options menu

Field	Description
Enable Discovery Server	Select whether your device is to be discovered and configured by other <b>bintec</b> devices in the network.  The function is activated with <i>Enabled</i> .  The function is disabled by default.

## 19.11 UPnP

Universal Plug and Play (UPnP) makes it possible to use current messenger services (e.g. real time video/audio conferencing) as peer-to-peer communication where one of the peers lies behind a NAT-enabled gateway.

UPnP enables (mostly) Windows-based operating systems to take control of other devices with UPnP functionality on the local network. These include gateways, access points and print servers. No special device drivers are needed as known common protocols are used, such as TCP/IP, HTTP and XML.

Your gateway makes it possible to use the subsystem of the Internet Gateway Device (IGD) from the UPnP function range.

In a network behind a NAT-enabled gateway, the UPnP-configured computers act as LAN UPnP clients. To do this, the UPnP function on the PC must be enabled.

The pre-configured port used for UPnP communication between LAN UPnP clients and the gateway is `5678`. The LAN UPnP client acts as a so-called service control point, i.e. it recognizes and controls the UPnP devices on the network.

The ports assigned dynamically by, for example, MSN Messenger, lie in the range from `5004` to `65535`. The ports are released internally to the gateway on demand, i.e. when an audio/video transfer is started in Messenger. When the application is closed, the ports are immediately closed again.

The peer-to-peer-communication is initiated via public SIP servers with only the information from the two clients being forwarded. The clients then communicate directly with one another.

For further information about UPnP, see [www.upnp.org](http://www.upnp.org).

### 19.11.1 Interfaces

In this menu, you configure the UPnP settings individually for each interface of your gateway.

You can determine whether UPnP requests from clients are accepted by each interface (for requests from the local network) and/or whether the interface can be controlled via UPnP requests.

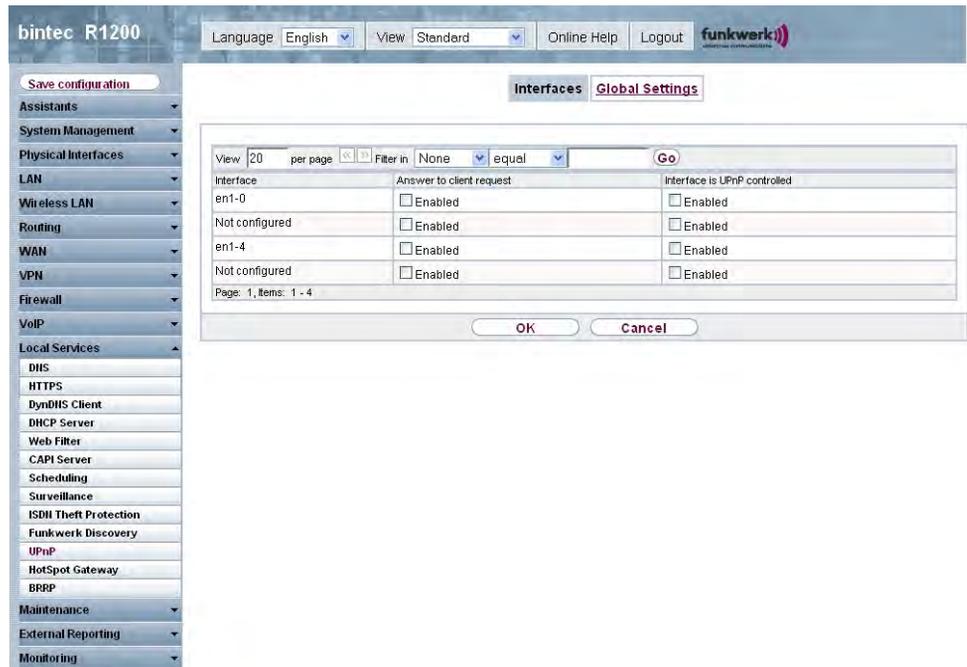


Fig. 173: Local Services -> UPnP -> Interfaces

The menu **Local Services ->UPnP-> Interfaces** consists of the following fields:

#### Fields in the Interfaces menu

Field	Description
Answer to client request	Determine whether UPnP requests from clients are to be answered via the particular interface (from the local network).  The function is activated with <i>Enabled</i> .  The function is disabled by default.
Interface is UPnP controlled	Determine whether the NAT Configuration of this interface is controlled by UPnP.  The function is activated with <i>Enabled</i> .  The function is enabled by default.

## 19.11.2 Global Settings

In this menu, you make the basic UPnP settings.

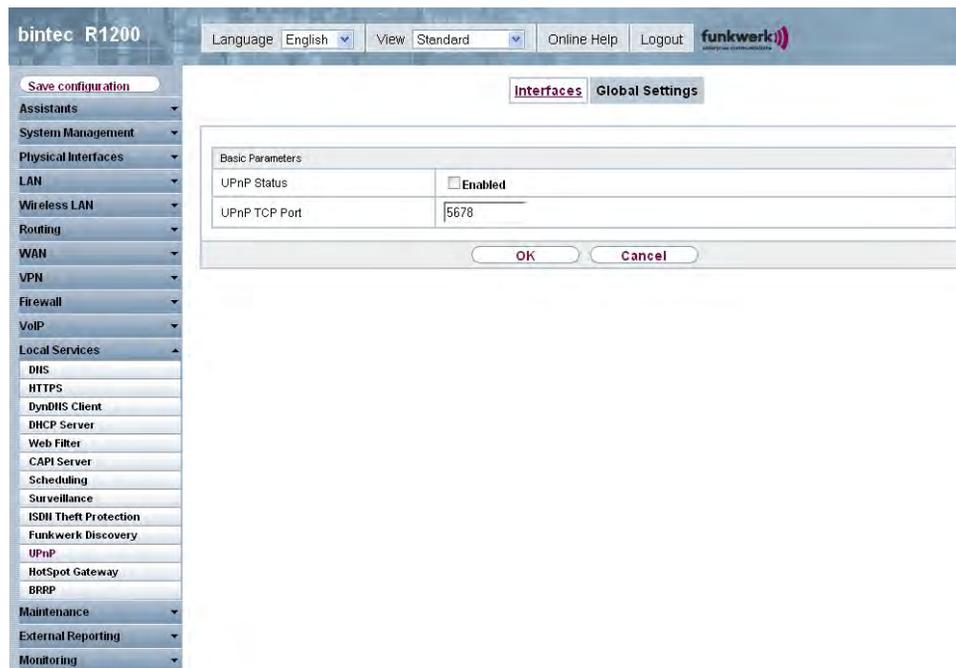


Fig. 174: Local Services -> UPnP -> Global Settings

The menu **Local Services -> UPnP -> Global Settings** consists of the following fields:

#### Fields in the menu Global Settings

Field	Description
UPnP Status	<p>Decide how the gateway processes UPnP requests from the LAN.</p> <p>The function is activated with <i>Enabled</i>. The gateway proceeds with UPnP releases in accordance with the parameters contained in the request from the LAN UPnP client, independently of the IP address of the requesting LAN UPnP client.</p> <p>The function is disabled by default. The gateway rejects UPnP requests, NAT releases are not made.</p>
UPnP TCP Port	<p>Enter the number of the port on which the gateway listens for UPnP requests.</p> <p>The possible values are 1 to 65535, the default value is 5678.</p>

## 19.12 Hotspot Gateway

The **bintec HotSpot Solution** allows provision of public Internet accesses (using WLAN or wired Ethernet). The solution is adapted to setup of smaller and larger Hotspot solutions for cafes, hotels, companies, communal residences, campgrounds, etc.

The **bintec HotSpot Solution** consists of a bintec gateway installed onsite (with its own WLAN access point or additional connected WLAN device or wired LAN) and of the Hotspot server, centrally located at a computing centre. The operator account is administered on the server via an administration terminal (e.g., a hotel reception PC); this includes functions such as registration entry, generating tickets, statistical analysis, etc.

### Login sequence at the Hotspot server

- When a new user connects with the Hotspot, he/she is automatically assigned an IP address via DHCP.
- As soon as he attempts to access any Internet site with a browser, the user is redirected to the home/login page.
- After the user has entered the registration data (user/password), these are sent to the central RADIUS server (Hotspot server) as RADIUS registration.
- Following successful registration, the gateway opens Internet access.
- For each user, the gateway sends regular additional information to the RADIUS server for recording accounting data.
- When the ticket expires, the user is automatically logged off and again redirected to the home/login page.

### Requirements

To operate a Hotspot, the customer requires:

- A bintec device as a Hotspot gateway with an active internet access and configured Hotspot server Entries for login and accounting (see menu **System Management** -> **Remote Authentication** -> **RADIUS** -> **New** with **Group Description** *Standard Group 0*)
- bintec Hotspot hosting (article number 5510000198)
- Access data
- Documentation
- Software licensing

Please note that you must first activate the licence.

- Go to [www.funkwerk-ec.com](http://www.funkwerk-ec.com) then **Service/Support** -> **Services** -> **Online Services**.
- Enter the required data (please note the relevant explanations on the license sheet), and follow the instructions of the online licensing.
- You then receive the Hotspot server's login data.

**Note**

Activation may require 2-3 business days.

## Access data for gateway configuration

RADIUS Server IP	62.245.165.180
RADIUS Server Password	Set by Funkwerk Enterprise Communications GmbH
Domain	Individually set for customers by customer/dealer
Walled Garden Network	Individually set for customers by customer/dealer
Walled Garden Server URL	Individually set for customers by customer/dealer
Terms & Conditions URL	Individually set for customers by customer/dealer

## Access data for configuration of the Hotspot server

Admin URL	<a href="https://hotspot.funkwerk-ec.com/">https://hotspot.funkwerk-ec.com/</a>
Username	Individually set by FEC
Password	Individually set by FEC

**Note**

Also refer to the WLAN Hotspot Workshop that is available to download from [www.funkwerk-ec.com](http://www.funkwerk-ec.com).

### 19.12.1 Hotspot Gateway

In the **Hotspot Gateway** menu you can configure the bintec gateway installed onsite for the **bintec Hotspot Solution**.

In the **Local Services -> Hotspot Gateway -> Hotspot Gateway** menu, a list of all configured hotspot networks is shown.

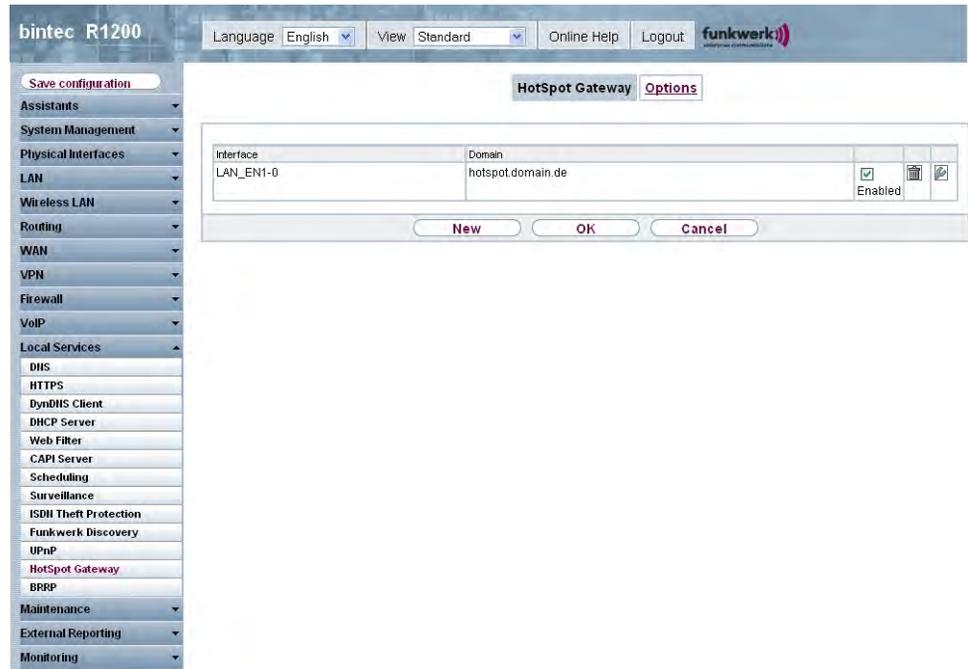


Fig. 175: **Local Services -> Hotspot Gateway -> Hotspot Gateway ->**

You can use the **Enabled** option to enable or disable the corresponding entry.

### 19.12.1.1 Edit/New

In the **Local Services -> Hotspot Gateway -> Hotspot Gateway ->** menu, you configure the Hotspot networks. Choose the **New** button to set up additional Hotspot networks.

The screenshot shows the configuration page for the HotSpot Gateway on a bintec R1200 device. The interface includes a top navigation bar with 'Language' (English), 'View' (Standard), 'Online Help', and 'Logout' buttons. A left sidebar contains a tree view of system settings, with 'Local Services' expanded to 'HotSpot Gateway'. The main content area is titled 'HotSpot Gateway' and contains two sections: 'Basic Parameters' and 'Advanced Settings'. The 'Basic Parameters' section has four rows: 'Interface' (dropdown menu showing LAN\_EN1-0), 'Domain at the HotSpot Server' (text input), 'Walled Garden' (checkbox labeled 'Enabled' which is unchecked), and 'Language for login window' (dropdown menu showing English). The 'Advanced Settings' section has two rows: 'Ticket Type' (dropdown menu showing Username/Password) and 'Allowed HotSpot Client' (dropdown menu showing All). At the bottom of the form are 'OK' and 'Cancel' buttons.

Fig. 176: Local Services -> Hotspot Gateway -> Hotspot Gateway ->

The **Local Services -> Hotspot Gateway -> Hotspot Gateway ->**  menu consists of the following fields:

#### Fields in the Hotspot Gateway Basic Parameters menu

Field	Description
Interface	Choose the interface to which the Hotspot LAN or WLAN is connected. When operating over LAN, enter the Ethernet interface here (e.g. en1-0). If operating over WLAN, the WLAN interface to which the access point is connected must be selected.
	<p><b>Caution</b></p> <p>For security reasons you cannot configure your device over an interface that is configured for the Hotspot. Therefore take care when selecting the interface you want to use for the Hotspot.</p> <p>If you select the interface over which the current configuration session is running, the current connection will be lost. You must then log in again over a reachable interface that</p>

Field	Description
	is not configured for the Hotspot to configure your device.
Domain at the HotSpot Server	Enter the domain name that you used when setting up the HotSpot server for this customer. The domain name is required so that the Hotspot server can distinguish between the different clients (customers).
Walled Garden	<p>Enable this function if you want to define a limited and free area of websites (intranet).</p> <p>The function is not activated by default.</p>
Walled Network / Net-mask	<p>Only if <b>Walled Garden</b> is enabled.</p> <p>Enter the network address of the <b>Walled Network</b>, the corresponding <b>Netmask</b> of the intranet server.</p> <p>For the address range resulting from <b>Walled Network / Net-masks</b>, clients require no authentication.</p> <p>Example: Enter 192.168.0.0 / 255.255.255.0, if all IP addresses from 192.168.0.0 to 19.168.0.255 are free. Enter 192.168.0.1 / 255.255.255.255, if only the IP address 192.168.0.1 is free.</p>
Walled Garden URL	<p>Only if <b>Walled Garden</b> is enabled.</p> <p>Enter the <b>Walled Garden URL</b> of the intranet server. Freely accessible websites must be reachable over this address.</p>
Terms & Conditions	<p>Only if <b>Walled Garden</b> is enabled.</p> <p>In the <b>General Terms and Conditions</b> input field enter the address of the general terms and conditions on the intranet server, or public server, e.g., <a href="http://www.webserver.de/agb.htm">http://www.webserver.de/agb.htm</a>. The page must lie within the address range of the walled garden network.</p>
Language for login window	<p>Here you can choose the language for the start/login page.</p> <p>The following languages are supported: <i>English, Deutsch, Italiano, Français, Español</i> and <i>Português</i>.</p> <p>The language can be changed on the start/login page at any</p>

Field	Description
	time.

The **Advanced Settings** menu consists of the following fields:

#### Fields in the menu Advanced Settings

Field	Description
Ticket Type	<p>Select the ticket type.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>Voucher</i>: Only the user name must be entered. Define a default password in the input field.</li> <li>• <i>Username/Password</i>(default value): User name and password must be entered.</li> </ul>
Allowed HotSpot Client	<p>Here you can define which type of users can log in to the Hotspot.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>All</i>: All clients are approved.</li> <li>• <i>DHCP Client</i>: Prevents users who have not received an IP address from DHCP from logging in.</li> </ul>

#### 19.12.1.2 Options

In the **Local Services** -> **Hotspot Gateway** -> **Options** menu, you configure general settings for the Hotspot.

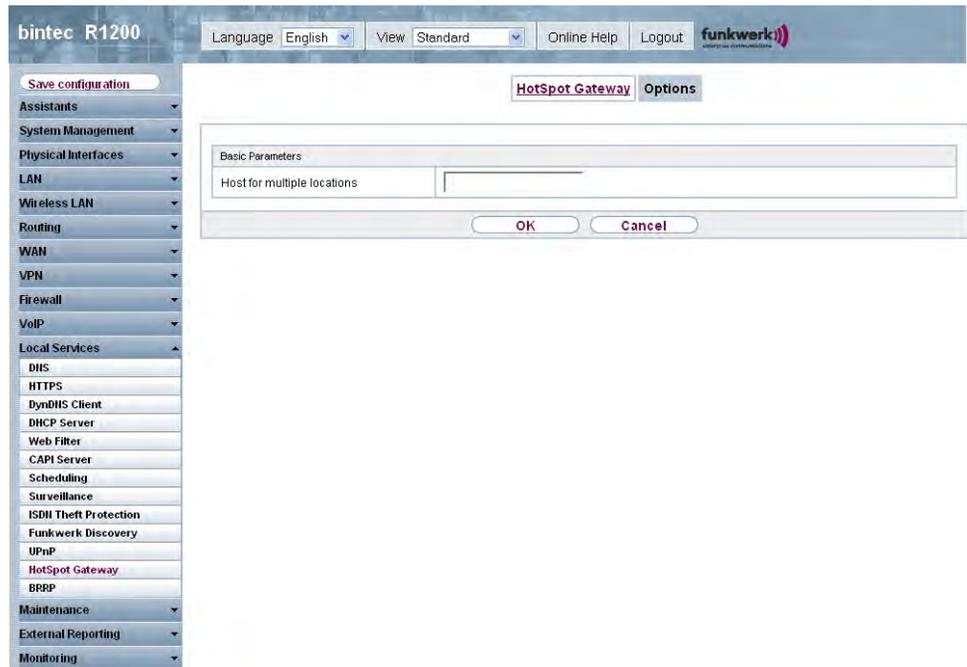


Fig. 177: Local Services -> Hotspot Gateway -> Options

The **Local Services -> Hotspot Gateway -> Options** menu consists of the following fields:

#### Fields in the Options Basic Parameters menu

Field	Description
Host for multiple locations	If several locations (branches) are set up on the Hotspot server, enter the value of the NAS identifier (RADIUS server parameter) that has been registered for this location on the Hotspot server.

## 19.13 BRRP

In the **BRRP** menu you can configure the redundancy of your gateway.



#### Note

You require a licence for devices in the R23x series and RS series.

BRRP (Bintec Router Redundancy Protocol) is a Bintec-specific implementation of the VRRP (Virtual Router Redundancy Protocol). A router redundancy procedure is used mainly to safeguard the availability of a physical gateway in a LAN or WAN.

## Terms and Definitions

A number of special terms are used to describe the functionality. The following terms are defined in the relevant RFC and in the Internet draft.

### BRRP terms

Field	Description
VRRP router	“A router that uses the Virtual Router Redundancy Protocol. It can be integrated into one or more “virtual routers””
Virtual Router	“An abstract object controlled by the VRRP, which is used as default router for the hosts of a LAN. It comprises a Virtual Router Identifier ( <b>ID of the virtual router</b> ) and an IP address or a group of associated IP addresses in a common LAN. A VRRP router can protect the data traffic of one or more virtual routers.”
IP Address Owner	“The VRRP router that possesses the IP address(es) of the virtual router as real interface address(es). This is the router that – if active - answers packets for ICMP pings, TCP connections, etc. to one of these IP addresses.”
Primary IP Address	“An IP address that is selected from the group of real interface addresses. A possible algorithm option is the selection of the first address. VRRP advertisements are always sent with the primary IP address as source of the IP packet.”
VRRP Advertisement	A keepalive that sends the master to the backup gateway to indicate his reachability.
Virtual Router Master	“The VRRP router that takes over forwarding the packets that have been sent to the IP addresses associated with the “virtual router”. It is also responsible for answering ARP (Address Resolution Protocol) requests for these IP addresses.”
Virtual Router Backup	“The group of VRRP routers that take over responsibility for forwarding the packets if the master fails.” In backup status these VRRP routers are inactive, i.e. they do not respond to any ARP requests.”

### 19.13.1 Virtual Routers

When using a route redundancy protocol, multiple routers are combined into a logical unit. The router redundancy protocol BRRP manages the routes involved and organises these as follows:

It ensures that only one routers within the logical connection is active.

It guarantees that if the active route fails, another router takes over the function of the failed device. The time that each router is active is determined by the priority assigned to the router.

Let us take the example of a simple scenario, in which gateway A provides Internet access for the hosts in a LAN. If this gateway fails, all hosts cannot access the Internet and their routes are configured statically. To allow the hosts continued access to the Internet, gateway B offers all hosts in the LAN the service that gateway A previously performed. All the tasks of a “virtual router” and the switching of services from one gateway to the other are controlled by the BRRP redundancy procedure.

The BRRP conforms to the specifications in RFC 2338 and the relevant Internet draft. (You will find the Internet drafts at <http://www.ietf.org/1idabstracts.html>.)

The configuration of the router redundancy procedure is carried out in the following steps:

- Configuration of the interface via which the BRRP advertisement data packets are sent.



#### Note

This interface is used to transmit the BRRP advertisement data packets and possibly to transmit keepalive monitoring data packets. Another interface must be configured in the next step to transmit the usage data.

The configuration of the advertisement interface is performed in the **Local Services -> BRRP -> Virtual Routers -> New -> Advertisement Interface** menu.

Only the active router in the router group sends advertisement data packets. The IPv4 multicast address 224.0.0.18 is used as the destination address for all routers in the group. All passive routers in the group must monitor this address so that if the advertisement data packets are not received that can react according to their priority and BRRP configuration.

- Configuration of the interface for transmitting usage data (configuration of the virtual interface).

A virtual interface is activated and deactivated by assigning it to a virtual router over the

BRRP router redundancy protocol.

The configuration is performed in the **Local Services -> BRRP -> Virtual Routers -> New -> BRRP Interface** menu.

In this step, you configure the IP address settings and assign the interface to a virtual router. The properties of the virtual router (e.g. the priority) are also defined here.



#### Note

The system automatically assigns the MAC Address of the virtual interface according to the following model: 00:00:5E:00:01:<ID of the virtual router>. The ID of the virtual router therefore determines the MAC Address of the interface, which is used to transmit the usage data.

The configuration of the virtual interface (MAC Address, IP address) and the configuration of the virtual router (priority, sending interval for advertisement, master down trials) must be identical on all routers with the same virtual router ID within the logical group.

You must use different IP addresses for the advertisement interface and for the virtual interface.

All virtual interfaces on a physical router should normally have the same priority.

- Configuration of the synchronisation between the virtual router and configuration of the events, which result in a switching of the operating status of the virtual router.

Controlling the operating status of a virtual router implicitly also controls the operating status of the interface to which the virtual router is linked. If an error occurs, all interfaces on a device have to be deactivated. Consequently, the operating status of all interfaces on a device must be synchronised. This synchronisation is required if multiple interfaces are monitored on a single device. This configuration is performed in the **Local Services -> BRRP -> VR Synchronisation -> New** menu.

- Switching on the redundancy procedure. This configuration is performed in the **Local Services -> BRRP -> Options** menu.

You configure the advertisement interface and the virtual interface(s) in the **Local Services -> BRRP -> Virtual Routers -> New** menu. You must configure the same virtual routers with the same interfaces on all physical routers involved in the redundancy procedure. (However, the virtual routers have different priorities on the various physical routers.)

#### 19.13.1.1 New

Choose the **New** button to configure other virtual routers.

The screenshot shows the configuration page for a BRRP Virtual Router Advertisement Interface. The interface includes a navigation menu on the left with categories like System Management, Physical Interfaces, LAN, Wireless LAN, Routing, WAN, VPN, Firewall, VoIP, Local Services, and Maintenance. The main configuration area is titled 'Virtual Routers' and contains the following fields:

- BRRP Advertisement Interface:** Ethernet Interface (dropdown menu), IP Address (text field), Netmask (text field).
- BRRP Monitored Interface:** Virtual Router Interface (dropdown menu), Advertisement interface not selected! (text field).
- Virtual Router IP Address:** IP Address (text field), Netmask (text field, value: 255.255.255.0), Add (button).
- Virtual Router ID:** 1 (dropdown menu).
- Virtual Router Priority:** 100 (dropdown menu).

Below the main configuration is an 'Advanced Settings' section with the following fields:

- Advertisement send interval: 1 (text field).
- Master down trials: 10 (text field).
- Pre-empt mode (go back into master state):  Enabled (checkbox).
- Enable authentication:  (checkbox).

At the bottom of the form are 'OK' and 'Cancel' buttons.

Fig. 178: Local Services -> BRRP -> Virtual Routers -> New

The **Local Services -> BRRP -> Virtual Routers -> New** menu consists of the following fields:

#### Fields in the Virtual Routers BRRP Advertisement Interface menu

Field	Description
Ethernet Interface	Choose the interface via which BRRP advertisement packets are sent and expected.  If you edit a <b>Virtual Router</b> , the Ethernet interface is displayed and cannot be changed.  Note: The Ethernet interface for sending the advertisements is always up and running and cannot therefore be used as the <b>Virtual Router Interface</b> .
IP Address	Shows the IP address(es) of the interface via which BRRP advertisement packets are sent and expected.

#### Fields in the Virtual Router BRRP Monitored Interface menu

Field	Description
Virtual Router Interface	Indicates on which physical interface the virtual interface is based, if a new virtual interface is created. The name of the virtual interface is assigned automatically when it is created. Shows the name of the virtual interface, if a virtual interface that has already been created is edited.
Virtual Router IP Address	Enter the IP address and the netmask of the virtual router. Here enter the IP address that you want to use in the local network as the actual gateway IP address.  Note: The <b>IP address</b> for advertisements and the <b>Virtual Router IP Address</b> must be different. These IP addresses can originate from the same network (optional).
Virtual Router ID	Select the ID of the virtual router.  This ID identifies the “virtual router” in the LAN and is part of every BRRP advertisement packet that is sent by the current master.  Possible values are whole numbers between <i>1</i> and <i>255</i> .
Virtual Router Priority	Define the logical priority of the virtual router. Possible values are between <i>1</i> and <i>255</i> . The higher the value, the higher the priority. The value <i>255</i> defines that this virtual router always functions as master as soon as it is active.  The default value is <i>100</i> .  The virtual router with the highest priority normally takes over the master role. After a backup scenario, the further master-slave role casting is determined by the parameters <b>Virtual router priority</b> and <b>Pre-empt Mode (back to master status)</b> .

In the **Advanced Settings** menu you must configure all of the parameters for all virtual routers identically on all devices in the group. We recommend leaving the preset values.

The **Advanced Settings** menu consists of the following fields:

#### Fields in the menu Advanced Settings

Field	Description
Advertisement send interval	Determine how often a BRRP advertisement packet is sent if the virtual router is defined as master. Only the current master sends via multicast BRRP advertisements, which also contain

Field	Description
	<p>the ID and the priority of the master.</p> <p>Possible values are whole numbers between <i>1</i> and <i>255</i>. The value is indicated in seconds and the default value is <i>1</i>.</p> <p>An advertisement timer based on the sending interval for advertisements runs in the router and an advertisement packet is sent when the timer expires.</p>
Master down trials	<p>Define the number of BRRP advertisements that must fail before the backup router with the lowest priority assumes that the master is inactive and takes over the role of master.</p> <p>A master down timer based on the <b>Master down trials</b> runs in the router; when this timer expires, the backup assumes that the master is not reachable if no advertisement has been received.</p> <p>The effective master down interval is the time calculated from the number of expected but omitted BRRP advertisements, the advertisement interval and the skew time, which adds a minimum period depending on the priority. The higher the priority, the shorter the time added. Consequently, a backup router with a higher priority responds more quickly than a router with lower priority).</p> <p>Possible values are whole numbers between <i>1</i> and <i>255</i> and the default value is <i>10</i>.</p>
Pre-empt mode (back in to master status)	<p>Define whether a backup router with higher priority has priority over a master router with low priority.</p> <p>Pre-empt mode is used to prevent unnecessary switching. This means: An active backup router with low priority does not give up its role if the master router becomes reachable again.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>The function is enabled by default.</p> <p>Note the following exception: If <b>Virtual Router Priority</b> <i>255</i> is selected, the gateway with this priority takes over the master role in all cases, i.e. the setting in <b>Pre-empt Mode</b> is not considered. You should therefore select a <b>Virtual Router Priority</b> lower than <i>255</i> if you wish to use pre-empt mode.</p>

Field	Description
Enable authentication	<p>Enable or disable authentication.</p> <p>The function is activated with <i>Enabled</i>.</p> <p>If the function is active, an input field is displayed. Enter the authentication key here.</p> <p>Note: Note that the authentication key must be the same for all virtual routers in the group.</p> <p>The function is disabled by default.</p>

## 19.13.2 VR Synchronisation

The watchdog daemon is configured in the **Local Services** -> **BRRP** -> **VR Synchronisation** menu, i.e. you define how state changes are handled.

A list of all synchronisations is displayed when opening the **Local Services** -> **BRRP** -> **VR Synchronisation** menu. You can either synchronise virtual interfaces or interfaces. New synchronisations can be added in the **New** menu.

For example, you can synchronise both virtual routers R1 and R2 over BRRP. To do this, you must create two entries. For the first entry, you must use R1 as the **Monitoring-VR/Interface** and R2 as the **Synchronisation-VR/Interface**. For the first second, you must configure R2 as the **Monitoring-VR/Interface** and R1 as the **Synchronisation-VR/Interface**.

### 19.13.2.1 New

Select the **New** button to create new synchronisations.

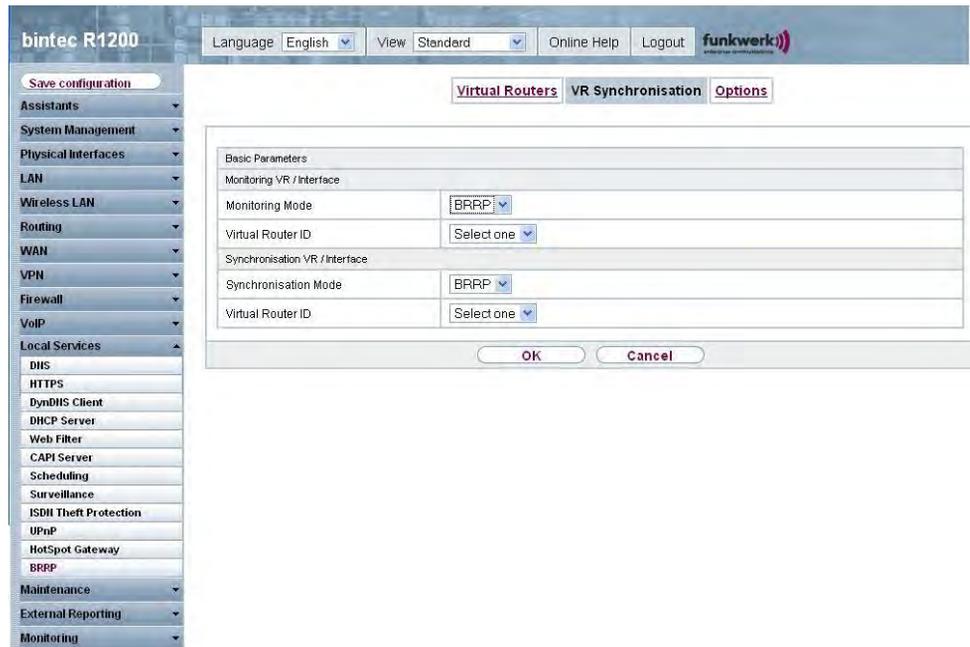


Fig. 179: **Local Services -> BRRP -> VR Synchronisation -> New**

The **Local Services -> BRRP -> VR Synchronisation -> New** menu consists of the following fields:

#### Fields in the VR-Synchronisation Monitoring VR/Interface menu

Field	Description
Monitoring Mode	Shows which mechanism is used for monitoring a virtual router.  Possible values: <ul style="list-style-type: none"> <li>• <b>BRRP</b>: The BRRP-specific state advertisements are used for determining the state of the master. (The master sends advertisements according to its configuration in the <b>Local Services -&gt; BRRP -&gt; Virtual Router -&gt; New -&gt; Advanced Settings</b> menu.)</li> </ul>
Virtual Router ID	Select a virtual router using the <b>Virtual Router ID</b> and define which interface is to be checked. You can choose previously defined IDs (see <b>Virtual Router ID</b> in the <b>Local Services -&gt; BRRP -&gt; Virtual Routers -&gt; New -&gt; Monitored BRRP Interface</b> menu). The watchdog daemon requests the detailed information entered in the <b>Virtual Router</b> .

### Fields in the VR-Synchronisation Synchronisation-VR/Interface menu

Field	Description
Synchronisation Mode	Indicates the mechanism with which virtual routers or interfaces are synchronised:  Possible values:  <ul style="list-style-type: none"> <li>• <i>BRRP</i>: BRRP is used to synchronise the virtual router.</li> </ul>
Virtual Router ID	Select the ID of the virtual router to be synchronised. Synchronising the virtual router implicitly synchronises the virtual interface associated with the virtual router.

### 19.13.3 Options

You can enable or disable the BRRP function in the **Local Services -> BRRP -> Options** menu.

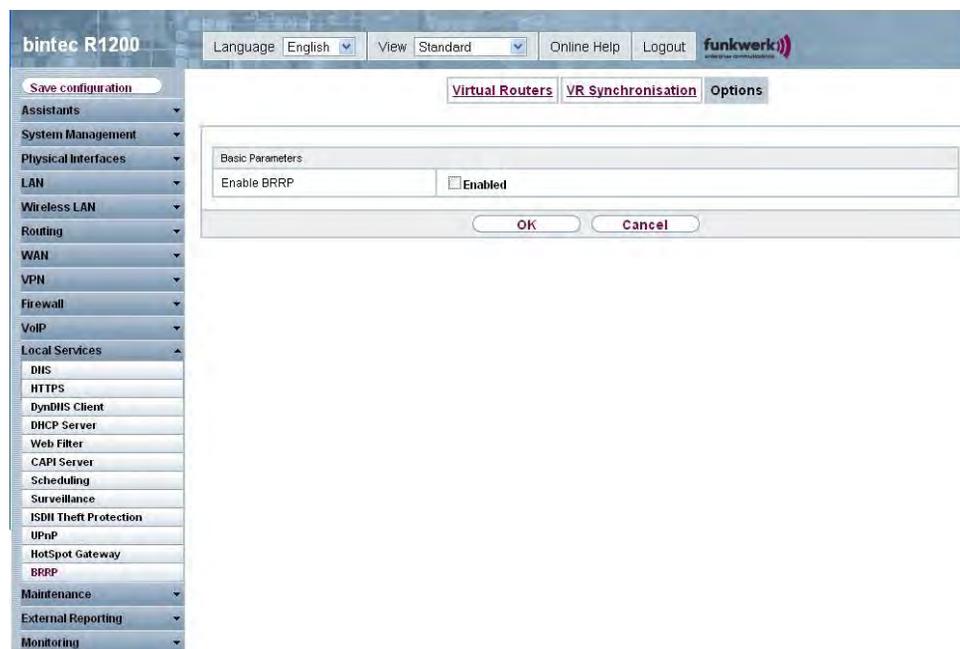


Fig. 180: Local Services -> BRRP -> Options

The **Local Services -> BRRP -> Options** menu consists of the following fields:

#### Fields in the Options Basic Parameters menu

Field	Description
Enable BRRP	<p data-bbox="636 210 1029 235">Enable or disable the BRRP function.</p> <p data-bbox="636 266 1058 292">The function is activated with <i>Enabled</i>.</p> <p data-bbox="636 322 1003 348">The function is disabled by default.</p>

## Chapter 20 Maintenance

This menu provides you with numerous functions for maintaining your device. It firstly provides a menu for testing availability within the network. You can manage your system configuration files. If more recent system software is available, you can use this menu to install it. If you need other languages for the configuration interface, you can import these. You can also trigger a system reboot in this menu.

### 20.1 Diagnostics

In the **Maintenance** -> **Diagnostics** menu, you can test the accessibility of individual hosts, the resolution of domain names and certain routes.

#### 20.1.1 Ping Test

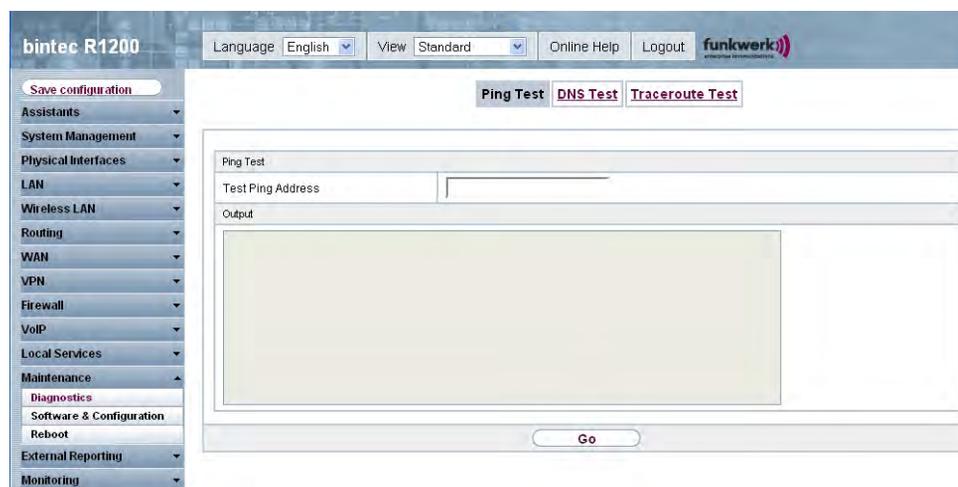


Fig. 181: Maintenance -> Diagnostics -> Ping Test

You can use the ping test to check whether a certain host in the LAN or an internet address can be reached. The **Output** field shows the ping test messages. The ping test is started by entering the IP address to be tested in **Test Ping Address** and clicking on the **Go** button.

## 20.1.2 DNS Test

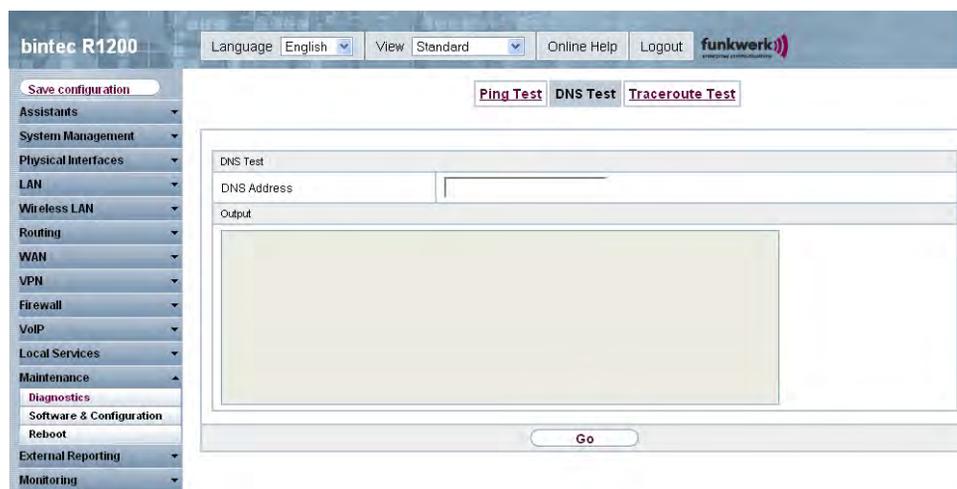


Fig. 182: Maintenance -> Diagnostics -> DNS Test

The DNS test is used to check whether the domain name of a particular host is correctly resolved. The **Output** field shows the DNS test messages. The DNS test is started by entering the domain name to be tested in **DNS Address** and clicking on the **Go** button.

## 20.1.3 Traceroute Test

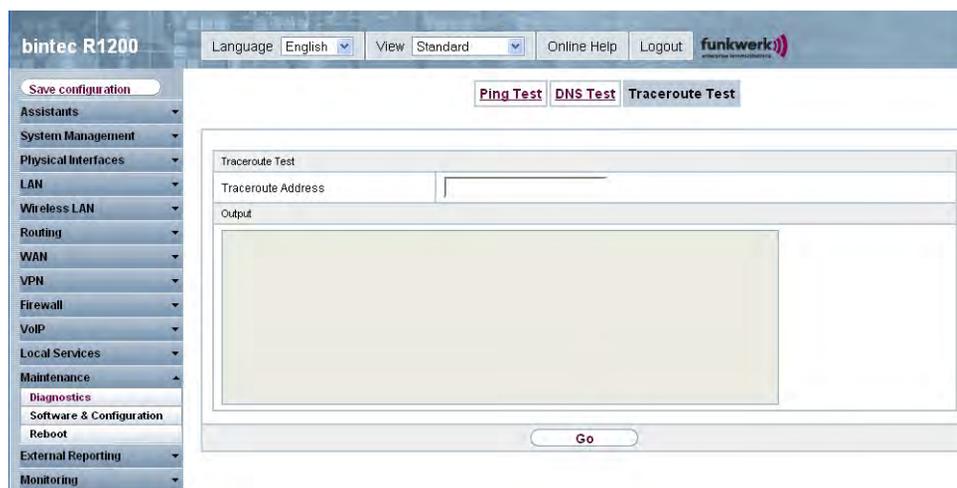


Fig. 183: Maintenance -> Diagnostics -> Traceroute Test

You use the traceroute test to display the route to a particular address (IP address or domain name), if this can be reached. The **Output** field shows the traceroute test messages. The traceroute test is started by entering the address to be tested in **Traceroute Address** and clicking on the **Go** button.

## 20.2 Software & Configuration

### 20.2.1 Options

You can use this menu to manage the software version of your device, your configuration files and the language of the **Funkwerk Configuration Interface**.

Your device contains the version of the system software available at the time of production. More recent versions may have since been released. You may therefore need to carry out a software update.

Every new system software includes new features, better performance and any necessary bugfixes from the previous version. You can find the current system software at [www.funkwerk-ec.com](http://www.funkwerk-ec.com). The current documentation is also available here.



#### Important

If you want to update your software, make sure you consider the corresponding release notes. These describe the changes implemented in the new system software.

The result of an interrupted update (e.g. power failure during the update) could be that your gateway no longer boots. Do not turn your device off during the update.

An update of BOOTmonitor and/or Logic is recommended in a few cases. In this case, the release notes refer expressly to this fact. Only update BOOTmonitor or Logic if Funkwerk Enterprise Communications GmbH explicitly recommends this.

#### Flash

Your device saves its configuration in configuration files in the flash EEPROM (Electrically Erasable Programmable Read Only Memory). The data even remains stored in the flash when your device is switched off.

#### RAM

The current configuration and all changes you set on your device during operation are

stored in the working memory (RAM). The contents of the RAM are lost if the device is switched off. So if you modify your configuration and want to keep these changes for the next time you start your device, you must save the modified configuration in the flash memory before switching off: **Save Configuration** button in the **Funkwerk Configuration Interface** navigation area. This configuration is then saved in the flash in a file with the name `boot`. When you start your device, the `boot` configuration file is used by default.

## Operations

The files in the flash memory can be copied, moved, erased and newly created. It is also possible to transfer configuration files between your device and a host via HTTP.

## Configuration file format

The file format of the configuration file allows encryption and ensures compatibility when restoring the configuration on the gateway in various system software versions. This is a CSV format, which can be read and modified easily. In addition, you can view the corresponding file clearly using Microsoft Excel for example. The administrator can store encrypted backup files for the configuration. When the configuration is sent by e-mail (e.g for support purposes) confidential configuration data can be protected fully if required. You can save or import files with the actions "Export configuration", "Export configuration with state information" and "Load configuration". If you want to save a configuration file with the action "Export configuration" or "Export configuration with state information", you can choose whether the configuration file is saved encrypted or without encryption.



### Caution

If you have saved a configuration file in an old format via the SNMP shell with the `put` command, there is no guarantee that it can be reloaded to the device. As a result, the old format is no longer recommended.

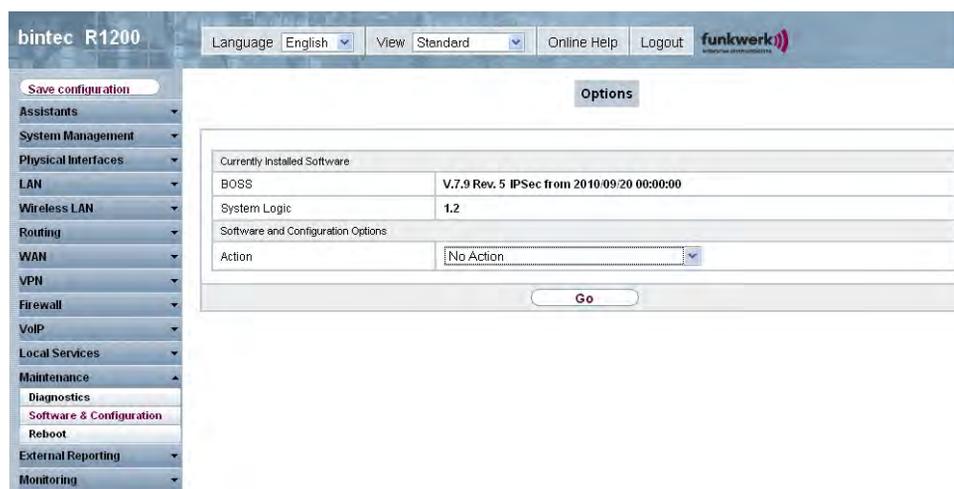


Fig. 184: Maintenance -> Software & Configuration -> Options

The **Maintenance -> Software & Configuration -> Options** menu consists of the following fields:

#### Fields in the menu Options Currently installed Software

Field	Description
BOSS	Shows the current software version loaded on your device.
System Logic	Shows the current system logic loaded on your device.
SHDSL Logic	Shows the current version of the SHDSL logic loaded on your device.
ADSL Logic	Shows the current version of the ADSL logic loaded on your device.

#### Fields in the Options Software and Configuration Options menu

Field	Description
Action	<p>Select the action you wish to execute.</p> <p>After each task, a window is displayed showing the other steps that are required.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li><i>No Action</i> (default value):</li> </ul>

Field	Description
	<ul style="list-style-type: none"> <li>• <i>Import configuration</i>: Under <b>Filename</b> select a configuration file you want to import. Note: Click <b>Go</b> to load the file under the name <i>boot</i> in the flash memory for the device. You must restart the device to enable it.</li>   <li>Note: The files to be imported must be in CSV format!</li> <li>• <i>Import language</i>: You can import other language versions of the <b>Funkwerk Configuration Interface</b> into your device. You can download the files to your PC from the download area at <a href="http://www.funkwerk-ec.com">www.funkwerk-ec.com</a> and from there import them to your device.</li> <li>• <i>Update system software</i>: you can start an update of the system software, the ADSL logic and the BOOTmonitor.</li> <li>• <i>Export configuration</i>: The configuration file <b>Current filename in flash memory</b> is transferred to your local host. If you click on the <b>Go</b> button, a dialog box is shown, in which you can select the storage location on your PC and enter the desired file name.</li> <li>• <i>Export configuration with state information</i>: The active configuration from the RAM is transferred to your local host. If you click on the <b>Go</b> button, a dialog box is shown, in which you can select the storage location on your PC and enter the desired file name.</li> <li>• <i>Copy</i>: The configuration file in the <b>Source File Name</b> field is saved as <b>Destination file name</b>.</li> <li>• <i>Rename</i>: The configuration file in the <b>Select file</b> field is renamed as <b>New Filename</b>.</li> <li>• <i>Delete configuration</i>: The configuration file in the <b>Select file</b> field is deleted.</li> <li>• <i>Delete file</i>: The file in the <b>Select file</b> field is deleted.</li> </ul>
Configuration Encryption	<p>Only for <b>Action</b> = <i>Import configuration, Export configuration, Export configuration with state information</i>. Define whether the data of the selected <b>Action</b> are to be encrypted..</p> <p>The function is activated by choosing <i>Enabled</i>.</p> <p>The function is disabled by default.</p> <p>If the function is active, you can enter the <b>Password</b> in the text</p>

Field	Description
	field.
Filename	Only for <b>Action</b> = <i>Import configuration, Import language, Update system software</i> . Enter the path and name of the file or select the file with <b>Browse...</b> via the explorer/finder.
Source Location	Only for <b>Action</b> = <i>Update system software</i> Select the source for the update.  Possible values: <ul style="list-style-type: none"> <li>• <i>Local File</i> (default value): The system software file is stored locally on your PC.</li> <li>• <i>HTTP server</i>: The file is stored on a remote server specified in the <b>URL</b>.</li> <li>• <i>Current software from Funkwerk server</i>: The file is on the official Funkwerk update server.</li> </ul>
URL	Only for <b>Source</b> = <i>HTTP server</i> Enter the URL of the update server from which the system software file is loaded.
Current File Name in Flash	For <b>Action</b> = <i>Export configuration</i> Choose the configuration file to be exported.
Include certificates and keys	For <b>Action</b> = <i>Export configuration, Export configuration with state information</i> , select whether the selected <b>Action</b> is also to apply for certificates and keys.  The function is activated by choosing <i>Enabled</i> .  The function is enabled by default.
Source File Name	Only for <b>Action</b> = <i>Copy</i> Select the source file to be copied.
Destination File Name	Only for <b>Action</b> = <i>Copy</i> Enter the name of the copy.
Select file	Only if <b>Action</b> = <i>Rename, Delete configuration</i> or <i>Delete file</i> Choose the file or configuration to be renamed or deleted.
New File Name	Only for <b>Action</b> = <i>Rename</i> Enter the new name of the configura-

Field	Description
	tion file.

## 20.3 Reboot

### 20.3.1 System Reboot

In this menu, you can trigger an immediate reboot of your device. Once your system has restarted, you must call the **Funkwerk Configuration Interface** again and log in.

Pay attention to the LEDs on your device. For information on the meaning of the LEDs, see the **Technical Data** chapter of the manual.



#### Note

Before a reboot, make sure you confirm your configuration changes by clicking the **Save Configuration** button, so that these are not lost when you reboot.

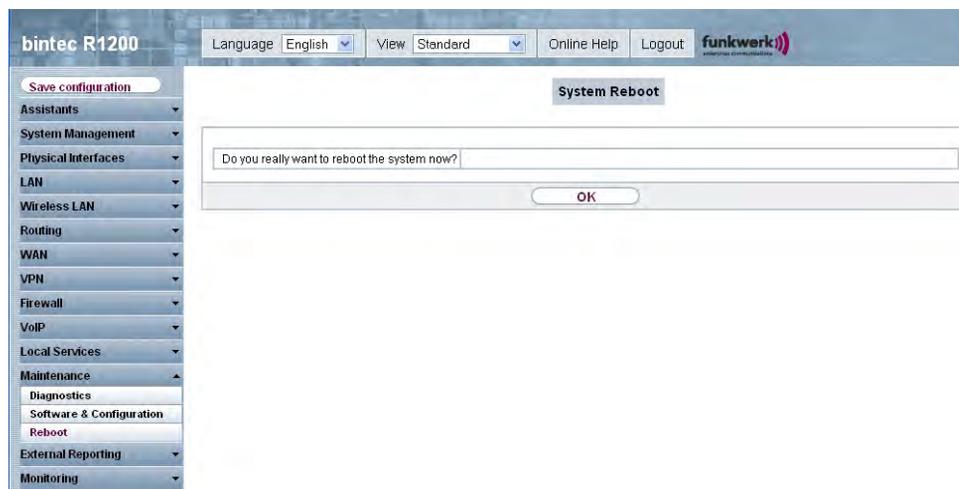


Fig. 185: Maintenance -> Reboot -> System Reboot

If you want to restart your device, click on the **OK** button. The device will reboot.

## Chapter 21 External Reporting

In this system menu, you define what system protocol messages are saved on which computers, and whether the system administrator should receive an e-mail for certain events. Information on IP data traffic can also be saved--depending on the individual interfaces. In addition, SNMP traps can be sent to specific hosts in case of error. Moreover, you can prepare your device for monitoring with the activity monitor.

### 21.1 Syslog

Events in various subsystems of your device (e.g. PPP) are logged in the form of syslog messages (system logging messages). The number of messages visible depends on the level set (eight levels from *Emergency* and *Information* to *Debug*).

In addition to the data logged internally on your device, all information can and should also be passed to one or more external PCs for storage and processing, e.g. to the system administrator's PC. The syslog messages saved internally on your device are lost when you reboot.



#### Warning

Make sure you only pass syslog messages to a safe computer. Check the data regularly and ensure that there is always enough spare capacity available on the hard disk of your PC.

### Syslog Daemon

All Unix operating systems support the recording of syslog messages. For Windows PCs, the Syslog Daemon included in the **DIME Tools** can record the data and distribute to various files depending on the contents (can be called in the download area at [www.funkwerk-ec.com](http://www.funkwerk-ec.com) ).

#### 21.1.1 Syslog Servers

Configure your device as a syslog server so that defined system messages can be sent to suitable hosts in the LAN.

In this menu, you define which messages are sent to which hosts and with which conditions.

In the **External Reporting** -> **System Log** -> **Syslog Servers** menu, a list of all configured system log servers is shown.

### 21.1.1.1 New

Choose the **New** button to set up new syslog servers.

Fig. 186: **External Reporting** -> **Syslog** -> **Syslog Servers** -> **New**

The **External Reporting** -> **Syslog** -> **Syslog Servers** -> **New** menu consists of the following fields:

#### Fields in the Syslog Servers Basic Parameters menu

Field	Description
IP Address	Enter the IP address of the host to which syslog messages are passed.
Level	Select the priority of the syslog messages that are to be sent to the host.  Possible values: <ul style="list-style-type: none"> <li>• <i>Emergency</i> (highest priority)</li> <li>• <i>Alert</i></li> <li>• <i>Critical</i></li> <li>• <i>Errors</i></li> </ul>

Field	Description
	<ul style="list-style-type: none"> <li>• <i>Warning</i></li> <li>• <i>Notice</i></li> <li>• <i>Information</i> (default value)</li> <li>• <i>Debug</i> (lowest priority)</li> </ul> <p>Syslog messages are only sent to the host if they have a higher or identical priority to that indicated, i.e. all messages generated are recorded at syslog level <i>Debug</i>.</p>
Facility	<p>Enter the syslog facility on the host.</p> <p>This is only required if the <b>Log Host</b> is a Unix computer.</p> <p>Possible values: <i>local0</i> - 7</p> <p>.</p> <p>The default value is <i>local0</i>.</p>
Timestamp	<p>Select the format of the time stamp in the syslog.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>None</i> (default value): No system time indicated.</li> <li>• <i>Time</i> : System time without date.</li> <li>• <i>Date &amp; Time</i> : System time with date.</li> </ul>
Protocol	<p>Select the protocol for the transfer of syslog messages. Note that the syslog server must support the protocol.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>UDP</i> (default value)</li> <li>• <i>TCP</i></li> </ul>
Type of Messages	<p>Select the message type.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>System &amp; Accounting</i> (default value)</li> <li>• <i>System</i></li> <li>• <i>Accounting</i></li> </ul>

## 21.2 IP Accounting

In modern networks, information about the type and number of data packets sent and received over the network connections is often collected for commercial reasons. This information is extremely important for Internet Service Providers that bill their customers by data volume.

However, there are also non-commercial reasons for detailed network accounting. If, for example, you manage a server that provides different kinds of network services, it is useful for you to know how much data is generated by the individual services.

Your device contains the IP Accounting function, which enables you to collect a lot of useful information about the IP network traffic (each individual IP session).

### 21.2.1 Interfaces

In this menu, you can configure the IP Accounting function individually for each interface.

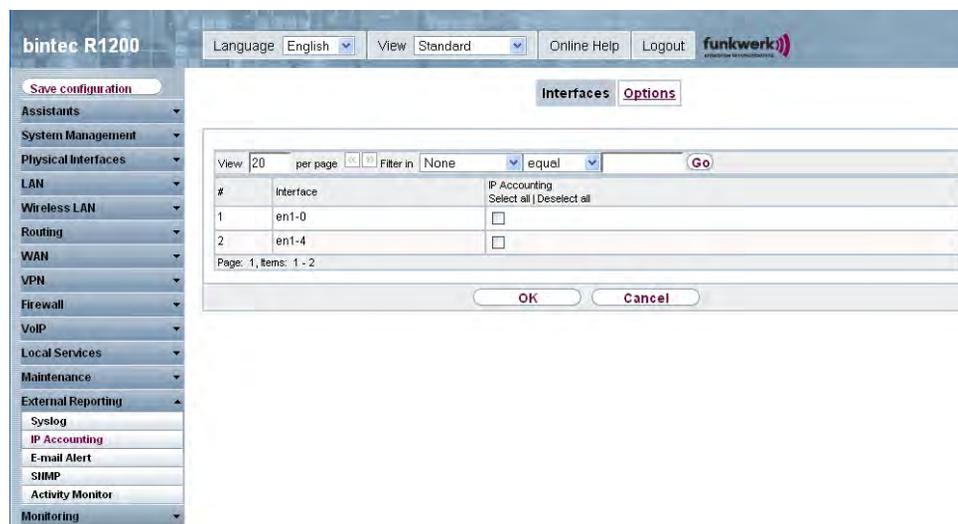


Fig. 187: External Reporting -> IP Accounting -> Interfaces

In the **External Reporting -> IP Accounting -> Interfaces** menu, a list of all interfaces configured on your device is shown. For each entry, you can activate IP Accounting by setting the checkmark. In the **IP Accounting** column, you do not need to click each entry individually. Using the options **Select All** and **Disable All**, you can enable or disable the IP accounting function for all interfaces simultaneously.

## 21.2.2 Options

In this menu, you configure general settings for IP Accounting.



Fig. 188: External Reporting -> IP Accounting -> Options

In the **External Reporting -> IP Accounting -> Options** menu you can set the **Log Format** of the IP accounting messages. The messages can contain character strings in any order, sequences separated by a slash, e.g. `\t` or `\n` or defined tags.

Possible format tags:

### Format tags for IP accounting messages

Field	Description
%d	Date of the session start in the format DD.MM.YY
%t	Time of the session start in the format HH:MM:SS
%a	Duration of the session in seconds
%c	Protocol
%i	Source IP Address
%r	Source Port
%f	Source interface index
%l	Destination IP Address
%R	Destination Port
%F	Destination interface index

Field	Description
%p	Packets sent
%o	Octets sent
%P	Packets received
%O	Octets received
%s	Serial Number for accounting message
%%	%

By default, the following format instructions are entered in the **Log Format** field. *INET*:  
`%d%t%a%c%i:%r/%f -> %I:%R/%F%p%o%P%O[%s]`

## 21.3 E-mail Alert

Depending on the configuration, E-mails are sent to the administrator as soon as relevant syslog messages occur.

### 21.3.1 E-mail Alert Server

The **E-mail Alert Server** menu consists of the following fields:

Fig. 189: External Reporting -> E-mail Alert -> E-mail Alert Server

The **External Reporting -> E-mail Alert -> E-mail Alert Server** menu consists of the following fields:

#### Fields in the E-mail Alert Server Basic Parameters menu

Field	Description
Alert Service	Enable or disable the function.
Sender E-Mail Address	Enter the mail address to be entered in the sender field of the E-mail.
Maximum Messages per Minute	Limit the number of outgoing mails per minute. Possible values are 1 to 15, the default value is 6.

#### Fields in the E-mail Alert Server SMTP Settings menu

Field	Description
SMTP Server	<p>Enter the address (IP address or valid DNS name) of the mail server to be used for sending the mails.</p> <p>The entry is limited to 40 characters.</p>
SMTP Authentication	<p>Authentication expected by the SMTP server.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>None</i> (default value): The server accepts and send emails without further authentication.</li> <li>• <i>ESMTP</i>: The server only accepts emails if the router is logged in with the correct user name and password.</li> <li>• <i>SMTP after POP</i>: The server requires that emails are called via POP3 by the sending IP with the correct POP3 user name and password before sending an email.</li> </ul>
User Name	<p>Only if <b>SMTP Authentication</b> = <i>ESMTP</i> or <i>SMTP after POP</i>.</p> <p>Enter the user name for the POP3 or SMTP server.</p>
Password	<p>Only if <b>SMTP Authentication</b> = <i>ESMTP</i> or <i>SMTP after POP</i>.</p> <p>Enter the password of this user.</p>
POP3 Server	<p>Only if <b>SMTP Authentication</b> = <i>SMTP after POP</i>.</p> <p>Enter the address of the server from which the e-mails are to be retrieved.</p>
POP3 Timeout	<p>Only if <b>SMTP Authentication</b> = <i>SMTP after POP</i>.</p> <p>Enter how long the router must wait after the POP3 call before it is forced to send the alert mail.</p>

Field	Description
	The default value is 600 seconds.

## 21.3.2 E-mail Alert Recipient

In the **E-mail Alert Recipient** menu, a list of syslog messages is displayed.

### 21.3.2.1 New

Choose the **New** button to create new e-mail alert receivers.

The screenshot shows the configuration interface for the 'E-mail Alert Recipient' menu. The interface includes a navigation sidebar on the left with options like 'System Management', 'Physical Interfaces', and 'External Reporting'. The main configuration area contains the following fields:

- Recipient:** A text input field.
- Matching String:** A text input field with a note '(Wildcards allowed)'.
- Severity:** A dropdown menu set to 'Emergency'.
- Message Timeout:** A text input field with the value '60'.
- Number of Messages:** A text input field with the value '1'.
- Message Compression:** A checkbox labeled 'Enable' which is checked.
- Monitored Subsystems:** A section with a 'Subsystem' dropdown and an 'Add' button.

At the bottom of the configuration window are 'OK' and 'Cancel' buttons.

Fig. 190: External Reporting -> E-mail Alert -> E-mail Alert Recipient

The **External Reporting -> E-mail Alert -> E-mail Alert Recipient** menu consists of the following fields:

### Fields in the E-mail Alert Recipient Add / Edit E-mail Alert Recipient menu

Field	Description
Recipient	Enter the E-mail address of the recipient. The entry is limited to 40 characters.
Matching String	You must enter a "Matching String". This must occur in a syslog message as a necessary condition for triggering an alert.  The entry is limited to 55 characters. Bear in mind that without the use of wildcards (e.g. "*"), only those strings that correspond exactly to the entry fulfil the condition. The "Matching String"

Field	Description
	entered therefore usually contains wildcards. To be informed of all syslog messages of the selected level, just enter "*".
Severity	<p>Select the severity at which the string configured in the <b>Matching String</b> field must occur to trigger an E-mail alert.</p> <p>Possible values:</p> <p><i>Emergency (default value), Alert, Critical, Error, Warning, Notice, Information, Debug</i></p>
Message Timeout	<p>Enter how long the router must wait after a relevant event before it is forced to send the alert mail.</p> <p>Possible values are 0 to 86400. The value 0 disables the timeout.</p>
Number of Messages	<p>Enter the number of syslog messages that must be reached before an E-mail can be sent for this case. If timeout is configured, the mail is sent when this expires, even if the number of messages has not been reached.</p> <p>Possible values are 0 to 99; the default value is 1.</p>
Message Compression	<p>Select whether the text in the alert E-mail is to be shortened. The e-mail then contains the syslog message only once plus the number of relevant events.</p> <p>Enable or disable the field.</p> <p>The function is enabled by default.</p>

#### Fields in the E-mail Alert Receiver Monitored Subsystems menu

Field	Description
Subsystem	<p>Select the subsystems to be monitored.</p> <p>Add a new system with <b>Add</b>.</p>

## 21.4 SNMP

SNMP (Simple Network Management Protocol) is a protocol from the IP protocol family for transporting management information about network components.

Every SNMP management system contains an MIB. SNMP can be used to configure, control and administrate various network components from one system. Such an SNMP tool is included on your device: the Configuration Manager. As SNMP is a standard protocol, you can use any other SNMP managers, e.g. HPOpenView.

For more information on the SNMP versions, see the relevant RFCs and drafts:

- SNMP V. 1: RFC 1157
- SNMP V. 2c: RFC 1901 - 1908
- SNMP V. 3: RFC 3410 - 3418

### 21.4.1 SNMP Trap Options

In the event of errors, a message - known as a trap packet - is sent unrequested to monitor the system.

In the **External Reporting -> SNMP -> SNMP Trap Options** menu, you can configure the sending of traps.

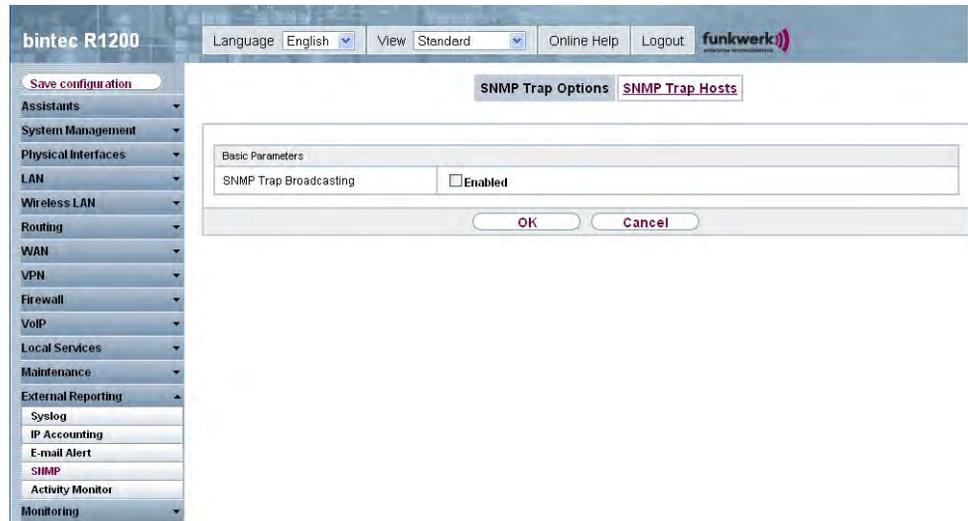


Fig. 191: External Reporting -> SNMP -> SNMP Trap Options

The **External Reporting -> SNMP -> SNMP Trap Options** menu consists of the following fields:

#### Fields in the SNMP Trap Options Basic Parameters menu

Field	Description
SNMP Trap Broadcasting	<p>Select whether the transfer of SNMP traps is to be activated.</p> <p>Your device then sends SNMP traps to the LAN's broadcast address.</p> <p>The function is activated by choosing <i>Enabled</i>.</p> <p>The function is disabled by default.</p>
SNMP Trap UDP Port	<p>Only if <b>SNMP Trap Broadcasting</b> is enabled.</p> <p>Enter the number of the UDP port to which your device is to send SNMP traps.</p> <p>Any whole number is possible.</p> <p>The default value is <i>162</i>.</p>
SNMP Trap Community	<p>Only if <b>SNMP Trap Broadcasting</b> is enabled.</p> <p>Enter a new SNMP code. This must be sent by the SNMP Manager with every SNMP request so that this is accepted by your device.</p> <p>A character string of between <i>0</i> and <i>255</i> characters is possible here.</p> <p>The default value is <i>SNMP Trap</i>.</p>

## 21.4.2 SNMP Trap Hosts

In this menu, you specify the IP addresses to which your device is to send the SNMP traps.

In the **External Reporting** -> **SNMP** -> **SNMP Trap Hosts** menu, a list of all configured SNMP trap hosts is shown.

### 21.4.2.1 New

Choose the **New** button to set up new SNMP trap hosts.

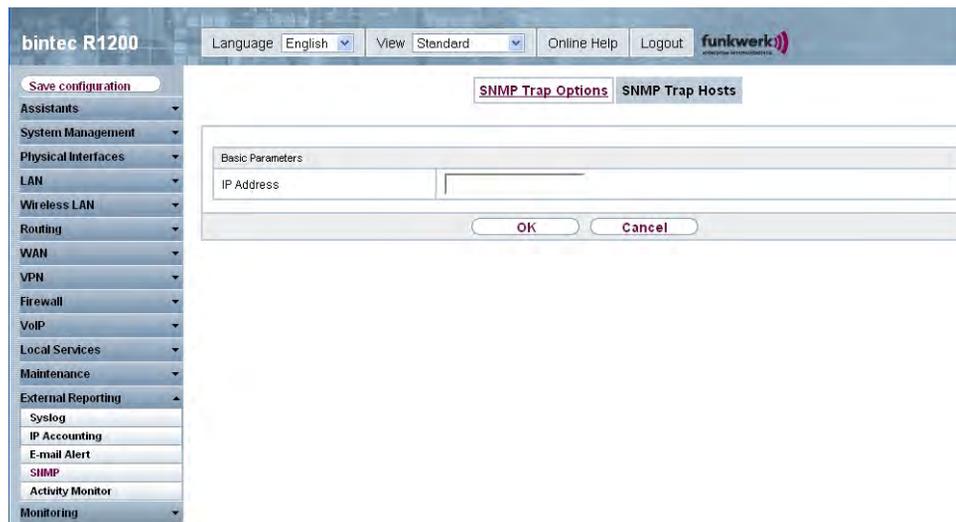


Fig. 192: External Reporting -> SNMP -> SNMP Trap Hosts -> New

The **External Reporting -> SNMP -> SNMP Trap Hosts -> New** menu consists of the following fields:

#### Fields in the SNMP Trap Hosts Basic Parameters menu

Field	Description
IP Address	Enter the IP address of the SNMP trap host.

## 21.5 Activity Monitor

This menu contains the settings needed to monitor your device with the Windows tool **Activity Monitor** (part of **BRICKware** for Windows).

### Purpose

The **Activity Monitor** enables Windows users to monitor the activities of your device. Important information about the status of physical interfaces (e.g. ISDN line) and virtual interfaces is easily obtained with one tool. A permanent overview of the utilisation of your device is possible.

### Method of operation

A Status Daemon collects information about your device and transfers it as UDP packets to the broadcast address of the first LAN interface (default setting) or to an explicitly entered

IP address. One packet is sent per time interval, which can be adjusted individually to values from 1 - 60 seconds. Up to 100 physical and virtual interfaces can be monitored, provided the packet size of 4096 bytes is not exceeded. The **Activity Monitor** on your PC receives the packets and can display the information contained in them in various ways according to the configuration.

Activate the **Activity Monitor** as follows:

- configure the relevant device(s) to be monitored.
- Start and configure the Windows application on your PC (you can download **BRICKware** for Windows to your PC from the download area at [www.funkwerk-ec.com](http://www.funkwerk-ec.com) and from there import it to your device).

## 21.5.1 Options

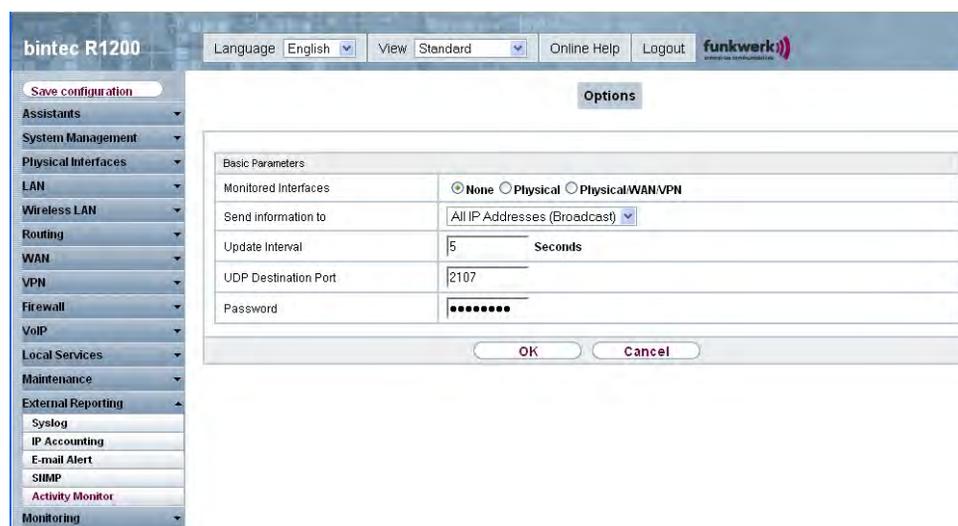


Fig. 193: External Reporting -> Activity Monitor -> Options

The **External Reporting -> Activity Monitor -> Options** menu consists of the following fields:

### Fields in the Options Basic Parameters menu

Field	Description
Monitored Interfaces	Select the type of information to be sent in the UDP packets to the Windows application.  Possible values:

Field	Description
	<ul style="list-style-type: none"> <li>• <i>None</i> (default value): Deactivates the sending of information to the <b>Activity Monitor</b>.</li> <li>• <i>Physical</i>: Only information about the physical interfaces is sent.</li> <li>• <i>Physical/WAN/VPN</i>: Information about physical and virtual interfaces is sent</li> </ul>
Send information to	<p>Select where your device sends the UDP packets.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <i>All IP Addresses (broadcast)</i> (default value): The default value <code>255.255.255.255</code> means that the broadcast address of the first LAN interface is used.</li> <li>• <i>Single Host</i>: The UDP packets are sent to the IP address entered in the adjacent input field.</li> </ul>
Update Interval	<p>Enter the update interval (in seconds).</p> <p>Possible values are <code>0</code> to <code>60</code>.</p> <p>The default value is <code>5</code>.</p>
UDP Destination Port	<p>Enter the port number for the Windows application <b>Activity Monitor</b>.</p> <p>The default value is <code>2107</code> (registered by IANA - Internet Assigned Numbers Authority).</p>
Password	<p>Enter the password for the <b>Activity Monitor</b>.</p>

## Chapter 22 Monitoring

This menu contains information that enable you to locate problems in your network and monitor activities, e.g. at your device's WAN interface.

### 22.1 Internal Log

#### 22.1.1 System Messages

In the **Monitoring -> Internal Log -> System Messages** menu, a list of all internally stored system messages is shown. Above the table you will find the configured **Maximum Number of Syslog Entries** and the configured **Maximum Message Level of Syslog Entries**. These values can be changed in the **System Management -> Global Settings -> System** menu.

The screenshot shows the web interface for a bintec R1200 device. The top bar includes 'Language English', 'View Standard', 'Online Help', and 'Logout'. The left navigation menu has 'Monitoring' selected, with 'Internal Log' and 'System Messages' visible. The main content area is titled 'System Messages' and contains the following configuration and table:

Automatic Refresh Interval: 300 Seconds

Maximum Number of Syslog Entries: 50

Maximum Message Level of Syslog Entries: Information

View: 20 per page Filter in: None equal Go

No.	Date	Time	Level	Subsystem	Message
1	2006-11-16	01:29:16	Information	INET	APDISCD: 2 access points found on interface 1000
2	2006-11-16	01:29:06	Information	INET	APDISCD: discovery initiated on interface 1000
3	2006-11-15	22:14:40	Information	IPSec	init: starting...
4	2006-11-15	22:14:40	Information	IPSec	BinTec ipsecd version 3.0 Copyright (c) 1996-2010 by Funkwerk Enterprise Communications GmbH
5	2006-11-15	22:14:40	Information	IPSec	init: running
6	2006-11-15	22:14:40	Information	INET	sshd: pid 57 - listening on 0.0.0.0 port 22.
7	2006-11-15	22:14:38	Information	Configuration	system r1200 started at Wed Nov 15 22:14:38 2006
8	2006-11-15	22:14:35	Information	Configuration	Converted time offset 0 to time zone:"UTC+00"
9	2006-11-15	22:14:35	Information	Configuration	boot configuration loaded

Page: 1, Items: 1 - 9

Fig. 194: Monitoring -> Internal Log -> System Messages

#### Values in the list System Messages

Field	Description
No.	Displays the serial number of the system message.
Date	Displays the date of the record.
Time	Displays the time of the record.

Field	Description
Level	Displays the hierarchy level of the message.
Subsystem	Displays which subsystem of the device generated the message.
Message	Displays the message text.

## 22.2 IPsec

### 22.2.1 IPsec Tunnels

In the **Monitoring -> IPsec -> IPsec Tunnel** menu, a list of all configured IPsec peers is shown.

The screenshot shows the web interface for monitoring IPsec tunnels. The left sidebar contains a navigation menu with categories like Assistants, System Management, Physical Interfaces, LAN, Wireless LAN, Routing, WAN, VPN, Firewall, VoIP, Local Services, Maintenance, External Reporting, and Monitoring. The Monitoring section is expanded, showing options like Internal Log, IPsec, ISDN Modem, Interfaces, WLAN, HotSpot Gateway, and QoS. The main content area is titled 'IPsec Tunnels' and includes a table with the following data:

#	Description	Remote IP	Remote Networks	Security Algorithm	Status	Action
1	Peer-1	-				

Page: 1, Items: 1 - 1

Fig. 195: Monitoring -> IPsec -> IPsec Tunnel


#### Values in the list IPsec Tunnels

Field	Description
#	Displays the serial number of the IPsec tunnel.
Description	Displays the name of the IPsec tunnel.
Remote IP Address	Displays the IP address of the remote IPsec Peers.
Remote Networks	Displays the currently negotiated subnets of the remote terminal.

Field	Description
Security Algorithm	Displays the encryption algorithm of the IPSec tunnel.
Status	Displays the operating status of the IPSec tunnel.
Action	Enables you to change the status of the IPSec tunnel as displayed.
Details	Opens a detailed statistics window.

You change the status of the IPSec tunnel by pressing the  button or  button in the **Action** column.

By pressing the , you display detailed statistics on the IPSec connection.

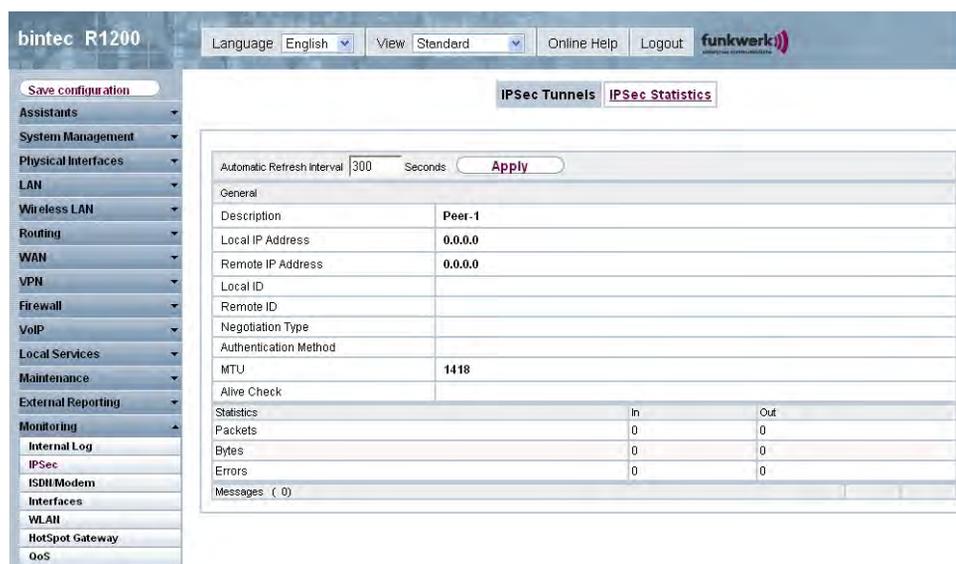

The screenshot shows the web interface for a bintec R1200 device. The left sidebar contains a navigation menu with categories like Assistants, System Management, Physical Interfaces, LAN, Wireless LAN, Routing, WAN, VPN, Firewall, VoIP, Local Services, Maintenance, External Reporting, and Monitoring. The Monitoring section is expanded, showing options for Internal Log, IPsec, ISDN Modem, Interfaces, WLAN, HotSpot Gateway, and QoS. The main content area has tabs for 'IPsec Tunnels' and 'IPsec Statistics'. The 'IPsec Statistics' tab is selected, displaying a configuration form for an IPsec tunnel. The form includes an 'Automatic Refresh Interval' set to 300 seconds and an 'Apply' button. Below this, there are sections for 'General' (Description: Peer-1, Local IP Address: 0.0.0.0, Remote IP Address: 0.0.0.0, Local ID, Remote ID, Negotiation Type, Authentication Method, MTU: 1418, Alive Check) and 'Statistics' (Packets, Bytes, Errors, Messages). The statistics table shows zero values for all metrics.

Fig. 196: Monitoring -> IPsec -> IPsec Tunnel->

### Values in the list IPsec Tunnels

Field	Description
Description	Shows the description of the peer.
Local IP Address	Shows the WAN IP address of your device.
Destination IP Address	Shows the WAN IP address of the connection partner.
Local ID	Shows the ID of your device for this IPSec tunnel.
Remote ID	Shows the ID of the peer.
Negotiation Type	Shows the exchange type.
Authentication Method	Shows the authentication method.

Field	Description
MTU	Shows the current MTU (Maximum Transfer Unit).
Alive Check	Shows the method for checking that the peer is reachable.
NAT Detection	Displays the NAT detection method.
Local Port	Shows the local port.
Remote Port	Shows the remote port.
Packets	Shows the total number of incoming and outgoing packets.
Bytes	Shows the total number of incoming and outgoing bytes.
Errors	Shows the total number of errors.
IKE (Phase 1) SAs (x) Role / Algorithm / Lifetime remaining / State	The parameters of the IKE (Phase 1) SAs are displayed here.
IPSec (Phase 2) SAs (x) Role / Algorithm / Local / Remote / Lifetime remaining / State	Shows the parameters of the IPSec (Phase 2) SAs.
Messages	The system messages for this IPSec tunnel are displayed here.

### 22.2.2 IPSec Statistics

In the **Monitoring -> IPSec -> IPSec Statistics** menu, statistical values for all IPSec connections are shown.

The screenshot shows the 'bintec R1200' web interface. At the top, there are options for Language (English), View (Standard), Online Help, and Logout. The 'IPsec Tunnels' and 'IPsec Statistics' tabs are visible. The 'IPsec Statistics' section contains a table with the following data:

Licenses		In Use	Maximum
IPsec Tunnels		0	110

Peers	Up	Going up	Blocked	Dormant	Configured
	Status	0	0	0	1

SAs	Established		Total
	IKE (Phase-1)	0	
IPsec (Phase-2)	0	0	
Packet Statistics	In	Out	
Total	50	112	
Passed	50	112	
Dropped	0	0	
Encrypted	0	0	
Errors	0	0	

Fig. 197: Monitoring -> IPsec -> IPsec Statistics

The **Monitoring -> IPsec -> IPsec Statistics** menu consists of the following fields:

#### Field in the IPsec Statistics Licenses menu

Field	Description
IPsec Tunnels	Shows the IPsec licenses currently in use ( <b>In use</b> ) and the maximum number of licenses usable ( <b>Maximum</b> ).

#### Field in the IPsec Statistics Peers menu

Field	Description
Status	Displays the number of IPsec tunnels by their current status. <ul style="list-style-type: none"> <li>• <b>Active</b>: Currently active IPsec tunnels.</li> <li>• <b>Enable</b>: IPsec tunnels currently in the tunnel setup phase.</li> <li>• <b>Blocked</b>: IPsec tunnels that are blocked.</li> <li>• <b>Dormant</b>: Currently inactive IPsec tunnels.</li> <li>• <b>Configured</b>: Configured IPsec tunnels.</li> </ul>

#### Field in the IPsec Statistics SAs menu

Field	Description
IKE (Phase1)	Shows the number of active phase-1 SAs ( <b>Established</b> ) from the total number of phase-1 SAs ( <b>Total</b> ).
IPsec (Phase2)	Shows the number of active phase-2 SAs ( <b>Established</b> ) from

Field	Description
	the total number of phase-2 SAs ( <b>Total</b> ).

#### Field in the IPSec Statistics Packet Statistics menu

Field	Description
Total	Shows the number of all processed incoming ( <b>Incoming</b> ) or outgoing ( <b>Outgoing</b> ) packets.
Passed	Shows the number of incoming ( <b>Incoming</b> ) or outgoing ( <b>Outgoing</b> ) packets forwarded in plain text.
Dropped	Shows the number of rejected incoming ( <b>Incoming</b> ) or outgoing ( <b>Outgoing</b> ) packets.
Encrypted	Shows the number of IPSec protected incoming ( <b>Incoming</b> ) or outgoing ( <b>Outgoing</b> ) packets.
Errors	Shows the number of incoming ( <b>Incoming</b> ) or outgoing ( <b>Outgoing</b> ) packets for which the processing led to errors.

## 22.3 ISDN/Modem

### 22.3.1 Current Calls

In the **Monitoring** -> **ISDN/Modem** -> **Current Calls** menu, a list of the existing ISDN connections (incoming and outgoing) is shown.

Fig. 198: Monitoring -> ISDN/Modem -> Current Calls

#### Values in the list Current Calls

Field	Description
#	Displays the serial number of the ISDN connection entry.
Service	Displays the service to or from which the call is connected: <i>PPP, IPSEC, X.25, POTS</i> .
Remote Number	Displays the number that was dialed (in the case of outgoing calls) or from which the call was made (in the case of incoming calls).
Interface	Displays additional information for PPP connections.
Direction	Displays the send direction: <i>Incoming, Outgoing</i> .
Charge	Displays the costs of the current connection.
Duration	Displays the duration of the current connection.
Stack	Displays the related ISDN port (STACK).
Channel	Displays the number of the ISDN B channel.
Status	Displays the state of the connection: <i>null, c-initiated, ovl-send, oc-procd, c-deliverd, c-present, c-recvd, ic-procd, up, discon-req, discon-ind, suspd-req, re-sum-req, ovl-recv</i> .

## 22.3.2 Call History

In the **Monitoring -> ISDN/Modem -> Call History** menu, a list of the last 20 ISDN connections (incoming and outgoing) made since the last system boot is shown.

The screenshot shows the web interface for a bintec R1200 device. The top navigation bar includes 'Language English', 'View Standard', 'Online Help', and 'Logout'. The left sidebar contains a menu with 'Monitoring' expanded to show 'ISDN/Modem' in red. The main content area has tabs for 'Current Calls' and 'Call History'. Below the tabs, there are controls for 'Automatic Refresh Interval' (300 Seconds) and 'Apply'. A table is displayed with the following columns: #, Service, Remote Number, Interface, Direction, Charge, Start Time, and Duration. The table is currently empty, and the page number is 1.

Fig. 199: Monitoring -> ISDN/Modem -> Call History

### Values in the list Call History

Field	Description
#	Displays the serial number of the ISDN connection.
Service	Displays the service to or from which the call was connected: <i>PPP, IPSEC, X.25, POTS.</i>
Remote Number	Displays the number that was dialed (in the case of outgoing calls) or from which the call was made (in the case of incoming calls).
Interface	Displays additional information for PPP connections.
Direction	Displays the send direction: <i>Incoming, Outgoing.</i>
Charge	Displays the costs of the connection.
Start Time	Displays the time at which the call was made or received.
Duration	Displays the duration of the connection.

## 22.4 Interfaces

### 22.4.1 Statistics

In the **Monitoring -> Interfaces -> Statistics** menu, the current values and activities of all device interfaces are shown.

The screenshot shows the 'Statistics' page in the Funkwerk R1200 web interface. The page title is 'bintec R1200' and 'Statistics'. The interface includes a navigation menu on the left with options like 'Save configuration', 'Assistants', 'System Management', 'Physical Interfaces', 'LAN', 'Wireless LAN', 'Routing', 'WAN', 'VPN', 'Firewall', 'VoIP', 'Local Services', 'Maintenance', 'External Reporting', and 'Monitoring'. The 'Monitoring' menu is expanded to show 'Internal Log', 'IPSec', 'ISDH Modem', 'Interfaces', 'WLAN', 'HotSpot Gateway', and 'QoS'. The main content area displays a table of interface statistics. The table has columns for 'No.', 'Description', 'Type', 'Tx Packets', 'Tx Bytes', 'Tx Errors', 'Rx Packets', 'Rx Bytes', 'Rx Errors', 'Status', 'Unchanged for', and 'Action'. The table shows three interfaces: 'en1-0' (Ethernet, 1.82K Tx Packets, 1.51M Tx Bytes, 0 Tx Errors, 1.47K Rx Packets, 253.83K Rx Bytes, 0 Rx Errors, Status: Up, Unchanged for: 0d 4h 14m 18s), 'en1-4' (Ethernet, 0 Tx Packets, 0 Tx Bytes, 0 Tx Errors, 0 Rx Packets, 0 Rx Bytes, 0 Rx Errors, Status: Down, Unchanged for: 0d 4h 14m 20s), and 'Peer-1' (Tunnel, 0 Tx Packets, 0 Tx Bytes, 0 Tx Errors, 0 Rx Packets, 0 Rx Bytes, 0 Rx Errors, Status: Down, Unchanged for: 0d 0h 14m 4s). The Action column contains icons for up/down status and a magnifying glass for details. The page footer indicates 'Page: 1, Items: 1 - 3'.

Fig. 200: **Monitoring -> Interfaces -> Statistics**

You change the state of the interface by pressing the button or button in the **Action** column. Press the button to display the statistical data for the individual interfaces in detail.

#### Values in the list Statistics

Field	Description
No.	Shows the serial number of the interface.
Description	Displays the name of the interface.
Type	Displays the interface text.
Tx Packets	Shows the total number of packets sent.
Tx Bytes	Displays the total number of octets sent.
Tx Errors	Shows the total number of errors sent.
Rx Packets	Shows the total number of packets received.

Field	Description
Rx Bytes	Displays the total number of bytes received.
Rx Errors	Shows the total number of errors received.
Status	Shows the operating status of the selected interface.
Unchanged for	Shows the length of time for which the operating status of the interface has not changed.
Action	Enables you to change the status of the interface as displayed.

## 22.5 WLAN

### 22.5.1 WLAN1

In the **Monitoring -> WLAN -> WLAN1** menu, the current values and activities of the first interface are shown.

The screenshot shows the 'bintec R1200' web interface. The main content area displays the 'WLAN1 Statistics' table. The table has three columns: 'mbps', 'Tx Packets', and 'Rx Packets'. The data rows are as follows:

mbps	Tx Packets	Rx Packets
54	0	0
48	0	0
36	0	0
24	0	0
18	0	0
12	0	0
11	0	0
9	0	0
6	0	0
5.5	0	0
2	0	0
1	0	0
Total	0	0

Below the table is an 'Advanced' button. The interface also features a left sidebar with a navigation menu, a top header with 'Language English' and 'View Standard' dropdowns, and a right sidebar with 'WLAN1', 'VSS', 'WDS', and 'Client Links' buttons.

Fig. 201: Monitoring -> WLAN -> WLAN1

#### Values in the list WLAN1

Field	Description
mbps	Displays the possible data rates on this wireless module.
Tx Packets	Shows the total number of packets sent for the data rate shown in <b>mbps</b> .

Field	Description
Rx Packets	Shows the total number of packets received for the data rate shown in <b>mbps</b> .

You can choose the **Advanced** button to go to an overview of more details.

The screenshot shows the Funkwerk R1200 monitoring interface. The left sidebar contains a navigation menu with categories like Assistants, System Management, Physical Interfaces, LAN, Wireless LAN, Routing, WAN, VPN, Firewall, VoIP, Local Services, Maintenance, External Reporting, and Monitoring. The Monitoring section is expanded, showing options like Internal Log, IPSec, ISDN Modem, Interfaces, WLAN (selected), HotSpot Gateway, and QoS. The main content area displays the WLAN1 Advanced view, featuring a table with 12 rows of statistics. The table has columns for #, Description, and Value. The Value column shows 0 for all entries. There is an 'Automatic Refresh Interval' set to 300 seconds and an 'Apply' button. A 'Back' button is located at the bottom of the table.

#	Description	Value
1	Unicast MSDUs transmitted successfully	0
2	Multicast MSDUs transmitted successfully	0
3	Transmitted MPDUs	0
4	Multicast MSDUs received successfully	0
5	Unicast MPDUs received successfully	0
6	MSDUs that could not be transmitted	0
7	Frame transmissions without ACK received	0
8	Duplicate received MSDUs	0
9	CTS frames received in response to an RTS	0
10	Received MPDUs that couldn't be decrypted	0
11	RTS frames with no CTS received	0
12	Corrupt Frames Received	0

Fig. 202: Monitoring -> WLAN -> WLAN1 -> Advanced

#### Values in the list Advanced

Field	Description
#	Displays the serial number of the list entry.
Description	Displays the description of the displayed value.
Value	Displays the statistical value.

#### Meaning of the list entries

Description	Meaning
Unicast MSDUs transmitted successfully	Displays the number of MSDUs successfully sent to unicast addresses since the last reset. An acknowledgement was received for each of these packets.
Multicast MSDUs transmitted successfully	Displays the number of MSDUs successfully sent to multicast addresses (including the broadcast MAC Address).
Transmitted MPDUs	Displays the number of MPDUs received successfully.
Multicast MSDUs received successfully	Displays the number of successfully received MSDUs that were sent with a multicast address.

Description	Meaning
Unicast MPDUs received successfully	Displays the number of successfully received MSDUs that were sent with a unicast address.
MSDUs that could not be transmitted	Displays the number of MSDUs that could not be sent.
Frame transmissions without ACK received	Displays the number of sent frames which which an acknowledgement frame was not received.
Duplicate received MSDUs	Displays the number of MSDUs received in duplicate.
CTS frames received in response to an RTS	Displays the number of received CTS (clear to send) frames that were received as a response to RTS (request to send).
Received MPDUs that couldn't be decrypted	Displays the number of received MSDUs that could not be encrypted. One reason for this could be that a suitable key was not entered.
RTS frames with no CTS received	Displays the number of RTS frames for which no CTS was received.
Corrupt Frames Received	Displays the number of frames received incompletely or with errors.

### 22.5.2 VSS

In the **Monitoring** -> **WLAN** -> **VSS** menu, the current values and activities of the configured wireless networks are shown.

The screenshot shows the 'bintec R1200' web interface. The left sidebar contains a navigation menu with categories like 'System Management', 'Physical Interfaces', 'LAN', 'Wireless LAN', 'Routing', 'WAN', 'VPN', 'Firewall', 'VoIP', 'Local Services', 'Maintenance', 'External Reporting', and 'Monitoring'. The 'Monitoring' section is expanded, showing 'Internal Log', 'IPSec', 'ISDN Modem', 'Interfaces', 'WLAN', 'HotSpot Gateway', and 'QoS'. The 'WLAN' section is selected, leading to the 'VSS' (Virtual Station Table) view. At the top, there are buttons for 'WLANI', 'VSS', 'WDS', and 'Client Links'. Below these is a form for 'Automatic Refresh Interval' set to 300 seconds with an 'Apply' button. The main area contains a table titled 'Client Node Table' with the following data:

MAC Address	IP Address	Up Time	Tx Packets	Rx Packets	Signal dBm (RSSI, RSSI2, RSSI3)	Noise dBm	Data Rate mbps
Funkwerk-ec (vss1-0)							
00:0d:fd:67:55:f3	0.0.0.0	0 Day(s) 0:0:17	3	2	-44(0,0,0)	-92	12


Fig. 203: Monitoring -> WLAN -> VSS

#### Values in the list VSS

Field	Description
MAC Address	Shows the MAC Address of the associated client.
IP Address	Shows the IP address of the client.
Up Time	Shows the time in hours, minutes and seconds for which the client is logged in.
Tx Packets	Shows the total number of packets sent.
Rx Packets	Shows the total number of packets received.
Signal dBm	Shows the received signal strength in dBm.
Noise dBm	Shows the received noise strength in dBm.
Data Rate mbps	Shows the current transmission rate of data received by this client in mbps.  The following clock rates are possible: IEEE 802.11b: 11, 5.5, 2 and 1 mbps; IEEE 802.11g/a: 54, 48, 36, 24, 18, 12, 9, 6 mbps.  If the 5 GHz frequency band is used, the indication of 11, 5.5, 2 and 1 mbps is suppressed for IEEE 802.11b.

#### VSS - Details for Connected Clients

In the **Monitoring -> WLAN -> VSS-><Connected client>**->  menu, the current values and activities of a connected client are shown.

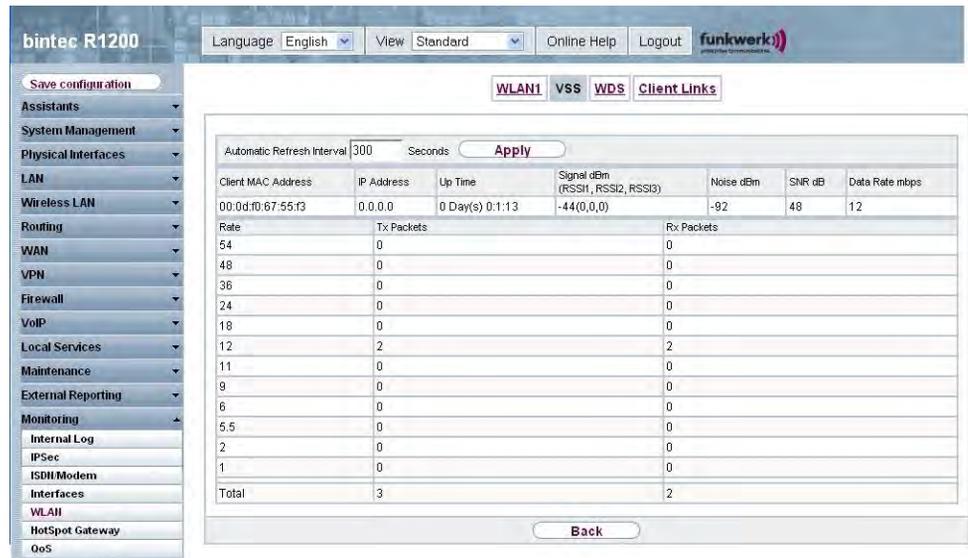

The screenshot shows the web interface for a bintec R1200 device. The left sidebar contains a navigation menu with categories like Assistants, System Management, Physical Interfaces, LAN, Wireless LAN, Routing, WAN, VPN, Firewall, VoIP, Local Services, Maintenance, External Reporting, and Monitoring. The Monitoring section is expanded, showing sub-items like Internal Log, IPSec, ISDN Modem, Interfaces, WLAN, HotSpot Gateway, and QoS. The main content area is titled 'WLAN VSS WDS Client Links'. It features a table with the following data:

Client MAC Address	IP Address	Up Time	Signal dBm (RSSI, RSSI2, RSSI3)	Noise dBm	SNR dB	Data Rate mbps
00:0d:fd:67:55:13	0.0.0.0	0 Day(s) 0:1:13	-44(0,0,0)	-92	48	12
Rate		Tx Packets		Rx Packets		
54	0			0		
48	0			0		
36	0			0		
24	0			0		
18	0			0		
12	2			2		
11	0			0		
9	0			0		
6	0			0		
5.5	0			0		
2	0			0		
1	0			0		
Total	3			2		

Fig. 204: **Monitoring -> WLAN -> VSS-><Connected client>**-> 

#### Values in the list VSS <Connected client>

Field	Description
Client MAC Address	Shows the MAC Address of the associated client.
IP Address	Shows the IP address of the client.
Up Time	Shows the time in hours, minutes and seconds for which the client is logged in.
Signal dBm	Shows the received signal strength in dBm.
Noise dBm	Shows the received noise strength in dBm.
SNR dB	<p>Signal-to-Noise Ratio in dB is an indicator of the quality of the wireless connection.</p> <p>Values:</p> <ul style="list-style-type: none"> <li>• &gt; 25 dB excellent</li> <li>• 15 - 25 dB good</li> <li>• 2 - 15 dB borderline</li> <li>• 0 - 2 dB bad.</li> </ul>
Data Rate mbps	Shows the current transmission rate of data received by this client.

Field	Description
	ent in mbps. The following clock rates are possible: IEEE 802.11b: 11, 5.5, 2 and 1 mbps; IEEE 802.11g/a: 54, 48, 36, 24, 18, 12, 9.6 mbps. If the 5-GHz frequency band is used, the indication of 11, 5.5, 2 and 1 mbps is suppressed for IEEE 802.11b.
Rate	Displays the possible data rates on this wireless module.
Tx Packets	Shows the number of sent packets for the data rate.
Rx Packets	Shows the number of received packets for the data rate.

### 22.5.3 WDS

In the **Monitoring** -> **WLAN** -> **WDS** menu, the current values and activities of the configured WDS links are shown.

The screenshot shows the web interface for a bintec R1200 device. The top navigation bar includes 'Language English', 'View Standard', 'Online Help', and 'Logout'. The left sidebar contains a menu with categories like 'System Management', 'Physical Interfaces', 'LAN', 'Wireless LAN', 'Routing', 'WAN', 'VPN', 'Firewall', 'VoIP', 'Local Services', 'Maintenance', 'External Reporting', and 'Monitoring'. Under 'Monitoring', 'WLAN' is selected. The main content area has tabs for 'WLAN', 'VSS', 'WDS', and 'Client Links'. Below the tabs, there is an 'Automatic Refresh Interval' set to '300' seconds with an 'Apply' button. A 'WDS Table' is displayed with the following data:

WDS Description	Remote MAC	Up Time	Tx Packets	Rx Packets	Signal dBm (RSSI1, RSSI2, RSSI3)	Noise dBm	Data Rate mbps
wds1-0	00:00:00:00:00:00	0d 0h 0m 4s	0	0	0(0,0,0)	0	0

Fig. 205: **Monitoring** -> **WLAN** -> **WDS**

#### Values in the list WDS

Field	Description
WDS Description	Shows the name of the WDS link.
Remote MAC	Shows the MAC Address of the WDS link partner.
Up Time	Shows the time in hours, minutes and seconds for which the WDS link is active.


Field	Description
Tx Packets	Shows the total number of packets sent.
Rx Packets	Shows the total number of packets received.
Signal dBm	Shows the received signal strength in dBm.
Noise dBm	Shows the received noise strength in dBm.
Data Rate mbps	Shows the current transmission rate of data received on this WDS link in mbps.

If required, the **Test** link can be used to start a link test. The test is only available for **funkwerk** devices and only if the WDS link is active.

The link test provides all the data necessary for checking the quality of the WDS link. The link test also helps you to align the antennas. This option is only displayed if the link state is *Enabled*.

## WDS Link Details

You use the  icon to open an overview of further details for the WDS links.

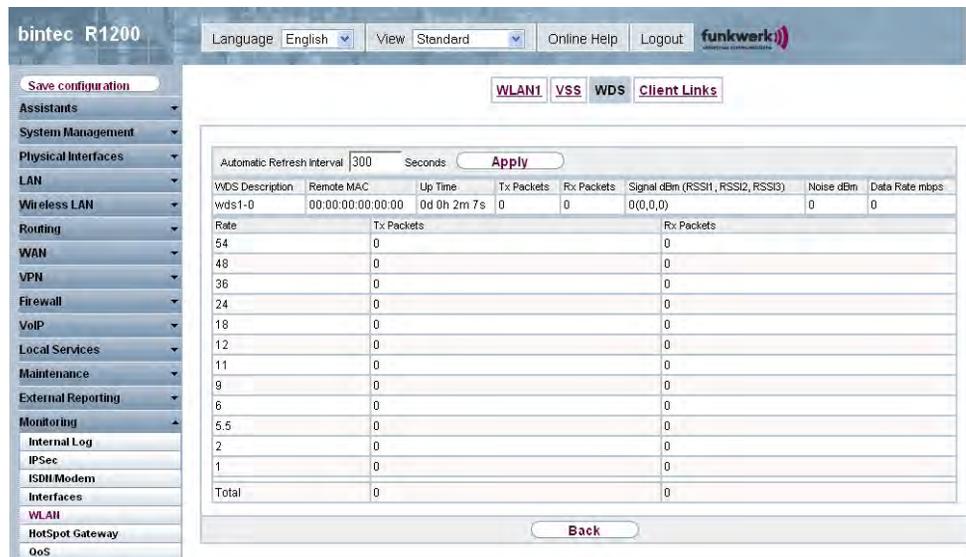

The screenshot shows the web interface for a bintec R1200 device. The top navigation bar includes 'Language English', 'View Standard', 'Online Help', and 'Logout'. The left sidebar contains a menu with categories like 'Assistants', 'System Management', 'Physical Interfaces', 'LAN', 'Wireless LAN', 'Routing', 'WAN', 'VPN', 'Firewall', 'VoIP', 'Local Services', 'Maintenance', 'External Reporting', 'Monitoring', 'Internal Log', 'IPSec', 'ISDN Modem', 'Interfaces', 'WLAN', 'HotSpot Gateway', and 'QoS'. The main content area is titled 'WDS' and features a table with columns: 'WDS Description', 'Remote MAC', 'Up Time', 'Tx Packets', 'Rx Packets', 'Signal dBm (RSSI1, RSSI2, RSSI3)', 'Noise dBm', and 'Data Rate mbps'. The table lists several WDS links with their respective statistics. A 'Back' button is located at the bottom of the table.

WDS Description	Remote MAC	Up Time	Tx Packets	Rx Packets	Signal dBm (RSSI1, RSSI2, RSSI3)	Noise dBm	Data Rate mbps
wds1-0	00:00:00:00:00:00	0d 0h 2m 7s	0	0	0(0,0,0)	0	0
Rate			Tx Packets	Rx Packets			
54			0	0			
48			0	0			
36			0	0			
24			0	0			
18			0	0			
12			0	0			
11			0	0			
9			0	0			
6			0	0			
5.5			0	0			
2			0	0			
1			0	0			
Total			0	0			

Fig. 206: Monitoring -> WLAN -> WDS->

## Values in the list WDS

Field	Description
WDS Description	Shows the name of the WDS link.

Field	Description
Remote MAC	Shows the MAC Address of the WDS link partner.
Up Time	Shows the time in hours, minutes and seconds for which the WDS link is active.
Tx Packets	Shows the total number of packets sent.
Rx Packets	Shows the total number of packets received.
Signal dBm	Shows the received signal strength in dBm.
Noise dBm	Shows the received noise strength in dBm.
Data Rate mbps	Shows the current transmission rate of data received on this WDS link in mbps.
Rate	Shows separately, for each of the stated data rates, the values for <b>Tx Packets</b> and <b>Rx Packets</b> .

## 22.5.4 Client Links

In the **Monitoring -> WLAN -> Client Links** menu, the current values and activities of the client links are shown.

The screenshot shows the Funkwerk R1200 web interface. The top bar includes the device name 'bintec R1200', language 'English', view 'Standard', and options for 'Online Help' and 'Logout'. The left navigation menu is expanded to 'Monitoring', with sub-items like 'Internal Log', 'IPSec', 'ISDN Modem', 'Interfaces', 'WLAN', 'HotSpot Gateway', and 'QoS'. The main content area shows the 'Client Links' page for 'WLAN1'. It features an 'Automatic Refresh Interval' of 300 seconds and an 'Apply' button. Below this is a 'Client Link Table' with the following data:

Client Link Description	AP MAC Address	Up Time	Tx Packets	Rx Packets	Signal dBm (RSSI1, RSSI2, RSSI3)	Noise dBm	Data Rate mbps
WLAN1 ()							
sta1-0		0d 0h 0m 8s	0	0	0(0,0,0)	0	0

Fig. 207: Monitoring -> WLAN -> Client Links


### Values in the Client Links list

Field	Description
Client Link Description	Shows the name of the client link.

Field	Description
AP MAC Address	Shows the MAC Address of the client link partner.
Up Time	Shows the time in hours, minutes and seconds for which the client link in question is active.
Tx Packets	Shows the total number of packets sent.
Rx Packets	Shows the total number of packets received.
Signal dBm	Shows the received signal strength in dBm.
Noise dBm	Shows the received noise strength in dBm.
Data Rate mbps	Shows the current transmission rate of data received on this client link in mbps.

## Client Link Details

You can use the  icon to open a summary of further details of the client links.

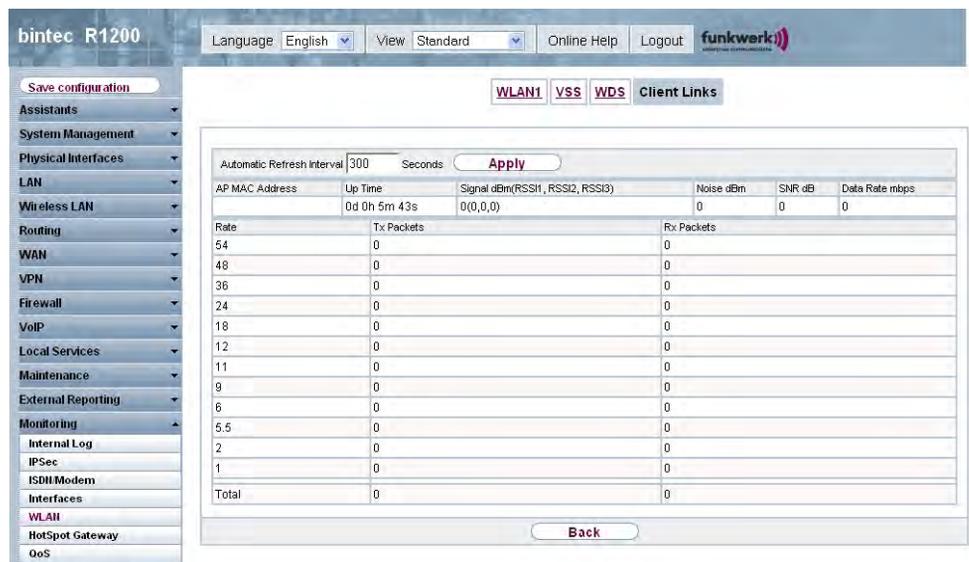

The screenshot shows the 'Client Links' monitoring page in the Funkwerk R1200 web interface. The page includes a navigation menu on the left with categories like Assistants, System Management, Physical Interfaces, LAN, Wireless LAN, Routing, WAN, VPN, Firewall, VoIP, Local Services, Maintenance, External Reporting, and Monitoring. The main content area displays a table of client links with columns for AP MAC Address, Up Time, Signal dBm, Noise dBm, SNR dB, and Data Rate mbps. The table shows a total of 0 for all metrics. An 'Apply' button is visible above the table.

Fig. 208: Monitoring -> WLAN -> Client Links->

## Values in the Client Links list


Field	Description
AP MAC Address	Shows the MAC Address of the client link partner.
Up Time	Shows the time in hours, minutes and seconds for which the client link in question is active.
Signal dBm	Shows the received signal strength in dBm.

Field	Description
Noise dBm	Shows the received noise strength in dBm.
SNR dB	Shows the signal quality in dB.
Data Rate mbps	Shows the current transmission rate of data received on this client link in mbps.
Rate	Shows separately, for each of the stated data rates, the values for <b>Tx Packets</b> and <b>Rx Packets</b> .

## 22.6 Bridges

### 22.6.1 br<x>

In the **Monitoring -> Bridges -> br<x>** menu, the current values of the configured bridges are shown.

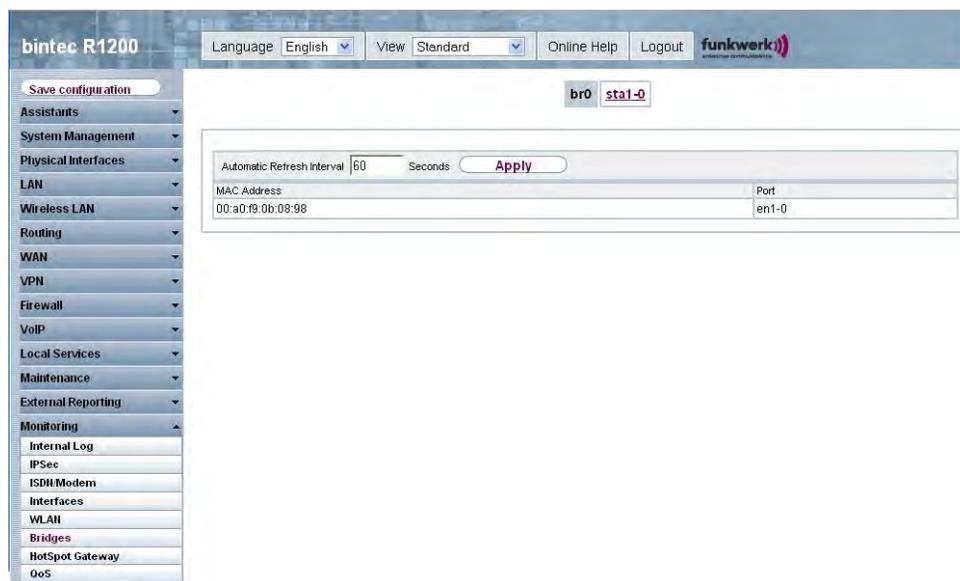

The screenshot shows the web interface for a bintec R1200 device. The top navigation bar includes 'Language English', 'View Standard', 'Online Help', and 'Logout'. The left sidebar contains a menu with 'Monitoring' expanded to show 'Bridges'. The main content area shows the configuration for bridge 'br0' and station 'sta1-0'. It includes an 'Automatic Refresh Interval' of 60 seconds and an 'Apply' button. Below this is a table with two columns: 'MAC Address' and 'Port'. The table contains one entry: MAC Address '00:a0:f9:0b:08:98' and Port 'en1-0'.

Fig. 209: Monitoring -> Bridge

#### Values in the br<x> list

Field	Description
MAC Address	Shows the MAC addresses of the associated bridge.
Port	Shows the port on which the bridge is active.

## 22.6.2 sta<x>

In the **Monitoring -> Bridges -> sta<x>** menu, the current values of the bridges to the configured WLAN clients are shown.

The screenshot shows the web interface for a bintec R1200 device. The main content area displays the configuration for the 'sta1-0' bridge. At the top, there are controls for 'Automatic Refresh Interval' (set to 60 seconds) and 'Current Wildcard MAC Address' (set to aabbcc:dd:ee:ff). Below this is a table with three columns: IP Address, MAC Address, and Port. The table contains 10 rows of data, each representing a WLAN client. A 'Reset' button is located at the bottom of the table.

IP Address	MAC Address	Port
192.168.1.28	00:16:d3:37:8f:d1	en1-0
192.168.1.26	00:a0:f9:0b:cf:03	en1-0
192.168.1.35	00:13:d4:ad:27:93	en1-0
192.168.1.2	00:11:2f:d0:c5:db	en1-0
192.168.1.40	00:0a:e4:27:c2:f2	en1-0
192.168.1.23	00:0c:29:e6:2a:70	en1-0
192.168.100.100	00:0a:e4:27:c2:f2	en1-0
192.168.1.21	00:11:d8:73:31:07	en1-0
192.168.1.24	00:11:d8:87:f7:56	en1-0
192.168.1.38	00:15:f2:47:8a:06	en1-0
192.168.1.1	fe:fd:c0:a8:01:01	en1-0

Fig. 210: Monitoring -> Bridge

### Values in the sta<x> list

Field	Description
Current Wildcard MAC Address	Shows the current configured wildcard MAC Address.
IP Address	Shows the IP address of the host associated with this WLAN client link.
MAC Address	Shows the MAC Address of the host associated with this WLAN client link.
Port	Shows the port on which the bridge is active.

## 22.7 Hotspot Gateway

## 22.7.1 Hotspot Gateway

In the **Monitoring** -> **Hotspot Gateway** -> **Hotspot Gateway** menu, a list of all connected hosts is shown.



Fig. 211: Monitoring -> Hotspot Gateway -> Hotspot Gateway

### Values in the list Hotspot Gateway

Field	Description
User Name	Displays the user's name.
IP Address	Shows the IP address of the user.
Physical Address	Shows the physical address of the user.
Logon	Shows the login time.
Interface	Shows the interface used.

## 22.8 QoS

In the **Monitoring** -> **QoS** menu, statistics are displayed for all interfaces for which QoS has been configured.

## 22.8.1 QoS

In the **Monitoring** -> **QoS** -> **QoS** menu, a list of all interfaces is shown for which QoS has been configured.

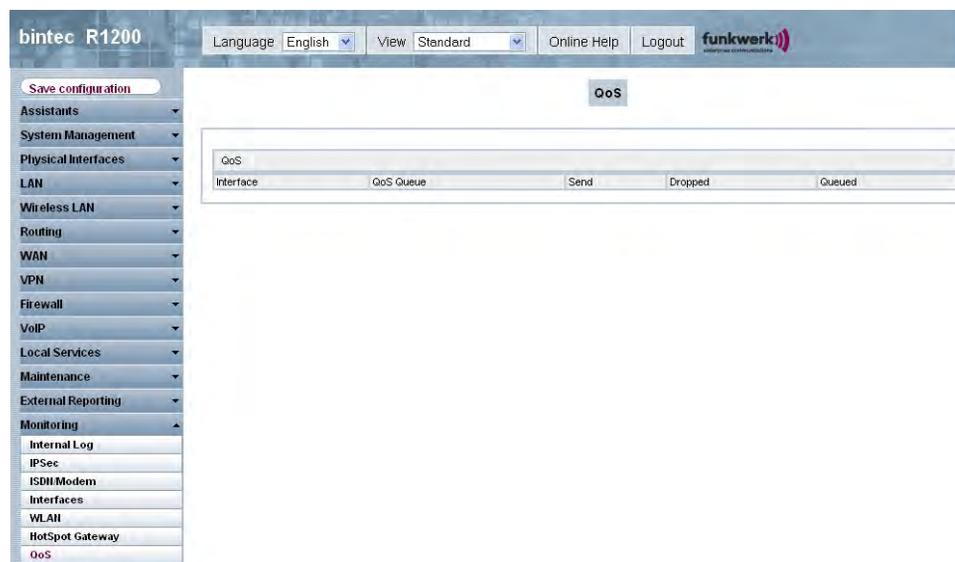


Fig. 212: Monitoring -> QoS -> QoS

### Values in the QoS list

Field	Description
Interface	Shows the interface for which QoS has been configured.
QoS Queue	Shows the QoS Queue, which has been configured for this interface.
Send	Shows the number of sent packets with the corresponding packet class.
Dropped	Shows the number of rejected packets with the corresponding packet class in case of overloading.
Queued	Shows the number of waiting packets with the corresponding packet class in case of overloading.

## Glossary

<b>Announcement</b>	If you want to call your employees or family members to a meeting or the dinner table, you could call each one of them individually or simply use the announcement function. With just one call, you reach all the announcement-enabled telephones without the subscribers having to pick up the receiver.
<b>Announcement function</b>	Performance feature of a PBX. On suitable telephones (e.g. system telephones), announcements can be made as on an intercom.
<b>Bit</b>	Binary digit. Smallest unit of information in computer technology. Signals are represented in the logical states "0" and "1".
<b>Bundle</b>	The external connections of larger PBXs can be grouped into bundles. When an external call is initiated by the exchange code or in the event of automatic external line access a bundle released for this subscriber is used to establish the connection. If a subscriber has authorisation for several bundles, the connection is established using the first released bundle. If one bundle is occupied, the next released bundle is used. If all the released bundles are occupied, the subscriber hears the engaged tone.
<b>Busy On Busy</b>	Call to engaged team subscriber. If one subscriber in a team has taken the receiver off the hook or is on the telephone, you can decide whether other calls are to be signalled for this team. The setting for reaching a subscriber can be toggled between "Standard" and "Busy On Busy". In the basic configuration, it is set to Standard. If Busy on Busy is set for a team, other callers hear the engaged tone.
<b>DECT</b>	Digital European Cordless Telecommunication. European standard for wireless telephones and wireless PBXs. Internal calls can be made free of charge between several handheld units. Another advantage is the higher degree of interception protection (GAP).
<b>Digital exchange</b>	Allows computer-controlled crossbar switches to set up a connection quickly, and special features such as inquiries, call waiting, three-party conference and call forwarding to be activated. All T-Com exchanges have been digital since January 1998.
<b>Digital voice transmission</b>	As a result of the internationally standardised Pulse Code Modulation (PCM), analogue voice signals are converted to a digital pulse flow of 64 kbps. Advantages: Better voice quality and less susceptibility to faults during analogue voice transmission.

<b>Direct Call</b>	You are not at home. However, there is someone at home who needs to be able to reach you quickly and easily by telephone if necessary (e.g. children or grandparents). As you can set up the Direct Call function for one or more telephones, the receiver of the telephone simply needs to be lifted. After five seconds, the PBX automatically calls the defined direct call number, if you do not start dialing another number first. You can enter up to 12 destination numbers when you configure Direct Call. A direct call number can only be used by one subscriber. If you want to change an entered direct call number, you can simply enter the new direct call number without having to delete the old direct call number. The old number is automatically overwritten when the new configuration is transferred to the PBX.
<b>DISA</b>	Direct Inward System Access
<b>Download</b>	Data transfer during online connections, where files are "loaded" from a PC or data network server to the user's own PC, PBX or terminal, so that they can be used there.
<b>DSL and ISDN connections</b>	Data is transferred between the Internet and your PBX over ISDN or T-DSL. The PBX determines the remote terminal to which a data packet is to be sent. For a connection to be selected and set up, parameters must be defined for all the required connections. These parameters are stored in lists which together permit the right connection to be set up. The PBX uses the PPP (Point-to-Point Protocol) for ISDN access, and PPPoE (Point-to-Point Protocol over Ethernet) for access over T-DSL. The traffic on these two Internet connections is monitored separately by the PBX.
<b>DSL modem</b>	Special modem for data transmission using DSL access technology.
<b>DSL splitter</b>	A DSL splitter is a device that splits the data or frequencies of various applications that run via a subscriber line or distribution point, and provides this via separate connections.
<b>Services</b>	Euro ISDN contains service indicators with defined names. Some of these have only historical meaning. In general, you should choose the "Telephony" service for "real" telephone calls. If this selection does not work (depends on network operator), you can try "speech", "audio 3k1Hz" or "telephony 3k1Hz". The same applies for faxing. Here, too, there is the collective term "Fax" plus a couple of more specific cases. From a purely technical point of view, the services are bits in a data word evaluated by means of a mask. If you include several bits in the mask, all these services are approved for activation, while in the case of just one bit, it is just the one selected ser-

vice.

<b>Three-party conference</b>	A three-way telephone call. Performance feature in T-Net, T-ISDN and your PBX.
<b>10 Base 2</b>	Thin Ethernet connection. Network connection for 10-mbps networks with BNC connector. T-connectors are used for the connection of equipment with BNC sockets.
<b>100Base-T</b>	Twisted pair connection, Fast Ethernet. Network connection for 100-mbps networks.
<b>10Base-T</b>	Twisted pair connection. Network connection for 10-mbps networks with RJ45 connector.
<b>1TR6</b>	D channel protocol used in the German ISDN. Today the more common protocol is DSS1.
<b>3DES (Triple DES)</b>	See DES.
<b>802.11a/g</b>	Specified data rates of 54, 48, 36, 24, 18, 12, 9 and 6 mbps and a working frequency in the range of 5 GHz (for IEEE802.11a) or 2.4 GHz (for IEEE802.11g). IEEE802.11 g can be configured to run in compliance with 11b or 11b and 11 as well.
<b>802.11b/g</b>	One of the IEEE standards for wireless network hardware. Products that meet the same IEEE standard can communicate with each other, even if they come from different hardware manufacturers. The IEEE802.11b standard specifies the data rates of 1, 2, 5.5 and 11 mbps, a working frequency in the range of 2.4 to 2.4835 GHz and WEP encryption. IEEE802.11 wireless networks are also known as Wi-Fi networks.
<b>A-subscriber</b>	The A-subscriber is the caller.
<b>a/b interface</b>	For connection of an analogue terminal. In the case of an ISDN terminal (terminal adapter) with a/b interface, the connected analogue terminal is able to use the supported T-ISDN performance features.
<b>AAA</b>	Authentication, Authorisation, Accounting
<b>Access code</b>	PIN or password
<b>Access list</b>	A rule that defines a set of packets that should or should not be transmitted by the device.
<b>Access point</b>	An active component of a network consisting of wireless parts and

optionally also of wired parts. Several WLAN clients (terminals) can log in to an access point (AP) and communicate via the AP data. If the optional wired Ethernet is connected, the signals between the two physical media, the wireless interface and wired interface, are bridged (bridging).

<b>Access protection</b>	Filters can be used to prevent external persons from accessing the data on the computers in your LAN. These filters are a basic function of a firewall.
<b>Accounting</b>	Recording of connection data, e.g. date, time, connection duration, charging information and number of data packets transferred.
<b>Active probing</b>	Active probing takes advantage of the fact that as standard, access points are to respond to client requests. Clients therefore send "probe requests" on all channels and wait for responses from an access point in the vicinity. The response packet then contains the SSID of the wireless LAN and information on whether WEP encryption is used.
<b>Ad hoc network</b>	An ad hoc network refers to a number of computers that form an independent 802.11 WLAN each with a wireless adapter. Ad hoc networks work independently without an access point on a peer-to-peer basis. Ad hoc mode is also known as IBSS mode (Independent Basic Service Set) and makes sense for the smallest networks, e.g. if two notebooks are to be linked to each other without an access point.
<b>ADSL</b>	Asymmetric digital subscriber line
<b>AH</b>	Authentication header
<b>Alphanumeric display</b>	Display unit e.g. for T-Concept PX722 system telephone, able to display letters and other characters as well as digits.
<b>Analogue connections</b>	For the connection of analogue terminals such as telephone, fax and answering machine.
<b>Analogue terminals</b>	Terminals that transmit voice and other information analogously, e.g. telephone, fax machine, answering machine and modem.
<b>Analogue voice transmission</b>	To transmit voice via the telephone, acoustic oscillations are converted to continuous electrical signals, which are transmitted via a network of lines (digital voice transmission).
<b>Answering machine</b>	You configure an analogue answering machine under "Terminal Type".

<b>AOC-D</b>	Display during and at end of connection.
<b>AOC-D/E</b>	Advice of charge-during/end.
<b>AOC-E</b>	Display only at end of connection.
<b>ARP</b>	Address Resolution Protocol
<b>Assignment</b>	An external call can be signalled to internal subscribers. The entries in the "Day" option and "Night" option can be different.
<b>Asynchronous</b>	A method of data transmission in which the time intervals between transmitted characters can vary in length. This allows computers and peripheral devices to intercommunicate without being synchronised by clock signals. The beginning and end of the transmitted characters must be marked by start and stop bits – in contrast to synchronous transmission.
<b>ATM</b>	Asynchronous transfer mode
<b>Attention tone</b>	Superimposing of an acoustic signal during a telephone call e.g. for call waiting.
<b>Authentication</b>	Check on the user's identify.
<b>Authorisation</b>	Based on the identity (authentication), the user can access certain services and resources.
<b>Automatic callback</b>	Special feature on telephones: By pressing a key or code, the caller requests a call back from the engaged terminal. If the subscriber you want is not at their desk or cannot take the call, they are automatically connected with the caller as soon as they have used the telephone again and replaced the receiver.
<b>Automatic callback on busy</b>	This function can only be used on telephones that permit suffix dialling. An automatic callback from an inquiry connection is not possible.
<b>Automatic callback on busy (CCBS)</b>	You urgently need to contact a business partner or internal subscriber. However, when you call, you always hear the engaged tone. If you were to receive notification that the subscriber had ended the call, your chance of reaching them would be very good. With "Call-back on Busy" you can reach the engaged subscriber once they have replaced the receiver at the end of the call. Your telephone rings. When you lift the receiver, a connection to the required subscriber is set up automatically. An internal "Callback on Busy" is deleted automatically after 30 minutes. The external "Callback on

Busy" is deleted after a period specified by the exchange (approx. 45 minutes). Manual deletion before this period has elapsed is also possible.

- Automatic callback on no reply (CCBS)** You urgently need to contact a business partner or internal subscriber. When you call them, you always hear the ringing tone, but your business partner is not close to the telephone and does not pick up. With "Callback on no reply", you can reach the subscriber as soon as they have completed a call or lifted and replaced the receiver of their telephone. Your telephone rings. When you lift the receiver, a connection to the required subscriber is established automatically.
- Automatic clearing of Internet connection (ShortHold)** You can activate ShortHold. When you do so, you define the time after which an existing connection is cleared if data transfer is no longer taking place. If you enter a time of 0, ShortHold is deactivated.
- Automatic outside line** After the receiver of a telephone is lifted, the telephone number of the external subscriber can be dialled immediately.
- Automatic redialling** Performance feature of a terminal. If the line is busy, several redial attempts are made.
- B channel** Corresponds to a telephone line in T-Net. In T-ISDN, the basic connection contains two B channels, each with a data transmission rate of 64 kbps.
- B channel** Bearer channel of an ISDN Basic Rate Interface or a Primary Rate Interface for the transmission of traffic (voice, data). An ISDN Basic Rate Interface consists of two B channels and one D channel. A B channel has a data transmission rate of 64 kbps. The data transmission rate of an ISDN Basic Rate Interface with your gateway can be increased to up to 128 kbps using channel bundling.
- BACP/BAP** Bandwidth Allocation Control Protocols (BACP/BAP in accordance with RFC 2125)
- Base station** Central unit of wireless telephone devices. There are two different types: The simple base station is used to charge the handheld unit. For special-feature telephones, the base station can also be used as a telephone, the handheld unit is charged using separate charging stations.
- Basic Rate Interface** ISDN connection that includes two basic channels (B channels) each with 64 kbps and one control and signalling channel (D chan-

nel) with 16 kbps. The two basic channels can be used independently of each other for each service offered in the T-ISDN. You can therefore telephone and fax at the same time. T-Com offers the Basic Rate Interface as a point-to-multipoint or point-to-point connection.

**Blacklist (dialling ranges)**

You can define a restriction on external dialling for individual subscribers. The telephone numbers entered in the blacklist table cannot be called by the terminals subject to dialling control, e.g. entry 0190 would block all connections to expensive service providers.

**Block Cipher Modes** Block-based encryption algorithm**Blowfish**

An algorithm developed by Bruce Schneier. It relates to a block cipher with a block size of 64 bit and a key of variable length (up to 448 bits).

**Bluetooth**

Bluetooth is a wireless transfer technology that can connect up different devices. Bluetooth replaces cables to connect various devices e.g. Notebook, PC, PDA, etc. Thanks to Bluetooth, these devices can exchange data with each other without a fixed connection. For example, PCs, notebooks or a PDA can access the Internet or a local network. The appointments on a PDA can be synchronised with the appointments on the PC without the need for a cable connection. Because of the many different application areas for the Bluetooth technology, the different types of connections between the devices are divided into profiles. A profile determines the service (function) that the individual Bluetooth clients can use among each other.

**BOD**

Bandwidth on Demand

**BootP**

Bootstrap protocol

**Bps**

Bits per second. A unit of measure for the transmission rate.

**Break-in**

In a PBX, the option of breaking in to an existing call. This is signalled acoustically by an attention tone.

**BRI**

Basic Rate Interface

**Bridge**

Network component for connecting homogeneous networks. As opposed to a gateway, bridges operate at layer 2 of the OSI model, are independent of higher-level protocols and transmit data packets using MAC addresses. Data transmission is transparent, which means the information contained in the data packets is not inter-

	preted.
<b>Broadcast</b>	Broadcasts (data packages) are sent to all devices in a network in order to exchange information. Generally, there is a certain address (broadcast address) in the network that allows all devices to interpret a message as a broadcast.
<b>Brokering</b>	Brokering makes it possible to switch between two external or internal subscribers without the waiting subscriber being able to hear the other conversation.
<b>Browser</b>	Program for displaying content on the Internet or World Wide Web.
<b>Bus</b>	A data transmission medium for use by all the devices connected to a network. Data is forwarded over the entire bus and received by all devices on the bus.
<b>CA</b>	Certificate Authority
<b>Calendar</b>	By allocating a calendar, you switch between Day and Night call assignment. For each day of the week, you can select any day/night switching time. A calendar has four switch times, which can be specifically assigned to each individual day of the week.
<b>Call allocation</b>	In a PBX, calls can be assigned to certain terminals.
<b>Call costs account</b>	You can set up a "call costs account" for a subscriber here. The maximum available number of units, in the form of a limit, can be assigned to each subscriber on their personal "call costs account". The "cost limit" is to be activated so that units can be booked. Once the units have been used up, no further external calls are possible. Internal calls can still be made at any time. The units are booked to the account each time a call is ended.
<b>Call diversion</b>	Also known as call forwarding. An incoming call is diverted to a specified telephone, Internet or wireless connection.
<b>Call filter</b>	Performance feature e.g. of the T-Concept PX722 system telephone, special-feature telephones or answering machines. The call is only signalled in the case of certain previously defined telephone numbers.
<b>Call forwarding in the exchange</b>	You can only use the options of call forwarding in the exchange via the keypad if certain services are activated for your connection. You can receive more information on this from your T-Com advisor. The exchange connects the calling subscriber with an external subscriber you have specified.

- Call forwarding in the PBX** The call forwarding (CF) performance feature of the PBX enables you to be reached even if you are not in the vicinity of your telephone. You achieve this by automatically forwarding your calls to the required internal or external telephone number. You can use the configuration program to define whether call forwarding should be carried out in the PBX or the exchange. You should use call forwarding in the exchange if certain services are activated for your connection. You can receive more information on this from your T-Com advisor.
- Call option day/night** Option of changing the call allocation on a PBX using a calendar. Calls received after office hours are forwarded to a telephone still manned, or to the answering machine or fax.
- Call pickup** Performance feature of a PBX. Calls can be received on an internal terminal that is not part of active call allocation.
- Call pickup** An external call is only signalled for your colleague. As you belong to several different teams, this is not surprising. You can now form various groups of subscribers in which call pickup is possible. A call can only be picked up by subscribers/terminals in the same pickup group. The assignment of subscribers in pickup groups is not dependent on the settings in the Day and Night team call assignment.
- Call Relay on Busy** Reject
- Call Through** Call Through is a dial-in via an external connection to the PBX with the call put through from the PBX via another external connection.
- Call to engaged subscriber** Busy on busy
- Call waiting** The "Call Waiting" performance feature means that other people can contact you during a telephone call. If another subscriber calls while you are on the telephone, you hear your telephone's call waiting tone. You can then decide whether to continue with your first call or speak to the person whose call is waiting.
- Call waiting protection** If you do not want to use the call waiting feature, you switch on call waiting protection. If you are taking a call, a second caller hears the engaged tone.
- Callback on Busy** Performance feature in T-ISDN, PBXs and T-Net. A connection is set up automatically as soon as the Busy status on the destination connection ends. When the connection is free, this is signalled to the caller. As soon as the caller lifts the receiver, the connection is

set up automatically. However, Callback must first be activated by the caller on his or her terminal.

<b>Callback on no reply</b>	You call a subscriber, who does not pick up. With "Callback on no reply", this is not a problem for you, because with this special feature, you can set up the connection without having to redial. If you are not on the telephone yourself, a new connection with the subscriber is set up - for a maximum of 180 minutes.
<b>Called party number</b>	Number of the terminal called.
<b>Caller list</b>	Special-feature telephones such as the T-Concept PX722 system telephone enable call requests to be stored during absence.
<b>Calling party number</b>	Number of the calling terminal.
<b>CAPI</b>	Common ISDN Application Programming Interface
<b>CAST</b>	A 128-bit encryption algorithm with similar functionality to DES. See Block Cipher Modes.
<b>CBC</b>	Cipher Block Chaining
<b>CCITT</b>	Consultative Committee for International Telegraphy and Telephony
<b>CD (Call Deflection)</b>	The forwarding of calls. This performance feature enables you to forward a call without having to take it yourself. If you forward a call to an external subscriber, you bear any connection costs from your connection to the destination of the forwarded call. This feature can therefore be used by system telephones and ISDN telephones that support this function (see user's guide for terminals). For more information on using this performance feature with the telephone, please see the user's guide.
<b>Central speeddial memory</b>	Performance feature of a PBX. Telephone numbers are stored in a PBX and can be called from every connected telephone using a key combination.
<b>Certificate</b>	Certificate
<b>Channel Bundling</b>	Channel bundling
<b>CHAP</b>	Challenge Handshake Authentication Protocol
<b>Checksum field</b>	Frame Check Sequence (FCS)
<b>CLID</b>	Calling Line Identification

<b>Client</b>	A client uses the services provided by a server. Clients are usually workstations.
<b>CLIP</b>	Abbreviation for Calling Line Identification Presentation. Telephone number display of calling party.
<b>CLIR</b>	Abbreviation for Calling Line Identification Restriction. Temporary suppression of the transmission of the calling party's telephone number.
<b>COLR</b>	Connected Line Identification Restriction (suppress B telephone number). This performance feature permits or suppresses the display of the called subscriber's telephone number. If display of the B telephone number is suppressed, your telephone number is not transmitted to the caller when you take a call. Example: You have set up call diversion to another terminal. If this terminal has activated suppression of the B telephone number, the calling party does not see a telephone number on the terminal display.
<b>Combination device</b>	If an analogue terminal connection of the PBX is set up as a "multi-functional port" for combination devices, all calls are received, regardless of the service. In the case of trunk prefixes using codes, the service ID "Analogue Telephony" or "Telefax Group 3" can also be transmitted, regardless of the configuration of the analogue connection. If 0 is dialled, the service ID "Analogue Telephony" is also transmitted.
<b>Conference call</b>	Performance feature of a PBX: Several internal subscribers can telephone simultaneously. Three-party conferences are also possible with external subscribers.
<b>Configuration Manager</b>	Windows application (similar to the Windows Explorer), which uses SNMP commands to request and carry out the settings of your gateway. The application was called the DIME Browser before BRICK-ware version 5.1.3.
<b>Configuration of the PBX with the PC</b>	One important prerequisite for the transfer of your configuration to the PBX is that you have set up a connection between the PC and PBX. You can do this using the LAN Ethernet connection.
<b>Configuration of the PBX with the telephone</b>	With some restrictions, you can also program your PBX using the telephone. For information on programming your PBX using the telephone, please see the accompanying user's guide.
<b>Connection of analogue terminals</b>	The performance features for analogue terminals can only be used with terminals that use the MFC dialling method and that have an R

or flash key.

<b>Connection of ISDN terminals</b>	The internal telephone number of the connection, and not the external number (multiple subscriber number) must be entered as the MSN in the ISDN terminal connected to the internal ISDN bus. See the user's guide for the ISDN terminals: Enter MSN. Please note that not all the ISDN terminals available on the market can use the performance features provided by the PBX via their key interface.
<b>CRC</b>	Cyclic Redundancy Check
<b>CTI</b>	Computer Telephony Integration. Term for connection between a PBX and server. CTI enables PBX functions to be controlled and evaluated by a PC.
<b>D channel</b>	Control and signalling channel of an ISDN Basic Rate Interface or Primary Rate Interface. The D channel has a data transmission rate of 16 kbps. In addition to the D channel, each ISDN BRI has two B channels.
<b>Data compression</b>	A process for reducing the amount of data transmitted. This enables higher throughput to be achieved in the same transmission time. Examples of this technique include STAC, VJHC and MPPC.
<b>Data Link Layer</b>	(DLL)
<b>Data packet</b>	A data packet is used for information transfer. Each data packet contains a prescribed number of characters (information and control characters).
<b>Data transmission rate</b>	The data transmission rate specifies the number of information units for each time interval transferred between sender and recipient.
<b>Datagram</b>	A self-contained data packet that is forwarded in the network with minimum protocol overhead and without an acknowledgement mechanism.
<b>Datex-J</b>	Abbreviation for Data Exchange Jedermann, the T-Online access platform. Local dial-in node in every local network. Some German cities offer additional high-speed access over T-Net/T-Net-ISDN.
<b>Day/Night option</b>	If you want to transfer important calls made after office hours to your home office to an answering machine, so that you are not disturbed, you can use call assignment. You can allocate each subscriber two different call allocations (call assignment Day and call assignment Night). With call assignments, it is also possible to forward the call to an external subscriber, so that you can be contacted at all times.

With call assignment Day/Night, therefore, you define which internal terminals are to ring in the event of an external call. Call assignment Day/Night is achieved using a table in which all the incoming calls are assigned to internal subscribers.

<b>Day/Night/Calendar</b>	You define switching of call variant Day/Night.
<b>DCE</b>	Data Circuit-Terminating Equipment
<b>DCN</b>	Data communications network
<b>Default gateway</b>	Describes the address of the gateway to which all traffic not destined for its own network is sent.
<b>Denial-Of-Service Attack</b>	A Denial-of-Service (DoS) attack is an attempt to flood a gateway or host in a LAN with fake requests so that it is completely overloaded. This means the system or a certain service can no longer be run.
<b>DES</b>	Data Encryption Standard
<b>Destination number memory</b>	Speeddial memory
<b>DHCP</b>	Dynamic Host Configuration Protocol
<b>Dial preparation</b>	On some telephones with a display, you can first enter a telephone, check it first, and then dial it.
<b>Dial-in parameters</b>	Define the dial-in parameters i.e. you enter the provider's dial-in number and specify:
<b>Dialling control</b>	In the configuration for certain terminals, you can define restrictions for external dialling.
<b>Dialup connection</b>	A connection is set up when required by dialling an extension number, in contrast to a leased line.
<b>DIME</b>	Desktop Internetworking Management Environment
<b>DIME Browser</b>	Old name for Configuration Manager.
<b>Direct dial-in</b>	Performance feature of larger PBXs at the point-to-point connection: The extensions can be called directly from outside.
<b>Direct dialling range</b>	See Extension numbers range
<b>Display and output of connection data</b>	In the configuration, it is possible to define storage of data records for specific terminals or all terminals. In the ex works setting, all in-

	coming external connections and all external calls you make are stored.
<b>Display of caller's number</b>	A suitable telephone is a prerequisite for this feature. Transmission of the telephone number must be permitted by the caller.
<b>DLCI</b>	In a Frame Relay network, a DLCI uniquely describes a virtual connection. Note that a DLCI is only relevant for the local end of the point-to-point connection.
<b>DMZ</b>	Demilitarised Zone
<b>DNS</b>	Domain Name System
<b>Do not disturb</b>	Station guarding
<b>DOI</b>	Domain of Interpretation
<b>Domain</b>	A domain refers to a logical group of devices in a network. On the Internet, this is part of a naming hierarchy (e.g. bintec.de).
<b>Door intercom</b>	Door intercom device. It can be connected to various PBXs. A telephone can be used to take an intercom call and open the door.
<b>Door intercom on analogue connection</b>	An analogue connection can be set up for connected of function module M06 to connect a DoorLine intercom system.
<b>Door terminal adapter</b>	The function module can be installed on an analogue connection of your PBX. If a door intercom (DoorLine) is connected to your PBX via a function module, you can speak with a visitor at the door via every authorised telephone. You can assign particular telephones to each ring button. These phones then ring if the ring button is pressed. On analogue telephones, the signal on the telephone matches the intercom call. In place of the internal telephones, an external telephone can also be configured as the call destination for the ring button. Your door intercom can have up to 4 ring buttons. The door opener can be pressed during an intercom call. It is not possible activate the door opener if an intercom call is not taking place.
<b>Dotted Decimal Notation</b>	The syntactic representation of a 32-bit whole number, written in four 8-bit numbers in decimal form and subdivided by a point. It is used to represent IP addresses on the Internet, e.g. 192.67.67.20
<b>Downstream</b>	Data transmission rate from the ISP to the customer.
<b>DSA (DSS)</b>	Digital Signature Algorithm (Digital Signature Standard).

<b>DSL/xDSL</b>	Digital Subscriber Line
<b>DSS1</b>	Digital Subscriber Signalling System
<b>DSSS</b>	Direct Sequence Spread Spectrum is a wireless technology that was originally developed for the military and offers a high level of protection against faults because the wanted signal is spread over a wide area. The signal is spread by means of a spread sequence or chipping code consisting of 11 chips across 22 MHz. Even if there is a fault on one or more of the chips during transfer, the information can still be obtained reliably from the remaining chips.
<b>DTE</b>	Data Terminal Equipment
<b>DTMF</b>	Dual Tone Multi Frequency (tone dialling system)
<b>Dynamic IP address</b>	In contrast to a static IP address, a dynamic IP address is assigned temporarily by DHCP. Network components such as the web server or printer usually have static IP address, while clients such as notebooks or workstations usually have dynamic IP addresses.
<b>E1/T1</b>	E1: European variant of the 2.048 mbps ISDN Primary Rate Interface, which is also called the E1 system.
<b>ECB</b>	Electronic Code Book mode
<b>ECT</b>	Explicit Call Transfer. This performance feature allows two external connections to be transferred without blocking the two B channels of the exchange connection.
<b>Email</b>	Electronic mail
<b>Emergency numbers</b>	You urgently need to contact the police, fire brigade or another telephone number. To make things worse, all the connections are busy. However, you have informed your PBX of the telephone numbers that need to be contactable in an emergency. If you now dial one of these numbers, it is recognised by the PBX and a B channel of the T-ISDN is automatically freed up for your emergency call. Emergency calls are not subject to configuration restrictions. If "Calling with prefix plus code number" is set for a connection, the internal connection is busy. To make an external call, first dial 0 and then the required emergency number.
<b>Encapsulation</b>	Encapsulation of data packets in a certain protocol for transmitting the packets over a network that the original protocol does not directly support (e.g. NetBIOS over TCP/IP).

<b>Encryption</b>	Refers to the encryption of data, e.g. MPPE.
<b>Entry of external connection data</b>	In the ex works setting, all external connections made and received via your PBX are recorded and stored in the form of connection data records.
<b>ESP</b>	Encapsulating Security Payload
<b>ESS</b>	The Extended Service Set describes several BSS (several access points) that form a single, logical wireless network.
<b>Ethernet</b>	A local network that connects all devices in the network (PC, printers, etc.) via a twisted pair or coaxial cable.
<b>Ethernet connections</b>	The 4 connections are led equally through an internal switch. Network clients can be directly connected to the connection sockets. The ports are designed as 100/BaseT full-duplex, autosensing, auto MDIX upwardly compatible to 10/Base T. Up to 4 SIP telephones or IP softclients with SIP standard can be directly connected to PCs with a network card.
<b>Eumex Recovery</b>	If the power supply to the PBX cuts out while new firmware is being loaded, the PBX functions are deleted.
<b>Euro ISDN</b>	Harmonised ISDN standardised within Europe, based on signalling protocol DSS1, the introduction of which network operators in over 20 European countries have committed to. Euro-ISDN has been introduced in Germany, replacing the previous national system 1 TR6.
<b>Eurofile transfer</b>	Communication protocol for the exchange of files between two PCs over ISDN using an ISDN card (file transfer) or telephones or PBXs configured for this.
<b>Exchange</b>	Node in the public telecommunication network. We differentiate between local exchanges and remote exchanges.
<b>Exchange access right</b>	PBXs differentiate between the following "exchange access rights". These can be set up differently for each subscriber in the configuration.
<b>Extended redialling</b>	A selected telephone number is "parked" in the telephone's memory. It can be redialled later, even if you have called other numbers in the meantime.
<b>Extension</b>	For PBXs, describes the terminal (e.g. telephone) connected to the exchange. Each extension can access PBX services and communicate with other extensions.

<b>Extension number</b>	An extension is an internal number for a terminal or subsystem. In point-to-point ISDN accesses, the extension is usually a number from the extension numbers range assigned by the telephone provider. In point-to-multipoint connections, it can be the MSN or a part of the MSN.
<b>Extension numbers range</b>	(direct dialling range)
<b>Fall Back: Priority of the Internet provider entries</b>	The priority of the Internet provider entries is defined by the sequence in which they are entered in the list. The first entry of a DSL connection is the standard access. If a connection cannot be set up via the standard access after a predefined number of attempts, setup is attempted using the second entry then subsequent entries. If the final entry in the list does not enable a connection to be set up successfully, the operation is terminated until a new request is made. When fall back occurs and all other ISPs can only be reached by dialup connections, both B channels may be occupied. If channel bundling is used, you cannot be reached for the duration of this connection.
<b>Fax</b>	Abbreviation of telefax.
<b>FHSS, Frequency Hopping Spread Spectrum</b>	In a FHSS system, the frequency spread is achieved through constantly changing frequencies based on certain hopping patterns. In contrast to DSSS systems, hopping patterns are configured, not the frequency. The frequency changes very frequently in one second.
<b>File transfer</b>	Data transmission from one computer to another, e.g. based on the Eurofile transfer standard.
<b>Filter</b>	A filter comprises a number of criteria (e.g. protocol, port number, source and destination address). These criteria can be used to select a packet from the traffic flow. Such a packet can then be handled in a specific way. For this purpose, a certain action is associated with the filter, which creates a filter rule.
<b>Firewall</b>	Describes the whole range of mechanisms to protect the local network against external access. Your gateway provides protection mechanisms such as NAT, CLID, PAP/CHAP, access lists, etc.
<b>Firmware</b>	Software code containing all a device's functions. This code is written to a PROM (programmable read only memory) and is retained there, even after the device is switched off. Firmware can be updated by the user when a new software version is available (firmware upgrade).

<b>First-level domain</b>	Describes the last part of a name on the Internet. For www.t-com.de, the first-level domain is de and in this case stands for Germany.
<b>Flash key</b>	The flash key on a telephone is the R button. R stands for Rückfrage (inquiry). The key interrupts the line briefly to start certain functions such as inquiries via the PBX.
<b>Follow-me</b>	Performance feature of a PBX for diverting calls on the destination telephone.
<b>Fragmentation</b>	Process by which an IP datagram is divided into small parts in order to meet the requirements of a physical network. The reverse process is known as reassembly.
<b>Frame</b>	Unit of information sent via a data connection.
<b>Frame relay</b>	A packet switching method that contains smaller packets and fewer error checks than traditional packet switching methods such as X.25. Because of its properties, frame relay is used for fast WAN connections with a high density of traffic.
<b>Freecall</b>	Telephone number. Previous service 0130. These telephone numbers have been switched to freecall 0800 since January 1, 1998.
<b>FTP</b>	File Transfer Protocol
<b>Full duplex</b>	Operating mode in which both communication partners can communicate bidirectionally at the same time.
<b>Function keys</b>	Keys on the telephone that can be assigned telephone numbers or network functions.
<b>G.991.1</b>	Data transmission recommendation for HDSL
<b>G.991.2</b>	Data transmission recommendation for SHDSL
<b>G.992.1</b>	Data transmission recommendation for ADSL. See also G.992.1 Annex A and G.992.1 Annex B.
<b>G.992.1 Annex A</b>	Data transmission recommendation for ADSL: ITU-T G.992.1 Annex A
<b>G.992.1 Annex B</b>	Data transmission recommendation for ADSL: ITU-T G.992.1 Annex B
<b>G.SHDSL</b>	See G.991.2.

<b>Gateway</b>	Entrance and exit, transition point
<b>Half duplex</b>	Bidirectional communication method in which it is only possible to either send or receive at a particular point in time. Also known as Simplex.
<b>Handheld unit</b>	Mobile component of wireless telephone units. In the event of digital transmission, it is also possible to make telephone calls between the handheld units (DECT).
<b>Hands free</b>	If the telephone has a microphone and speaker installed, you can conduct a call without using your hands. As a result, other people in the room can also participate in the call.
<b>Hashing</b>	The process of deriving a number (hash) from a character string. A hash is generally far shorter than the text flow it was derived from. The hashing algorithm is designed so that there is a relatively low probability of generating a hash that is the same as another hash generated from a text sequence with a different meaning. Encryption methods use hashing to make sure that intruders cannot change transmitted messages.
<b>HDLC</b>	High Level Data Link Control
<b>HDSL</b>	High Bit Rate DSL
<b>HDSL2</b>	High Bit Rate DSL, version 2
<b>Headset</b>	Combination of headphones and microphone as a useful aid for anyone who makes a lot of telephone calls and wants to keep hands free for making notes.
<b>HMAC</b>	Hashed Message Authentication Code
<b>HMAC-MD5</b>	Hashed Message Authentication Code - uses Message Digest Algorithm Version 5.
<b>HMAC-SHA1</b>	Hashed Message Authentication Code - uses Secure Hash Algorithm Version 1.
<b>Holding a call</b>	A telephone call is put on hold without breaking the connection (inquiry/brokering).
<b>Holding in the PBX</b>	Both B channels of the ISDN connection are needed for the performance features "Call another person during a call" and "Speak alternately with two people" (brokering). As a result, you cannot be reached from outside or make external calls via your PBX's second

	B channel. With this setting, an external caller put on hold hears the PBX's on-hold music.
<b>Hook flash</b>	The use of the inquiry, brokerage and three-party conference special features in T-Net and certain performance features of some PBXs is only possible with the hook flash function (long flash) of the signal key on the telephone. On modern telephones, this key is indicated with an "R".
<b>Host name</b>	A name used in IP networks instead of the corresponding address. A host name consists of an ASCII string that uniquely identifies the host computer.
<b>HTTP</b>	HyperText Transfer Protocol
<b>Hub</b>	Network component used to connect several network components together to form a local network (star-shaped).
<b>IAE</b>	ISDN connection unit, ISDN connection socket.
<b>ICMP</b>	Internet Control Message Protocol
<b>ICV</b>	Integrity Check Value
<b>Identify malicious callers (intercept)</b>	You have to request this performance feature from T-Com. The company will provide you with further information on the procedure. If you enter code 77 during a call or after the caller has ended a call (you hear the engaged tone from the exchange), the caller's telephone number is stored in the exchange. ISDN telephones can also use separate functions for this performance feature. For more information on this function, please see your user's guide.
<b>IEEE</b>	The Institute of Electrical and Electronics Engineers (IEEE). A large, global association of engineers, which continuously works on standards in order to ensure different devices can work together.
<b>IETF</b>	Internet Engineering Task Force
<b>Index</b>	The index from 0...9 is fixed. Every external multiple subscriber number entered is assigned to an index. You need this index when configuring performance features using the telephone's codes, e.g. configuring "Call forwarding in the exchange" or "Define telephone number for the next external call".
<b>Infrastructure mode</b>	A network in infrastructure mode is a network that contains at least one access point as the central point of communication and control. In a network in infrastructure mode, all clients communicate with

each other via access points only. There is no direct communication between the individual clients. A network of this kind is also known as a BSS (basic service set), and a network that consists of several BSS is known as an ESS (extended service set). Most wireless networks operate in infrastructure mode to establish a connection with the wired network.

<b>Inquiry</b>	Makes it possible to put the first call on hold in the event of a call waiting and take a new call.
<b>Internal call tone</b>	Special signal on a PBX to differentiate between internal and external calls.
<b>Internal calls</b>	Free-of-charge connection between terminals in a PBX.
<b>Internal telephone numbers</b>	Your PBX has a fixed internal telephone number plan.
<b>Internet</b>	The Internet consists of a number of regional, local and university networks. The IP protocol is used for data transmission on the Internet.
<b>Internet time sharing</b>	Allows several users to surf the Internet simultaneously over an ISDN connection. The information is requested by the individual computers with a time delay.
<b>Intranet</b>	Local computer network within a company based on Internet technology providing the same Internet services, e.g. homepages and sending email.
<b>IP</b>	Internet Protocol
<b>IP Address</b>	The first part of the address by which a device is identified in an IP network, e.g. 192.168.1.254. See also netmask.
<b>IPComP</b>	IP payload compression
<b>IPCONFIG</b>	A tool used on Windows computers to check or change its own IP settings.
<b>IPoA</b>	IP over ATM
<b>ISDN</b>	Integrated Services Digital Network
<b>ISDN address</b>	The address of an ISDN device that consists of an ISDN number followed by further numbers that relate to a specific terminal, e.g. 47117.

<b>ISDN Basic Rate Interface</b>	ISDN subscriber connection. The Basic Rate Interface consists of two B channels and one D channel. In addition to the Basic Rate Interface, there is the Primary Rate Interface. The interface to the subscriber is provided by an So bus.
<b>ISDN card</b>	Adapter for connecting a PC to the ISDN Basic Rate Interface. From a technical perspective, we differentiate between active and passive cards. Active ISDN cards have their own processor, which handles communication operations independently of the PC processor and therefore does not require any resources. A passive ISDN card, on the other hand, uses the PC's resources.
<b>ISDN Login</b>	Function of your gateway. Your gateway can be configured and administrated remotely using ISDN Login. ISDN Login operates on gateways in the ex works state as soon they are connected to an ISDN connection and therefore reachable via an extension number.
<b>ISDN number</b>	The network address of the ISDN interface, e.g. 4711.
<b>ISDN router</b>	A router that does not have network connections but provides the same functions between PC, ISDN and the Internet.
<b>ISDN-BRI</b>	ISDN Basic Rate Interface
<b>ISDN-Dynamic</b>	This performance feature requires the installation of the T-ISDN Speedmanager. If you are surfing the Internet and use two B channels for downloading, you cannot be reached by telephone from outside. As a further call is signalled over the D channel, your PBX can, depending on the setting, specifically shut down a B channel so that you can take the call.
<b>ISDN-Internal/External</b>	Alternative name for the So bus.
<b>ISDN-PRI</b>	ISDN Primary Rate Interface
<b>ISO</b>	International Standardization Organization
<b>ISP</b>	Internet Service Provider
<b>ITU</b>	International Telecommunication Union
<b>Key Escrow</b>	Stored keys can be viewed by the government. The US government, in particular, requires key storages to prevent crimes being covered up through data encryption.
<b>LAN</b>	Local Area Network

<b>LAPB</b>	Link Access Procedure Balanced
<b>Last access</b>	The last access by T-Service is stored and displayed in the configuration.
<b>Layer 1</b>	Layer 1 of the ISO OSI Model, the bit transfer layer.
<b>LCD</b>	Liquid Crystal Display, a screen in which special liquid crystal is used to display information.
<b>LCP</b>	Link Control Protocol
<b>LDAP</b>	Lightweight Directory Access Protocol
<b>Lease Time</b>	The "Lease Time" is the time a computer keeps the IP address assigned to it without having to "talk" to the DHCP server.
<b>Leased Line</b>	Leased line
<b>LLC</b>	Link Layer Control
<b>Local exchange</b>	Switching node of a public local telephone network that supports the connection of end systems.
<b>Loudspeaker</b>	Function on telephones with an integrated loudspeaker: You can press a button so that the people present in the room can also hear the telephone call.
<b>MAC Address</b>	Every device in the network is defined by a fixed hardware address (MAC address). The network card of a device defines this internationally unique address.
<b>Man-in-the-Middle Attack</b>	Encryption using public keys requires the public keys to be exchanged first. During this exchange, the unprotected keys can be intercepted easily, making a "man-in-the-middle" attack possible. The attacker can set a key at an early stage so that a key known to the "man-in-the-middle" is used instead of the intended key from the real communication partner.
<b>MD5</b>	See HMAC-MD5
<b>MFC</b>	Multifrequency code dialling method
<b>MIB</b>	Management Information Base
<b>Microphone mute</b>	Switch for turning off the microphone. The subscriber on the telephone cannot hear the discussions in the room.

<b>Mixed mode</b>	The access point accepts WPA and WPA2.
<b>MLPPP</b>	Multilink PPP
<b>Modem</b>	Modulator/Demodulator
<b>MPDU</b>	MAC Protocol Data Unit - every information packet exchanged on the wireless medium includes management frames and fragmented MSDUs.
<b>MPPC</b>	Microsoft Point-to-Point Compression
<b>MPPE</b>	Microsoft Point-to-Point Encryption
<b>MSDU</b>	MAC Service Data Unit - a data packet that ignores fragmentation in the WLAN.
<b>MSN</b>	Multiple subscriber number
<b>MSSID</b>	See SSID
<b>MTU</b>	Maximum Transmission Unit
<b>Multicast</b>	A specific form of broadcast in which a message is simultaneously transmitted to a defined user group.
<b>Multiple subscriber number</b>	Multiple subscriber number
<b>Multiprotocol gateway</b>	A gateway that can route several protocols, e.g. IP, X.25, etc.
<b>Music on hold (MoH)</b>	Your PBX has two internal music-on-hold melodies. On delivery, internal melody 1 is active. You can choose between melody 1 or 2, or deactivate the music on hold.
<b>Music on hold (MoH)</b>	Performance feature of a PBX. During an inquiry or call forwarding, a melody is played that the waiting subscriber hears. On your PBX, you can choose between two internal melodies.
<b>MWI</b>	Transmission of a voice message from a mailbox e.g. T-NetBox or MailBox to a terminal. The receipt of the message on the terminal is signalled e.g. by a LED.
<b>NAT</b>	Network Address Translation
<b>NDIS WAN</b>	NDIS WAN is a Microsoft enhancement of this standards in relation to wide area networking (WAN). The NDIS WAN CAPI driver per-

	mits the use of the ISDN controller as a WAN card. The NDIS WAN driver enables the use of a DCN network on Windows. NDIS is the abbreviation for Network Device Interface Specification and is a standard for the connection of network cards (hardware) to network protocols (software).
<b>Net surfing</b>	A "journey of discovery" for interesting information in wide-ranging data networks such as T-Online. Known mainly from the Internet.
<b>NetBIOS</b>	Network Basic Input Output System
<b>Netmask</b>	The second part of an address in an IP network, used for identification of a device, e.g. 255.255.255.0. See also IP address.
<b>Network</b>	Your PBX has a DSL router so that one or more PCs can surf the Internet and download information.
<b>Network address</b>	A network address designates the address of a complete local network.
<b>Network termination (NTBA)</b>	In telecommunications, the network termination is the point at which access to a communication network is provided to the terminal.
<b>Netz-Direkt (keypad functions)</b>	You can use the "Netz-Direkt" (keypad) function (automatic external line access) to enter a key sequence from your ISDN or analogue telephone to use current T-ISDN functions. For more information on this, consult your T-Com client advisor and request the necessary codes (e.g. call forwarding in the exchange).
<b>NMS</b>	Network Management Station
<b>Notebook function</b>	During a telephone call, a telephone number can be entered in the telephone's buffer so that it can be dialled at a later point in time.
<b>NT</b>	Network Termination
<b>NTBA</b>	Network Termination for Basic Access
<b>NTP</b>	Network Time Protocol
<b>OAM</b>	Operation and Maintenance
<b>Offline</b>	Without connection. Connectionless operating state e.g. of the PCs.
<b>Online</b>	With connection. For example the state of a connection between a PC and data network or for data exchange between two PCs.
<b>Online banking</b>	Term for electronic banking e.g. using T-Online.

<b>Online Pass</b>	Part of the T-Com certification services for the Internet. Digital pass for the Internet. With the Online Pass, an Internet user can be authenticated as a customer in a company.
<b>Online services</b>	Services available around the clock via communication services such as T-Online and the Internet.
<b>OSI model</b>	OSI = Open Systems Interconnection
<b>OSPF</b>	Open Shortest Path First
<b>Outgoing extension number signal</b>	The "outgoing extension number signal" is intended for internal connections on the point-to-point to which an explicit extension number was not assigned. When an external call is made, the extension number entered under Outgoing Extension Number Signal is also transmitted.
<b>Outgoing telephone number</b>	If you have not suppressed transmission of your telephone number, and the telephone of the person you are calling supports the CLIP function, the person you are calling can see the telephone number of the connection you are calling from on their telephone display. This telephone number transmitted during an external call is called the outgoing telephone number.
<b>Packet switching</b>	Packet switching
<b>PAP</b>	Password Authentication Protocol
<b>Parking</b>	The call is held temporarily in the exchange. The main difference to on hold: The call is interrupted, the receiver can be replaced. Can be used for brokering. Possible in T-Net, T-ISDN and PBXs. The terminal must have MFC and the R key.
<b>PBX</b>	Private Branch Exchange
<b>PBX</b>	The features offered by a PBX are manufacturer-specific and enable operation of exchanges, free internal calls, callback on busy, and conference calls, among other things. PBXs are used e.g. for office communication (voice, text and data transfer).
<b>PBX</b>	Private Branch Exchange (PBX)
<b>PBX</b>	Private Automatic Branch Exchange
<b>PBX number</b>	A point-to-point ISDN access includes a PBX number and an extension numbers range. The PBX number is used to reach the PBX. A certain terminal of the PBX is then dialled via one of the extension

numbers of the extension numbers range.

<b>PCMCIA</b>	The PCMCIA (Personal Computer Memory Card International Association) is an industry association founded in 1989 that represents credit card-sized I/O cards such as WLAN cards.
<b>PDM</b>	Abbreviation for pulse dialling method. Conventional dialling procedure in the telephone network. Dialed numbers are represented by a defined number of dc impulses. The pulse dialling method is being replaced by the multifrequency code method (MFC) .
<b>PGP</b>	Pretty Good Privacy
<b>PH</b>	Packet handler
<b>Phone book</b>	The PBX has an internal phone book. You can store up to 300 telephone numbers and the associated names. You can access the PBX's phone book with the funkwerk devices (for example CS 410). You add entries to the phone book using the configuration interface.
<b>PIN</b>	Personal identification number
<b>Ping</b>	Packet Internet Groper
<b>PKCS</b>	Public Key Cryptography Standards
<b>Point-to-multipoint</b>	Point-to-multipoint connection
<b>Point-to-multipoint</b>	Basic connection in T-ISDN with three telephone numbers and two lines as standard. The ISDN terminals are connected directly on the network termination (NTBA) or ISDN internet connection of a PBX.
<b>Point-to-multipoint</b>	Point-to-multipoint
<b>Point-to-multipoint connection for the PBX</b>	You enter the multiple subscriber numbers received from T-Com with the order confirmation in the table fields defined for them in the configuration. As a rule, you receive three multiple subscriber numbers, but can apply for up to 10 telephone numbers for each connection. When you enter the telephone numbers, they are assigned to an "index" and also to a team. Note that initially, all telephone numbers are assigned to team 00. The internal telephone numbers 10, 11 and 20 are entered in team 00 ex works. External calls are therefore signalled with the internal telephone numbers 10, 11 and 20 for the connections entered in team 00.
<b>Point-to-point</b>	Point-to-point

<b>Point-to-point ISDN access</b>	Point-to-point
<b>Polling</b>	Fax machine function that "fetches" documents provided by other fax machines or fax databases.
<b>Port</b>	Input/output
<b>POTS</b>	Plain Old Telephone System
<b>PPP</b>	Point-to-Point Protocol
<b>PPP authentication</b>	Security mechanism. A method of authentication using passwords in PPP.
<b>PPPoA</b>	Point to Point Protocol over ATM
<b>PPPoE</b>	Point to Point Protocol over Ethernet
<b>PRI</b>	Primary Rate Interface
<b>Primary Rate Interface (PRI)</b>	ISDN subscriber connection. The PRI consists of one D channel and 30 B channels (in Europe). (In America: 23 B channels and one D channel.) There is also the ISDN Basic Rate Interface.
<b>Protocol</b>	Protocols are used to define the manner and means of information exchange between two systems. Protocols control and rule the course of data communication at various levels (decoding, addressing, network routing, control procedures, etc.).
<b>Proxy ARP</b>	ARP = Address Resolution Protocol
<b>PSN</b>	Packet Switched Network
<b>PSTN</b>	Public Switched Telephone Network
<b>PVID</b>	Port VLAN ID
<b>R key</b>	Telephones that have a R key (inquiry key) can also be connected to a PBX. In modern telephones, the R key triggers the hook flash function. This is required for use of performance features in T-Net such as inquiry/brokering and three-party conference.
<b>RADIUS</b>	Remote Authentication Dial In User Service
<b>RADSL</b>	Rate-Adaptive Digital Subscriber Line
<b>RAS</b>	Remote access service

<b>Real Time Clock (RTC)</b>	Hardware clock with buffer battery
<b>Receiver volume</b>	Function for controlling the volume in the telephone receiver.
<b>Reconnection on the bus (parking)</b>	For a point-to-multipoint connection, enables the terminal connection to be reconnected to another ISDN socket during the telephone call.
<b>Recording telephone calls</b>	Performance feature of an answering machine. Enables a conversation to be recorded during the telephone call.
<b>Remote</b>	Remote, as opposed to local.
<b>Remote access</b>	Opposite to local access, see Remote.
<b>Remote CAPI</b>	bintec's own interface for CAPI.
<b>Remote diagnosis/remote maintenance</b>	Some terminals and PBXs are supported and maintained by T-Service support offices over the telephone line, which often means a service engineer does not have to visit the site.
<b>Remote query</b>	Answering machine function. Involves listening to messages remotely, usually in connection with other options such as deleting messages or changing recorded messages.
<b>Repeater</b>	A device that transmits electrical signals from one cable connection to another without making routing decisions or carrying out packet filtering. See Bridge and Router.
<b>Reset</b>	Resetting the device enables you to return your system to a predefined initial state. This may be necessary if you have made incorrect configuration settings or the device is to be reprogrammed.
<b>RFC</b>	Specifications, proposals, ideas and guidelines relating to the Internet are published in the form of RFCs (request for comments).
<b>Rijndael (AES)</b>	Rijndael (AES) was selected as AES due to its fast key generation, low memory requirements and high level of security against attacks. For more information on AES, see <a href="http://csrc.nist.gov/encryption/aes">http://csrc.nist.gov/encryption/aes</a> .
<b>RIP</b>	Routing Information Protocol
<b>RipeMD 160</b>	RipeMD 160 is a cryptographic hash function with 160 bits. It is regarded as a secure replacement for MD5 and RipeMD.

<b>RJ45</b>	Plug or socket for maximum eight wires. Connection for digital terminals.
<b>Roaming</b>	In a multicell WLAN, clients can move freely and log off from one access point and log on to another when moving through cells, without the user noticing this. This is known as roaming.
<b>Room monitoring (acoustic)</b>	To use the "Room Monitoring" performance feature, the telephone must be activated in the room to be monitored by means of a code, and the receiver must be lifted or "Hands-free" switched on. If you replace the telephone receiver or turn off "Hands-free", room monitored ends and the performance feature is switched off.
<b>Room monitoring from external telephones</b>	This function can be used to monitor rooms from an external telephone.
<b>Room monitoring from internal telephones</b>	You can acoustically monitor a room from an internal telephone in your PBX. This is set up using the telephone procedures described in the user's guide. Please read the information on the described functions in the user's guide.
<b>Router</b>	A device that connects different networks at layer 3 of the OSI model and routes information from one network to the other.
<b>RSA</b>	The RSA algorithm (named after its inventors Rivest, Shamir, Adleman) is based on the problem of factoring large integers. It therefore takes a large amount of data processing capacity and time to derive a RSA key.
<b>RTSP</b>	Real-Time Streaming Protocol
<b>S2M interface</b>	See Primary Rate Interface.
<b>SAD</b>	The SAD (=Security Association Database) contains information on security agreements such as AH or ESP algorithms and keys, sequence numbers, protocol modes and SA life. For outgoing IPSec connections, an SPD entry refers to an entry in the SAD i.e. the SPD defines which SA is to be applied. For incoming IPSec connections, the SAD is queried to determine how the packet is to be processed.
<b>SDSL</b>	Symmetric Digital Subscriber Line
<b>Server</b>	A server offers services used by clients. Often refers to a certain computer in the LAN, e.g. DHCP server.

<b>ServerPass</b>	Part of the T-Com certification services for the Internet. Digital pass for a company. With the ServerPass, T-Com confirms that a server on the Internet belongs to a particular company and that this was verified through the presentation of an excerpt from the business register.
<b>Service 0190</b>	Additional voice service from T-Com for the commercial distribution of private information services. The T-Com services are limited to providing the technical infrastructure and collection processing for the information providers. The provided information is accessed using the telephone number 0190 which is uniform across Germany plus a 6-digit telephone number. Information offering: Entertainment, weather, finance, sport, health, support and service hotlines.
<b>Service 0700</b>	Additional voice service from T-Com. Allows calls to be received via a location-independent telephone number uniform across Germany, starting with the numbers 0700. Free-of-charge routing to national fixed network. Enhancement with Vanity possible.
<b>Service 0900</b>	Additional voice service from T-Com. Replaces Service 0190.
<b>Service number 0180</b>	Additional voice service 0180call from T-Com to receive calls from a location-dependent telephone number uniform across Germany, starting with the numbers 0180.
<b>Setup Tool</b>	Menu-driven tool for the configuration of your gateway. The Setup Tool can be used as soon as the gateway has been accessed (serial, ISDN Login, LAN).
<b>SHA1</b>	See HMAC-SHA.
<b>SHDSL</b>	Single-Pair High-Speed
<b>Short hold</b>	Is the defined amount of time after which a connection is cleared if no more data is transmitted. Short hold can be set to static (fixed amount of time) or dynamic (according to charging information).
<b>Signalling</b>	Simultaneous signalling: All assigned terminals are called simultaneously. If a telephone is busy, call waiting can be used.
<b>Simplex operation (ISDN subscribers only)</b>	This connection can only be used for an ISDN telephone (only T-Concept PX722 system telephones) with a simplex function. If you call an ISDN telephone with a simplex function, this automatically activates the Loudspeaker function so that a conversation can take place immediately. Please see the information on the telephone user's guide on the simplex operation function.

<b>SIP</b>	Session Initiation Protocol
<b>SMS</b>	Short Message Service
<b>SMS receipt</b>	<p>If you have connected an SMS-enabled terminal, you can decide whether SMS receipt is to be permitted for the connection. The ex works setting is no SMS receipt. To receive an SMS with your SMS-enabled terminal, you must register once with the T-Com SMS Service. One-time registration is free. You simply send an SMS containing ANMELD to the destination call number 8888. You then receive a free-of-charge confirmation of registration from the T-Com SMS Service. You can deregister your device or telephone number by sending an SMS containing ABMELD to the destination number 8888. Incoming SMS are then read out. Information on which telephones are SMS-enabled can be obtained from T-Punkt, our customer hotline 0800 330 1000 or on the Internet at <a href="http://www.t-com.de">http://www.t-com.de</a>.</p>
<b>SMS server telephone numbers</b>	<p>You can connect SMS-enabled telephones to your PBX and thus use the SMS performance feature in the T-Com fixed network. SMSs are forwarded to the recipient via the T-Com SMS server. To send an SMS with an SMS-enabled terminal, the telephone number 0193010 of the SMS server must be prefixed to the recipient number. This telephone number is already stored in your PBX, so manual input of the server telephone is not necessary and does not need to be sent from the telephone. To receive an SMS with your SMS-enabled fixed-network telephone, you must register once with the Deutsche Telekom SMS Service. Charges are made for sending SMSs. There are no costs for receiving SMSs.</p>
<b>SNMP</b>	Simple Network Management Protocol
<b>SNMP shell</b>	Input level for SNMP commands.
<b>So bus</b>	<p>All ISDN sockets and the NTBA of an ISDN point-to-multipoint connection. All So buses consist of a four-wire cable. The lines transmit digital ISDN signals. The So bus is terminated with a terminating resistor after the last ISDN socket. The So bus starts at the NTBA and can be up to 150 m long. Any ISDN devices can be operated on this bus. However, only two devices can use the So bus at any one time, as only two B channels are available.</p>
<b>So connection</b>	See ISDN Basic Rate Interface
<b>So interface</b>	<p>Internationally standardised interface for ISDN systems. This interface is provided on the network side by the NTBA . On the user</p>

side, the interface is intended for connecting a PBX (point-to-point connection) and for connecting up to eight ISDN terminals (point-to-multipoint connection).

**SOHO**

Small Offices and Home Offices

**SPD**

The SPD (=Security Policy Database) defines the security services available for IP traffic. These security services are dependent on parameters such as the source and destination of the packet etc.

**Special features**

Performance features of the T-Net and T-ISDN networks such as display of the caller's number, callback on busy, call forwarding, changeable connection lock, changeable telephone number lock, connection without dialling and transmission of charge information. Availability depends on the standard of the connected terminals.

**Special-features connection**

T-ISDN Basic Rate Interface with an extensive range of services: call waiting, call forwarding, third-party conference, display of call costs at the end of a connection, inquiry/brokering, telephone number transmission. In the special-features connection, three multiple subscriber numbers are included as standard.

**Specify own telephone number for next call**

If you want to make a business call late in the evening from your private sphere - say the living room - for example, you can define your business telephone number as the outgoing multiple subscriber number (MSN) for this call. The advantages of this are that the costs for the connection are recorded for the selected MSN and the person you are calling can identify you by the transferred MSN. Before you call an external number, you can define which of your telephone numbers is to be sent to the exchange and called party. You make the selection using the telephone number index.

**Speeddial number**

A speeddial index (000...299) can be assigned to each of the 300 telephone numbers in the telephone book. You then dial this speeddial index instead of the long telephone number. Note that telephone numbers dialled using the speeddial function must also comply with the dialrule.

**SPID**

Service Profile Identifier

**Splitter**

The splitter separates data and voice signals on the DSL connection.

**Spoofing**

Technique for reducing data traffic (and thus saving costs), especially in WANs.

<b>SSID</b>	The Service Set Identifier (SSID) or Network Name refers to the wireless network code based on IEEE 802.11.
<b>SSL</b>	Secure Sockets Layer A technology, now standard, developed by Netscape, which is generally used to secure HTTP traffic between a web browser and a web server.
<b>STAC</b>	Data compression procedure.
<b>Standard connection</b>	T-ISDN Basic Rate Interface with the performance features Inquiry/Brokering and Telephone Number Transmission. The standard connection contains three multiple subscriber numbers.
<b>Static IP address</b>	A fixed IP address, in contrast to a dynamic IP address.
<b>Station guarding</b>	Deactivation of acoustic call signalling: do not disturb.
<b>Subaddressing</b>	In addition to the transmission of ISDN telephone numbers, additional information in the form of a subaddress can be transmitted from the caller to the called party over the D channel when the connection is set up. Addressing that goes beyond the pure MSN, which can be used e.g. specifically to locate several ISDN terminals that can be reached on one telephone number for a particular service. In the called terminal - e.g. a PC - various applications can also be addressed and in some cases executed. Costs are charged for the performance feature, and it must be requested separately from the network operator.
<b>Subnet</b>	A network scheme that divides individual logical networks into smaller physical units to simplify routing.
<b>Subnet mask</b>	A method of splitting several IP networks into a series of subgroups or subnetworks. The mask is a binary pattern that must match the IP addresses in the network. 255.255.255.0 is the default subnet mask. In this case, 254 different IP addresses can occur in a subnet, from x.x.x.1 to x.x.x.254.
<b>Subscriber Name</b>	To distinguish between connections more easily, you can assign a subscriber name for each internal subscriber.
<b>Suppress A-telephone number (CLIR)</b>	CLIP/CLIR: Calling line identification presentation/calling line identification restriction
<b>Suppress B telephone number (COLR)</b>	COLP/COLR: Connected line identification presentation/connected line identification restriction = Activate/suppress transmission of called party's telephone number to caller. This performance feature

	suppresses the display of the called subscriber's telephone number. If display of the B telephone number is suppressed, your telephone number is not transmitted to the caller when you take a call.
<b>Suppress own telephone number</b>	Temporary deactivation of the transmission of your own telephone number.
<b>Suppression of the telephone number</b>	Performance feature of a PBX. The display of the telephone number can be deactivated on an individual basis.
<b>Switch</b>	LAN switches are network components with a similar function to bridges or even gateways. They switch data packets between the input and output port. In contrast to bridges, switches have several input and output ports. This increases the bandwidth in the network. Switches can also be used for conversion between networks with different speeds (e.g. 100-mbps and 10-mbps networks).
<b>Switchable dialling method</b>	Option of switching between the pulse dialling method and MFC method by means of a switch or key input on the terminal, such as the telephone or fax machine.
<b>Synchronous</b>	Transmission process in which the sender and receiver operate with exactly the same clock signals – in contrast to asynchronous transmission. Spaces are bridged by a stop code.
<b>Syslog</b>	Syslog is used as the de facto standard for transmitting log messages in an IP network. Syslog messages are sent as unencrypted text messages over the UDP port 514 and collected centrally. They are usually used to monitor computer systems.
<b>System telephones</b>	Telephone that belongs to a modern PBX, which - depending on the PBX - has a number of special features and keys, e.g. the T-Concept PX722.
<b>T-DSL</b>	Product name used by Deutsche Telekom AG for its DSL services and products.
<b>T-Fax</b>	Product name for T-Com fax machines.
<b>T-ISDN</b>	Telephony, faxing, data transfer and online services from one network and a single connection: T-ISDN offers exciting services with numerous benefits, for example a point-to-multipoint connection - the ideal solution for families or small businesses. This connection option, which can be used with the existing telephone cable, costs less than two telephone connections but offers far greater quality and ease of use: Two independent lines, so that you can still make a

phone call, receive a fax, or surf the Internet when another family member is making a long call on the other line. Three or more telephone numbers, which you can assign individually to your devices and distribute differently if needed through simple programming steps. Most ISDN telephones can "manage" several telephone numbers, so you can set up a "central" telephone in your household, for example, to allow you to react to calls to all ISDN telephone numbers with this telephone. The fax and telephone in your home office can also each be assigned a number, as can your son or daughter's phone. As a result, each family member can be contacted with a separate number, helping to eliminate "day-to-day friction"! And as far as the costs are concerned, on request you can have your bill broken down to show which units have been charged for the individual ISDN telephone numbers.

<b>T-Net</b>	The digital telephone network of T-Com for connecting analogue terminals.
<b>T-NetBox</b>	The answering machine in T-Net and T-ISDN. The T-NetBox can store up to 30 messages.
<b>T-NetBox telephone number</b>	Enter the current T-NetBox telephone number here if it differs from the 08003302424 entered ex works. As soon as your T-NetBox receives a voice or fax message, notification is sent to your PBX.
<b>T-Online</b>	Umbrella term the T-Com online platform. Offers services such as e-mail and Internet access.
<b>T-Online software</b>	T-Com software decoder for all conventional computer systems that enables access to T-Online. Supports all functions such as KIT, e-mail and the Internet with a browser. T-Online users receive this software free of charge.
<b>T-Service</b>	T-Service carries out all installation work and configurations for the PBX at the customer's request. The service ensures optimum voice and data transmission at all times thanks to maintenance work.
<b>T-Service access</b>	T-Service access enables you to have your PBX configured by T-Service. Give T-Service a call! Get advice and provide information on your configuration requirements. T-Service will then configure your PBX remotely without you having to do anything.
<b>TA</b>	Terminal Adapter
<b>TAPI</b>	Telephony Application Program Interface

<b>TAPI configuration</b>	You can use the TAPI configuration to modify the TAPI driver in line with the program that uses this driver. You can check which MSN is to be assigned to a terminal, define a line name, and configure the dialling parameters. First configure your PBX. You must then configure the TAPI interface. Use the "TAPI Configuration" program.
<b>TCP</b>	Transmission Control Protocol
<b>TCP/IP</b>	Transmission Control Protocol/Internet Protocol
<b>TCU</b>	Telecommunication connection unit
<b>TE</b>	Terminal equipment
<b>TEI</b>	Terminal Endpoint Identifier
<b>Telefax</b>	Term that describes the remote copying for transmitting texts, graphics and documents true to the original over the telephone network.
<b>Telematics</b>	Telematics is a combination of telecommunication and computer technology and describes data communication between systems and devices.
<b>Telnet</b>	Protocol from the TCP/IP protocol family. Telnet enables communication with a remote device in the network.
<b>Terminal adapter</b>	Device for interface adaptation. It enables different equipment to be connected to T-ISDN. The terminal adapter a/b is used to connect analogue terminals to the So interface of the ISDN Basic Rate Interface. Existing analogue terminals can still be operated with tone dialling.
<b>TFTP</b>	Trivial File Transfer Protocol
<b>Tiger 192</b>	Tiger 192 is a relatively new and very fast hash algorithm.
<b>TLS</b>	Transport Layer Security
<b>Tone dialling</b>	Multifrequency code method (MFC)
<b>Transfer internal code</b>	If you receive an internal call, e.g. from the subscriber with internal telephone number 22, while you are away, this subscriber's internal telephone number is stored in your telephone's caller list. However, because your connection is automatically set to Automatic Outside Line as a result of the ex works settings, you would first have to dial ** for a callback in order to obtain the internal dialling tone, and then

22. If "Transfer Internal Code" is active, \*\* is placed before the 22 and the callback can be made directly from the caller list.

<b>Transmission speed</b>	The number of bits per second transmitted in T-Net or T-ISDN from the PC or fax machine. Fax machines achieve up to 14.4 kbps, modems 56 kbps. In the ISDN, data and fax exchange with 64 kbps is possible. With T-DSL, up to 8 mbps can be received and up to 768 kbps sent.
<b>TSD</b>	Terminal Selection Digit
<b>TTL</b>	TTL stands for Time to Live and describes the time during which a data packet is sent between the individual servers before it is discarded.
<b>Twofish</b>	Twofish was a possible candidate for the AES (Advanced Encryption Standard). It is regarded as just as secure as Rijndael (AES), but is slower.
<b>U-ADSL</b>	Universal Asymmetric Digital Subscriber Line
<b>UDP</b>	User Datagram Protocol
<b>Update</b>	Update to a software program (PBX firmware). An update is the updated version of an existing software product, and is indicated by a new version number.
<b>Upload</b>	Data transfer during online connections, where files are transferred from the user's PC to another PC or to a data network server.
<b>UPnP</b>	Universal Plug and Play
<b>Upstream</b>	Data transmission rate from the client to the ISP.
<b>URL</b>	Universal/Uniform Resource Locator
<b>USB</b>	Universal Serial Bus
<b>User guidance</b>	Electronic user guidance that takes the user through the required functions of a terminal such as a telephone, answering machine or fax machine step by step (menu-guided operation).
<b>UUS1 (User to User Signalling 1)</b>	This function is only possible for system telephones and ISDN telephones.
<b>V.11</b>	ITU-T recommendation for balanced dual-current interface lines (up to 10 mbps).

<b>V.24</b>	CCITT and ITU-T recommendation that defines the interface between a PC or terminal as Data Terminal Equipment (DTE) and a modem as Data Circuit-terminating Equipment (DCE).
<b>V.28</b>	ITU-T recommendation for unbalanced dual-current interface line.
<b>V.35</b>	ITU-T recommendation for data transmission at 48kbps in the range from 60 to 108kHz.
<b>V.36</b>	Modem for V.35.
<b>V.42bis</b>	Data compression procedure.
<b>V.90</b>	ITU standard for 56 kbps analogue modems. In contrast to older V.34 modems, data is sent in digital form to the client when the V.90 standard is used and does not need to be first converted from digital to analogue on one side of the modem (provider), as was the case with V.34 and earlier modems. This makes higher transmission rates possible. A maximum speed of 56 kbps can be achieved only under optimum conditions.
<b>Vanity</b>	Letter dialling
<b>VDSL</b>	Very high bit rate digital subscriber line (also called VADSL or BD-SL).
<b>VID</b>	VLAN ID
<b>VJHC</b>	Van Jacobson Header Compression
<b>VLAN</b>	Virtual LAN
<b>VoIP</b>	Voice over IP
<b>VPN</b>	Virtual Private Network
<b>VSS</b>	Virtual Service Set
<b>WAN</b>	Wide Area Network
<b>WAN interface</b>	WAN interface
<b>WAN partner</b>	Remote station that is reached over a WAN, e.g. ISDN.
<b>Web server</b>	Server that provides documents in HTML format for access over the Internet (WWW).
<b>Webmail</b>	T-Online service with which e-mails can be sent and received world-

wide on the Internet by means of a browser.

<b>WEP</b>	Wired Equivalent Privacy
<b>Western plug</b>	(also known as RJ-45 plug) Plug used for ISDN terminals with eight contacts. Developed by the US telephone company Western Bell. Western plugs for analogue telephones have four or six contacts.
<b>WINIPCFG</b>	A graphical tool on Windows 95, 98 and Millennium that uses Win32 API to view and configure the IP address configuration of computers.
<b>WLAN</b>	A group of computers wirelessly connected to each other (wireless LAN).
<b>WMM</b>	Wireless multimedia
<b>WPA</b>	Wi-Fi-protected access
<b>WPA Enterprise</b>	Concentrates primarily on the needs of companies and offers secure encryption and authentication. Uses 802.1x and the Extensible Authentication Protocol (EAP) and thus offers an effective means of user authentication.
<b>WPA-PSK</b>	Intended for private users or small businesses that do not run a central authentication server. PSK stands for Pre-Shared Key and means that AP and client use a fixed character string (8 to 63 characters) known to all subscribers as the basis for key calculation for wireless traffic.
<b>WWW</b>	World Wide Web
<b>X.21</b>	The X.21 recommendation defines the physical interface between two network components in packet-switched data networks (e.g. Datex-P).
<b>X.21bis</b>	The X.21bis recommendation defines the DTE/DCE interface to V-series synchronous modems.
<b>X.25</b>	An internationally agreed standard protocol that defines the interface between network components and a packet-switched data network.
<b>X.31</b>	ITU-T recommendation on the integration of X.25-compatible DTEs in ISDN (D channel).
<b>X.500</b>	ITU-T standards that cover user directory services, see LDAP. Example: The phone book is the directory in which you find people on

the basis of their name (agreement with the telephone directory). The Internet supports several databases with information on users, such as e-mail addresses, telephone numbers and postal addresses. You can search these databases to obtain information about individuals.

**X.509**

ITU-T standards that define the format of the certificates and certificate queries and their use.

## Index

294 , 316

Modem Init Sequence 147

#

# 114 , 510 , 519

#1, #2, #3 141

### A

Access 448

ACCESS\_ACCEPT 124

ACCESS\_REJECT 124

ACCESS\_REQUEST 124

ACCOUNTING\_START 124

ACCOUNTING\_STOP 124

ACL Mode 205

Action 212 , 212 , 374 , 443 , 491 ,  
510 , 517

Action if license not registered 440

Action if server not reachable 440

Active IPsec Tunnels 99

Active Sessions (SIF, RTP, etc...) 99

Additional Wire Pairs 167

Address 381

Address Mode 177 , 300

Address Range 381

Address Type 381

Administrative Status 322 , 388 , 398  
, 405 , 406

ADSL Chipset 163

ADSL Logic 491

ADSL Mode 164

ADSL SyncType 164

Advertisement send interval 481

Alert Service 500

Alive Check 127 , 336 , 341 , 511

All Multicast Groups 242

Allow deleting/editing all routing  
entries 222

Allowed Addresses 205

Allowed Hotspot Client 475

Always on 268 , 273 , 277 , 285 , 289  
, 354 , 361

Always on 263

Answer to client request 468

Antenna Diversity 187

AP MAC Address 212 , 525 , 526

APN (Access Point Name ) 147 , 173

Apply QoS 374

ARP Processing 202

Associated Line 411

ATM Interface 167

ATM PVC 273

ATM Service Category 303

Authentication 266 , 270 , 275 , 280 ,  
287 , 291 , 356 , 364

Authentication for PPP Dialin 133

Authentication ID 393 , 398

Authentication Method 332 , 511

Authentication Password 464

Authentication Type 125 , 130

Autoconfiguration on Bootup 153

Autosave Mode 141

AUX Port Status 147

### B

Back Route Verify 221 , 325

Based on Ethernet Interface 177

Beacon Period 193

Bearer Service 161

Blacklisted 445

Block after connection failure for 266 ,  
270 , 275 , 280 , 287 , 291 , 356 ,  
364

Block Time 131 , 336

blocked 260

BOSS 491

BOSS Version 99

Bundle Type 159

Burst size 257

Bytes 511

### C

- CA Certificate 137
  - CA Certificates 336
  - Cache Hitrate (%) 427
  - Cache Hits 427
  - Cache Size 420
  - Call Number 283 , 294
  - Callback 366
  - Callback Mode 280 , 291
  - Called Address 405 , 408
  - Called Address Translation 406 , 407
  - Called Line 408
  - Calling Address 405
  - Calling Address Translation 408
  - Calling Line 405 , 408
  - CAPI Server TCP Port 448
  - Category 443
  - Certificate is CA Certificate 135
  - Certificate Request Description 137
  - Certificate Revocation List (CRL)
    - Checking 135
  - Channel 187 , 212 , 515
  - Channel Bundling 282
  - Channel Selection 156
  - Channel Sweep 195
  - Charge 515 , 516
  - Class ID 252 , 257
  - Class map 252
  - Client Link Description 212 , 525
  - Client MAC Address 522
  - Client mode 187
  - Client Type 301
  - Clock Mode 156
  - Clock Rate 167
  - Code 383
  - Codec Proposal Sequence 395 , 402
  - Comfort Noise Generation (CNG) 396 , 403
  - Common Name 139
  - Compression 119 , 311 , 314
  - Configuration Encryption 491
  - Configuration Interface 114
  - Configured Speed / Mode 150
  - Confirm Admin Password 104
  - Connected 212
  - Connection Idle Timeout 263 , 268 , 273 , 277 , 285 , 289 , 354 , 361
  - Connection State 249
  - Connection Type 170 , 277 , 354
  - Consider 238
  - Contact 102
  - Continuity Check (CC) End-to-End 307
  - Continuity Check (CC) Segment 307
  - Control Mode 254 , 318
  - Controlled Interfaces 455
  - Corrupt Frames Received 519
  - COS filter (802.1p/Layer 2) 249
  - Country 139
  - CPU Usage 99
  - Create NAT Policy 265 , 269 , 274 , 278 , 286 , 290 , 355 , 362
  - CTS frames received in response to an RTS 519
  - Current File Name in Flash 491
  - Current Local Time 106
  - Current Speed / Mode 150
  - Current Wildcard MAC Address 528
  - Custom 139
  - Custom Time Slots 156
  - CW Max 193
  - CW Max. 195
  - CW Min 193
  - CW Min. 195
- D**
- D Channel Mode 328
  - Data Packets Sequence Numbers 352
  - Data Rate mbps 521 , 522 , 523 , 524 , 525 , 526
  - Date 509
  - Day 443
  - Default Drop Extension 414
  - Default Ethernet for PPPoE Interfaces 300
  - Default Route 265 , 269 , 274 , 278 , 286 , 290 , 310 , 313 , 316 , 323 , 355 , 362 , 369

- Default Route Distribution 234
  - Delete complete IPSec configuration 346
  - Description 135, 145, 159, 224, 249, 252, 257, 263, 268, 273, 277, 285, 289, 298, 310, 313, 316, 322, 332, 339, 344, 350, 354, 361, 369, 380, 381, 383, 383, 386, 388, 393, 398, 405, 408, 411, 413, 438, 450, 510, 511, 517, 519
  - Destination 374
  - Destination File Name 491
  - Destination Interface 242
  - Destination IP Address 459, 511
  - Destination IP Address / Netmask 226, 249
  - Destination IP Address/Netmask 217
  - Destination Port 218
  - Destination Port Range 383
  - Destination Port/Range 226, 249
  - Details 510
  - Detection Mode 170
  - Device Mode 167
  - DH Group 332
  - DHCP Broadcast flag 178
  - DHCP Hostname 178, 300
  - DHCP MAC Address 178, 300
  - DHCP Options 436
  - Dial Latency 414
  - Dialling Number 461
  - Direction 233, 252, 411, 515, 516
  - Distribution Mode 238
  - Distribution Policy 238
  - Distribution Ratio 239
  - DNS Hostname 422
  - DNS Negotiation 266, 270, 275, 283, 287, 291, 358, 365
  - DNS Requests 427
  - DNS Server 424
  - DNS Server Configuration 419
  - DNS Test 488
  - Domain 424
  - Domain at the HotSpot Server 473
  - Domain Name 419
  - dormant 260
  - down 260
  - Downstream 164
  - Drop non-members 182
  - Drop untagged frames 182
  - Dropped 514, 530
  - Dropping algorithm 259
  - DSA Key Status 121
  - DSCP / TOS Value 218
  - DSCP/TOS filter (Layer 3) 249
  - DSP Module 100
  - DTIM Period 193
  - Duplicate received MSDUs 519
  - Duration 515, 516
  - Dynamic RADIUS Authentication 347
- ## E
- E-mail 139
  - EAP Preauthentication 203
  - Echo Cancellation 396, 403
  - ED Threshold 193, 195
  - Enable authentication 481
  - Enable BRRP 485
  - Enable Discovery Server 466
  - Enable IPSec 346
  - Enable server 448
  - Enable update 431
  - Enable VLAN 183
  - Encapsulation 298
  - Encrypted 514
  - Encryption 131, 280, 356, 364
  - Encryption Algorithms 120
  - End-to-End Pending Requests 306
  - End-to-End Send Interval 306
  - Entries 283, 294
  - Entry active 125, 130
  - Errors 511, 514
  - Ethernet Interface 480
  - Ethernet Interface Selection 150
  - Expire Time 393, 398
  - Extended Route 217
  - Extension / User Name 393
  - External Address 411

External Filename 142 , 143  
External Port 390

**F**

Facility 496  
Fallback interface to get DNS server  
420  
Faxheader 448  
File Encoding 142 , 143  
Filename 491  
Filter 252  
Filter Rules 377  
Filtered Input Interface(s) 440  
Firewall Status 378  
First Timeserver 107  
Force certificate to be trusted 135  
Forward 424  
Forward to 424  
Forwarded Requests 427  
Fragmentation Threshold 193 , 195  
Frame transmissions without ACK re-  
ceived 519

**G**

Garbage Collection Timer 236  
Gateway 217 , 436 , 464  
Generate Private Key 137  
GPRS/UMTS Interface 285  
GRE Window Adaption 367  
GRE Window Size 367  
Group Description 125 , 238  
Group ID 455

**H**

Hashing Algorithms 120  
Hello Interval 352  
High Priority Class 252  
Hold Down Timer 236  
Host 424  
Host for multiple locations 476  
Host Name 431  
HTTP 117  
HTTPS 117

HTTPS TCP Port 429

**I**

IEEE 802.11d Compliance 187  
IGMP Proxy 246  
IGMP State Limit 244 , 247  
IGMP Status 247  
Ignore Certificate Request Payloads  
348  
IKE (Phase1) 513  
IKE (Phase1) SAs 511  
Include certificates and keys 491  
Incoming ISDN Number 328 , 366  
Incoming Number 461  
Incoming Service Type 147 , 173  
Interface 116 , 118 , 170 , 182 , 217 ,  
221 , 224 , 233 , 239 , 244 , 254 ,  
318 , 377 , 424 , 431 , 435 , 457 ,  
464 , 473 , 515 , 516 , 529 , 530  
Interface Action 457  
Interface Description 114  
Interface is UPnP controlled 468  
Interface Leads 170  
Interface Mode 177  
Interface Type 170 , 393  
Interfaces 252  
Internal IP Address 390  
Internal Port 390  
Internal Timeserver 107  
Interval 455 , 459  
Intra-cell Repeating 202  
Invalid DNS Packets 427  
IP Accounting 498  
IP accounting message format 499  
IP Address 233 , 300 , 301 , 422 , 438  
, 464 , 480 , 496 , 506 , 521 , 522 ,  
528 , 529  
IP Address Assignment 323  
IP Address Mode 265 , 269 , 274 ,  
278 , 286 , 290 , 355 , 362  
IP Address Owner 477  
IP Address Range 435  
IP address to use for DNS/WINS server  
assignment 420

IP Address/Netmask 177  
 IP Assignment Pool 278 , 290 , 323  
 IP Assignment Pool (IPCP) 355 , 362  
 IP Compression 341  
 IP Pool Name 296 , 345  
 IP Pool Range 296 , 345  
 IPSec (Phase2) 513  
 IPSec (Phase2) SAs 511  
 IPSec Debug Level 346  
 IPSec Tunnels 513  
 ISDN Configuration Type 153  
 ISDN Line Framing 156  
 ISDN Login 117  
 ISDN Mode 413  
 ISDN Port 161  
 ISDN Switch Type 153 , 156  
 ISDN Theft Protection Service 461  
 ISDN Timeserver 107  
 ISDN Usage External 99  
 ISDN Usage Internal 99

**K**

Key Value 369

**L**

Language for login window 473 , 476  
 Last Member Query Interval 244  
 Last Write Result 464  
 Layer 2 Mode 170  
 Layer 4 Protocol 218  
 LCP Alive Check 266 , 270 , 275 ,  
 287 , 291 , 311 , 314 , 316 , 356 ,  
 364  
 LDAP URL Path 145  
 Lease Time 436  
 Level 496 , 509  
 Licence Key 111 , 441  
 Licence Serial Number 111  
 Licence Status 441  
 License valid until 441  
 Lifetime 332 , 339  
 Line Speed 147 , 170  
 Line Speed Interval 167

Local Address 411  
 Local Certificate 332 , 392 , 429  
 Local Certificate Description 142 ,  
 143  
 Local GRE IP Address 369  
 Local Hostname 350  
 Local ID 511  
 Local ID Type 332  
 Local ID Value 332  
 Local IP Address 217 , 265 , 269 ,  
 274 , 278 , 286 , 290 , 310 , 313 ,  
 316 , 323 , 352 , 355 , 362 , 369 ,  
 511  
 Local Port 511  
 Local PPTP IP Address 270  
 Location 102 , 139  
 Logged Actions 378  
 Logging Level 119  
 Logon 529  
 Long Retry Limit 193 , 195  
 Loopback End-to-End 306  
 Loopback Segment 306  
 Low Latency Transmission 388

**M**

MAC Address 177 , 300 , 438 , 464 ,  
 521 , 527 , 528  
 Mail Exchanger (MX) 432  
 Management VID 183  
 Master down trials 481  
 Matching String 502  
 Max Receive Lifetime 193  
 Max Transmit MSDU Lifetime 193  
 Max. Clients 202  
 Max. queue size 259  
 Max. Receive Lifetime 195  
 Max. Time Period for Active Scan 195  
 Max. Time Period for Passive Scan  
 195  
 Max. Transmission Rate 191  
 Max. Transmit MSDU Lifetime 195  
 Maximum Burst Size (MBS) 303  
 Maximum Groups 247  
 Maximum Message Level of Syslog

- Entries 102
  - Maximum Messages per Minute 500
  - Maximum Number of Accounting Log Entries 102
  - Maximum Number of Dialup Retries 266 , 270 , 275 , 280 , 287 , 291
  - Maximum Number of History Entries 440
  - Maximum Number of Syslog Entries 102
  - Maximum Response Time 244
  - Maximum Retries 352
  - Maximum Sources 247
  - Maximum Time between Retries 352
  - Maximum TTL for Negative Cache Entries 420
  - Maximum TTL for Positive Cache Entries 420
  - Maximum Upload Speed 254 , 257 , 318
  - Maximum upstream bandwidth 164 mbps 518
  - Media Gateway Status 414
  - Media Stream Termination 414
  - Members 380 , 386
  - Memory Usage 99
  - Message 509
  - Message Compression 502
  - Message Timeout 502
  - Messages 511
  - Metric 217
  - Metric Offset for Active Interfaces 233
  - Metric Offset for Inactive Interfaces 233
  - Min. queue size 259
  - Min. Time Period for Active Scan 195
  - Min. Time Period for Passive Scan 195
  - Minimum Time between Retries 352
  - Mobile phone providers 173
  - Mode 137 , 212 , 218 , 221 , 244 , 247 , 283 , 294 , 328 , 332 , 344
  - Mode / Bridge Group 114
  - Modem Escape Character 147
  - Modem Init Sequence 173
  - Modem Status 173
  - Monitored Interface 457
  - Monitored Interfaces 461 , 507
  - Monitored IP Address 455
  - Monitoring Mode 484
  - MSDUs that could not be transmitted 519
  - MSN 161
  - MSN Recognition 161
  - MTU 369 , 511
  - Multicast Group Address 242
  - Multicast MSDUs received successfully 519
  - Multicast MSDUs transmitted successfully 519
- N**
- Name 344
  - NAT active 223
  - NAT Detection 511
  - NAT method 224
  - NAT Traversal 336
  - Negative Cache 420
  - Negotiation Type 511
  - Netmask 217 , 233 , 300 , 301 , 355 , 464
  - Network Name (SSID) 202 , 210 , 212
  - Network Quality 173
  - Network Type 217
  - New Destination IP Address/Netmask 228
  - New Destination Port 228
  - New File Name 491
  - New Source Port 228
  - Nitro Mode 191
  - Nitro XM 191
  - No. 221 , 509 , 517
  - Node Name 464
  - Noise dBm 521 , 522 , 523 , 524 , 525 , 526
  - Number of Admitted Connections 324
  - Number of B Channels 282
  - Number of Dialling Retries 462

Number of Messages 502

## O

OAM Flow Level 305  
 Operation Band 187  
 Operation Mode 187  
 Organisation 139  
 Organisational Unit 139  
 OSPF Mode 283 , 311 , 314 , 317 ,  
 358 , 365  
 Other Inactivity 379  
 Outbound Line 406  
 Outbound Proxy 398  
 Outgoing Interface 257  
 Outgoing ISDN Number 328 , 366  
 Outgoing Number 461  
 Overbooking allowed 257

## P

Packet Size 396 , 403  
 Packets 511  
 Passed 514  
 Password 137 , 142 , 143 , 263 , 268  
 , 273 , 277 , 285 , 289 , 344 , 350 ,  
 354 , 361 , 393 , 398 , 431 , 448 ,  
 491 , 501 , 507  
 Peak Cell Rate (PCR) 303  
 Peer Address 322  
 Peer ID 322  
 Phase 1 Profile 324  
 Phase 2 Profile 324  
 Physical Address 529  
 Physical Connection 163  
 Physical Interface - Interface Specifics -  
 Link 100  
 Ping 117  
 Ping Test 487  
 Poisoned Reverse 234  
 Policy 127 , 131  
 Pool Usage 435  
 POP3 Server 501  
 POP3 Timeout 501  
 Port 393 , 433 , 527 , 528

Port Name 153 , 156  
 Port Usage 153 , 156 , 283 , 294  
 Portforwardings 223  
 Positive Cache 420  
 PPPoE Ethernet Interface 263  
 PPPoE Interfaces for Multilink 263  
 PPPoE Mode 263  
 PPTP Address Mode 270  
 PPTP Inactivity 379  
 PPTP Interface 268  
 PPTP Mode 361  
 PPTP Passthrough 223  
 Pre-empt mode (back into master  
 status) 481  
 Preferred Network Type 173  
 Preshared Key 203 , 207 , 210 , 322  
 Primary 419 , 419  
 Primary DHCP Server 439  
 Primary IP Address 477  
 Priorisation algorithm 254  
 Prioritize TCP ACK Packets 266 , 270  
 , 275 , 287 , 291 , 301 , 311 , 314 ,  
 316 , 356 , 364  
 Priority 125 , 130 , 257 , 406  
 Priority queue 257  
 Privacy 207  
 Propagate PMTU 341  
 Proposals 332 , 339  
 Protocol 226 , 249 , 383 , 388 , 390 ,  
 393 , 398 , 433 , 496  
 Protocol Header Size below Layer 3  
 254  
 Provider 298 , 431  
 Provider Name 433  
 Proxy ARP 178 , 325  
 Proxy ARP Mode 283 , 294 , 311 ,  
 314 , 317 , 358 , 365  
 Proxy Interface 246  
 PVID 182

## Q

QoS Queue 530  
 Query Interval 244  
 Queued 530

Queues/Policies 254

## R

RA Encrypt Certificate 137  
 RA Sign Certificate 137  
 RADIUS Dialout 127  
 RADIUS Secret 125  
 RADIUS Server Group ID 344  
 Rate 522, 524, 526  
 Real Time Jitter Control 254  
 Realm 398  
 Receive Version 230  
 Received DNS Packets 427  
 Received MPDUs that couldn't be de-  
 crypted 519  
 Recent System Logs 100  
 Recipient 502  
 Region 213  
 Registrar 398  
 Registration 393, 398  
 Remote GRE IP Address 369  
 Remote Hostname 350  
 Remote ID 511  
 Remote IP Address 351, 510  
 Remote MAC 523, 524  
 Remote MAC Address 209  
 Remote Networks 510  
 Remote Number 515, 516  
 Remote Port 390, 511  
 Remote PPTP IP Address 270, 361  
 Remote PPTP IP Address/Hostname  
 361  
 Remote User (for Dialin only) 277  
 Requested Rate 167  
 Response 422  
 Result of Autoconfiguration 153  
 Retransmission Timer 236  
 Retries 127  
 RFC 2091 Variable Timer 234  
 RFC 2453 Variable Timer 234  
 RIP UDP Port 234  
 Roaming Profile 195  
 Robustness 244  
 Role 344

Route Announce 230  
 Route Entries 265, 269, 274, 278,  
 286, 290, 310, 313, 316, 323,  
 355, 362, 369  
 Route Timeout 236  
 Route Type 217  
 RSA Key Status 121  
 RTS frames with no CTS received  
 519  
 RTS Threshold 193, 195  
 RTT Mode (Realtime Traffic Mode)  
 257  
 Rx Bytes 517  
 Rx Errors 517  
 Rx Packets 517, 518, 521, 522,  
 523, 524, 525

## S

Scan channels 195  
 Scan Interval 195  
 Scan Threshold 195  
 SCEP URL 137  
 Schedule (Start / Stop Time) 443  
 Schedule Interval 453  
 Second Timeserver 107  
 Secondary 419, 419  
 Secondary DHCP Server 439  
 Security Algorithm 510  
 Security Mode 203, 210  
 Segment Pending Requests 306  
 Segment Send Interval 306  
 Select action 450  
 Select file 491  
 Select interface 450  
 Select ISDN interface 393  
 Select radio 450  
 Selected Ports 366  
 Selection 383  
 Send 530  
 Send Certificate Chains 348  
 Send Certificate Request Payloads  
 348  
 Send CRLs 348  
 Send information to 507

- Send Initial Contact Message 347
  - Send Key Hash Payloads 348
  - Send Version 230
  - Sender E-Mail Address 500
  - Serial Number 99
  - Server 433
  - Server Failures 427
  - Server IP Address 125 , 130
  - Server Timeout 127
  - Service 161 , 226 , 374 , 515 , 516
  - Session Border Controller Mode 414
  - Session Timeout 388
  - Set Date 106
  - Set Time 106
  - Severity 502
  - SHDSL Logic 491
  - SHDSL Type 167
  - Short Retry Limit 193 , 195
  - Show passwords and keys in clear text 104
  - Signal 212
  - Signal dBm 521 , 522 , 523 , 524 , 525 , 526
  - Silent Deny 223
  - SIM Card Uses PIN 147 , 173
  - SIP Endpoint IP Address 393 , 398
  - SIP Header Field(s) for Caller Address 401
  - SMTP Authentication 501
  - SMTP Server 501
  - SNMP 117
  - SNMP Listen UDP Port 122
  - SNMP Read Community 104
  - SNMP Trap Broadcasting 504
  - SNMP Trap Community 504
  - SNMP Trap UDP Port 504
  - SNMP Version 122
  - SNMP Write Community 104
  - SNR dB 522 , 526
  - Sort Order 395 , 402
  - Source 374
  - Source File Name 491
  - Source Interface 218 , 242
  - Source IP Address 455 , 459
  - Source IP Address / Netmask 226 , 228 , 249
  - Source IP Address/Netmask 218
  - Source Location 450 , 491
  - Source Port 218 , 226
  - Source Port Range 383
  - Source Port/Range 226 , 249
  - Specific Ports 366
  - Specify bandwidth 377
  - Speed Dialing 416
  - SSH 117
  - SSH service active 119
  - Stack 515
  - Start Mode 324
  - Start Time 452 , 516
  - State/Province 139
  - Status 510 , 513 , 515 , 517
  - Stop Time 452
  - Subnet 381
  - Subscriber Number 153 , 156 , 401
  - Subsystem 503 , 509
  - Successfully Answered Queries 427
  - Summary 139
  - Sustained Cell Rate (SCR) 303
  - Switch Port 150
  - Sync SAs with ISP interface state 347
  - Synchronisation Mode 485
  - System Admin Password 104
  - System Date 99
  - System Logic 491
  - System Name 102
- ## T
- TACACS+ Secret 130
  - TCP Inactivity 379
  - TCP Keepalives 119
  - TCP Port 131
  - TCP-MSS Clamping 178
  - Telnet 117
  - Terms & Conditions 473
  - TFTP File Name 450
  - TFTP Server 450
  - Third Timeserver 107
  - Ticket Type 475

- Time 509
  - Time Condition 452
  - Time Update Interval 107
  - Time Update Policy 107
  - Time Zone 106
  - Timeout 131 , 462
  - Timeslot Matrix 159
  - Timeslot Range 159
  - Timeslot Selection 159
  - Timestamp 496
  - Total 514
  - Traceroute Test 488
  - Traffic Priority 374
  - Traffic shaping 254 , 257 , 377
  - Transfer Mode 328
  - Transfer own IP address over ISDN 328
  - Transmit Key 203 , 207 , 210
  - Transmit Power 187
  - Transmit Shaping 164
  - Transmitted MPDUs 519
  - Transparent MAC Address 116
  - Trials 455
  - Trigger 457
  - Trunk Line 407
  - Trunk Mode 398
  - TTL 422
  - Tunnel Profile 354
  - Tx Bytes 517
  - Tx Errors 517
  - Tx Packets 517 , 518 , 521 , 522 , 523 , 524 , 525
  - Type 249 , 298 , 383 , 405 , 517
  - Type of Endpoint 390
  - Type of Messages 496
  - Type of traffic 224
- U**
- UDP Destination Port 351 , 359 , 507
  - UDP Inactivity 379
  - UDP Port 127
  - UDP Source Port 351
  - UDP Source Port Selection 359
  - UMTS/HSDPA/HSUPA Status 173
  - Unchanged for 517
  - Unicast MPDUs received successfully 519
  - Unicast MSDUs transmitted successfully 519
  - up 260
  - Up Time 521 , 522 , 523 , 524 , 525 , 526
  - Update Interval 433 , 507
  - Update Path 433
  - Update Timer 236
  - Update URL 450
  - UPnP Status 469
  - UPnP TCP Port 469
  - Upstream 164
  - Uptime 99
  - URL 491
  - URL / IP Address 445
  - URL Path Depth 440
  - Usage Area 187
  - Usage Type 280 , 291
  - Use key 369
  - Use PFS Group 339
  - Use Zero Cookies 347
  - User Defined Channel Plan 195
  - User Name 263 , 268 , 273 , 277 , 285 , 289 , 354 , 361 , 398 , 431 , 448 , 501 , 529
  - Users 344
- V**
- Value 519
  - Vendor Mode 125
  - Virtual Channel Connection (VCC) 303 , 305
  - Virtual Channel Identifier (VCI) 298
  - Virtual Path Connection (VPC) 305
  - Virtual Path Identifier (VPI) 298
  - Virtual Router 477
  - Virtual Router Backup 477
  - Virtual Router ID 480 , 484 , 485
  - Virtual Router Interface 480
  - Virtual Router IP Address 480
  - Virtual Router Master 477

Virtual Router Priority 480  
VLAN ID 177  
VLAN Identifier 181  
VLAN Members 181  
VLAN Name 181  
VRRP Advertisement 477  
VRRP router 477

## W

Walled Garden 473  
Walled Garden URL 473  
Walled Network / Netmask 473  
WDS Description 207 , 523 , 524  
Web Filter Status 440  
WEP Key 1 - 4 207  
WEP Key 1-4 203 , 210  
Whitelisted 445  
Wildcard 432  
Wildcard MAC Address 116  
Wildcard Mode 116  
Wire Mode 167  
Wireless Mode 191  
WMM 202  
WPA Cipher 203 , 210  
WPA Mode 203 , 210  
WPA2 Cipher 203 , 210

## X

X.31 (X.25 in D Channel) 155  
X.31 TEI Service 155  
X.31 TEI Value 155  
X.75 Layer 2 Mode 159  
XAUTH Profile 324

## Z

Zero Cookie Size 347